

6. OPERATING INSTRUCTIONS

TYPICAL

Receiver & Remote Control Programming

NOTICE: To comply with FCC rules, adjustment or modification of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the transmitter battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

Your garage door opener receiver and remote control have been set at the factory to a matching code. The opener will activate when the **LARGE** button on the remote(s) is pressed. The multi-function remote(s) can also activate additional garage door openers and/or light control models ~~874CB and 872CB~~.

Below are instructions for programming your opener to match the other buttons on your multi-function remote and any additional remotes you may purchase. See available accessories on page 38.

Your "Smart" garage door opener will operate with up to four "Smart" remote controls (with green indicator lights), a Keyless Entry System and code switch remote controls with red indicator lights.

To Add A Remote

Select a push button to operate the receiver, Figure 1.

1. Press and *hold* the remote push button.
2. Then press and release the "Smart" button on the right side panel of the opener, Figure 2. The opener lights will *flash once*.
3. Release the remote push button.

Now the opener will operate when the remote control push button is pressed.

If you release the remote control push button before the opener lights flash, the opener will not accept the code.

To Change the Selected Push Button On the Same Remote

If you decide to use a different remote control button than originally programmed into the opener, you need to erase *all* the learned codes and reprogram each remote used to operate the garage door opener.

To Erase All Remote Control Codes

- Press and hold the "Smart" button on the opener panel until the indicator light turns off (about 6 seconds). *All* the codes the opener has learned will be erased.
- To reprogram, repeat Steps 1 – 3 for each remote control in use.



WARNING

Children operating or playing with a garage door opener can injure themselves or others. *The garage door could close and cause serious injury or death.* Do not allow children to operate the door control(s) or remote control transmitter(s).

A moving garage door could injure or kill someone under it. Activate the opener only when you can see the door clearly, it is free of obstructions, and is properly adjusted.

Figure 1

Multi-Function Remote Control


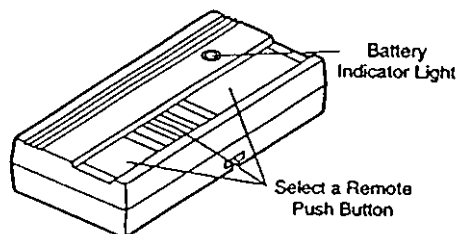


Figure 2

Garage Door Opener (With "Smart" Button)

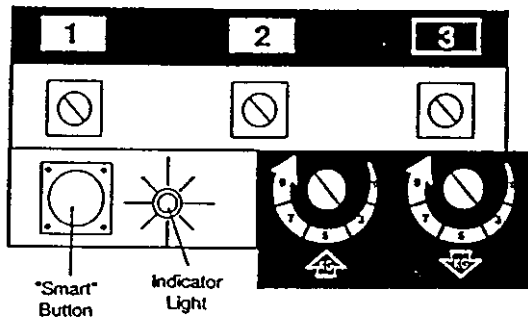

Code programming instructions are also located on the opener panel.