



Model 984LM 4-Channel Remote Control

OWNER'S MANUAL

NOTICE: To comply with FCC rules, adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

394

The 984LM remote control can activate four separate garage door openers, gate openers, entryways and/or light controls. (Instructions for programming light products are included with those accessories.)

All four push buttons work with common platform receivers having a yellow indicator light. The rolling code between these channels and the receiver changes with each use, randomly accessing over 100 billion new codes.

Instructions are described and illustrated below.

WHEN USED WITH SECURITY+ GARAGE DOOR OPENERS

NOTE: When using Common Platform receiver, refer to instructions supplied with receiver.

To program the opener to accept the remote control code:

Select a remote control push button. The first button is recommended for use with a garage door opener.

1. Press and *hold* the selected push button. See Figure 1.
2. Press and release the "Smart" (learn) button on the opener panel. See Figure 2. The indicator light on the panel will begin to blink and the opener lights will flash once.
3. Release the remote push button.

Now the opener will operate when that push button is pressed.

Adding a remote can also be done from the door control, as follows:

1. *With the door closed, press and hold* the selected push button.
2. Press and hold the Light button on the door control.
3. Press and hold the door control push bar.
4. After the opener lights flash, release all buttons.

Test by pressing the remote push button (garage door should open).

To erase all remote control codes from the receiver:

Press and hold the "Smart" button on the opener panel until the indicator light turns off (about 6 seconds). All transmitter codes inside the *receiver* are now erased. Then follow the steps above to re-program each remote control.

To check batteries:

1. Look at LED while pressing any button. A flashing LED indicates batteries are ok. See Figure 3.
2. See page 2 for battery replacement instructions.



WARNING

Children operating or playing with a garage door opener can injure themselves or others. The garage door could close and cause serious injury or death. Do not allow children to operate the wall push buttons or remote controls.

A moving garage door could injure or kill someone under it. Activate the opener only when you can see the door clearly, it is free of obstructions, and is properly adjusted.

Figure 1

394
Model 984LM
Remote Control

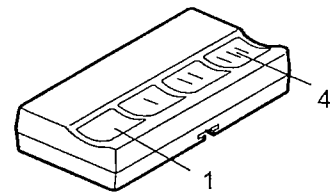 


Figure 2

SECURITY+ Garage Door Opener

 
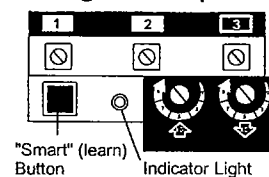 


Figure 3



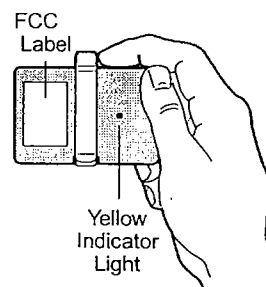

WARNING

Keep batteries away from small children. If swallowed, promptly notify doctor.

394 Replacement Parts	
Model 984LM remote caseK74-17929
(circuit board not included)
3V2032 Lithium battery (2 required)010A20
Visor clip029B137

The Remote Control Batteries

1. The lithium batteries should produce power for up to 5 years.
2. To replace, pry open case with visor clip or screwdriver, as shown. Insert batteries *positive side up (+)*. See figure 4.
3. Dispose of old batteries properly.

**FOR SERVICE DIAL OUR TOLL FREE NUMBER:
1-800-528-2817**

Figure 4

