

00782

I

Instruction Manual

Specification

- The current indoor and outdoor are display on the main LCD readout
- Temperature measurement range:
Indoor main unit:32F – 122F (0C -50C)
Wireless remote unit:0F – 122F (-20C – 50C)
- Temperature resolution:0.1 degree
- Transmission range: up to 100ft. in an open area

INSTRUCTION MANUAL

ATTENTION

For the first installation, insert the batteries in the main unit and then the remote sensor.

Battery installation

Main unit

Insert 2 fresh “AAA” alkaline batteries into the main unit. (Batteries not included)

Remote sensor

Insert 2 fresh “AAA” alkaline batteries into the main unit. (Batteries not included)


Getting Started


Indoor unit

Insert the batteries into the main unit. It displays the indoor temperature. And the outdoor reading “- - -“

Remote sensor

Insert the batteries into the remote sensor. The Indoor unit displays the outdoor temperature.

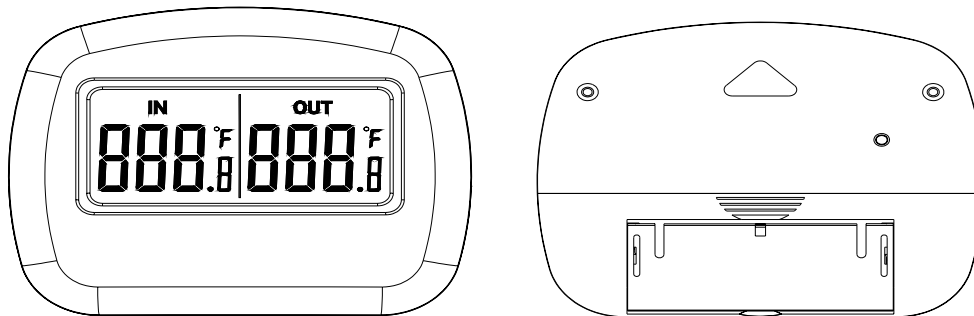

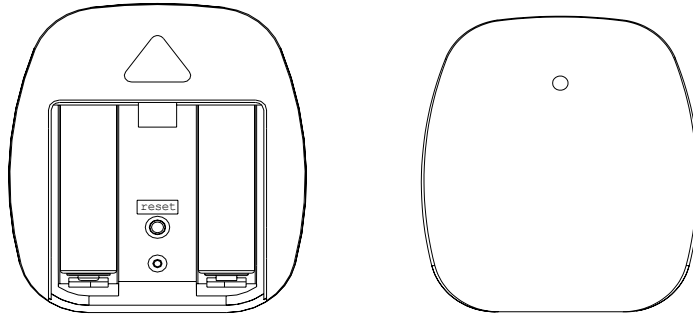

Replace Batteries

For remote sensor

When the outdoor window display “- - -” continuously, maybe the remote sensor out of range or batteries low. Replace the fresh batteries into the Remote sensor and MUST be press the RESET button on the Indoor unit (receiver).

When the Indoor unit (receiver) cannot display any reading, please replace the fresh batteries into the Main unit (receiver).

Troubleshooting

Using the Reset button on the Indoor unit (receiver)

In some unusual occasions, the Indoor unit may be affected by electrical interference and respond abnormally. In such conditions, press the RESET button on the Indoor unit to resume normal operation. The Indoor unit will reset the display and display the indoor temperature. The outdoor window displays “- - -”, and display the outdoor temperature within 1 minute.

Using the Reset button on the remote sensor (sender)

In some unusual occasions, the remote sensor may be affected by electrical interference and respond abnormally. In such conditions, press the RESET button on the remote sensor to resume normal operation.

If you press the RESET button on the remote sensor, you MUST press the RESET button on the Indoor unit (receiver) as well.

When the Indoor unit display “- - -” continuously in the outdoor window, it may the remote sensor out of range or batteries low. Please put the Remote sensor (sender) close to the Indoor unit (receiver) or replace the fresh batteries.

After press the Reset button or replace the batteries on the Remote sensor (sender), you MUST press the Reset button on the Main unit (receiver).

Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Trade Name: **ACURITE®**

Model Number: 00782

The responsible party information:

Chaney Instrument Co.

965 S. Wells Street,

Lake Geneva, WI 53147,

Tel: 262-248-4449

Contact Person: Robin Hansen

LIMITED WARRANTY INTERNATIONAL

Consumer may have more remedies at law than follows. Chaney Instrument Company warrants to the owner, this product to be free from defect in material and

workmanship for one year from date of purchase. CHANEY INSTRUMENT SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER ARISING IN CONTRACT OR TORT. Chaney Instrument's obligation (at its option) is limited to repair or replace this product.

For in- warranty repair, send clock, accompanied by Guarantee, bearing Dealer's name and date of purchase, with \$5.00 to cover handling and postage, to:

Chaney Instrument Company

965 Wells Street

Lake Geneva, Wisconsin 53147

ACURITE®

Lake Geneva, WISCONSIN 53147

www.chaneyinstrument.com