





# **Water Detector**

model 01190

Congratulations on your new AcuRite product. Protect your property from potential water damage anywhere flooding is a potential danger.

## **Features & Benefits**

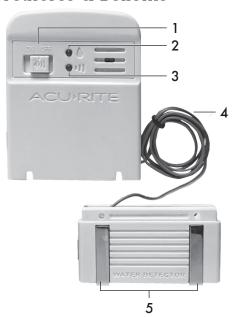

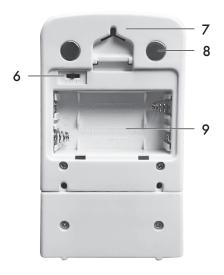

#### **FRONT**

- 1. Alarm ON/OFF Switch
- 2. Moisture Indicator
  Indicates when moisture is detected.
- Wireless Signal Indicator
   If applicable, flashes when data is being sent to Wireless Receiver.
- 4. 2.5-ft (.6m) Cord
- Sensor Contacts
   Detect the presence of liquid.

#### **BACK**

- 6. A-B-C Switch
  If applicable, ID code that must match
  Wireless Receiver's A-B-C switch to ensure
  units synchronize.
- 7. Integrated Hanger For easy placement.
- 8. Magnetic Backing
- 9. Battery Compartment
- 10. Battery Compartment Cover (not shown)


**Questions?** Contact Customer Support at (262) 729-4850 or visit www.**AcuRite**.com.

SAVE THIS MANUAL FOR FUTURE REFERENCE.





# **Water Detector Setup**

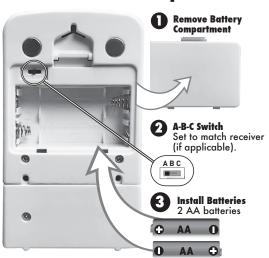

- Remove the battery compartment
- If purchased with a Wireless Receiver, set the A-B-C switch located inside the battery compartment.

You must select the same letter choices for both the detector and the receiver in order for the units to synchronize.

- Insert 2 x AA batteries into the battery compartment as shown. Follow the polarity (+/-) diagram in the battery compartment.
- Replace the battery cover.

# **Using the Water Detector**


The Water Detector works as a stand-alone unit which can be placed where leaks may occur and has an audible alert when liquid is detected. It may also be used with a Wireless Receiver (sold separately) which can be placed in a living area, ensuring that you hear the alert.


#### **Placement Guidelines**

Water will naturally flow towards the low point of the area that is beings monitored. For the best results, place Water Detector in an area where water is most likely to collect.

You may place the Water Detector upright in the desired location (Figure A), or mount the base with the wired sensor placed on ground level (Figure B).

NOTE: The sensor is water-resistant and is designed to detect the presence of liquid/leaks. However, to extend it's life, place the Water Detector in an area where it will not remain submerged in liquid.

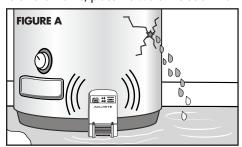

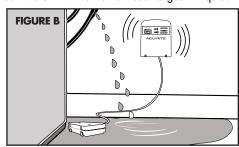

# **Specifications**

| POWER           | 2 x AA alkaline batteries                                 |  |
|-----------------|---|--|
| WIRELESS RANGE  | 330 ft / 100 m (depending on home construction materials) |  |
| CORD            | 2.5 ft (.6m) length; Water-resistant                      |  |
| DATA REPORTING  | ATA REPORTING 1 second updates once water is detected     |  |
| SOUND INTENSITY | 85 dB at 3.3 ft (1 meter)                                 |  |

# ACU)RITE

Instruction Manual

# **Water Detector Wireless Receiver**

model 01191 (sold separately)

# **Features & Benefits**





# 8

#### **FRONT**

- 1. Moisture Indicator Indicates when moisture is detected.
- 2. Low Battery Indicator
- 3. Zz Button

Press and release to silence the alarm for 1 hour. Press and hold 4 seconds to silence the alarm for 24 hours.

#### BACK

- 4. Magnetic Backing
- 5. A-B-C Switch

ID code that must match Water Detector's A-B-C switch to ensure units synchronize.

- 6. Integrated Hanger For easy placement.
- 7. Battery Compartment
- 8. Battery Compartment Cover

# **Receiver Setup**

- Remove the battery compartment cover.
- Set the A-B-C switch located inside the battery compartment.

You must select the same letter choices for both the detector and the receiver in order for the units to synchronize.

- Insert 3 x AA batteries into the battery compartment for the Receiver, as shown. Follow the polarity (+/-) diagram in the battery compartment.
- Replace the battery cover.

# **Troubleshooting**

| Problem   | Possible Solution   |
|---|---|
| Alarm does not sound,<br>even when there is<br>liquid | <ul> <li>Check that the batteries are installed correctly. Batteries may need to be replaced.</li> <li>Make sure the Alarm ON/OFF switch on the Water Detector is set to ON.</li> </ul>                               |
| No Wireless Receiver reception                        | If the wireless signal indicator does not flash:  Relocate the Wireless Receiver and/or the Water Detector. The units must be within 100 m (330 ft) of each other.  Make sure the A-B-C switches on both units match. |









# **Specifications**

#### **POWER**

3 x AA alkaline batteries

If your AcuRite product does not operate properly after trying the troubleshooting steps, visit www.AcuRite.com or call (262) 729-4850 for assistance.

# **Customer Support**

AcuRite customer support is committed to providing you with best-in-class service. For assistance, please have the model number of this product available and contact us in any of the following ways:



(262) 729-4850

- ▶ Installation Videos
- ▶ Register your Product
- Replacement Parts

- ► Instruction Manuals
- ▶ Support User Forum
- Submit Feedback & Ideas

# **MPORTANT**

PRODUCT MUST BE REGISTERED TO RECEIVE WARRANTY SERVICE

#### **PRODUCT REGISTRATION**

Register online to receive 1 year warranty protection

www. AcuRite.com

## **Limited 1-Year Warranty**

AcuRi te is a wholly owned subsidiary of Chaney Instrument Company. For purchases of AcuRite products, AcuRite provides the benefits and services set forth herein. For purc hases of Chaney products, Chaney provides the benefits and services set forth herein.

We warrant that all products we manufacture under this warranty are of good material and workmanship and, when properly installed and operated, will be free of defects for a period of one year from the date of purchase.

period of one year from the date of purchase.

Any product which, under normal use and service, is proven to breach the warranty contained herein within ONE YEAR from date of sale will, upon examination by us, and at our sole option, be repaired or replaced by us. Transportation costs and charges for returned goods shall be paid for by the purchaser. We hereby disclaim all responsibility for such fransportation costs and charges. This warranty will not be breached, and we will give no credit for products which have received normal wear and tear not affecting the functionality of the product, been damaged (including by acts of nature), tampered, abused, improperly installed, or repaired or altered by others than our authorized representatives.

Remedy for breach of this warranty is limited to repair or replacement of the defective item(s). If we determine that repair or replacement is not feasible, we may, at our option, refund the amount of the original purchase price.

THE ABOVE-DESCRIBED WARRANTY IS THE SOLE WARRANTY FOR THE PRODUCTS AND IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. ALL OTHER WARRANTIES OTHER THAN THE EXPRESS WARRANTY SET FORTH HEREIN ARE HEREBY EXPRESSLY DISCLAIMED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

©Chaney Instrument Co. All rights reserved. AcuRite is a registered trademark of the Chaney Instrument Co., Lake Geneva, WI 53147. All other trademarks and copyrights are the property of their respective owners. AcuRite uses patented technology. Visit www.AcuRite.com/patents for details.

Printed in China 01190 INST 081018 We expressly disclaim all liability for special, consequential, or incidental damages, whether arising in tort or by contract from any breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you

We further disclaim liability from personal injury relating to our products to the extent permitted by law. By acceptance of any of our products, the purchaser assumes all liability for the consequences arising from their use or misuse. No person, firm or corporation is authorized to bind us to any other obligation or liability in connection with the sale of our products. Furthermore, no person, firm or corporation is authorized to modify or waive the terms of this warranty unless done in writing and signed by a duly authorized agent of ours.

In no case shall our liability for any claim relating to our products, your purchase or your use thereof, exceed the original purchase price paid for the product.

#### Applicability of Policy

This Return, Refund, and Warranty Policy applies only to purchases made in the United States and Canada. For purchases made in a country other than the United States or Canada, please consult the policies applicable to the country in which you made your purchase.

Additionally, this Policy applies only to the original purchaser of our products. We cannot and do not offer any return, refund, or warranty services if you buy products used or from resale sites such as eBay or Craigslist.

#### **Governing Law**

This Return, Refund, and Warranty Policy is governed by the laws of the United States and the State of Wisconsin. Any dispute relating to this Policy shall be brought exclusively in the federal or State courts having jurisdiction in Walworth County, Wisconsin; and purchaser consents to jurisdiction within the State of Wisconsin.

#### **FCC Information**

This experies to be extended and and to comply with the lights for a Gas B digital devices, pagusant to port 15 of the RCC Rules. These, but president provide responsible projected or against formally inference in a maderial middlefact. This experient generates use and can exclude the services of the providence of th

Canada Statement
This device complies with Industry Canada's licence-evernal RSSs. Operation is subject to the following two conditions
(2) This device must accept any interference, and
(2) This device must accept any interference, including interference that may cause undesired operation of the device

reil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux d

suivantes : ell ne dat pas produire de brouillage; «ur de l'accareil doit accepter tout brouillage radicélectrique subi, même si le brouillage est susceptible d'en compro



