

DVM-HR DV Wall™

USER MANUAL



CHAUVET, 3000 N 29th Ct, Hollywood, FL 33020 U.S.A
(800) 762-1084 – (954) 929-1115
FAX (954) 929-5560
www.chauvetlighting.com

Table of Contents

1. BEFORE YOU BEGIN.....	3
UNPACKING INSTRUCTIONS.....	3
CONTACT US.....	3
IMPORTANT SAFETY INFORMATION.....	4
2. INTRODUCTION	5
OVERVIEW	5
FEATURES.....	5
COMPUTER SYSTEM REQUIREMENTS.....	5
PRODUCT OVERVIEW.....	6
3. HARDWARE SETUP.....	7
AC POWER	7
SYSTEM LIMITATIONS.....	7
MAXIMUM SYSTEM CONFIGURATION	8
Other Configuration Examples.....	8
MOUNTING SYSTEM.....	9
Flying bracket attachment.....	10
SIGNAL & POWER CONFIGURATION.....	11
DV-WALL DRIVER	12
Dipswitch Settings.....	13
JP1 Dipswitch.....	13
JP2 Dipswitch.....	14
TRANSMITTER CARD.....	15
Data Out 1 & Data Out 2 connectors.....	15
Aux Port.....	15
DC External Power Input.....	15
Transmitter Card Installation.....	15
EXAMPLE SYSTEM CONFIGURATIONS.....	16
4:3 Aspect Ratio.....	16
4 meters by 3 meter	16
8 meters by 6 meters.....	16
16 meters by 12 meters.....	17
16:9 Aspect Ratio.....	18
8 meters by 4.5 meters.....	18
16 meters by 9 meters.....	18
Special Applications.....	19
Pattern 1.....	19
Pattern 2.....	19
4. APPENDIX.....	20
RETURNS PROCEDURE.....	20
CLAIMS	20
MAINTENANCE.....	20
TECHNICAL SPECIFICATIONS (PER PANEL).....	21
TECHNICAL SUPPORT	21

©CHAUVET, 2006, All Rights Reserved

Information and specifications in this User Manual are subject to change without notice. CHAUVET assumes no responsibility or liability for any errors or inaccuracies that may appear in this manual.

1. Before You Begin

Unpacking Instructions

Immediately upon receiving a product, carefully unpack the carton, check the contents to ensure that all parts are present, and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. **Save the carton and all packing materials.** In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

Note: If you should require sending any items back to CHAUVET, call CHAUVET for a (RMA) Return Merchandise Authorization number. The factory will not allow any shipments without an RMA.

Your shipment may include the following:

DV WALL SYSTEM

DV Wall LED Panel	4 pcs
Power Cables	4 pcs
Signal Cables	4 pcs
Mounting System.....	4 pcs
User Manual & Warranty Card	

DV WALL STUDIO (SOFTWARE)

Transmitter Card.....	1 pc
DVI Signal Cable	1 pc
RS232 Signal Cable	1 pc
DV Wall Studio CD ROM.....	1 pc
Ethernet Cable.....	1 pc
Signal Cable	8 pcs
DV Wall Driver (Video Receiver)	1 pc
DV Wall Driver Power Supply.....	1 pc

Contact Us

World Wide

General Information

Chauvet Lighting
3000 North 29th Court
Hollywood, FL 33020
voice: 954.929.1115
fax: 954.929.5560
toll free: 800.762.1084

Technical Support

Chauvet Lighting
3000 North 29th Court
Hollywood, FL 33020
voice: 954.929.1115 (**Press 4**)
fax: 954.929.5560 (**Attention: Service**)

World Wide Web

www.chauvetlighting.com

Important Safety Information



This product is designed for professional use. This product presents risks of lethal or severe injury due to fire and heat, electric shock, and injury from falls. **Read this manual** before installing or powering the fixture, follow the safety precautions listed below and observe all warnings in this manual and on the fixture. If you have any questions about how to operate the fixture safely, please contact CHAUVET.

Protection against Electric Shock

- Always disconnect from AC power source before servicing or replacing LED clusters or fuse, and be sure to replace with same type fuse.
- All fixtures must be connected to circuits with a suitable Earth Ground.
- Do not operate the fixture if covers are open or if any internal component is missing or damaged.
- Make sure power cord is never crimped or damaged.
- Never disconnect power cord by pulling or tugging on the cord.

Protection against Fire & Burns

- Always make sure that you are connecting to the proper voltage and that the line voltage you are connecting to is not higher than that stated on decal or rear panel of the fixture.
- The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces. Be sure that no ventilation slots are blocked.
- Maintain a minimum distance of 1 meter (3.28 feet) from combustible materials.
- Allow this product to cool for a minimum of 15 minutes before opening, handling or removing the cover in this product.
- Maximum ambient temperature is $T_a: 40^\circ$. Do not operate fixture at temperatures higher than this.

Protection against Injury to persons

- Secure fixture to fastening device using a safety chain.
- Do not open fixture for a minimum of 15 minutes after switching off.
- In the event of serious operating problem, stop using the unit immediately. Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.

2. Introduction

Overview

The DV Wall is both an indoor and outdoor LED video wall display suitable for a wide range of applications. An IP65 rating ensures reliable and safe operation in most weather conditions. The DV Wall can be seen comfortably during daytime or night time hours.

The DV Wall's modular rugged design provides the user many shape and size building options. The mounting system is easy and quick to assemble and disassemble. It is perfect for outdoor displays and large viewing distances. The DV Wall is available in 31mm resolution providing the greatest economy and value while maintaining optimum brightness.

Range of applications include but not limited to; Architectural, Merchandising & Retail, Rental & Staging, Entertainment Venues, Sports Stadiums and Outdoor Advertising.

Features

- Durable and weather resistant IP-65 rated housing
- Mounting system has rigging points and flexible configurations
- 16.7 million colors (24bit)
- Video/flash/text/RGB color mixing and any PC based graphics
- Play music videos and DVDs from your computer
- Additional power-con output for daisy chaining units together
- Additional video output for daisy chaining units together
- Works with other manufacturers' software (must have DVI to DVW card installed)
- Direct air convection cooled
- Low power consumption


Requirements

- DV Wall Driver (1 per every 6 panels wide and 16 panels high)
- DV-Wall Studio software and/or ShowXpress Timeline (with DVI to DVW card installed)
- Windows XP computer with an available PCI slot
- ATI graphics card

Computer System Requirements

EQUIPMENT	MINIMUM	RECOMMENDED
OPERATING SYSTEM	Windows XP SP2	Windows XP SP2
COMPUTER	Pentium 200 Mhz processor with at least one free PCI slot	Pentium 1 Ghz or better with at least one free PCI slot
MEMORY	128 MB	512MB or higher
HARD DISK	20 GB 5400 RPM	40 GB 7200 RPM or better
DISPLAY CARD	ATI Graphics Card with dual display and DVI-I output Note: NVIDIA graphics cards are not compatible with this software	Tested on an ATI Radeon 9300

Product Overview

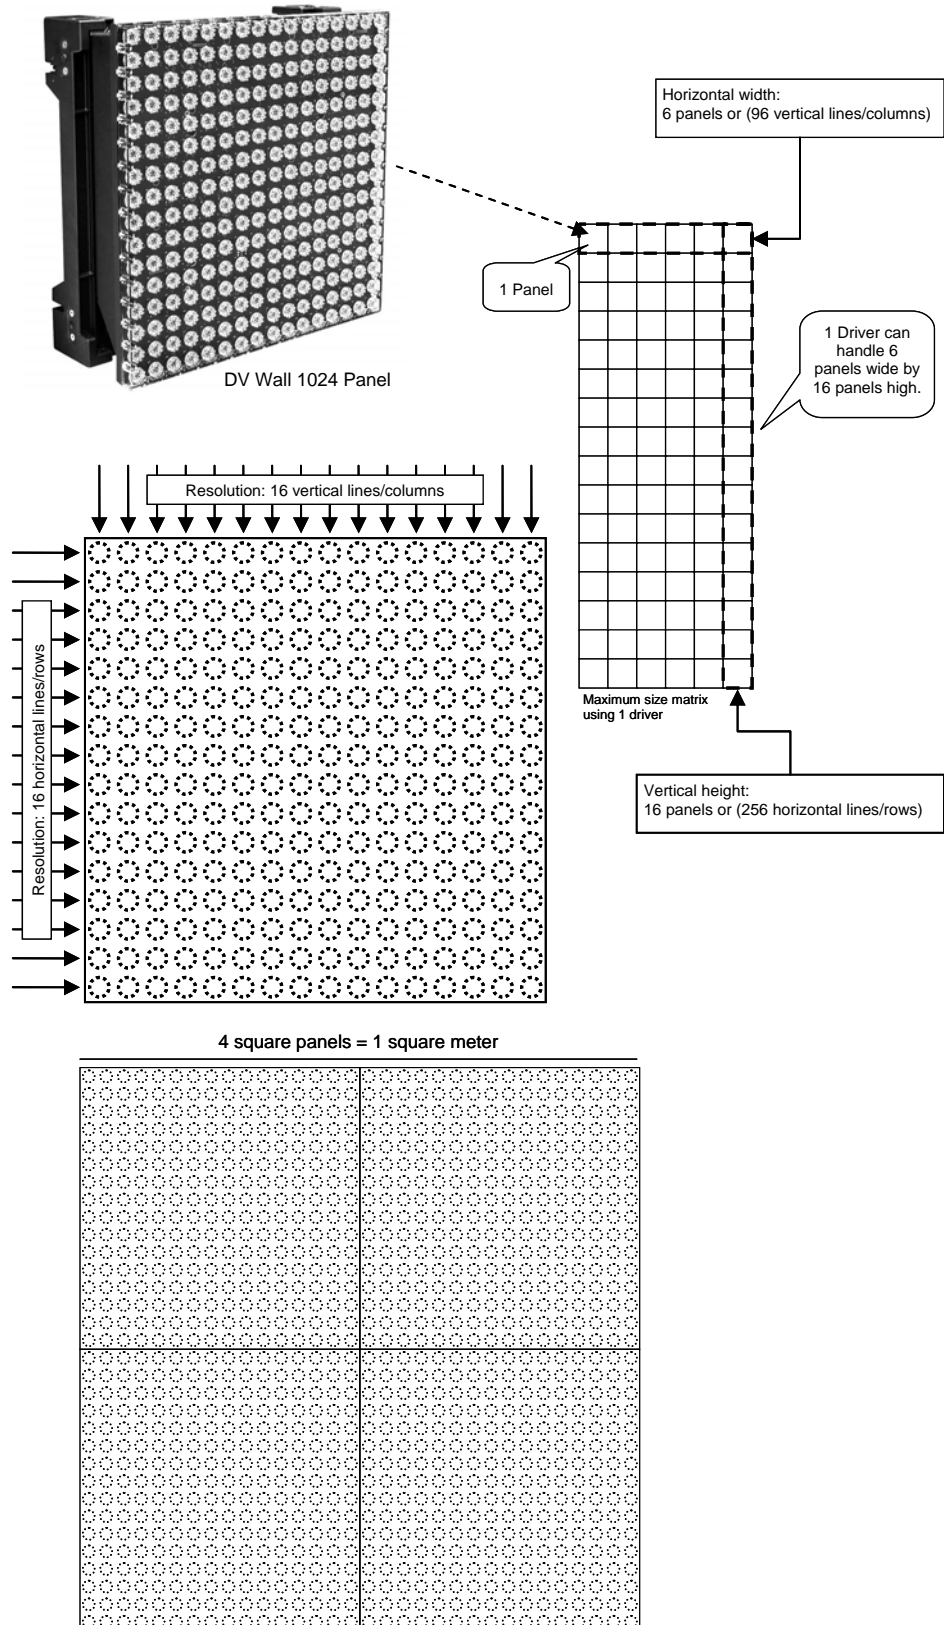

3. Hardware Setup

AC Power

Warning!

Verify that the power requirement label on your unit matches the line voltage applied. All fixtures must be connected to circuits with a suitable Earth Ground.

- To determine the power requirements for a particular fixture, see the label affixed to the back plate of the fixture or refer to the fixture's specifications chart.
- A fixture's listed current rating is its average current draw under normal conditions.
- All fixtures must be powered directly off a switched circuit and cannot be run off a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel is used solely for a 0% to 100% switch.
- Before applying power to a fixture, check that the source voltage matches the fixture's requirement.
- All fixtures must be connected to circuits with a suitable Earth Ground.

Power Cable Configuration

CABLE	Pin	International	Screw Color
BROWN	Live	L	Yellow or Brass
BLUE	Neutral	N	Silver
YELLOW/GREEN	Earth	EG (Ground)	Green

System Limitations

VERTICAL PANELS (DOWN)

MINIMUM	1 panel = 16 rows of LED clusters or 16 vertical pixels/lines
MAXIMUM WITH 1 DRIVER	16 panels = 256 rows of LED clusters or 256 vertical pixels/lines
MAXIMUM WITH 2+ DRIVERS	32 panels = 512 rows of LED clusters or 512 vertical pixels


HORIZONTAL PANELS (ACROSS)

MINIMUM	1 panel = 16 columns of LED clusters or 16 horizontal pixels/lines
MAXIMUM WITH 1 DRIVER	6 panels = 96 columns of LED clusters or 96 horizontal pixels/lines
MAXIMUM WITH 2+ DRIVERS	48 panels = 768 columns of LED clusters or 768 horizontal pixels

RESOLUTION


MINIMUM	16 pixels X 16 pixels
MAXIMUM WITH 1 DRIVER	96 pixels X 128 pixels
MAXIMUM WITH 2+ DRIVERS	768 pixels X 512 pixels

Maximum System Configuration

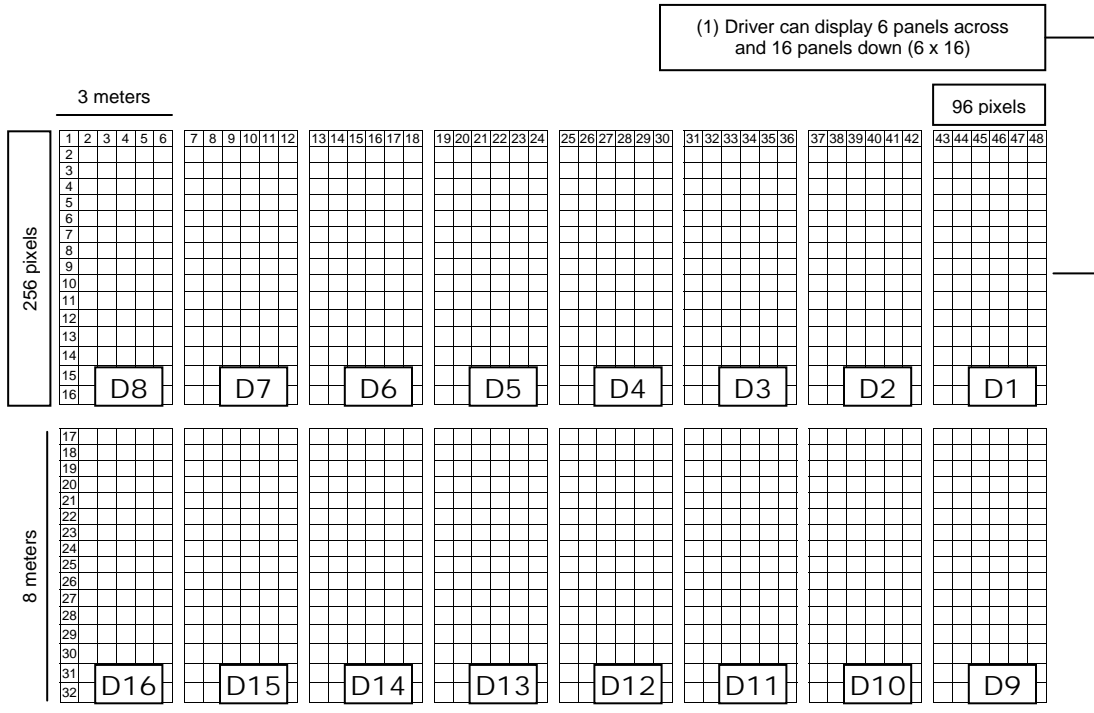


Gaps between matrix sections are for visual aid only. Panel sections pair up edge to edge to maintain consistent pixel separation across multiple matrix sections.

Other Configuration Examples

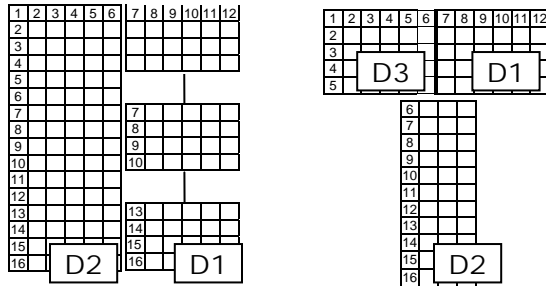


Mounting System

Each DV Wall panel comes with a square bracket with interlocking connectors that must first be bolted to the two tracks located on opposite sides of the back of the panel using the provided M10 Hex bolts.

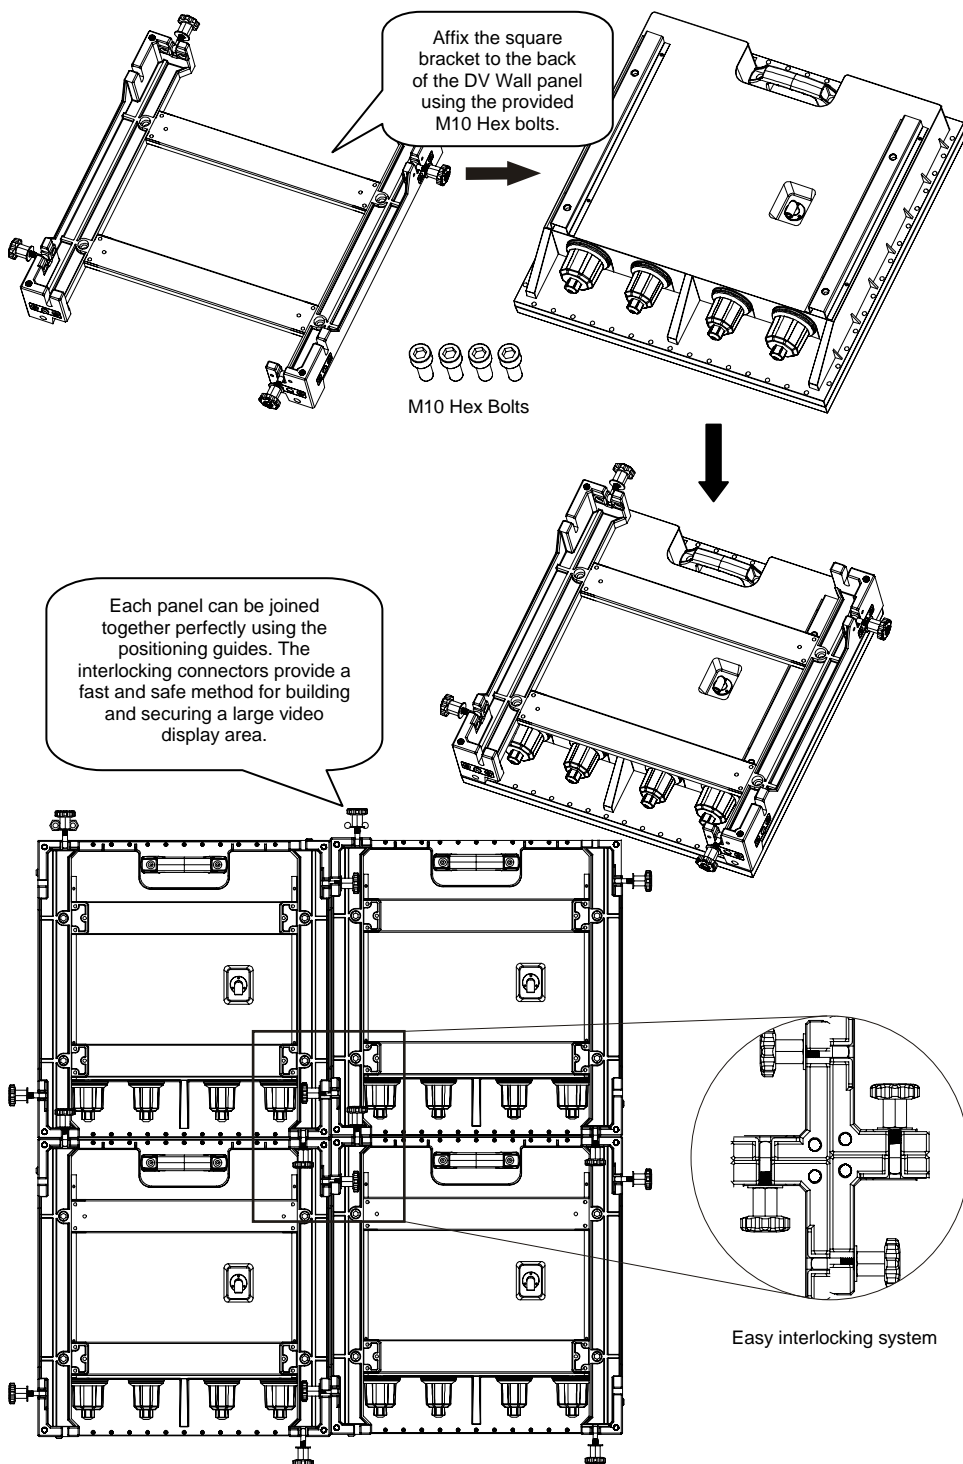

Flying bracket attachment


The flying bracket attachment is used to fly or rig a 1 meter width section of a DV wall. It is designed to be attached to the very top row of a 1 meter section. Additional hardware is provided for interconnecting multiple flying brackets.

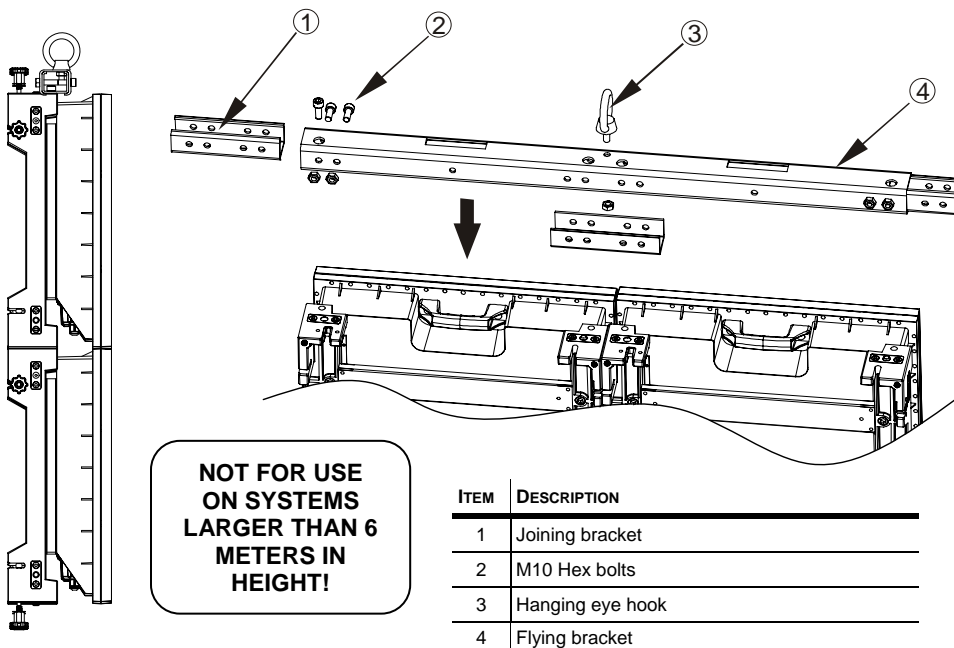

Caution!


- Always make sure that all bolts are securely fastened.
- For screens measuring 3 meters in height or beyond, use 2 rigging points for every 1 meter section.
- Do not use on systems larger than 6 meters in height.

Signal & Power Configuration

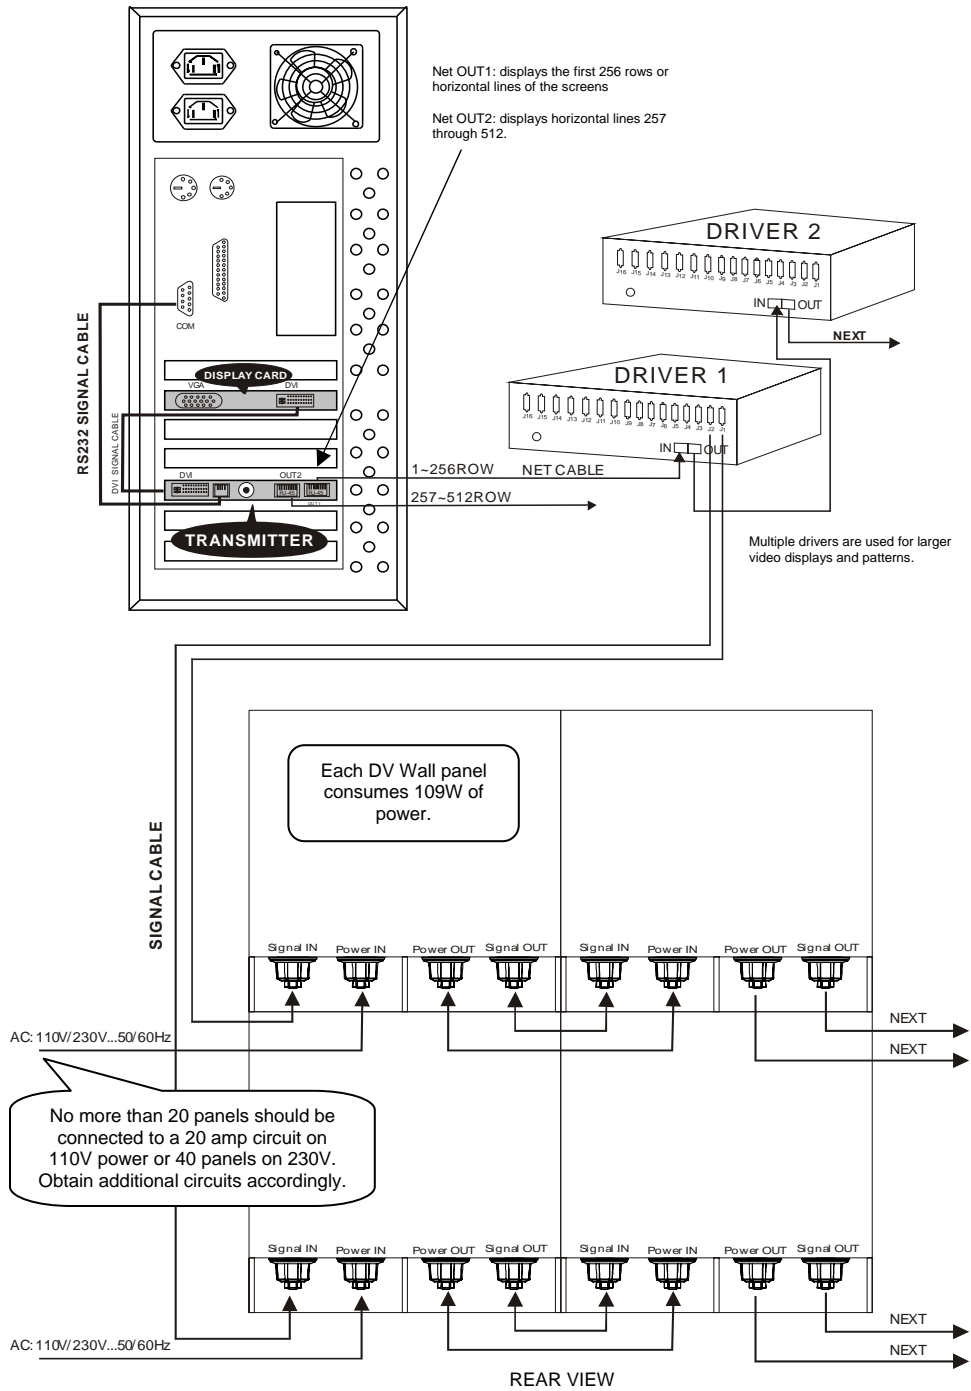


DV-Wall Driver

Every driver contains 16 output ports (J1 ~ J16). Each output port provides signal source to one horizontal row of panels not exceeding 6 panels wide.

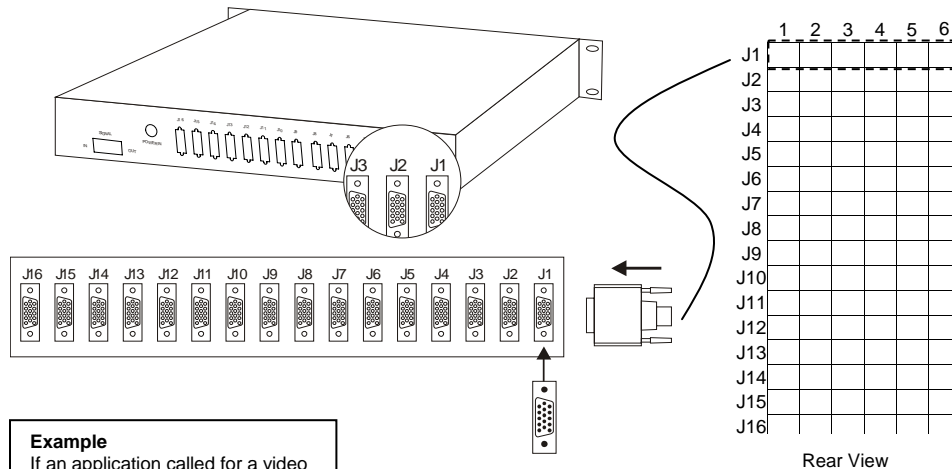

Example

If an application called for a video wall 3 meters high and 3 meters wide the following connection diagram would apply:

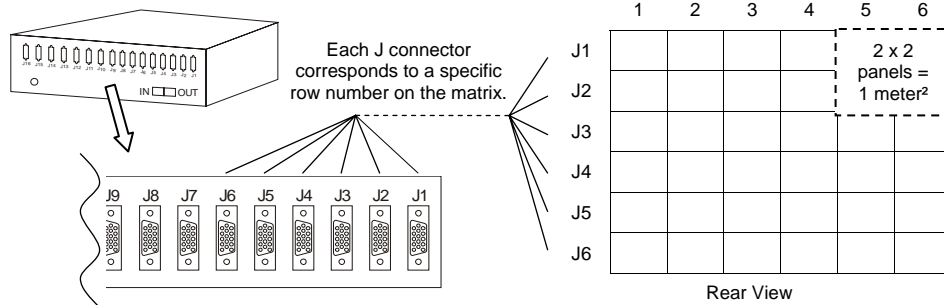

It is also easy to calculate a required number of J output connectors to use so long as you have a specific pixel resolution in mind for your application.

NUMBER OF HORIZONTAL LINES(ROWS) OR VERTICAL PIXELS	NO. OF PANELS VERTICAL	OUTPUT CONNECTIONS TO USE
16	1	J1
32	2	J1 ~ J2
48	3	J1 ~ J3
64	4	J1 ~ J4
80	5	J1 ~ J5
96	6	J1 ~ J6
112	7	J1 ~ J7
128	8	J1 ~ J8
144	9	J1 ~ J9
160	10	J1 ~ J10
176	11	J1 ~ J11
192	12	J1 ~ J12
208	13	J1 ~ J13
224	14	J1 ~ J14
240	15	J1 ~ J15
256	16	J1 ~ J16


Dipswitch Settings

A DV-Wall video display matrix may consist of up to 16 drivers or 16 individual grid sections in various pattern configurations. Each driver must be addressed according to your configuration so that the video displayed appears whole and intact. Two internal dipswitches (JP1 & JP2) are addressed according to your system layout and configuration.

JP1	Sets the total width one driver will display. The width can be described in either number of panels or pixel resolution. Possible widths include 1 to 6 panels or 16 to 96 horizontal pixels.
JP2	Sets the starting vertical line from which this driver will begin to display video. Remember that a matrix may consist of multiple sections across, so in order to display video correctly you will need to set the starting address for each section handled by a driver.

JP1 Dipswitch

JP1 dipswitches have their own unique addressing method. For example setting dipswitch 3 to ON adds 32 values to the counter while setting 11 to ON subtracts 16.

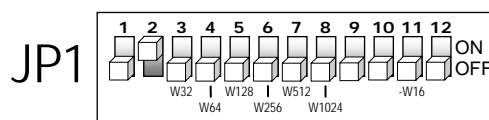


DEFAULT SETTING = 32

You can use the table below to quickly identify the dipswitch settings for your matrix width.


Horizontal Width in (pixel columns or vertical lines)	Number of panels	JP1 Dipswitches												
		(Default Off)	(Default On)	add 32	add 64	add 128	add 256	add 512	add 1024	(Default Off)	(Default Off)	subtract 16	(Default Off)	
		1	2	3	4	5	6	7	8	9	10	11	12	
16	1		1										1	
32	2		1											
48	3		1	1									1	
64	4		1	1										
80	5		1		1								1	
96	6		1		1									
		Note: 1 = Dipswitch ON, Blank = Dipswitch OFF The default setting of dipswitch # 2 ON and all others OFF equals 32.												

JP2 Dipswitch

In order for video to display properly across multiple sections or drivers, each driver must be addressed accordingly. The JP2 dipswitch establishes the horizontal starting address or (vertical line) for each section of matrix.

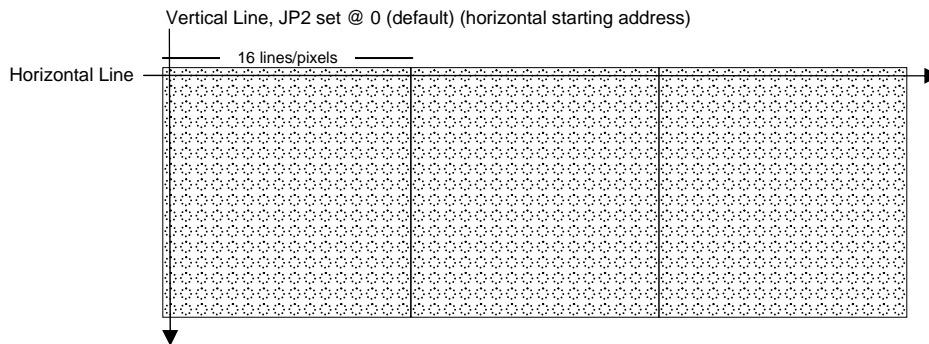

Just like the JP1 dipswitch, JP2 has different numerical designations for addressing. Dipswitches 6 and 7 always remain in the ON position.

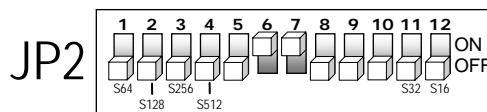

DEFAULT START ADDR = 0


You can use the table below to quickly identify the dipswitch settings for a starting address.

Vertical Lines (Horizontal starting address)	JP2 Dipswitches												Vertical Lines (Horizontal starting address)	JP2 Dipswitches											
	add 64	add 128	add 256	add 512	(Default Off)	(Default On)	(Default On)	(Default Off)	(Default Off)	(Default Off)	add 16	add 32		add 64	add 128	add 256	add 512	(Default Off)	(Default On)	(Default On)	(Default Off)	(Default Off)	(Default Off)	add 16	add 32
	1	2	3	4	5	6	7	8	9	10	11	12		1	2	3	4	5	6	7	8	9	10	11	12
0						1	1						400		1	1			1	1				1	
16						1	1				1		416		1	1			1	1					1
32						1	1				1		432		1	1			1	1				1	1
48						1	1				1	1	448		1	1	1		1	1					
64	1					1	1				1		464		1	1	1		1	1				1	
80	1					1	1				1		480		1	1	1		1	1					1
96	1					1	1				1		496		1	1	1		1	1				1	1
112	1					1	1				1	1	512				1		1	1					
128		1				1	1						528				1		1	1				1	
144		1				1	1				1		544				1		1	1				1	1
160		1				1	1				1		560				1		1	1				1	1
176		1				1	1				1	1	576		1		1		1	1					
192	1	1				1	1						592		1		1		1	1				1	
208	1	1				1	1				1		608		1		1		1	1					1
224	1	1				1	1				1	1	624		1		1		1	1				1	1
240	1	1				1	1				1	1	640			1	1		1	1					
256			1			1	1						656		1		1		1	1				1	
272			1			1	1				1		672		1		1		1	1					1
288			1			1	1				1		688		1		1		1	1				1	1
304			1			1	1				1	1	704		1	1	1		1	1					
320	1		1			1	1						720		1	1	1		1	1				1	
336	1		1			1	1				1		736		1	1	1		1	1					1
352	1		1			1	1				1		752		1	1	1		1	1				1	1
368	1		1			1	1				1	1	768				1	1	1	1					
384		1	1			1	1																		

Note: 1 = Dipswitch ON, Blank = Dipswitch OFF

Transmitter Card

Install the transmitter card in an available PCI slot in your computer. The transmitter card is the interface between your PC, DV-Wall Studio software and the DV-Wall Screen. You must use the DVI cable provided to connect from the computers DVI output to the DVI port on the transmitter card.

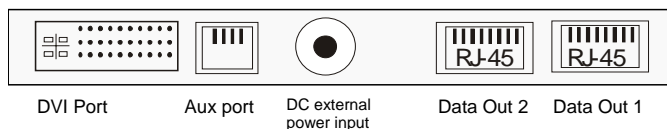

Data Out 1 & Data Out 2 connectors

The two network output ports transmit 256 rows or horizontal lines. Output 1 transmits rows/lines 1 through 256. Output 2 transmits rows/lines 257 through 512.

Aux Port


This is a standard 6-pin telephone connector. A cable is provided that connects from the 9-pin DIN RS232 port to the Aux port on the transmitter card. This port allows control of the R variable, gray scale, DV Wall matrix active area, and matrix lock and matrix range.

DC External Power Input

This input takes a 5V power supply. It is only used if the transmitter card will be operated eternally of the computer.

Transmitter Card Installation

1. Turn off the computer before opening its case and adding or removing components.
2. Insert the transmitter card into an available PCI slot in your computer.
3. Connect out of your computer's display card DVI output and into the DVI input on the transmitter card using the DVI signal cable provided.
4. Connect out of the serial RS232 (also COM port) connector and into the 6-pin telephone connector on the transmitter card using the RS232 signal cable provided.
5. Plug the provided ethernet cable into the RJ45 connector labeled OUT 1 and into a driver's ethernet IN connector to display rows 1 through 256.
6. If using displaying 512 row lines connect the OUT 2 as well to a new driver.
7. Secure all connections.
8. In order to test the system successfully it will be necessary to address the drivers correctly. Jump to the section in this manual on driver dipswitch settings.
9. Once drivers are assigned, turn on the computer and test the system.

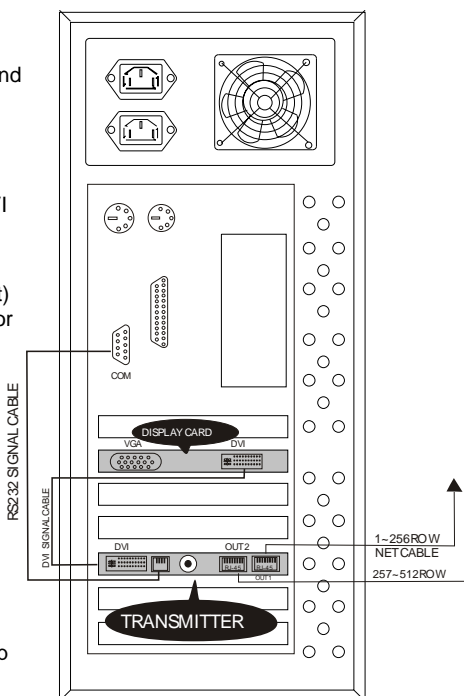


Note!

If your computer reboots or turns off abruptly; please remove the DVI cable from the transmitter card and reboot your computer. After Windows loads reconnect the DVI cable.


Example System Configurations

4:3 Aspect Ratio


4 meters by 3 meter

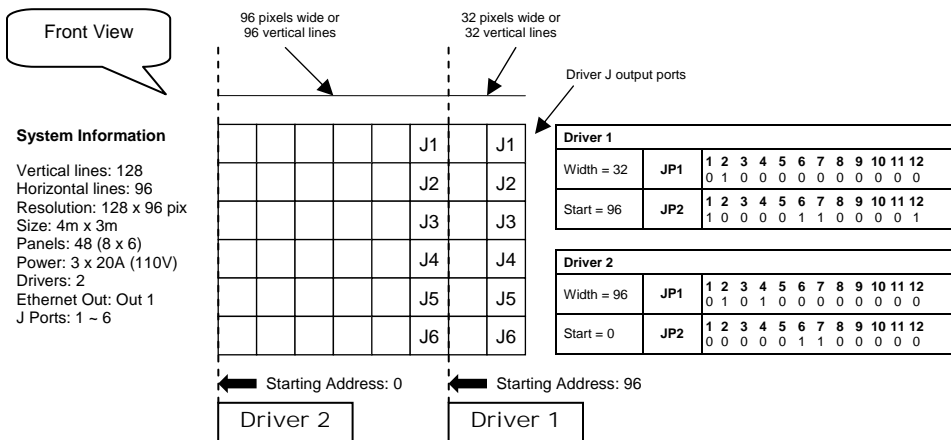

8 meters by 6 meters

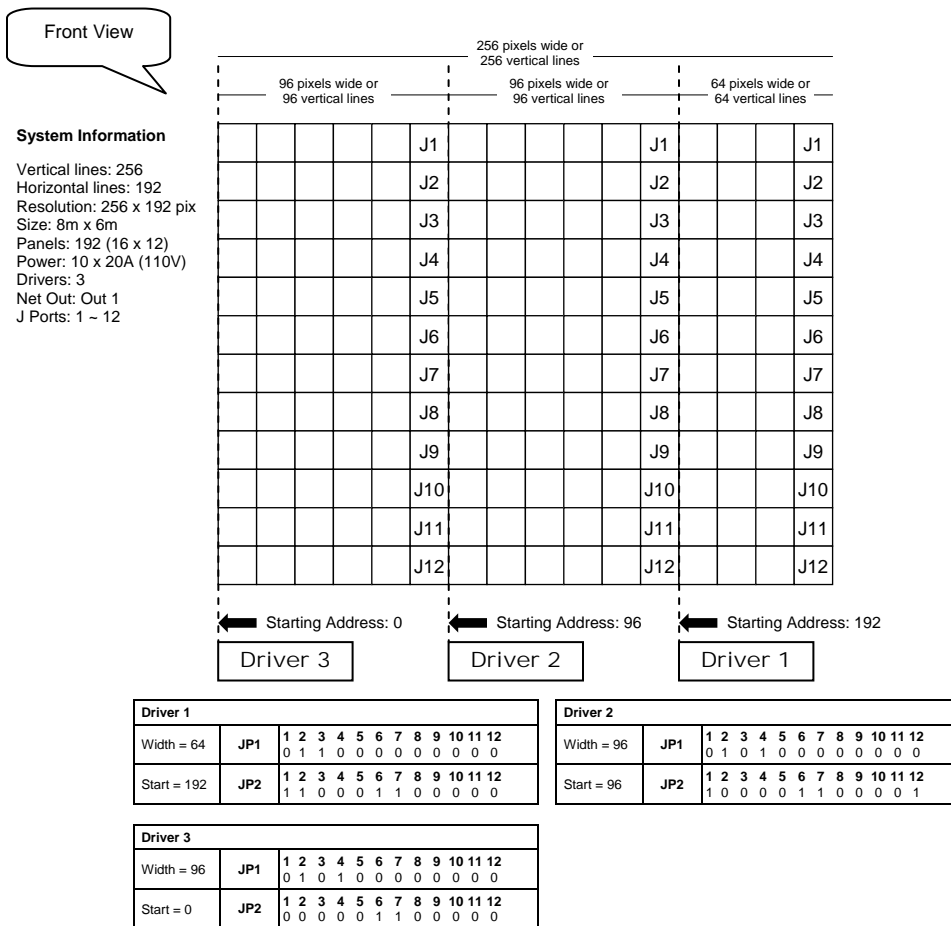


16 meters by 12 meters

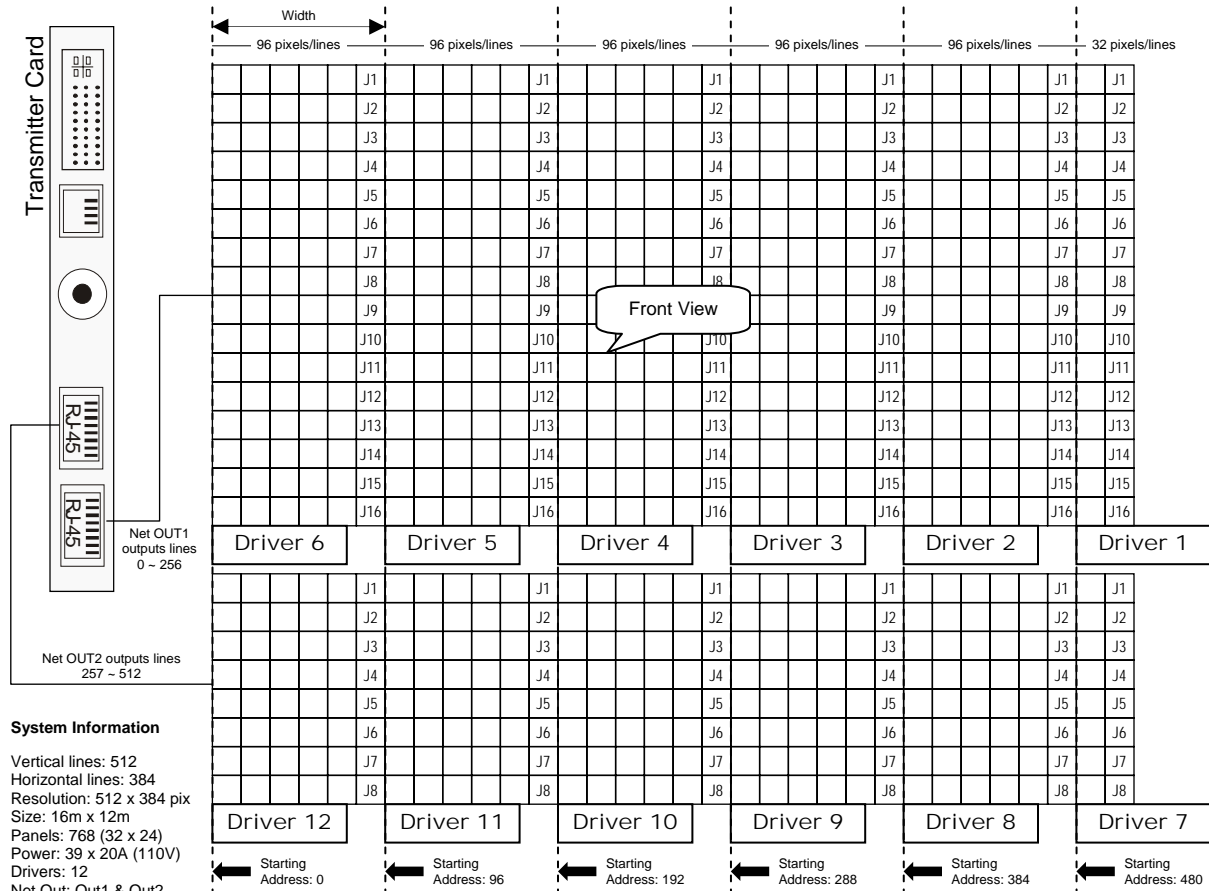

Driver	Width	JP1	JP2
Driver 1	32	1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 0 0 0 0 0 0 0 0 0	1 2 3 4 5 6 7 8 9 10 11 12 1 1 1 0 0 1 1 0 0 0 0 1
Driver 2	96	1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0	1 2 3 4 5 6 7 8 9 10 11 12 0 1 1 0 0 1 1 0 0 0 0 0
Driver 3	96	1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0	1 2 3 4 5 6 7 8 9 10 11 12 0 0 0 0 0 1 1 0 0 0 0 1
Driver 4	96	1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0	1 2 3 4 5 6 7 8 9 10 11 12 1 1 0 0 0 1 1 0 0 0 0 0
Driver 5	96	1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0	1 2 3 4 5 6 7 8 9 10 11 12 1 0 0 0 0 1 1 0 0 0 0 1
Driver 6	96	1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0	1 2 3 4 5 6 7 8 9 10 11 12 0 0 0 0 0 1 1 0 0 0 0 0
Driver 7	32	1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 0 0 0 0 0 0 0 0 0	1 2 3 4 5 6 7 8 9 10 11 12 1 1 1 0 0 1 1 0 0 0 0 1
Driver 8	96	1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0	1 2 3 4 5 6 7 8 9 10 11 12 0 1 1 0 0 1 1 0 0 0 0 0
Driver 9	96	1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0	1 2 3 4 5 6 7 8 9 10 11 12 0 0 0 0 0 1 1 0 0 0 0 1
Driver 10	96	1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0	1 2 3 4 5 6 7 8 9 10 11 12 1 1 0 0 0 1 1 0 0 0 0 0
Driver 11	96	1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0	1 2 3 4 5 6 7 8 9 10 11 12 1 0 0 0 0 1 1 0 0 0 0 1
Driver 12	96	1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0	1 2 3 4 5 6 7 8 9 10 11 12 0 0 0 0 0 1 1 0 0 0 0 0


16:9 Aspect Ratio

8 meters by 4.5 meters

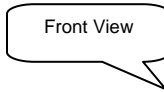

System Information

Vertical lines: 256
 Horizontal lines: 144
 Resolution: 256 x 144 pix
 Size: 8m x 4.5m
 Panels: 144 (16 x 9)
 Power: 8 x 20A (110V)
 Drivers: 3
 Net Out: Out 1
 J Ports: 1 ~ 9

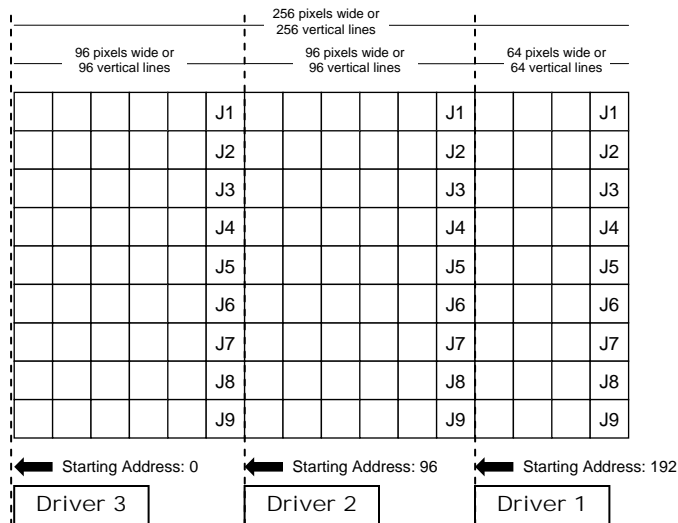

Driver 1	
Width = 64	JP1 1 2 3 4 5 6 7 8 9 10 11 12 0 1 1 0 0 0 0 0 0 0 0 0
Start = 192	JP2 1 2 3 4 5 6 7 8 9 10 11 12 1 1 0 0 0 1 1 0 0 0 0 0

Driver 2	
Width = 96	JP1 1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0
Start = 96	JP2 1 2 3 4 5 6 7 8 9 10 11 12 1 0 0 0 0 1 1 0 0 0 0 1

Driver 3	
Width = 96	JP1 1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0
Start = 0	JP2 1 2 3 4 5 6 7 8 9 10 11 12 0 0 0 0 0 1 1 0 0 0 0 0

Driver 2	
Width = 96	JP1 1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0
Start = 96	JP2 1 2 3 4 5 6 7 8 9 10 11 12 1 0 0 0 0 1 1 0 0 0 0 1

16 meters by 9 meters

By now you should have a good understanding of the steps involved in configuring fairly simple sizes. The following example will not illustrate the grid but will present all dipswitch settings in a table format and relevant system information for a 16 by 9 meter matrix. J1~J8 are used for Net OUT2 only.

Driver	
1	Width = 64 JP1 1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 0 0 0 0 0 0 0 0 0
	Start = 192 JP2 1 2 3 4 5 6 7 8 9 10 11 12 1 1 1 0 0 1 1 0 0 0 0 1
2	Width = 64 JP1 1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0
	Start = 192 JP2 1 2 3 4 5 6 7 8 9 10 11 12 0 1 1 0 0 1 1 0 0 0 0 0
3	Width = 64 JP1 1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0
	Start = 192 JP2 1 2 3 4 5 6 7 8 9 10 11 12 0 0 0 0 0 1 1 0 0 0 0 1
4	Width = 64 JP1 1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0
	Start = 192 JP2 1 2 3 4 5 6 7 8 9 10 11 12 1 1 0 0 0 1 1 0 0 0 0 0
5	Width = 64 JP1 1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0
	Start = 192 JP2 1 2 3 4 5 6 7 8 9 10 11 12 1 0 0 0 0 1 1 0 0 0 0 1
6	Width = 64 JP1 1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0
	Start = 192 JP2 1 2 3 4 5 6 7 8 9 10 11 12 0 0 0 0 0 1 1 0 0 0 0 0

Driver	
7	Width = 64 JP1 1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 0 0 0 0 0 0 0 0 0
	Start = 192 JP2 1 2 3 4 5 6 7 8 9 10 11 12 1 1 1 0 0 1 1 0 0 0 0 1
8	Width = 64 JP1 1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0
	Start = 192 JP2 1 2 3 4 5 6 7 8 9 10 11 12 0 1 1 0 0 1 1 0 0 0 0 0
9	Width = 64 JP1 1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0
	Start = 192 JP2 1 2 3 4 5 6 7 8 9 10 11 12 0 0 0 0 0 1 1 0 0 0 0 1
10	Width = 64 JP1 1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0
	Start = 192 JP2 1 2 3 4 5 6 7 8 9 10 11 12 1 1 0 0 0 1 1 0 0 0 0 0
11	Width = 64 JP1 1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0
	Start = 192 JP2 1 2 3 4 5 6 7 8 9 10 11 12 1 0 0 0 0 1 1 0 0 0 0 1
12	Width = 64 JP1 1 2 3 4 5 6 7 8 9 10 11 12 0 1 0 1 0 0 0 0 0 0 0 0
	Start = 192 JP2 1 2 3 4 5 6 7 8 9 10 11 12 0 0 0 0 0 1 1 0 0 0 0 0

System Information


Vertical lines: 512
 Horizontal lines: 384
 Resolution: 512 x 384 pix
 Size: 16m x 9m
 Panels: 768 (32 x 24)
 Power: 96 x 20A (110V)
 Drivers: 12
 Net Out: Out1 & Out2
 J Ports: Out1: J1 ~ J16
 J Ports: Out2: J1 ~ J8

Special Applications

Pattern 1

System Information

Vertical lines: 208
 Horizontal lines: 96
 Resolution: 208 x 96 pix
 Size: 6.5m x 3m
 Panels: 52 (pattern)
 Power: 3 x 20A (110V)
 Drivers: 4
 Net Out: Out 1
 J Ports: 1 ~ 6

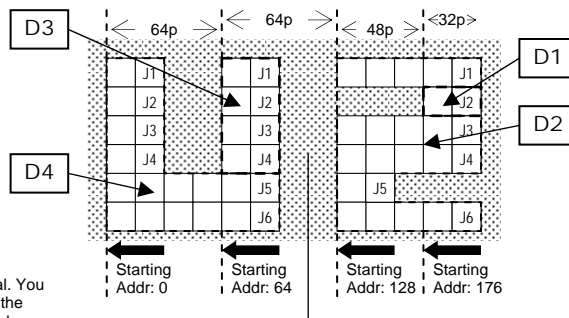


This space is optional. You may choose to have the video signal displayed continuously regardless of the gap.

Driver		JP1	1	2	3	4	5	6	7	8	9	10	11	12
1	Width = 32	JP1	1	2	3	4	5	6	7	8	9	10	11	12
	Start = 176	JP2	0	1	0	0	0	0	0	0	0	0	0	0
2	Width = 48	JP1	1	2	3	4	5	6	7	8	9	10	11	12
	Start = 128	JP2	1	1	1	0	0	1	1	0	0	0	0	1
3	Width = 64	JP1	1	2	3	4	5	6	7	8	9	10	11	12
	Start = 64	JP2	0	1	0	1	0	0	0	0	0	0	0	0
4	Width = 64	JP1	1	2	3	4	5	6	7	8	9	10	11	12
	Start = 0	JP2	0	1	0	1	0	0	0	0	0	0	0	0

Pattern 2

System Information

Vertical lines: 96
 Horizontal lines: 96
 Resolution: 96 x 96 pix
 Size: 3m x 3m
 Panels: 20 (pattern)
 Power: 1 x 20A (110V)
 Drivers: 3
 Net Out: Out 1
 J Ports: 1 ~ 5

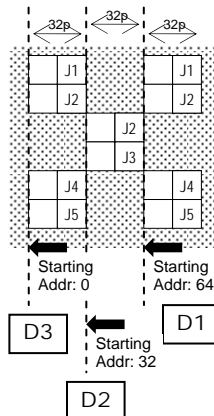

Driver		JP1	1	2	3	4	5	6	7	8	9	10	11	12
1	Width = 32	JP1	1	2	3	4	5	6	7	8	9	10	11	12
	Start = 176	JP2	0	1	0	0	0	0	0	0	0	0	0	0
2	Width = 48	JP1	1	2	3	4	5	6	7	8	9	10	11	12
	Start = 128	JP2	1	1	1	0	0	1	1	0	0	0	0	1
3	Width = 64	JP1	1	2	3	4	5	6	7	8	9	10	11	12
	Start = 64	JP2	0	1	0	0	0	1	1	0	0	0	0	0

a

4. Appendix

Returns Procedure

Returned merchandise must be sent prepaid and in the original packing, call tags will not be issued. Package must be clearly labeled with a Return Merchandise Authorization Number (RA #). Products returned without an RA # will be refused. Call CHAUVET and request RA # prior to shipping the fixture. Be prepared to provide the model number, serial number and a brief description of the cause for the return. Be sure to properly pack fixture, any shipping damage resulting from inadequate packaging is the customer's responsibility. CHAUVET reserves the right to use its own discretion to repair or replace product(s). As a suggestion, proper UPS packing or double-boxing is always a safe method to use.

Claims

Damage incurred in shipping is the responsibility of the shipper; therefore the damage must be reported to the carrier upon receipt of merchandise. It is the customer's responsibility to notify and submit claims with the shipper in the event that a fixture is damaged due to shipping. Any other claim for items such as missing component/part, damage not related to shipping, and concealed damage, must be made within seven (7) days of receiving merchandise.

Maintenance

To maintain optimum performance and minimize wear, fixtures should be cleaned frequently. Usage and environment are contributing factors in determining frequency. As a general rule, fixtures should be cleaned at least twice a month. Dust build up reduces light output performance and can cause overheating. This can lead to reduced lamp life and increased mechanical wear. Be sure to power off fixture before conducting maintenance.

Unplug fixture from power. Use a vacuum or air compressor and a soft brush to remove dust collected on external vents and internal components. Clean all glass when the fixture is cold with a mild solution of glass cleaner or Isopropyl Alcohol and a soft lint free cotton cloth or lens tissue. Apply solution to the cloth or tissue and drag dirt and grime to the outside of the lens. Gently polish optical surfaces until they are free of haze and lint. Do not touch the lamp glass when cleaning fixture. Oil and dirt can cause damage and premature aging of the lamp. In the event that the lamp is touched or becomes dirty, clean the lamps with an alcohol wipe.

The cleaning of internal and external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the unit's optics. Clean with soft cloth using normal glass cleaning fluid. - Always dry the parts carefully. - Clean the external optics at least every 20 days. Clean the internal optics at least every 30/60 days.

Technical Specifications (per panel)

WEIGHT & DIMENSIONS

Length.....	19.8 in (501 mm)
Width.....	19.8 in (501 mm)
Height.....	4.0 in (101 mm)
Weight with mounting hardware.....	28 lbs (12.7 kg)

POWER

Operating Voltage.....	110V 60 Hz or 230V 50 Hz
Power consumption.....	109W peak @ 120V
Inrush power.....	136W @ 120V

LIGHT SOURCE

LED's.....	2304 (768 red, 768 green, 768 blue)
------------	-------------------------------------

PHOTO OPTIC

Viewing Angle.....	120°
Pixel Pitch.....	.31mm
Pixels per panel.....	.256

FUSE

Main.....	20mm Glass 8A Fast Blow
-----------	-------------------------

CONTROL & PROGRAMMING

Data input.....	VGA connector
Data output.....	VGA connector

ENVIRONMENTAL

Ambient temperature.....	14° – 104°F (-10° – 40°C)
--------------------------	---------------------------

ORDERING INFORMATION

DV Wall™ Panel Set (4 panels in flight case).....	DVM-HR
DV Wall™ Studio (software, PCI card, cables).....	DVW Studio
DV Wall™ Driver.....	DVW Driver
Flying Bracket for DVM-HR.....	DVM-BR

Technical Support

Address: Service Dept.
 3000 N 29th Ct, Hollywood, FL 33020 (U.S.A.)
 Support (Email): tech@chauvetlighting.com
 Telephone: (954) 929-1115 - (Press 4)
 Fax: (954) 929-5560 - (Attention: Service)
 Website: <http://www.chauvetlighting.com>