


USER


NO.CX-10W


(WIFI)


Available on the


PLEASE CAREFULLY READ THE INSTRUCTIO MANUAL BEFORE FLYING.

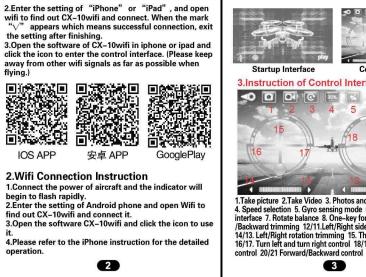


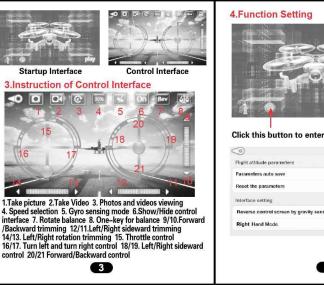


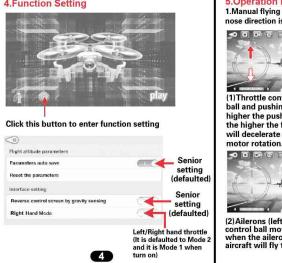

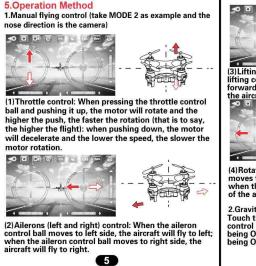


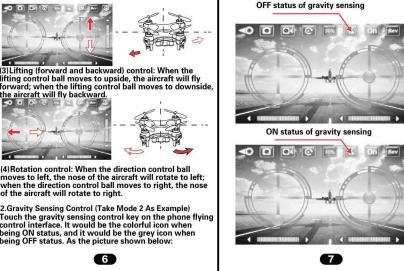

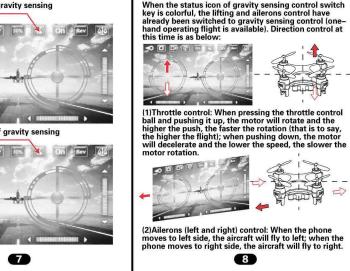

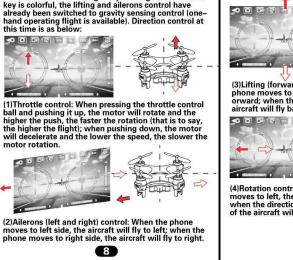

(3)Lifting (forward and backward) control: When phone moves to forward side, the aircraft will fly aircraft will fly backward moves to left, the nose of the aircraft will rotate to left when the direction control ball moves to right, the nose of the aircraft will rotate to right.

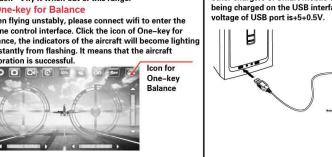

the charger, and then insert the USB charging line into If need to replace the battery, please select t When the green indicator is flashing, it represents it is orresponding network for connection after exit the under charging. When the green indicator is lighting

when successfully connection The maximum control radius of WIFI is 15 meters and don't fly it when out of this range.

nhone control interface. Click the icon of One-key for

constantly, it represents it is fully charged. Besides Appl. charger, this USB charging line can be connected with a

other chargers of Smart mobile or movable power or being charged on the USB interface on the car. The

In order to strengthen the quality of

video feedback, please pull out the antenna from the bottom of the body

shell when using it and keep the

e installed to provide a separation distance of at least 20 cm from all person

transmitter. End-users and installers must be provided