



MOTOMANUAL

Audex™
Jacket Series

User's Guide
DRAFT 16
10/6/2005

Audex™ Jacket Series

The Audex Jacket is the first to combine coveted Burton® apparel with leading Bluetooth® wireless technology from Motorola. This cutting edge technology provides music and wireless communications on or off the mountain. Answer calls from friends and control your favorite tunes using the integrated control panel on your sleeve. Free yourself to enjoy other activities while your compatible mobile phone and iPod® stay in your pockets and out of your way.

The Audex Jacket features integrated stereo speakers in the hood, a microphone and chest/battery module embedded within the inside pocket of the jacket, as well as a control panel on the sleeve that allows remote operation of your phone and iPod. When you prefer a more secluded experience, enjoy instant privacy by listening to music or conducting calls with a wired headset plugged into the 3.5mm headset jack on the chest module. When it is time to wind down, the removable electronics make it easy to clean your jacket.

Package Contents

- Control Module
- Chest Module
- Speakers (1 left, 1 right)
- Microphone
- Battery
- Wall Charger (with adapters)
- User's Guide (this booklet)
- Quick Start Guide
- Warranty Leaflet (Europe)

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196
www.hellomoto.com

1-877-MOTOBLU
1-888-390-6456 (TTY/TDD United States for hearing impaired)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. iPod is a registered trademark of Apple Computer, Inc., registered in the U.S. and other countries. All other product or service names are the property of their respective owners.

© Motorola, Inc., 2005.

Caution: Changes or modifications made in the phone or Bluetooth module, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual Number: 6809497A44-0

Burton
Global Product Services
USA 800 881 3183 JAPAN 03 5738 2555
EUROPE 00800 287 866 13 / +43(0) 512 230 230
www.burton.com

Audex is a trademark of Burton Snowboards. Burton is a registered trademark of Burton Snowboards.

Contents

 
Audex Components	4
Installing Your Audex Components	4
Charging the Battery	5
Installing Your Battery	5
Basic Audex Operation	6
Control Module Keys	6
Control Module Display	7
Control Module Menus	9
Using Your Audex Jacket	11
Turning Your Audex Jacket On & Off	11
Idle Mode	11
Pairing Your Audex Jacket and Phone	12
Playing Music	12
Making and Receiving Calls	13
Locking/Unlocking Control Module Keys	15
Using Privacy Mode	15
Customizing Your Audex Jacket	16
Setting Ring Style	16
Setting Ring Tones	16
Turning Bluetooth® Indicator Light On and Off	16
Saving Battery Power	16
Setting Time	17
Maintenance and Care	17
Care	17
Washing Instructions	17
European Union Directives Conformance Statement	18
Caring for the Environment by Recycling	18
Recycling Mobile Phones and Accessories	18
Safety and General Information	18

Support	20
Consumer Warranty Coverage	20
Audex Components by Motorola Limited Warranty –	
North America	22
Wireless Phone Safety Tips	24
Industry Canada Notice to Users	25
FCC Notice to Users	25
Export Law Assurances	26

Audex Components

Take a moment before you get started to familiarize yourself with the components of your new Audex Jacket. The following components are provided in the box included with your jacket:

 
- Control Module
- Chest Module
- Speakers (2)
- Microphone
- Battery

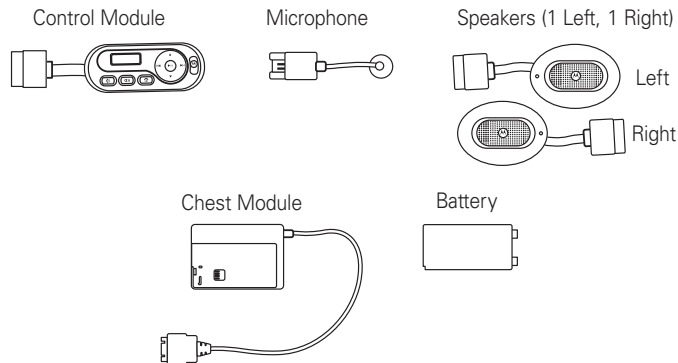

Installing Your Audex Components

For instructions on installing the components on your jacket, see the *Audex Jacket Series Quick Start Guide* (included in your box of components).

Once installed and connected, the components are located on the jacket as shown below:

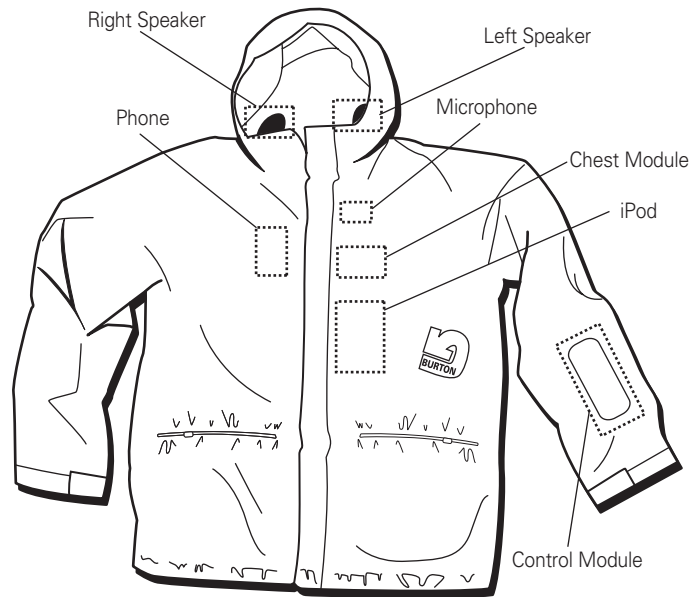

The following items must be purchased separately:

- Bluetooth Phone
- iPod (requires iPod with Dock Connector)

Charging the Battery

Your Audex system utilizes a rechargeable battery that is installed in the Chest Module. The battery powers all electronic components that come with your jacket.

Follow these steps to charge the battery:

- 1 If necessary, install the proper country power adapter on the wall charger connector as shown in the example.

The following power adapters are provided with your jacket:

 
- UK (SYN7455A)
- Europe (SYN7456A)
- Australia / New Zealand (SYN8127B)

- 2 Plug the charger into the battery's charging port as shown.

Be sure to align the plug correctly. If the plug does not connect to the unit easily, try flipping it over and re-inserting.

 
 
- 3 Plug the charger into an electrical wall outlet.

The red indicator light turns on when the battery is charging. When the battery is fully charged (about 2 hours), an additional green indicator light turns on.

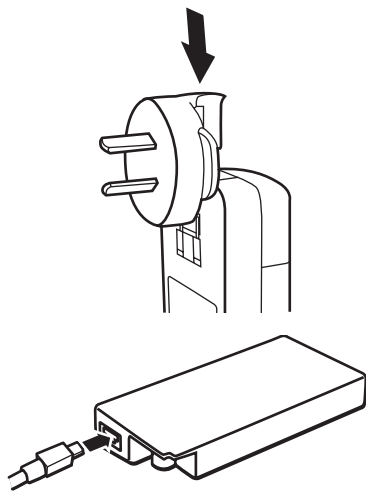

Installing Your Battery

Follow the steps shown in the diagram to install the battery into the Chest Module.

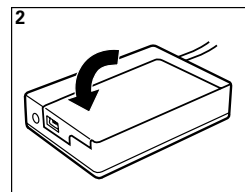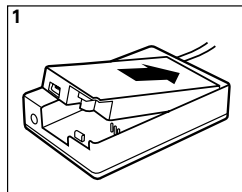

Battery Tips

Battery performance depends on network configuration, signal strength, operating temperature, features selected, and voice, data, and other application usage patterns.

 
- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
- When storing your battery, keep it partially charged in a cool, dark, dry place.
- Never expose batteries to temperatures below -10°C (14°F) or above 60°C (140°F).
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.

Warning: Never dispose of batteries in a fire because they may explode.

Before using your Audex system, read the battery safety information in "Safety and General Information" on page 18.

Basic Audex Operation

The Audex system is operated using the Control Module. The Control Module furnishes a combination of buttons and a display screen to operate your phone and iPod with your jacket. Here's a quick anatomy lesson of the Control Module.

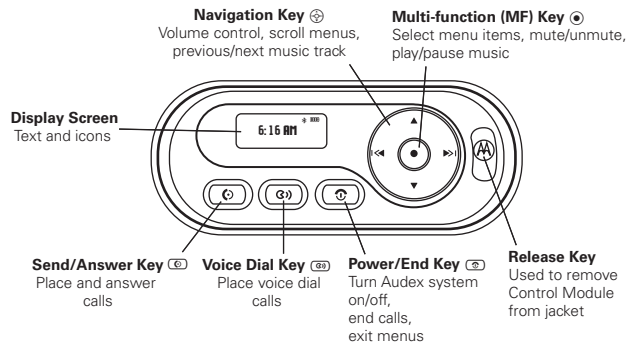
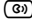 




Control Module Keys

Several push button keys and a multi-position navigation key allow you to perform tasks with your phone and iPod using the Control Module on your jacket.

 
Push Button Keys

Push button keys are used to operate the Control Module. Each key provides multiple functions when used within the jacket

Key	Function
 Send / Answer	<ul style="list-style-type: none">answer an incoming callplace call (using a recent received or dialed phone number)access dialed call list
 Voice Dial	<ul style="list-style-type: none">place call (your phone must support voice dial features)
 End / Power	<ul style="list-style-type: none">power on/off Audex systemend a call (connected or on hold)ignore an incoming callreturn to Idle screen (from iPod or Menu screen)
 Multi-function	<ul style="list-style-type: none">play / pause songselect menu itemshold / lock Control Module keysmute / unmute call

Navigation Key

The navigation key is a multi-position controller that provides easy scrolling capabilities on the Control Module.

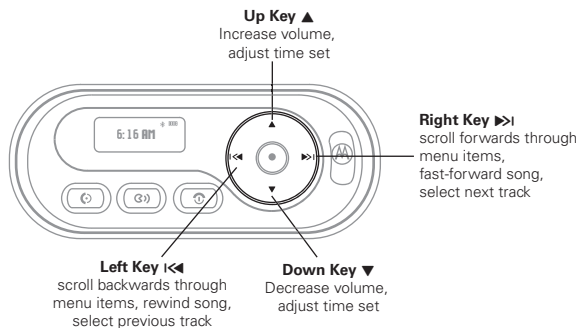

Each position on the navigation key provides multiple functions:

Key	Function
▲ Up	<ul style="list-style-type: none">• increase volume• adjust time value in time setting
▼ Down	<ul style="list-style-type: none">• decrease volume• adjust time value in time setting

Key	Function (Continued)
◀◀ Left	<ul style="list-style-type: none">• access main menu (from Idle screen)• scroll backward through menu items• start song over• play previous song (press twice)• rewind song (press and hold)
▶▶ Right	<ul style="list-style-type: none">• access main menu (from Idle screen)• scroll forward through menu items• skip to next song• fast-forward song (press and hold)

Control Module Display

A display panel on the Control Module provides text and indicators for status, navigation, and current activity when using your Audex jacket.

There are three main areas on your display panel:

- Status
- Navigation
- Current Activity

Status

The status area provides jacket operational and configuration status, and is highlighted in the figure below:



The following indicators are displayed in the status area:

Indicator(s)	Indicates
	Battery charge level
	Bluetooth feature is operating in jacket: <ul style="list-style-type: none">Flashing indicates jacket in pairing modeSteadily lit indicates Bluetooth connection with phone
	Loud phone ring style
	Soft phone ring style
	Silent phone ring style

Navigation

The navigation area provides iPod operation status and menu item index, and is highlighted in the figure below:



The following indicators are displayed in the navigation area:

Indicator(s)	Indicates
	Menu/iPod list index (icon shown is example)
	Menu/iPod selection list
	Menu selection
	iPod song selected
	iPod song playing
	iPod song paused
	Starting song over / Play previous song
	Skipping to next song
	Rewinding song
	Fast-forwarding song
	Dialed calls list
	Received calls list

Current Activity

The current activity area displays iPod and phone operational status and text for menus, and is highlighted in the figure below:



The following indicators are displayed in the current activity area:

Indicator(s)	Indicates
	Call dialing
	Call connected
	Call ended
	Call failed
	Incoming call
	Missed call
	Call on hold
	Say name (voice dial)
	Phone connected (to jacket)
	iPod connected (to jacket)
	iPod or phone disconnected
	Volume level
	Selected item (in menus)
	Unselected item (in menus)
	Back (in menus)
	Hold / lock mode

Control Module Menus

A menu interface is provided that allows you to perform certain operating and customizing tasks when using your jacket.

There are two different sets of menus on the Control Module:

- main menu
- calling menu

Main Menu





The following selections are provided in the main menu:

Menu	Selection(s)	Description	See:
1) iPod	Back to iPod	returns to previous played song	
		Note: Only provided when iPod song is paused	
	Playlists	provides list of playlists on the iPod	“Selecting a Song to Play” on page 12
	Artists	provides list of artists on the iPod	
	Albums	provides list of albums on the iPod	
	Songs	provides list of songs on the iPod	
	Back	returns to previous menu	

Menu	Selection(s)	Description	See:
2) Recent Calls	Received Calls	access calls received on the phone	"Making a Call Using a Recent Call Phone Number" on page 14
	Dialed Calls	access calls dialed on the phone	
	Back	returns to previous menu	
3) Ring Styles	Style	provides list of ring styles for jacket	"Setting Ring Style" on page 16
	Ring Tones	provides list of ring tones for jacket	
	Back	returns to previous menu	
4) Bluetooth	Find Me	places jacket into Bluetooth pairing mode (for 3 minutes)	"Pairing Your Audex Jacket and Phone" on page 12
	Bluetooth Light	enables/disables Bluetooth indicator light on Control Module	
	Back	returns to previous menu	
5) Battery Save	On	enables battery save mode	"Saving Battery Power" on page 16
	Off	disables battery save mode	
	Back	returns to previous menu	

Menu	Selection(s)	Description	See:
6) Set Time	<Time>	enables to set time	"Setting Time" on page 17
	Back	returns to previous menu	
7) Back	N/A	exits main menu and returns you to Idle Mode	

Use the following tips for navigating the main menu:

- The main menu is accessed by first pressing the  key, then pressing the  and  keys to navigate through the initial menu selections.
- Use the  key to make menu selections.
- Use the **Back** selection in each menu to step backwards.
- iPod menu is only accessible when the iPod is connected in the jacket.



 
Calling Menu

The following selections are provided in the calling menu:

Note: The calling menu is only accessible during a call.

Menu	Description
1) Mute/Unmute	mutes/unmutes microphone during a call
2) Hold/Resume	places on hold/resumes connected call
3) Call Time	displays connected call duration
4) Back	exits calling menu


Use the following tips for navigating the main menu:

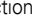- While in a call, press the  and  keys to navigate through the menu selections.
- Use the  key to make menu selections.
- Use the **Back** selection in each menu to move backwards.

Using Your Audex Jacket

This section provides instructions on performing operating tasks with Audex.

 
Turning Your Audex Jacket On & Off

To turn on or off Audex, press and hold  key on the Control Module for at least 5 seconds until the Motorola logo is displayed.

When turned on, the Audex system establishes a connection with your phone and iPod (however, the connection assumes an established Bluetooth link exists with your phone).

Note: Ensure your phone's Bluetooth feature is turned on and is paired with the jacket. To pair your phone and jacket, see "Pairing Your Audex Jacket and Phone" on page 12.

- When connecting to the iPod, the iPod Connected icon is displayed for a few seconds.

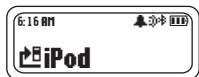

- When connecting to the phone, the Phone Connected icon is displayed for a few seconds.



- Once the Audex jacket is connected to the phone and iPod, the iPod menu is displayed.



- If the phone is already on a call when connecting to the Audex jacket, the Call Connected icon is displayed for a few seconds.




- If only the phone is connected to the jacket (and the phone is not currently on a call), the Idle Mode screen is displayed.
- While connected to the phone, the Control Module light indicator around the navigation key flashes quickly every 3 seconds
- When disconnecting your phone or iPod, the Disconnected icon is displayed for a few seconds.






Idle Mode

When not operating the phone or iPod, the Audex system is placed in Idle mode. When in Idle mode, the following screen is displayed:

 


Upon operating the phone or iPod, the clock is minimized and displayed in the upper left of the display screen. If a song is paused, the Pause () is also displayed.

Pairing Your Audex Jacket and Phone

- 1 Press  key to return to Idle Mode screen. If a song is playing, it is paused.
- 2 Select **Bluetooth** in main menu and press  key.
- 3 Select **Find Me** and press  key.

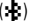 


The Audex jacket is placed in Bluetooth pairing mode for 3 minutes (the Bluetooth icon  remains flashing during pairing mode).

- 4 Using your phone, perform a Bluetooth device discovery (refer to your phone manual for detailed instructions on accessing Bluetooth and putting it in device discovery mode). For most Motorola phones, you can find the Bluetooth option under the Main Menu or Connections menu:

After accessing Bluetooth:

- a Select **Look for Devices**.
The phone lists Bluetooth devices it finds.
- b Select **Audex**.
- c Select **OK** or **Yes** to pair your jacket with your phone.
- d Enter the passkey: **0000**
- e Select **OK**.

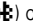



 
When your Audex jacket successfully pairs with your phone, the light indicator around the navigation key flashes rapidly 5 times and the Bluetooth icon  changes from flashing to steadily lit. Each time you power the Control Module on/off, the jacket tries to establish a Bluetooth connection with the same phone. If after 30 seconds, that phone is not found, the jacket automatically goes into Bluetooth pairing mode (Bluetooth icon flashes).

 
Note: Step 4 is for most Motorola phones. For other phones, see your phone's user's guide for instructions on performing a Bluetooth device discovery.

Playing Music


Selecting a Song to Play


To listen to a song, you must first select from your iPod.

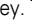
- 1 Press  key to return the Idle Mode screen, then select **iPod** in main menu and press  key.
- 2 Select song selection category and press  key.
- 3 Select playlist/album/artist and press  key.
- 4 Select song and press  key. The iPod Song icon is displayed.

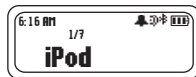 


Playing a Song

Once you select a song, you can play it by pressing the  key.



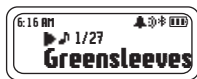


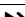 


Note: When a song is selected, the Song () icon is displayed. To select a song, see “Selecting a Song to Play”.

 
The iPod Play () icon is displayed and the song is played on your jacket.





The song title and artist are displayed scrolling across the screen.

Music Features

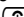To do this...	Do this
Pause a song	Press  key.
Change the song volume	Press the  and  keys.
Fast-forward a song	Press and hold  key.
Rewind a song	Press and hold  key.
Skip to next song	Press  key. (If playing last song on song list. song is paused).
Start song over	Press  key. (If playing first song on song list. song is paused).
Play the previous song	Press  key twice.

When playing, the song is automatically paused when you make or receive a call, or press the  key.

 
To continue to play the song (once phone call is ended), do one of the following:

- Quick press (tap) the  key.
- First select **Back To iPod** in the iPod menu, then press  key.

Making and Receiving Calls

Making a Voice Dial Call

Note: To make a voice dial call, your phone must support voice dial features.

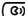- 1 Press  key. If a song is playing, it is paused.



- 2 Speak name of person to call. Name is repeated over jacket speaker and the Call Dialing icon is displayed.



Once connected, the Call Connected icon is displayed.



 
Making a Handset Dial Call


- 1 Dial the phone number using the phone handset. You will hear dialing over the jacket speakers. (If a song is playing, it is paused.)
- 2 Press Send key on the phone.


Once connected, the Call Connected icon is displayed.




Making a Call Using a Recent Call Phone Number

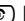- 1 Press  key to return to Idle Mode screen. If a song is playing, it is paused.


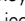 
Shortcut: Press  key from the Idle Mode screen to directly access the Dialed Calls menu (skipping steps 2 and 3).

- 2 Select **Recent Calls** in main menu and press  or  key.



 
- 3 Select **Dialed Calls** or **Received Calls** and press  key.



- 4 Select phone number and press  or  key. The Call Dialing icon is displayed.




Once connected, the Call Connected icon is displayed for a few seconds. Then the caller ID dialed is displayed during the call.

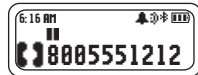

Receiving a Call




When an incoming call is active, the Call Dialing icon and caller ID is displayed.




- **To answer an incoming call**, press the  key. If a song is playing, it is paused.

Once connected, the Call Connected icon is displayed for a few seconds. If available, the phone number dialed is displayed during the call.



- **To ignore an incoming call**, press the  key.
- **For calls that are missed**, the Missed Call () icon is displayed until any button is pressed on the Control Module. If the  key is pressed, the Received Calls menu is displayed.



For all instances of receiving an incoming call, the iPod will be paused if playing music. To continue playing music, press the  key.

Ending a Call








To end a call, press  key. The Call Ended icon is displayed.




When the call ends, if a song is paused, do one of the following to continue to play the song:


- Quick press (tap) the  key.
- First select **Back To iPod** in the iPod menu, then press  key.

Calling Features



To do this...	Do this
Mute / unmute a call	Press  key when on a call, OR Select Mute/Unmute in calling menu and press  key. While call is muted, Muted is displayed next to the Call Connected icon. When call is unmuted, Connected text is redisplayed.
Change the call volume	Press the  and  keys.
Hold / resume a call	Select Hold/Resume in calling menu and press  key. Call On Hold icon is displayed.
View call time	Select Call Time in calling menu and press  key.
End a call on hold	Press  key.

Locking/Unlocking Control Module Keys

To lock keys on the Control Module, press and hold  key for 5 seconds.

The Hold/Lock Mode  icon is displayed and the Control Module keys are disabled (locked).

 


To unlock keys on the Control Module, press and hold  key for 5 seconds until the Hold/Lock Mode  icon is no longer displayed.

Using Privacy Mode

Your Audex system allows you to listen to audio in privacy using headphones. In privacy mode, all audio from your phone or iPod is output to your headphones (while the speakers in the jacket hood are silent).



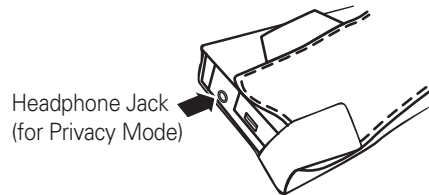

To use privacy mode, connect your headphones into the headphone jack on the Chest Module.

 


Note: Chest Module holder design may vary among jackets.

Customizing Your Audex Jacket




Setting Ring Style

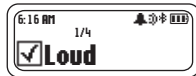- 1 Press  key to return to Idle Mode screen. If a song is playing, it is paused.
- 2 Select **Ring Styles** in main menu and press  key.
- 3 Select **Styles** and press  key.
- 4 Select ring style and press  key. A Checkmark icon is displayed.




Setting Ring Tones

Note: Audex ringtones are used only when the phone is in silent or vibrate mode. Otherwise, the phone's ringtones are used.

- 1 Press  key to return to Idle Mode screen. If a song is playing, it is paused.
- 2 Select **Ring Styles** in main menu and press  key.
- 3 Select **Ring Tones** and press  key.







 
- 4 Select a ringer and press  key. A Checkmark icon is displayed.



Turning Bluetooth® Indicator Light On and Off



Note: This procedure turns the Bluetooth indicator light on/off on the Control Module, but does not turn off the Audex Bluetooth connection or link features.

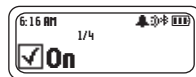- 1 Press  key to return to Idle Mode screen. If a song is playing, it is paused.
- 2 Select **Bluetooth** in main menu and press  key.
- 3 Select **Bluetooth Light** and press  key.
- 4 Select **On** or **Off** and press  key. A Checkmark icon is displayed.




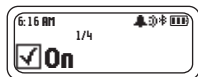 
Saving Battery Power

This procedure allows you to shorten the length of time that buttons and indicators remain lit on the Control Module (thereby extending battery life).








- 1 Press  key to return to Idle Mode screen. If a song is playing, it is paused.
- 2 Select **Battery Save** in main menu and press  key.

 


- 3 Select **On** or **Off** and press  key. A Checkmark icon is displayed.



Setting Time

- 1 Press  key to return to Idle Mode screen. If a song is playing, it is paused.
- 2 Select **Set Time** in main menu and press  key.
- 3 Adjust time as follows:
 - Press  and  keys to move between values (currently selected value flashes).
 - Press  and  keys to change value.
- 4 Press  key to commit changes.

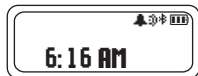

Maintenance and Care

Please use the following guidelines for proper maintenance and care of your Audex Jacket:

Care

- Allow jacket to completely dry after riding or exposure to moisture. Do not expose the Audex components to moisture.
- This jacket is a high-tech piece of apparel. Do not expose the Audex components to excessive force or impact. Be careful not to drop the Audex Jacket.

Washing Instructions

- **Excessive washing is not recommended.**
- Before washing the jacket, you must remove your iPod, phone, and all Audex Jacket components. See "Contents" on page 3 for a listing of all components. Warranty will no longer be valid if components are not removed prior to washing.
- Tuck in all cords, close pockets, and zip the jacket closed.
- Follow washing instructions on the inside of the jacket. These are as follows:
 - Machine Wash Warm (Below 30c) using powdered detergent. Rinse thoroughly.
 - DO NOT Bleach.
 - Tumble dry low heat, or hang dry in shade.
 - DO NOT iron.
 - DO NOT dry clean.
 - DO NOT use fabric softener.
 - Periodically replenish water repellent finish – spray on only.
- Allow your jacket to completely dry before reinstalling the Audex electronic components.

European Union Directives Conformance Statement

Hereby, Motorola declares that this product is in compliance with



- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte

Caring for the Environment by Recycling



When you see this symbol on a Motorola product, do not dispose the product with household waste.

Recycling Mobile Phones and Accessories



The rechargeable batteries that power this product must be disposed of properly and may need to be recycled.

In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region.

Warning: Never dispose of batteries in a fire because they may explode.

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR DEVICE.

Safety Information: Wireless Devices

Electromagnetic Interference

Note: Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

Facilities

To avoid electromagnetic interference and/or compatibility conflicts, turn off your device in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external radio frequency (RF) energy emitted by your device.

Aircraft

While aboard aircraft, turn off your device when instructed to do so. Any use of the device must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Hearing Aids: Some devices may interfere with some hearing aids. In the event of such interference, you may want to consult with your hearing aid manufacturer to discuss alternatives.

Other Medical Devices: If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Safety Information: General Use

USE AT YOUR OWN RISK

Do not use your headphones and cellular phone while riding or moving. Only use them while waiting for the lift, on the lift, waiting to ride, or in the lodge. Listening to tunes or talking on a phone while riding may prevent you from hearing others around you, distract you from riding safely, and limit your ability to hear what your edges are doing on the snow. All of these can cause loss of control and an accident possibly resulting in injury or death to you or others.

Avoid Distraction

Using headsets while operating a motor vehicle, motorcycle or bicycle is dangerous, and is illegal in some states. Check your local laws. Use caution while using your Audex Jacket Series when engaging in ANY activity that requires your full attention. Avoid placing or receiving calls while driving an automobile, motorcycle, equipment or any other motorized mode of transportation to reduce the risk of accident or injury.

Avoid Hearing Damage

Using the headset at high volume may result in permanent hearing loss. If you experience ringing in your ear, reduce the volume or discontinue using Audex Jacket Series. With continued use at high volume, your ear may become accustomed to the sound level, which may result in permanent damage to your hearing. Keep Audex Jacket Series volume at a safe level.

Avoid Moisture

It is important to properly dry jacket after every use by hanging in a warm, dry location. Do not expose the Audex components to moisture.

Location of Use

Audex Jacket Series is NOT to be used in the vicinity of any explosive or hazardous substances, as it may become volatile and cause serious injury or death.

See "Electromagnetic Interference" above for restrictions on using Audex Jacket Series in medical facilities and aboard aircraft.

Proper Care of your Audex Jacket

Do Not Modify or Dismantle

Do not attempt to open Audex Jacket system components. Doing so may expose you to electric shock and serious injury. There are no user-serviceable parts inside. Any attempt to alter or repair the module will void the limited warranty. Users are not permitted to make changes or modify the device in any way. Changes and modifications void the user's authority to operate the device. See 47 CFR Sec. 15.21.

Battery

Do not attempt to remove the internal rechargeable battery. Disposal of devices that contain internal rechargeable batteries must be in accordance with local environmental regulations.

For additional information on purchasing replacement batteries, please visit www.hellomoto.com.

Temperature

- Do not use your Audex Jacket in temperatures lower than -10°C / 14°F or higher than 60°C / 140°F. **Battery life may temporarily shorten in low-temperature conditions.**
- Do not recharge your Audex Jacket in temperatures lower than 0°C / 32°F or higher than 40°C / 104°F.
- Conditions inside a parked car can exceed this temperature range. Do not store your Audex Jacket in a parked car.
- Do not store your Audex Jacket in direct sunlight.
- Storing your Audex Jacket fully charged in high temperature conditions may permanently reduce the life of the battery.

Shock

Do not expose your Audex Jacket to excessive force or impact. Be careful not to drop your Audex Jacket.

Charger

Do not force the charging cable connector into the battery charging port. If the connector won't go into the port, try flipping the connector 180 degrees. Do not attempt to charge your Audex Jacket with any charger other than the one designed by Motorola specifically to be used with this product.

Cleaning

To clean components in your Audex Jacket System, use a soft cotton cloth to gently brush all surfaces to remove any grit or particles that might scratch the surfaces. Please note the following:

- The Audex Jacket components are not waterproof**, and excessive moisture will damage the electronic circuitry. Do not rinse or immerse any modules.
- Before cleaning, make sure the Audex Jacket System is unplugged from the wall charger.
- Do not clean the modules with soaps, detergents, ammonia, alkaline cleaners, abrasive cleaning compounds or solvents. These substances may leak into the module and damage the electronic circuitry.

Support

If your Audex Jacket does not function, please make sure that the battery is properly installed and charged, all electronics are properly secure with wiring connectors, and you have followed the instructions to install your system. For additional assistance, contact Motorola Product Support:

North America	www.hellomoto.com or 1.877.MOTOBLU
Australia	1300 138823
New Zealand	0508 6686 7652
Austria	0800 297 246
Belgium	027 001 660
Czech Republic	844 111 145
Denmark	43 48 8005
Eire	1850 909 555
Finland	0800 117 036
France	0803 303 302
Germany	18 035 050
Greece	210 6800 009
Hungary	40 200 800
Italy	199 501 160
Luxembourg	03420 808 296
Netherlands	020 201 5034
Norway	22 551 004
Poland	801 620 620
Portugal	214 101 001
Romania	(021) 3057999
Russia	(095) 785 0180
Slovakia	850 111 011
Spain	902 100 077
Sweden	08 445 1210
Switzerland	0800 553 109
Turkey	212 317 45 95
United Kingdom	0870 9010 555

Consumer Warranty Coverage

Thank you for purchasing your Audex jacket. The Audex jacket is covered by two different warranties: one that covers the Jacket and all sewn in components, and which is administered by Burton, and one that covers the Audex components, and which is administered by Motorola, Inc.

Audex Jacket Series Warranty Policy – Jacket and Sewn In Components Coverage

Burton warrants all products sold by Burton to be free of defects in material or workmanship for a period of one year from the date of purchase.

If a product is found to be defective by Burton, in its sole discretion, Burton's only responsibility shall be limited to repair or replacement of the defective product. Burton will not be responsible for any costs, losses, or damages incurred as a result of loss of use of product. This warranty is subject to the following limitations, in addition to any imposed by virtue of applicable law.

- The warranty applies only to Burton products purchased from a Burton Authorized Dealer and is valid for the original purchaser only.
- All products returned to Burton for warranty inspection must receive prior return authorization which can be given over the phone. Ship products freight prepaid and insured. Burton assumes no responsibility for products during shipment from the customer to our Warranty Department. Shipping charges are not refundable.
- Excluded from coverage under this warranty are the following:
 - Damage caused by misuse, abuse or neglect.
 - Normal wear and tear.
 - Damage caused by anything other than defects in materials or workmanship.
 - Any and all claims for consequential and incidental damages are excluded from coverage under this warranty although, some States do not allow the exclusion or limitation of incidental or consequential damages, and so the above limitation or exclusion may not apply to you.

ROCK OR RAIL DAMAGE AND ANY OTHER IMPACT RELATED DAMAGE IS NOT COVERED UNDER THIS WARRANTY.

- All coverage under this warranty is void if any modification, change or alteration has been made to the product that is not specifically authorized in writing by Burton.
- Repaired or replaced products are covered for the remainder of the original warranty only.

- All warranty claims must be accompanied by the original purchase receipt from an Burton Authorized Dealer. Invoice or charge receipt must clearly identify the dealer.
- Burton products are not covered by any verbal warranties.

Audex Jacket Series Product Coverage – Jacket and Sewn In Components Coverage

Covered:

- Defective sewing.
- Defective zippers and attachment hardware.
- Velcro patches and/or snaps.
- Missing or broken drawstrings, cords and leashes.
- Internal wiring and electrical harnesses

Not Covered:

- Rips and tears.
- Fading (this includes UV damage).
- Pilling.
- Shrinking.
- Damage (including color bleeding and loss of waterproof qualities) resulting from improper washing or the use of improper detergents).

Audex Jacket Series Claims Procedure – Jacket and Sewn In Components Coverage

STEP ONE

Evaluate the Validity of the Claim

- Was the product purchased in the last 12 months?
- Does the damage appear to be attributable to defective materials or workmanship?
- Does the damage appear to be due to impact, abuse, negligence, or reactions to heat, solvents, or harsh detergents?

For specific instructions regarding different products, please consult the Warranty Guidelines.

If it appears to meet the "Covered" Guidelines in this manual, continue...

STEP TWO

CALL FOR A RETURN AUTHORIZATION (RA) NUMBER

- Dealers call 1-800-367-2951.
- Consumers call 1-800-881-3138.
- Tell us WHAT you are sending back - describe the product.
- Tell us WHY you are sending it back - describe the problem.
- Record the RA# and details in a log.

STEP THREE

PACK AND SHIP THE PRODUCT IMMEDIATELY!

- Include the original proof of purchase (receipt).
- Include a brief description of the problem and the RA#
- Mark the defect with masking tape if possible.
- Print the RA# clearly on the outside of the box.
- Ship the claim to:

Burton

Attn: Product Service RA# _____
 30 Community Drive Suite #3
 South Burlington, VT 05403

Customers are responsible for shipping charges to Burton.

Overnight and 2-Day shipments to Burton will be returned in the same manner at our expense.

*****W48 GOES INTO EFFECT WHEN WE RECEIVE THE PRODUCT.*****

(What is W48? This means the product will be on it's way back to you in 2 business days.)

Within 48 hours of receipt of product, the claim will be handled in one of the following ways:

- If the returned product is within the valid warranty period of one year and judged by Burton to be defective, we will repair or replace the product. **The warranty remains valid on repaired and replaced items for the remainder of the warranty coverage period.**
- If the problem is determined to be not covered under warranty but can be repaired, we will call with a quote, and to get authorization to proceed with the repair.
- If the problem is not covered under warranty, nor repairable, the product will be returned as is.

Audex Components by Motorola Limited Warranty – North America

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its wireless telephones, pagers and consumer two-way radios that operate via Family Radio Service or General Mobile Radio Service ("Products"), Motorola-branded or certified accessories sold for use with these Products ("Accessories"), including the Audex components manufactured by Motorola and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products Covered	Length of Coverage	Exclusions
A Products and Accessories as defined above, unless otherwise provided for below.	A One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.	<p>Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.</p> <p>Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.</p> <p>Wiring and other electrical harnesses. Wiring and other electrical harnesses integrated into clothing or wearable items and which connect Products or Accessories are excluded from coverage.</p>

Products Covered	Length of Coverage	Exclusions
1 Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	1 Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.	<p>Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) impact, collision or other contact with solid objects; (c) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (d) contact with solvents, adhesives, or other chemicals; (e) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (f) other acts which are not the fault of Motorola, are excluded from coverage.</p> <p>Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.</p> <p>Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.</p>

Products Covered	Length of Coverage	Exclusions
2 Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	2 Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.	Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.
3 Consumer and Professional Two-Way Radio Accessories.	3 Ninety (90) days from the date of purchase by the first consumer purchaser of the product.	Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.
4 Products and Accessories that are Repaired or Replaced.	4 The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.	
B Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk)	B Ninety (90) days from the date of purchase.	Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected. Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided "as is" and without warranty.

Who Is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	Phones: 1-800-331-6456 Pagers: 1-800-548-9954 Two-Way Radios and Messaging Devices: 1-800-353-2729
Canada	All Products: 1-800-461-4575
TTY	1-888-390-6456
For Accessories and Software , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF

ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Wireless Phone Safety Tips

Drive Safe, Call Smart SM

Check the laws and regulations on the use of wireless phones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. Contact www.motorola.com/callsmart for more information.

Your wireless phone lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your wireless phone while driving, remember the following tips:

Get to know your Motorola wireless phone and its features such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.

When available, use a handsfree device. If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original™ handsfree accessories available today.

Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.

Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and even heavy traffic can be hazardous.

Do not take notes or look up phone numbers while driving. Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.

Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic. If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.

Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.

Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident, or medical emergencies.¹

Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.¹

Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.¹

¹Wherever wireless phone service is available. (ITC00-011)

Industry Canada Notice to Users

Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device Ref IC RSS 210 Sec. 5.11. The term "IC:" before the certification/registration number only signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment. See Ref IC Self-Marking 6(f) and RSP-100 Sec. 4.

FCC Notice to Users

Users are not permitted to make changes or modify the device in any way. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade. (ITCO0-007)

