



Please read and keep all safety and use instructions  
Bitte lesen und bewahren Sie alle Sicherheits und Gebrauchsanweisungen auf  
Lees en bewaar alle veiligheids- en gebruiksinstructies  
Lea y use todas las instrucciones y conserve la seguridad.  
Lue ja säilytä kaikki turvallisuus- ja käyttöohjeet  
Lire et conservez les instructions de sécurité et le manuel d'emploi s'il vous plaît  
Si prega di leggere e conservare tutte le istruzioni di sicurezza e uso  
Venligst les og hold all sikkerhet og bruk instruksjon  
Por favor, leia e mantenha toda a segurança e use as instruções  
прочитайте и сохраните инструкцию по безопасности и использованию  
Prze czytaj i zachowaj wszystkie instrukcje dotyczące bezpieczeństwa i użytkowania  
Vänligen läs och håll all säkerhet och användningstruering  
Harap baca dan simpan semua instruksi keselamatan dan penggunaan  
모든 안전 및 사용 지침을 읽고 숙지하십시오  
全ての安全使用取扱説明書を読みください  
請閱讀並保留所有安全和使用說明  
請閱讀並保留所有安全和使用說明  
استخدموا التعليمات اأمان واستخدام الجهاز

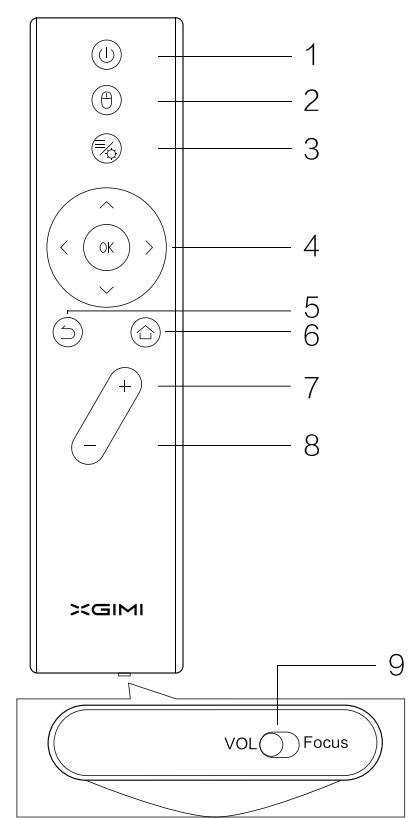


1. On/off 2. Air Mouse 3. Menu / Shortcut 4. OK / Directions 5. Return 6. Home  
7. Volume+ (Focus+) 8. Volume- (Focus-) 9. Function  
1. An/aus 2. Air Mouse 3. Menu / Verknüpfung 4. OK / Richtung 5. Zurück 6. Home  
7. Lautstärke + (Focus +) 8. Volume- (Focus-) 9. Funktion  
1. Aan/uit 2. Lucht muis 3. Menu / Snelkoppeling 4. OK / richting 5. Terugnkeer  
6. Volume+ (Focus+) 7. Volume- (Focus-) 8. Thuis 9. Functie  
1. Encendido/apagado 2. Ratón de aire 3. Menú / Acceso directo 4. OK / Direccion  
5. Regreso 6. Inicio 7. Volumen + (foco +) 8. Volumen - (foco -) 9. Función  
1. Poisk/paaltä 2. Ai-nhiini 3. Valtikko / Oikeute 4. OK / suunta 5. Paluu 6. Koti  
7. Äänenvoimakkuus + (tarkennus +) 8. Äänenvoimakkuus - (tarkennus -) 9. Toiminto  
1. Allumé / éteint 2. Souris d'air 3. Menu / Raccourci 4. OK / Direction 5. Retour 6. Accueil  
7. Volume + (focu +) 8. Volume - (focu -) 9. Fonction  
1. Acceso /s pento 2. Mouse volante 3. Menu / Acceso directo 4. ok / direzione 5. Ritorno  
6. Casa 7. Volume + (Focus+) 8. Volume- (Focus-) 9. Funzione  
1. Ligado / desligado 2. Rato do ar 3. Menu / Atalho 4. OK / direção 5. Retorno 6. Home  
7. Volume + (foco +) 8. Volume - (foco -) 9. Função  
1. PÅ/av 2. Air Mouse 3. Meny / Shortcut 4. ok / retningen 5. Return 6. Hjem  
7. Volum + (fokus +) 8. Volum - (fokus -) 9. Funktion  
1. Вкл/выкл 2. Воздушная мышь 3. Меню / ярлы 4. OK / направление 5. возвращение  
6. дома 7. громкость + (фокус +) 8. громкость - (фокус -) 9. функция  
1. On / off 2. Myz szpizmyczka 3. Menu / Shtrot 4. Ok / kierunek 5. Wróć 6. Strona główna  
7. Głośność + (ostrzeż +) 8. Głośność - (ostrzeż -) 9. Funkcja  
1. On / off 2. Air Mouse 3. Menu / Shortcut 4. ok / riktning 5. Return 6. Home  
7. Volym + (fokus +) 8. Volym - (fokus -) 9. Funktion  
1. Sedang/mati 2. Tikus udara 3. Menu / Pintasan 4. OK / Arah 5. Kembali 6. Rumah  
7. Volume+ (Focus+) 8. Volume- (Focus-) 9. Fungsi  
1. On / 오프 2. 에어 마우스 3. 메뉴 / 바로가기 4. OK / 방향 5. 돌아 가기 6. 홈  
7. 음량 + (포커스 +) 8. 음량 - (포커스 -) 9. 기능  
1. オン / オフ 2. エアーマウス 3. メニュー / ショートカット 4. OK / 方向 5. 戻る 6. ホーム  
7. 音量 + (フォーカス+) 8. 音量 - (フォーカス-) 9. 機能  
1. 开 / 关 2. 飞鼠 3. 菜单 / 快捷方式 4. OK/方向 5. 返回 6. 音量+ 7. 音量- (对焦+)  
8. 音量- (对焦-) 9. 功能  
1. 開 / 關 2. 飛鼠 3. 菜單 / 快捷方式 4. OK/方向 5. 返回 6. 音量+ 7. 音量- (對焦+)  
8. 音量- (對焦-) 9. 功能  
1. تشغيل / إيقاف 2. جهاز الفأر الجوي 3. القائمة / اختصار 4. OK / اتجاه 5. العودة 6. الرئيسية  
7. الصوت + (التركيز+) 8. الصوت - (التركيز-) 9. الوظيفة

1. Connect the power cable and press the power button  
1. Schließen Sie das Netzkabel an und drücken Sie den Netzschalter  
1. Sluit het nettoes aan en schuif het voorgepaneel naar beneden / omhoog  
1. Connecte el cable de alimentación y presione el botón de encendido  
1. Kytkie virtajohto ja paina virtapainiketta  
1. Connectez avec le câble d'alimentation et appuyez sur le bouton d'alimentation  
1. Collegare il cavo di alimentazione e premere qui l'interruttore  
1. Koble strömkkabelen og trykk på strømknappen  
1. Ligue o cabo de alimentação e pressione o botão de energia  
1. Подключите кабель питания и нажмите кнопку питания  
1. Podłącz kabel zasilający i przycisnąć przycisk zasilania  
1. Anslut strömkabeln och tryck på strömknappen  
1. Sambungkan kabel daya dan tekan tombol daya  
1. 전원 케이블을 연결하고 전원 버튼을 누릅니다  
1. 電源ケーブルを接続し、電源ボタンを押します  
1. 連接電源線並按功能鍵  
1. 連接電源線並按電源前面板  
1. 連接電源線並向下 / 向上推動前面板  
1. 連接電源線並向下 / 向上推動前面板  
1. 連接電源線並向下 / 向上推動前面板  
1. 連接電源線並向下 / 向上推動前面板


1. Power on / off  
Power on / off XGIMI Z2 series and H2 series

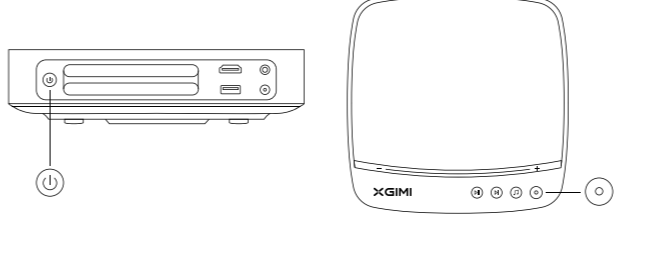

Power on/off XGIMI CC Aurora

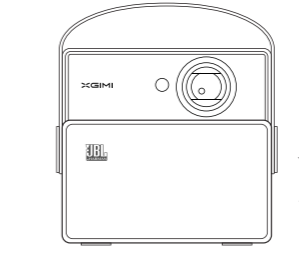


2. Remote Control Pairing

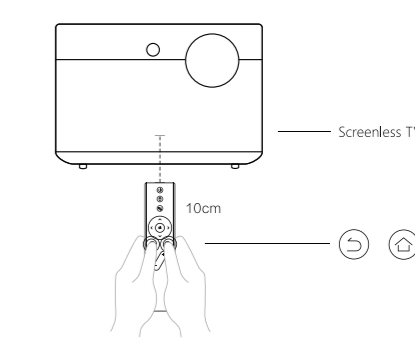

Chengdux XGimi Technology Co., Ltd.  
Building A4, Tianfu Software Park, High-tech zone, Chengdu, China  
186-28-87599891 www.xgimi.com service@xgimi.com

3. Auto Focus / Manual Focus

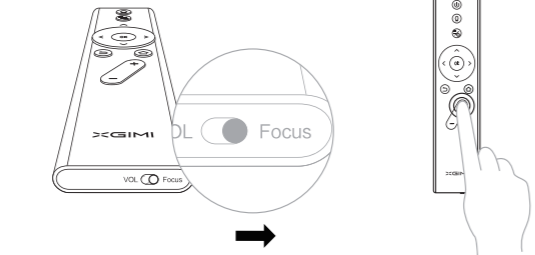

3. Switch the function key to the right, your device will automatically focus. Or press the +/- button to manually focus  
3. Schalten Sie die Funktionstaste nach rechts und das Gerät wird automatisch fokussieren. Oder drücken Sie die +/- Taste, um manuell zu fokussieren  
3. Zet de functie-toets naar rechts, uw apparaat zal automatisch scherpstellen. Of druk op de knop +/- om handmatig scherp te stellen  
3. Cambie la tecla de función a la derecha, su dispositivo se enfocará automáticamente. O presione el botón +/- para enfocar manualmente  
3. Valitse toimintopainikon oikealle. Laitte tarkentaa automaattisesti. Tai paina +/- painiketta manuaalisesti  
3. Glissez le bouton de fonction vers la droite pour que votre appareil se mette automatiquement au point. Ou appuyez sur le bouton +/- pour mettre au point manuellement  
3. Sposta il tasto funzione a destra, il tuo dispositivo si metterà a fuoco automaticamente. Oppure premere il pulsante +/- per mettere a fuoco manualmente  
3. Bytt funktions-tast til høyre, enheten vil automatisk fokusere. Eller trykk på +/--knappen for å fokusere manuelt  
3. Mude a tecla de função para a direita, o dispositivo irá focar automaticamente. Ou pressione o botão +/- para focar manualmente  
3. Переключите функциональную клавишу вправо, ваше устройство будет автоматически фокусироваться. Или нажмите кнопку +/- для ручной фокусировки  
3. Przelącz klawisz funkcyjny w prawo, urządzenie automatycznie ustawi ostrość. Lub nacisnąć przycisk +/-, aby ręcznie ustawić ostrość

Usage Notice

How to use the equipment correctly:

- Do not turn the lens towards the human eyes to avoid the strong light from the lens damage the eyes.
- Do not block the air inlet and outlet of the device to avoid damage to the internal electronic devices.
- Do not use paper, cloth, and other cleaning tools to wipe the lens directly to avoid damage to the lens; use clean air blowing to remove dust on the lens' surface.
- Do not use chemicals, cleaning agents or clean water to clean the device, as well as to avoid rain, moisture and mineral liquid corrosion circulating board.
- Please put the device and its parts and accessories in the place where children cannot touch.
- Please ensure that the device is being used in a dry and ventilated environment.
- Do not store the device in hot or cold environment, high (low) temperature will shorten the life span of electronic devices. Enabling operating environment could be 0-40°C.
- Do not put the device in any heating equipment (such as drying machine, microwave oven, and so on).
- Do not squeeze the device or place heavy objects on the device to avoid damage to the internal circuit board.
- Do not throw, knock, or violent shaking the device, resulting in damage to the internal circuit board.
- Do not attempt to disassemble device. If you have any questions, please contact the after-sales service of XGIMI.
- Do not maintain any products. If the device or any parts cannot work normally should promptly consult the after-sales service or factory repair.
- If the device has not been using for a long time, please cut off the power supply.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The user manual or instruction manual for an intentional or unintentional radiator shall caution the user that chesnor modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form. For a Class B digital device or peripheral, the instructions furnished the user shall include the following or similar statement, placed in a prominent location in the text of the manual. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-- Reorient or relocate the receiving antenna.  
-- Increase the separation between the equipment and receiver.  
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-- Consult the dealer or an experienced radio / TV technician for help.


Radiation Exposure Statement

For Remote controller, this equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.  
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.  
For LED Projector , this equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment; this equipment should be installed and operated with minimum distance 20cm between the radiator & you body.  
Note : For 5150-5250MHz band, it is restricted to indoor use.

BE	HR	AT
BG	IT	PL
CZ	CV	PT
DK	LV	RO
DE	LT	SI
EE	LU	SK
IE	HU	FI
EL	MT	SE
ES	NL	UK
FR		

Model : XHAD01 Rated : 18V 8.33A

LED projector

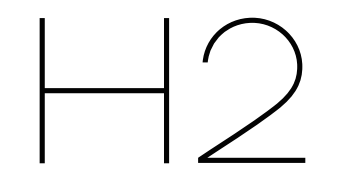

CE RoHS  
CAUTION: possibly hazardous optical radiation emitted from this product. FCC ID: 2AFEN9HAD01  
Remote Controller, FCC ID: 2AFEN8914C