

# 2010 Full-Size Truck Navigation System

---

<b>Infotainment System</b> .....	3	Navigation .....	42	Problems with Route	
Introduction .....	3	Using the Navigation		Guidance .....	78
Overview .....	4	System .....	42	If the System Needs	
Radio .....	14	Maps .....	44	Service .....	79
AM-FM Radio .....	14	Navigation Symbols .....	47	Ordering Map DVDs .....	79
Satellite Radio .....	21	Navigation Menu .....	53	Database Coverage	
Audio Players .....	24	Destination .....	65	Explanations .....	80
CD/DVD Player .....	24	Global Positioning		Voice Recognition .....	80
Auxiliary Devices .....	41	System (GPS) .....	77	<b>Index</b> .....	i-1
		Vehicle Positioning .....	78		

---

---

---

## Introduction



GENERAL MOTORS, GM, the GM Emblem, CHEVROLET, the CHEVROLET Emblem, and the names TAHOE, SUBURBAN, AVALANCHE, and SILVERADO, GMC, the GMC Truck Emblem, and the names SIERRA, SIERRA

DENALI, YUKON, and DENALI, HUMMER, the name HUMMER, H2, and the H2 Design are registered trademarks of General Motors Corporation.



Manufactured under license under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and DTS Digital Surround are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.



Dolby® is manufactured under license from Dolby® Laboratories. Dolby® and the double-D symbol are trademarks of Dolby® Laboratories.



"Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

## 4 Infotainment System

---

iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

The information in this manual supplements the owner manual. This manual includes the latest information available at the time it was printed. We reserve the right to make changes in the product after that time without notice. For vehicles first sold in Canada, substitute the name General Motors of Canada Limited for Chevrolet Motor Division, GMC, or HUMMER whenever it appears in this manual.

Keep this manual with the owner manual in the vehicle, so it will be there if it is needed. If the vehicle is sold, leave this manual in the vehicle.

### **Canadian Vehicle Owners (Propriétaires des Véhicules Canadiens)**

A French language copy of this manual can be obtained from your dealer or from:

On peut obtenir un exemplaire de ce guide en français auprès du concessionnaire ou à l'adresse suivante:

Helm, Incorporated  
P.O. Box 07130  
Detroit, MI 48207

1-800-551-4123

Numéro de poste 6438 de langue française  
[www.helminc.com](http://www.helminc.com)

### **Overview**

Read this manual thoroughly to become familiar with how the navigation system operates.

The navigation system includes navigation and audio functions.

While entering the vehicle or when turning the vehicle off, some DVD Map Disc noise is normal.

Keeping your eyes on the road and your mind on the drive is important for safe driving. The navigation system has built-in features intended to help keep your eyes on the road and mind on the drive. Some features may be disabled while driving. Note that these functions will be grayed-out. A grayed-out function indicates it is not available when the vehicle is moving.

All functions are available when the vehicle is parked. Do the following before driving:

- Become familiar with the navigation system operation, hard keys on the faceplate, and touch-sensitive screen buttons of the navigation system.
- Set up the audio by presetting favorite stations, setting the tone, and adjusting the speakers.

- Set up the navigation features before beginning driving, such as entering an address or a preset destination.
- Set up your phone numbers in advance so they can be called easily with the press of a single button or a single voice command (for navigation systems equipped with phone capability).

 **WARNING**

Taking your eyes off the road too long or too often while using the navigation system could cause a crash resulting in injury or death to you or others. Focus your attention on driving.

 **WARNING**

Avoid looking too long or too often at the moving map on the navigation screen. This could cause a crash and you or others can be injured or killed. Use the turn-by-turn voice guidance directions whenever possible.

Use the navigation system to:

- Plan a route.
- Select a destination using various methods and choices.
- Follow turn-by-turn route and map guidance with voice prompts, only if permitted by traffic laws, controls, and conditions.

You should always be alert and obey traffic and roadway laws and instructions, regardless of the guidance from the navigation system. Because the navigation system uses street map information that does not include all traffic restrictions or the latest road changes, it may suggest using a road that is now closed for construction or a turn that is prohibited by signs at the intersection. Because the system uses limited information, you must always evaluate whether following the system's directions is safe and legal for the current conditions.

When the navigation system is turned on, a screen may appear with the information below, and you must read and acknowledge the information it contains.

## 6 Infotainment System


### **WARNING**

Taking your eyes off the road for extended periods could cause a crash resulting in injury or death to you or others.

To help avoid a crash in which you or others could be killed:

- Always concentrate on your driving first by keeping your eyes and mind on the road, and your hands on the wheel.
- Follow system directions only if permitted by traffic laws, controls, and conditions.
- Before using this system, read the owner's manual and learn how it operates.
- Some system controls cannot be used when the vehicle is moving.


After you acknowledge the start up information you will be able to access the NAV (navigation) and DEST (destination) functions. Once accessed, you can enter or delete information in the navigation system or access other functions. See instructions later in this section.

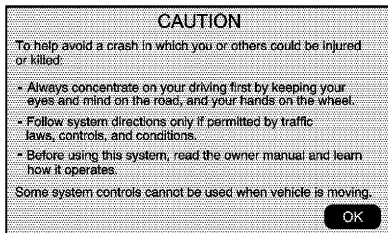

Every fifty times the vehicle is started and the navigation system is turned on, the Caution screen appears. After reading the caution, select OK to load the map DVD information.

If OK is not selected, all hard keys except for NAV (Navigation) and DEST (Destination) can be accessed. You can also press the NAV hard key to have this Caution screen appear.

When getting started, set the navigation system to your preference or delete information you may have entered using various options.

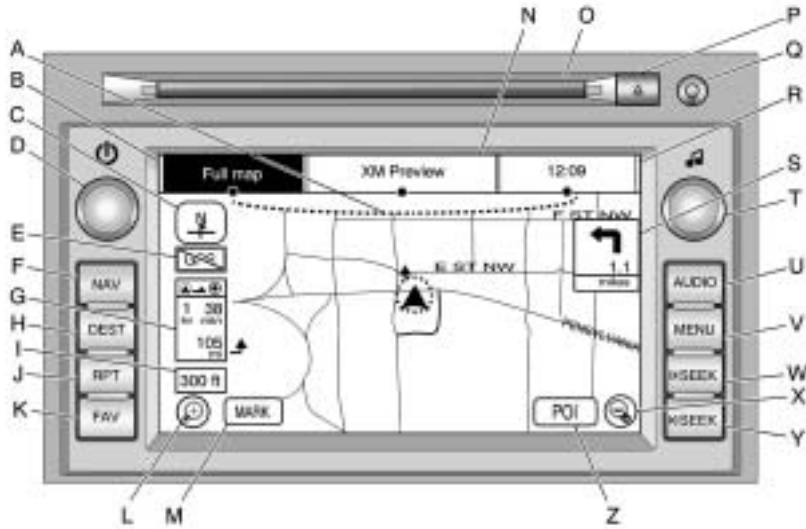







Screen Shown with Map Disc Inserted

- A. DVD Map Disc. See "Installing the Map DVD" under *Maps* on page 44 for more information.
- B. FULL MAP Touch Screen Button. See "NAV" under "Hard Keys" under *Using the Navigation System* on page 42 for more information.
- C. North Up/Heading Up Symbol. See *Navigation Symbols* on page 47 for more information.
- D. ⏻ (Power/Volume) Knob. See *AM-FM Radio* on page 14 and *Satellite Radio* on page 21 for more information.
- E. No GPS Signal Symbol. See *Navigation Symbols* on page 47 for more information.
- F. NAV (Navigation) Hard Key. See "Hard Keys" under *Using the Navigation System* on page 42 for more information.
- G. Distance and Time to Distance Symbol. See *Navigation Symbols* on page 47 for more information.

## 8 Infotainment System

---

- H. DEST (Destination) Hard Key. See *Destination* on page 65 for more information.
- I. Map Scale. See “Map Scales” under *Maps* on page 44 for more information.
- J. RPT (Repeat) Hard Key for Voice Guidance. See “Hard Keys” under *Using the Navigation System* on page 42 for more information.
- K. FAV (Favorite) Hard Key. See “Storing Radio Station Presets” under *Using the Navigation System* on page 42 for more information.
- L.  (Zoom In) Touch Screen Button. See “Map Scales” under *Maps* on page 44 for more information.
- M. Mark Touch Screen Button. See “Adding Destinations to the Address Book” under *Destination* on page 65 for more information.
- N. Source (AM, FM, XM, CD, etc.) Touch Screen Button. See *AM-FM Radio* on page 14, *Satellite Radio* on page 21, and *CD/DVD Player* on page 24 for more information.
- O. Audio CD/Video DVD Slot. See *CD/DVD Player* on page 24 for more information.
- P.  (Audio CD/Video DVD Eject) Hard Key. See *CD/DVD Player* on page 24 for more information.
- Q. Auxiliary Input Jack. See *Auxiliary Devices* on page 41 for more information.
- R. Clock Touch Screen Button. See *Navigation Menu* on page 53 for more information.
- S. Distance to Next Turn Symbol. See *Navigation Symbols* on page 47 for more information.
- T.  (Tune/Sound) knob. See *AM-FM Radio* on page 14 and *Satellite Radio* on page 21 for more information.
- U. AUDIO Hard Key. See *AM-FM Radio* on page 14 and *Satellite Radio* on page 21 for more information.
- V. MENU Hard Key (Settings and Preferences). See *Navigation Menu* on page 53 for more information.
- W.  SEEK (or Next) Key. See *AM-FM Radio* on page 14, *Satellite Radio* on page 21, and *CD/DVD Player* on page 24 for more information.
- X.  (Zoom Out) Touch Screen Button. See “Map Scales” under *Maps* on page 44 for more information.
- Y.  SEEK (or Previous) Key. See *AM-FM Radio* on page 14, *Satellite Radio* on page 21, and *CD/DVD Player* on page 24 for more information.
- Z. POI (Point of Interest) Touch Screen Button. See “Displaying Points of Interest (POI) on



the Map Screen” under *Navigation Symbols on page 47* for more information.

### Language — English/Metric

To change the language of the navigation screens, see “Driver Information Center (DIC)” in your vehicle’s owner manual index for more information.

To change the navigation screens from English or metric, see “DIC Operation and Displays” in your vehicle’s owner manual index for more information.

### Deleting Personal Information

This navigation system can record and store personal information such as names and addresses. At times, such as when you are disposing of your vehicle, you may want to delete this information. See “Edit Address Book — Edit/View” under *Navigation Menu on page 53* for deleting information from the address book.

### Limit Features While Driving

The navigation system may have this feature.

Touch the Limit Features While Driving screen button to turn on and off the ability to limit functions while driving. When this screen button is highlighted, the following functions are limited while driving:



- Music Navigator Scrolling
- Radio Category Scrolling
- Navigation Menu Scrolling and some functions

See “Category” under *AM-FM Radio on page 14* and *Satellite Radio on page 21* for more information. See “From Map” under *Destination on page 65* for more information.

Some functions will remain limited regardless of the setting.

### Storing Radio Station Presets

To set preset radio stations, do the following:

1. Press the  (power) knob to turn the system on.
2. Press the AUDIO hard key and select the desired band (AM, FM1, FM2, XM1, or XM2 (if equipped)).
3. Use the  (tune) knob or the SEEK arrows to tune to the desired station.
4. Press and hold one of the five preset screen buttons, at the bottom of the screen, until you hear a beep or see the station displayed on the selected preset button.
5. Repeat the steps for each preset.

See “Storing Radio Station Presets” under *AM-FM Radio on page 14* and *Satellite Radio on page 21* for more information.

## 10 Infotainment System

---

### Setting the Clock

To set the time, do the following:


1. Press the clock touch screen button located in the upper right corner of the screen.
2. Press the Set screen button.
3. Press the Hours and Minutes – (minus) and + (plus) signs to decrease and to increase the time. See “Setting the Clock” under *Navigation Menu on page 53* for more information.

### Setting the Search Area, Entering an Address and Point of Interest, and Storing Preset Destinations

Before entering an Address, Point of Interest, Home, or Preset Destination, select the appropriate region that contains the final destination. Your vehicle must be in P (Park) to perform this operation.

### Setting the Search Area

To set the search area, do the following:


1. If the radio is already on with a map disc inserted, skip to Step 5.
2. Press the  (power) knob to turn the system on.
3. Insert the DVD map disc. See “Installing the Map DVD” under *Maps on page 44* for more information.
4. A caution may appear. Touch the OK screen button to proceed.
5. Press the DEST hard key.
6. Press the Change Search Area screen button.
7. Select the appropriate region numbered screen button that contains your final destination.
8. Press the Back screen button to return to the Destination Entry menu. See *Destination on page 65* for more information.



### Entering an Address



If you are having trouble finding a city or a street name, do the following:

- Input the street name first instead of the city name, or vice versa.
- Input more characters or reduce the amount of characters to reduce or expand the available options.

To set a destination by entering a city name, do the following:

1. If the radio is already on with a map disc inserted, skip to Step 5.
2. Press the  (power) knob to turn the system on.
3. Insert the DVD map disc. See “Installing the Map DVD” under *Maps on page 44* for more information.
4. A caution may appear. Touch the OK screen button to proceed.
5. Press the DEST hard key.

6. Press the  Address Entry screen button.
7. The City name category will automatically be selected for entry. Start entering the city name.  
If five or less names are available for the entered characters, a list will display. If more than five are available, there will be a screen button with a number in it, it represents the number of available cities. Select this button to view the list and select a city.
8. Once a city is selected the street name category will automatically be selected for entry. Start entering the street name.  
Do not enter directional information or street type, and use the space symbol screen button (  ) between street or city names. For example, the street name N. Royal Oak Rd. should be entered as

royal  oak. Use the backspace (  ) screen button if an incorrect character has been entered.

If five or less names are available, a list will display. If more than five are available, there will be a screen button with a number in it, it represents the number of available streets. Select this button to view the list.


9. Select the street name with the correct prefix from the list (Dr., Ln., St., etc.).
10. Once a street has been selected, the numeric keyboard will display, allowing you to enter the house number. The system will display the house number range that is available for the street.
11. Select the Go screen button. A map screen, with the destination marked, will appear.

12. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
13. Select the Start Guidance screen button. You are now ready to start your route.

See “Address Entry” under *Destination on page 65* for more information.


### Entering a Point of Interest (POI)

To set a destination by entering a Point of Interest (POI), do the following:

1. If the radio is already on with a map disc inserted, skip to Step 5.
2. Press the  (power) knob to turn the system on.
3. Insert the DVD map disc. See “Installing the Map DVD” under *Maps on page 44* for more information.
4. A caution may appear. Touch the OK screen button to proceed.


## 12 Infotainment System

---

5. Press the DEST hard key.
6. Press the  Point of Interest screen button.
7. Enter the specific title of the POI in the POI name space (i.e. Washington Monument).  
If five or less names are available, a list will display. If more than five are available, there will be a screen button with a number in it, it represents the number of available POIs. Select this button to view the list.
8. Select the Go screen button. A map screen, with the destination marked, will appear.
9. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
10. Select the Start Guidance screen button. You are now ready to start your route.

See “Point of Interest (POI)” under *Destination on page 65* for more information.

### Storing Preset Destinations

1. If the radio is already on with a map disc inserted, skip to Step 5.
2. Press the  (power) knob to turn the system on.
3. Insert the DVD map disc. See “Installing the Map DVD” under *Maps on page 44* for more information.
4. A caution may appear. Touch the OK screen button to proceed.
5. Press the DEST hard key.
6. Enter a destination. See *Destination on page 65* for information on how to enter a destination.
7. Press the Mark screen button from the map screen to add the current final destination as a preset destination.

The address book screen will appear.


8. Select the Name screen button. An alpha-keyboard will display. Enter the name.
9. Press and hold one of the screen buttons at the bottom of the screen until a pop-up confirmation displays.

The name will appear in that preset destination screen button and is now available to select from the Destination Entry screen. See “Using Your Stored Preset Destinations” next in this section to select it as a destination.

See “Adding or Changing Preset Destinations” under *Destination on page 65* for more information on how to add preset destinations.

## Using Your Stored Preset Destinations

These destinations are available for selection while driving.

1. If the radio is already on with a map disc inserted, skip to Step 5.
2. Press the  (power) knob to turn the system on.
3. Insert the DVD map disc. See “Installing the Map DVD” under *Maps on page 44* for more information.
4. A caution may appear. Touch the OK screen button to proceed.
5. Press the DEST hard key.
6. Select one of the available preset destination screen buttons. A map screen, with the destination marked, will appear.
7. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.

8. Select the Start Guidance screen button. You are now ready to start your route.

See “Preset Destination” under *Destination on page 65* for more information.

## Canceling Guidance


Guidance will be canceled once you arrive at your final destination. To cancel guidance prior to arrival at the final destination, do the following:

1. Press the DEST hard key.
2. Press the Cancel Guidance screen button.

## Guidance Volume

To adjust the volume of voice guidance prompts, do the following:

1. Press the MENU hard key to enter the menu options, then press the MENU key repeatedly until Nav is selected or touch the Nav screen button.

2. Press the  Voice Prompt screen button.
3. Press the + (plus) or – (minus) screen buttons to increase or to decrease the volume of the voice prompts.

See “Voice Prompt” under *Navigation Menu on page 53* for more information.

## Hybrid Screens

See the “Two-Mode Hybrid Manual” for more information.

## Cleaning the Display Screen

Use a soft clean cotton cloth dampened with clean water.


### Radio


#### AM-FM Radio

**Notice:** Before adding any sound equipment to the vehicle, such as an audio system, CD player, CB radio, mobile telephone, or two-way radio, make sure that it can be added by checking with your dealer. Also, check federal rules covering mobile radio and telephone units. If sound equipment can be added, it is very important to do it properly. Added sound equipment can interfere with the operation of the vehicle's engine, radio, or other systems, and even damage them. The vehicle's systems can interfere with the operation of sound equipment that has been added.

**Notice:** The chime signals related to safety belts, parking brake, and other functions of the vehicle operate through the navigation system. If that equipment is replaced or additional equipment is added to the vehicle, the chimes may not work. Make sure that replacement or additional equipment is compatible with the vehicle before installing it. See "Accessories and Modifications" in the Index of the vehicle's owner manual.

#### Playing the Radio


 **(Power/Volume):** Press this knob to turn the audio system on and off. Turn the knob to increase or to decrease the volume.

 **(Tuning/Sound Knob):** Turn this knob to go to the next or previous frequency.

Press this knob to display the Sound menu. See "Sound Menu" later in this section.


**AUDIO:** Press this key to display the audio screen. Press the key to switch between AM, FM, or XM, if equipped, DISC, or AUX (Auxiliary), or touch the screen button. See *AM-FM Radio on page 14*, *Satellite Radio on page 21*, *CD/DVD Player on page 24*, and *Auxiliary Devices on page 41* for more information.

## Finding a Station

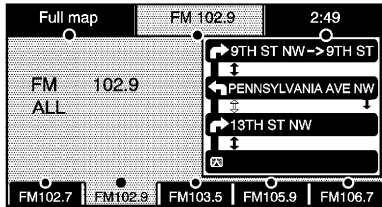

### FM source shown, other sources similar

If viewing a map screen, touch the source screen (AM, FM, XM, CD, etc.) button. The display will split between the audio screen and the map screen. All station-changing functions can be performed from this screen.

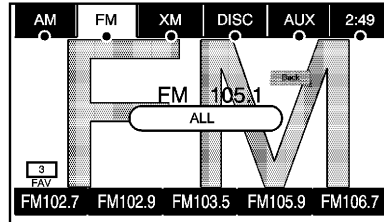

### FM source shown, other sources similar

If you do not want to view a split screen or you are not on a map screen, press the AUDIO hard key.

**AM/FM/XM:** Touch the source (AM, FM, or XM, if equipped) screen button or press the AUDIO key repeatedly until the desired source is highlighted.



### FM source shown, other sources similar

**Category:** Touch the screen button, located in the middle of the screen, to receive a list of all of the selected band stations in the area. Use the up and down arrow screen buttons to scroll the frequencies. Touch the desired frequency.

FM lists may also contain a category to select if stations in your area support Radio Data Systems (RDS).

## 16 Infotainment System

**↻ Refresh List:** Touch this screen button to refresh the list of stations.


When viewing a map screen, the name of the station or channel will appear on the display.

**➤ SEEK / ⏪ SEEK:** To seek stations, press the left or right arrow keys to go to the next or previous station and stay there.


To scan stations, press and hold either arrow for more than two seconds. The radio will go to a station, play for a few seconds, then go on to the next station. To stop scanning, press either arrow again.

### Storing Radio Station Presets

This feature allows you to store up to 30 preset stations. See “Number of Preset Pages” under “Radio Menu” later in this section for more information. You can mix AM, FM, and XM (if equipped). To store presets, do the following:

1. Press the  (power) knob to turn the system on.
2. If viewing a map screen, touch the source screen button, press the AUDIO key, or press the FAV (favorite) key.
3. Select the band.
4. Seek, scan, or tune to the desired station, to select the station.
5. Press and hold one of the preset screen buttons for more than two seconds or until you hear a beep.
6. Repeat the steps for each preset.

### Sound Menu

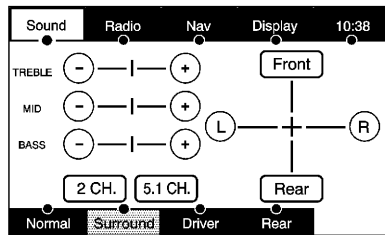

#### Digital Signal Processing (DSP) shown, Equalization similar

**🎵 (Sound Menu):** Press this knob or press the MENU key to access the Sound menu to adjust the treble, midrange, bass, fade, balance, and equalization or Digital Signal Processing (DSP), if equipped with the Bose® sound system.



## Setting the Tone

**TREBLE:** Touch the plus (+) or minus (–) sign to increase or decrease the treble. If a station is weak or noisy, decrease the treble.

**MID (Midrange):** Touch the plus (+) or minus (–) sign to increase or decrease the midrange.

**BASS:** Touch the plus (+) or minus (–) sign to increase or decrease the bass.

## Adjusting the Speakers

**L/R (Left/Right) (Balance):** To adjust the balance between the left and the right speakers, touch and hold the L or R screen buttons. To center the balance and the fade, touch the center, where the two lines meet.

**Front/Rear (Fade):** To adjust the fade between the front and the rear speakers, touch and hold the Front or Rear screen buttons. To center the balance and the fade, touch the center, where the two lines meet.

## Automatic Equalization

If the system has automatic equalization, you can select customized equalization settings designed for Talk. Touch the Talk screen button to hear the change in sound. The system will save the setting for each source.

To not use the automatic equalization setting, press any of the screen buttons that will change the treble, midrange, bass, balance, or fade. This will take the system out of the equalization setting so that you can create your own sound.

## Digital Signal Processing (DSP)

If the system has Digital Signal Processing (DSP), DSP is used to provide a choice of four different listening experiences. DSP can be used while listening to the audio system. The type of DSP selected is displayed on the status line.

Select from the following DSP settings:

**Normal:** Select this screen button to adjust the audio to be in normal mode. This provides the best sound quality for all seating positions.

**Surround (Centerpoint®):** Select this screen button to turn on Bose Centerpoint® signal processing circuitry. Centerpoint® produces a full vehicle surround sound listening experience from a CD, MP3/WMA, DVD, or XM stereo digital audio source and delivers five independent audio channels from the conventional two channel stereo recordings. This is not available for AM or FM.

**Driver:** Select this screen button to adjust the audio to give the driver the best possible sound quality.

**Rear:** Select this screen button to adjust the audio to give the rear seat occupants the best possible sound quality.

## 18 Infotainment System


The 2 CH and 5.1 CH buttons are available only when a 5.1 CH disc is available and RSA is off.

**2 CH (Channel):** Select this screen button to enhance surround sound. The Surround screen button must be selected to select the 2 CH screen button.

**5.1 CH (Channel):** Select this screen button, when listening to a DVD, to give a full affect of surround sound listening. The Surround screen button must be selected to select the 5.1 CH screen button.

**Downmix:** If a 5.1 CH disc is playing, and the 2 CH screen button is selected or RSA is turned on, the system will downmix the audio from 5.1 CH to 2 CH if this feature is supported on the disc.

### Radio Menu

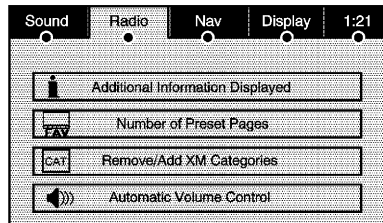

Press the MENU key to enter the menu screen, then press the MENU key repeatedly until Radio is selected or touch the Radio screen button to make changes for radio information displayed or to limit features while driving, number of preset pages, XM categories, and Automatic Volume Control or Bose® AudioPilot®.

### Additional Information Displayed

The navigation system may have this feature.

Touch the **i** Additional Information Displayed screen button to turn station, channel, CD, and MP3 information on or off.

Touch the YES screen button to receive information, when it is available, for the following; FM: RDS category name and radio text, XM: Song Title and Artist Name, CD: CD text, MP3: tag information.

Touch the NO screen button to receive no information.

### Limit Features While Driving


The navigation system may have this feature.

Touch the Limit Features While Driving screen button to turn on and off the ability to limit functions while driving. When this screen button is highlighted, the following functions will be limited while driving:

- Music Navigator Scrolling
- Radio Category Scrolling
- Navigation Menu Scrolling and some functions

See “Category” earlier in this section for more information. See “From Map” under *Destination* on page 65 for more information.

### Number of Preset Pages

Touch the  Number of Preset Pages screen button to change the number of preset pages, 1 through 6. Each preset page can contain five preset stations. Touch the desired numbered screen button.


### Automatic Volume Control or Bose AudioPilot®

#### Automatic Volume

**Control:** With automatic volume control, your audio system adjusts automatically to make up for road and wind noise as you drive.

To use Automatic Volume Control:

1. Set the volume at the desired level.
2. Press the MENU key to enter the menu screen, then press the MENU key repeatedly until Radio is selected or touch the Radio screen button.

3. Press the  Automatic Volume Control screen button to access the Speed Compensated Volume screen.
4. Touch the Low, Medium, or High screen buttons. Each higher setting allows for more compensation at faster vehicle speeds.


Then, as you drive, automatic volume control automatically increases the volume, as necessary, to overcome noise at any speed. The volume level should always sound the same to you as you drive. To turn automatic volume control off, touch the OFF screen button.

## 20 Infotainment System

---

**AudioPilot:** If the system has the Bose® sound system it may include Bose AudioPilot® noise compensation technology.

To use AudioPilot®:

1. Press the MENU key to enter the menu screen, then press the MENU key repeatedly until Radio is selected or touch the Radio screen button.
2. Press the  Automatic Volume Control screen button to access the AudioPilot menu.
3. Press the ON screen button.

To turn it off, touch the OFF screen button.

When on, AudioPilot® continuously adjusts the audio system equalization, to compensate for background noise, so that your music always sounds the same at the set volume level.

This feature is most effective at lower volume settings where background noise can affect how well you hear the music being played through your vehicle's audio system. At higher volume settings, where the music is much louder than the background noise, there may be little or no adjustments by AudioPilot®. For more information on AudioPilot®, please visit [bose.com/audiopilot](http://bose.com/audiopilot).

### Radio Data System (RDS)

The audio system has a Radio Data System (RDS). RDS features are available for use only on FM stations that broadcast RDS information. With RDS, the radio can do the following:

- Seek to stations broadcasting the selected type of programming
- Receive announcements concerning local and national emergencies
- Display messages from radio stations

This system relies on receiving specific information from these stations and will only work when the information is available. In rare cases, a radio station may broadcast incorrect information that will cause the radio features to work improperly. If this happens, contact the radio station.


The RDS system is always on. When information is broadcast from the FM station you are listening to, the station name or call letters will be displayed on the audio screen. RDS may provide a program type (PTY) for current programming and the name of the program being broadcasted.


## Satellite Radio

**Notice:** Before adding any sound equipment to the vehicle, such as an audio system, CD player, CB radio, mobile telephone, or two-way radio, make sure that it can be added by checking with your dealer. Also, check federal rules covering mobile radio and telephone units. If sound equipment can be added, it is very important to do it properly. Added sound equipment can interfere with the operation of the vehicle's engine, radio, or other systems, and even damage them. The vehicle's systems can interfere with the operation of sound equipment that has been added.

**Notice:** The chime signals related to safety belts, parking brake, and other functions of the vehicle operate through the navigation system. If that equipment is replaced or additional equipment is added to the vehicle, the chimes may not work. Make sure that replacement or additional equipment is compatible with the vehicle before installing it. See "Accessories and Modifications" in the Index of the vehicle's owner manual.

### Playing the Radio

 **(Power/Volume):** Press this knob to turn the audio system on and off. Turn the knob to increase or to decrease the volume.

 **(Tuning/Sound Knob):** Turn this knob to go to the next or previous frequency.

Press this knob to display the Sound menu. See "Sound Menu" later in this section.

**AUDIO:** Press this key to display the audio screen. Press the key to switch between AM, FM, or XM, if equipped, DISC, or AUX (Auxiliary), or touch the screen button. See *AM-FM Radio on page 14*, *Satellite Radio on page 21*, *CD/DVD Player on page 24*, and *Auxiliary Devices on page 41* for more information.

### Finding a Station

For information on finding and changing a station, see *AM-FM Radio on page 14* earlier in this section.

**AM/FM/XM:** Touch the source (AM, FM, or XM, if equipped) screen button or press the AUDIO key repeatedly until the desired source is highlighted. See *AM-FM Radio on page 14* earlier in this section.

## 22 Infotainment System

**Category:** Touch the screen button, located in the middle of the screen, to receive a list of all of the selected band stations in the area. Use the up and down arrow screen buttons to scroll the frequencies. Touch the desired frequency.

XM lists will also contain a category to select and the stations or channels that pertain to the category. For XM, touch the left and right arrow screen buttons to change categories. The station information will appear on the display. See “Radio Menu” later in this section to add and remove XM categories from the category list. When listening to XM stations, you will be able to select all of the categories when using the right and left arrow screen buttons on the main audio screen. The categories, when removed, will not be enabled to select from the category list screen.

**Refresh List:** Touch this screen button to refresh the list of stations.

When viewing a map screen, the name of the station or channel will appear on the display.


**SEEK / SEEK:** To seek stations, press the left or right arrow keys to go to the next or previous station and stay there.

To scan stations, press and hold either arrow for more than two seconds. The radio will go to a station, play for a few seconds, then go on to the next station. To stop scanning, press either arrow again.

### Storing Radio Station Presets

This feature allows you to store up to 30 preset stations. You can mix AM, FM, and XM (if equipped). To store presets, see *AM-FM Radio on page 14* earlier in this section.


### Sound Menu

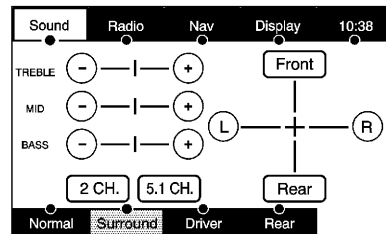

### Digital Signal Processing (DSP) shown, Equalization similar


For more information on setting the tone, adjusting the speakers, Digital Signal Processing (DSP), and automatic equalization, see *AM-FM Radio on page 14* earlier in this section.

## Radio Menu

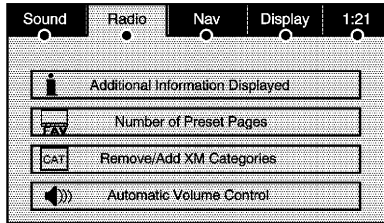

Press the MENU key to enter the menu screen, then press the MENU key repeatedly until Radio is selected or touch the Radio screen button to make changes for radio information displayed or to limit features while driving, number of preset pages, XM categories, and Automatic Volume Control or Bose® AudioPilot®, see *AM-FM Radio on page 14* earlier in this section.

### Remove/Add XM Categories

Touch the  Remove/Add XM Categories screen button to remove or add XM categories when selecting XM categories from the category list screen. The list of XM categories will appear on the screen. Use the up and down arrow screen buttons to scroll through the list. The categories to remove will be highlighted and the categories to add will be dark in color. Touch the category that you would like to add or remove. Touch the Restore All Categories screen button to add all categories that have been removed.

### XM™ Satellite Radio Service

XM™ is a satellite radio service that is based in the 48 contiguous United States and 10 Canadian provinces. XM Satellite Radio has a wide variety of programming and commercial-free music, coast-to-coast, and in digital-quality sound. During your trial or when you subscribe, you will get unlimited access to XM Radio Online for when you are not in the vehicle. A service fee is required to receive the XM service. For more information, contact XM at [www.xmradio.com](http://www.xmradio.com) or call 1-800-929-2100 in the U.S. and [www.xmradio.ca](http://www.xmradio.ca) or call 1-877-438-9677 in Canada.

When XM™ is active, the channel name and number, song title, and artist will display on the screen.

### XM™ Radio Messages

See “XM™ Radio Messages” in the vehicle’s owner manual” for a list of possible XM messages.

# Audio Players

## CD/DVD Player

### Playing an Audio CD

The player can be used for CD and MP3. If your vehicle has RSE, the player can be used for CD, MP3, DVD audio, and as a DVD video player. See “Playing a DVD” later in this section.

With the ignition on, insert a CD partway into the slot, label side up. The player will pull it in and the CD should begin playing. While playing a CD, the navigation system is available. If you insert a CD with the system off and the ignition on, it will start to play.

When you insert a CD, the CD tab will display.

If you turn off the ignition or radio with a CD in the player, it will stay in the player. When you turn on the

ignition or radio, the CD will start playing where it stopped, if it was the last selected audio source.

As each new track starts to play, the track number will appear on the display.

The CD player can play the smaller 3 inch (8cm) single CDs with an adapter ring. Full-size CDs and the smaller CDs are loaded in the same manner.

If an error appears on the display, see “CD/DVD Messages” later in this section.

If viewing a map screen, touch the CD screen button. The display will split between the audio screen and the map screen. If you do not want to view a split screen or you are not on a map screen, press the AUDIO key then press the AUDIO key until CD is selected or touch the CD screen button.



**|| / ▶ (Pause/Play):** Touch this button to pause the CD. This button will then change to the play button. Touch the play button to play the CD.

**RANDOM:** Touch this button to hear the tracks in random, rather than sequential, order. Touch RANDOM again to turn off random play.

**◀ (Rewind):** Touch and hold this button to rewind quickly through a track selection. You will hear sound at a reduced volume. Release this button to stop rewinding. The display will show the elapsed time of the track.



▶▶ **(Forward):** Touch and hold this button to fast forward quickly through a track selection. You will hear sound at a reduced volume. Release this button to stop fast forwarding. The display will show the elapsed time of the track.

▷ **SEEK / ◀ SEEK:** Press the right arrow to go to the next track. Press the left arrow to go to the start of the current track, if more than five seconds have played. If either arrow is pressed more than once, the player will continue moving backward or forward through the CD. The sound will mute while seeking.

You can also turn the tune knob to seek to the next or previous track.

When playing an audio CD, if your vehicle has RSE, the rear seat operator can power on the RSE video screen and use the remote control to navigate through the tracks on the CD.

## Using an MP3 CD

### MP3 Format

There are guidelines that must be met, when creating an MP3 disc. If the guidelines are not met when recording a CD-R(W), the CD may not play. The guidelines are (Supported Sampling rate and Bit rates will vary based on CD or DVD Navigation Systems):

- Sampling rate: 8 kHz, 11.025 kHz, 12 kHz, 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, and 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, and 192 kHz.
- Bit rates supported: 8, 16, 24, 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, and 320 kbps.
- ID3 tag information is displayed by the radio if it is available. The radio supports ID3 tag information v1.0 or v1.1. The radio will display a filename, song name, artist name, album name, and directory name.

- Maximum 32 characters, including spaces, in a file or folder name.
- Maximum number of folders is 253 with a maximum hierarchy of eight folders.
- Create a folder structure that makes it easy to find songs while driving. Organize songs by albums using one folder for each album. Each folder or album should contain 18 songs or less.
- It is recommended that there is a maximum of 192 files on a disc.
- The files can be recorded on a CD-R or CD-RW with a maximum capacity of 700MB.
- DVD with MP3 are not playable on this system.

### Root Directory

The root directory will be treated as a folder. If the root directory has compressed audio files, the directory will be displayed as ROOT.

All files contained directly under the root directory will be accessed prior to any root directory folders. However, playlists (Px) will always be accessed before root folders or files.

### **Empty Directory or Folder**

If a root directory or a folder exists somewhere in the file structure that contains only folders/subfolders and no compressed files directly beneath them, the player will advance to the next folder in the file structure that contains compressed audio files and the empty folder will not be displayed or numbered.

### **No Folder**

When the CD contains only compressed files, the files will be located under the root folder. The next and previous folder functions will have no function on a CD that was recorded without folders or playlists. When displaying the name of the folder the radio will display ROOT.

When the CD contains only playlists and compressed audio files, but no folders, all files will be located under the root folder. The left and right arrow buttons will search playlists (Px) first and then go to the root folder. When the radio displays the name of the folder the radio will display ROOT.

### **Order of Play**

Tracks will be played in the following order:

- Play will begin from the first track in the first playlist and will continue sequentially through all tracks in each playlist. When the last track of the last playlist has been played, play will continue from the first track of the first playlist.
- If the CD does not contain any playlists, then play will begin from the first track under the root directory. When all tracks from the root directory have been

played, play will continue from files according to their numerical listing. After playing the last track from the last folder, play will begin again at the first track of the first folder or root directory.

When play enters a new folder, the display will not automatically show the new folder name. The new track name will appear on the display.

### **File System and Naming**

The song name that will display will be the song name that is contained in the ID3 tag. If the song name is not present in the ID3 tag, then the radio will display the file name without the extension (such as .mp3) as the track name.

Track names longer than 32 characters or four pages will be shortened. The display will not show parts of words on the last page of text and the extension of the filename will not display.

### Preprogrammed Playlists

You can access preprogrammed playlists which were created by WinAmp™, MusicMatch™, or Real Jukebox™ software, however, you will not have editing capability. These playlists will be treated as special folders containing compressed audio song files.

### Playing an MP3

With the ignition on, insert a CD partway into the slot, label side up. The player will pull it in. The system may take some time to read the MP3 disc. While playing a CD, the navigation system is available. If you insert a CD with the system off and the ignition on, it will start to play.

When you insert a CD, the CD tab will display.

If you turn off the ignition or radio with a CD in the player, it will stay in the player. When you turn on the ignition or radio, the CD will start playing where it stopped, if it was the last selected audio source.

As each new track starts to play, the track number will appear on the display.

If an error appears on the display, see “CD/DVD Messages” later in this section.

If viewing a map screen, touch the CD screen button. The display will split between the audio screen and the map screen. If you do not want to view a split screen or you are not on a map screen, press the AUDIO key, then press the AUDIO key until CD is selected or touch the CD screen button.



**|| / ▶ (Pause/Play):** Touch this button to pause the CD. This button will then change to the play button. Touch the play button to play the CD.

**Random:** Touch this screen button to hear the disc played in random (tracks and folders) order. Touch the Random screen button to turn off random play.

**◀◀ (Rewind):** Touch and hold this button to rewind quickly through a track selection. You will hear sound at a reduced volume. Release this button to stop rewinding. The display will show the elapsed time of the track.

**▶▶ (Forward):** Touch and hold this button to fast forward quickly through a track selection. You will hear sound at a reduced volume. Release this button to stop fast forwarding. The display will show the elapsed time of the track.

**◀▶ (Folder):** Select the left or right arrow to go to the previous or next folder on the disc.

Press the middle screen button, with the folder name, to sort the MP3 by folder and file name. It may take a few minutes for the system to sort the MP3.

**Sort By:** Touch this screen button to organize the MP3 to enable you to sort the MP3 by artist, album, and genre. It may take a few minutes for the system to sort the MP3.

**▷ SEEK / ◀ SEEK:** Press the right arrow to go to the next track. Press the left arrow to go to the start of the current track, if more than five seconds have played. If either arrow is pressed more than once, the player will continue moving backward or forward through the CD. The sound will mute while seeking.

You can also turn the tune knob to seek to the next or previous track.

When playing an MP3, if your vehicle has RSE, the rear seat operator can power on the RSE video screen and use the remote control to navigate through the MP3.

### Playing a DVD

The player can be used for DVD audio and DVD video.

With the ignition on, insert a DVD partway into the top visible slot, label side up. The player will pull it in and the DVD should begin playing. While playing a DVD, the navigation system is available. If you insert a DVD with the system off and the ignition on, it will start to play.

This feature will not operate on the navigation screen unless the vehicle is in P (Park).

The Rear Seat Entertainment (RSE) video screen will start play of the DVD when a DVD has been inserted into the navigation system. See "Rear Seat Entertainment System" in the Index of your vehicle's owner manual for more information.

The DVD player is only compatible with DVDs of the appropriate region code that is printed on the jacket of most DVDs.

The DVD slot is compatible with most audio CDs, CD-R, CD-RW, DVD-Video, DVD-Audio, DVD-R/RW, DVD+R/RW media along with MP3 and WMA “un-protected” formats.

There are three ways to play a DVD:

- Once a DVD is inserted, the system will automatically start play of the DVD.
- If you are on a map screen, touch the DVD screen button.
- Press the AUDIO hard key, then touch the DVD screen button.

When a DVD is loaded in the DVD player, the rear seat operator can power on the RSE video screen and use the remote control to navigate through the DVD.

**⏻ (Power/Volume):** Press this knob to turn the system on and off. Turn the knob to increase or decrease the volume of the audio system.

Press and hold this knob for more than two seconds to turn the navigation system, RSE, and RSA off.

If an error appears on the display, see “CD/DVD Messages” later in this section.

### Rear Seat Entertainment (RSE)


If the Rear Seat Entertainment (RSE) video screen is playing a DVD movie and the ignition is turned to LOCK and then back to ACCESSORY, RUN, or START, the RSE screen will not turn back on automatically. To view the movie on the RSE video screen:

- Press the remote control **⏻** (power) button, then the **▶** (play) button, which will continue the movie from where it was stopped.
- Press the **▶** (play) screen button on the navigation screen, which will continue the movie from where it was stopped.

- Eject and replace the DVD movie from the navigation system, which will start the movie from the beginning.

### DVD Menu Options

Once a DVD starts to play, the menu options will automatically appear. To display the menu choices while a DVD is playing in full screen, touch anywhere on the screen.

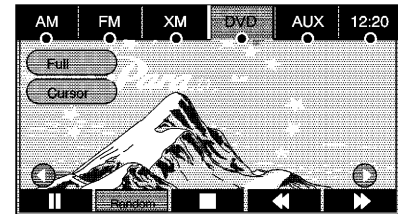

There are three pages of menu options. Press the right and left arrow screen buttons to use all

of the menu screen buttons. Menu options are available when they are highlighted. Some menu options are only available when the DVD is not playing.

**Full:** Press this screen button to remove all menu options from the display. Press anywhere on the screen to display the menu options.

**Cursor:** Touch this button to access the cursor menu. The arrows and other cursor options allow you to navigate the DVD menu options. The cursor menu options are only available if a DVD has a menu.

◀, ▲, ▶, ▼ (Arrow

**Buttons):** Use these arrow buttons to move around the DVD menu.

**Enter:** Touch this button to select the highlighted option.

**Return:** Touch this button to go back to the previous DVD menu.

**Back:** Touch this button to go back to the main DVD display screen.

**Move:** Touch this button to move the cursor buttons back and forth from the bottom-right corner to the top-left corner of the screen.

⏸ / ▶ (Pause/Play): Touch this button to pause the DVD. This button will then change to the play button. Touch the play button to play the DVD.

**Random:** Touch this button to hear the tracks in random, rather than sequential, order. Touch Random again to turn off random play. This button is not available for DVD video.

■ (Stop): Touch this button to stop play of the DVD. Press the play button to continue playing the DVD from where the DVD was stopped. Press this button twice to return to the beginning of the DVD.

◀◀ (Rewind): Touch and hold this button to rewind through the scene, chapters, and titles. This button may not work when the DVD is playing the copyright information or the previews.

▶▶ (Forward): Touch and hold this button to advance rapidly through the scene, chapters, and titles. This button may not work when the DVD is playing the copyright information or the previews.

**Top Menu:** Touch this button to display the first menu of the DVD. This button is not available on all DVDs.

**Menu:** Touch this button to display the DVD menu of the current area of the DVD that is playing. This button is not available for DVD audio.

**Search:** Touch this button to display the title search screen. The keyboard allows you to type in the title number of the title that you would like to watch.

**Setup:** Touch this button to display the DVD Setup screen. This button is only available when the DVD is not playing. The DVD Setup screen allows you to change the brightness, contrast, and mode, change the viewing on the monitor, and to change the initial settings; language, parental level, and aspect.

☀ **(Brightness):** Touch the up or down screen arrows to increase or decrease the brightness of the navigation screen.


● **(Contrast):** Touch the up or down screen arrows to increase or decrease the contrast of the navigation screen.


**Auto (Automatic):** Touch this screen button for the system to automatically adjust the navigation screen background depending on exterior lighting conditions.


**Night:** Touch this screen button and the system will make the navigation screen background darken.

**Day:** Touch this screen button and the system will make the navigation screen background brighten.


**Monitor:** From the DVD Setup screen, touch this button to adjust the viewing angle of the DVD on the navigation screen. This is not available on all DVDs.

Touch the  button to close the screen in from the left and right sides.

Touch the  button to fill the screen on the left and right sides.

Touch the  button to fill the screen on the top and bottom.

**Initial Settings:** From the DVD Setup screen, touch this button to change audio, subtitle, and menu languages, parental level, and to view the aspect of the DVD. The movie must be stopped to use this menu. These settings are not available on all DVDs.

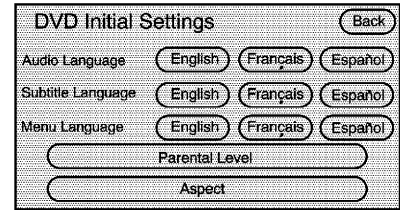

**Audio Language:** Touch English, Francais, or Espanol to change the language that you are listening to.

**Subtitle Language:** Touch English, Francais, or Espanol to change the language of the subtitles.

**Menu Language:** Touch English, Francais, or Espanol to change the language of the menus.

## 32 Infotainment System

---

**Parental Level:** Touch this button to change the rating level to only allow the play of DVDs with a certain rating. The rating selection is 1 through 8, with 1 being a G rating. If the 1 is selected, any DVD with a rating above G will not be able to be viewed without entering a password.

When the parental level screen is first entered a keyboard will appear on the display and a four-digit password will need to be created. Type in a password that you will be able to remember. Once the password is created, you can then select a rating level.

If you would like to change the rating level, press the Parental Level button, then press the Password button. Type in the password and then change the rating level.

If the password has been forgotten, contact your dealer.

This may not be available on all DVDs.

**Aspect:** Touch this button to change the aspect ratio of the DVD. This may not be available on all DVDs.

**Audio:** Press this button to display the audio stream number and to change the language heard. Repeatedly press this button to toggle through the available languages. This may not be available on all DVDs. This button is not available when the DVD is stopped.

**Subtitle:** Touch this button to playback the video with subtitles. Repeatedly press this button to toggle through the available languages. To turn the subtitles off, press this button until Off is selected. This button is not available when the DVD is stopped. This may not be available on all DVDs.

**Angle:** Touch this button to adjust the viewing angle of the DVD. Repeatedly press this button to toggle through the angles.

This button is not available when the DVD is stopped. This may not be available on all DVDs.

◀ **Page:** Press this button to go to the previous scene. This button is not available when the DVD is stopped. This button is not available for DVD video.

**Page** ▶ : Press this button to go to the next scene. This button is not available when the DVD is stopped. This button is not available for DVD video.

▷ **SEEK (Next Track/Chapter):** Press this hard key to go to the next track or chapter. This button may not work when the DVD is playing the copyright information or the previews.

◁ **SEEK (Previous Track/Chapter):** Press this hard key to return to the start of the current track or chapter.



Press this button again to go to the previous track or chapter. This button may not work when the DVD is playing the copyright information or the previews.

### CD/DVD Messages

If Disc Read Error appears on the display and/or the CD/DVD comes out, it could be for one of the following reasons:

- If a disc was inserted with an invalid or unknown format.
- If the disc is not from a correct region.
- If the map DVD disc was installed into the CD slot. See "Installing the Map DVD" under *Maps on page 44* for more information.
- It is very hot. When the temperature returns to normal, the DVD should play.

- You are driving on a very rough road. When the road becomes smoother, the CD/DVD should play.
- The CD/DVD is dirty, scratched, wet, or upside down.
- The air is very humid. If so, wait about an hour and try again.
- There may have been a problem while burning the CD/DVD.
- The label may be caught in the CD/DVD player.

If the CD/DVD is not playing correctly, for any other reason, try a known good CD/DVD.

If any error occurs repeatedly or if an error cannot be corrected, contact your dealer.

If playing recorded media such as a CD or DVD, the sound quality may be reduced due to CD or DVD quality, the method of recording, the quality of the music that has been recorded, recording speed, max media recording speed, and the way the CD or DVD has been handled. There may be an increase in skipping, difficulty in finding tracks, and/or difficulty in loading and ejecting. If these problems occur, check the bottom surface of the disc. If the surface is damaged, such as cracked, broken, or scratched, it will not play properly. If the surface is soiled, see "Care of Your CDs and DVDs" in the Index of the vehicle's owner manual.

If there is no apparent damage, try a known good CD or DVD.

**Notice:** If a label is added to a CD or DVD, or more than one CD or DVD is inserted into the slot at a time, or an attempt is made to play scratched or damaged CDs or DVDs, the player could be damaged. While using the CD or DVD player, use only CDs or DVDs in good condition without any label, load one CD or DVD at a time, and keep the player and the loading slot free of foreign materials, liquids, and debris.

Do not add any label to a CD or DVD, it could get caught in the player. If a CD or DVD is recorded on a personal computer and a description label is needed, try labeling the top of the recorded CD or DVD with a soft marker.

### USB Host Support

The USB connector uses the USB 2.0.

### USB Supported Devices

- USB flash sticks or pen drives.
- Portable USB Hard Drives. Special care needs to be taken related to the power source of these devices (USB bus powered vs. external power).
- Portable media adapters that support SD Flash, Compact Flash, or SD Micro.

Depending on the USB mass storage device, some devices might not be recognized. The supported file formats for USB devices are .mp3 and .wma files.

Music can be played directly from the USB device and controlled through MP3 control functions and menu.

### Playing from USB

Content can also be played directly from the USB device.

The USB port is located, depending on the vehicle, in the center console or instrument panel in the APO connection on the passenger side.

The USB icon displays when the USB device connected.

To play a USB device:

- Connect the USB and it begins to play.
- Press the Audio hard key until AUX tab is selected, then press the USB screen button. The audio source options under AUX menu will vary based on your Navigation model.

While the USB source is active, use the following to operate USB function:

**▶/|| (Play/Pause):** Press to start, pause or resume play of the current media source.

**▶▶ (Seek Up/FWD):** Press to seek to the next track.

Press and hold to advance quickly through playback. Release the button to return to playing speed. Elapsed time displays.

**◀◀ (Seek Down/REV):** Press to seek to the beginning of the current or previous track. If the track has been playing for less than five seconds, the previous track plays. If playing longer than five seconds, the current track restarts. Press and hold to reverse quickly through playback. Release the button to return to playing speed. Elapsed time displays.

**TUNE:** Turn the knob to the right or left to go to the next or previous track.

**USB Music Menu:** See USB Music Menu following for more information.


### USB Music Menu

Once the USB has been connected, the main music menu appears.

Select any of the following buttons on the USB Music Menu:

**Files/Folders/Playlists:** Select to view the playlists stored on the USB. Select a folder/playlist to view a list of all songs in the folder/playlist. Select a song from the list. Once selected, Files/Folders/Playlists Mode displays. The playlist option would only be available if the device has playlist.


To use the USB music menu:

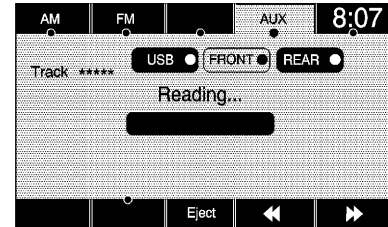


1. Touch the center button to go to the main list menu. The system will start reading the disc.



2. Once the disc has been read into the system, touch USB.

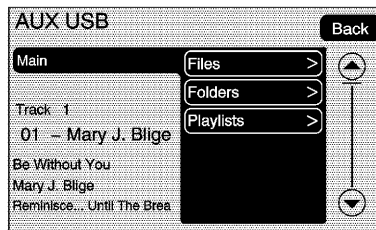


3. Touch Files, Folders, or Playlists to show a list of songs stored on the USB device.

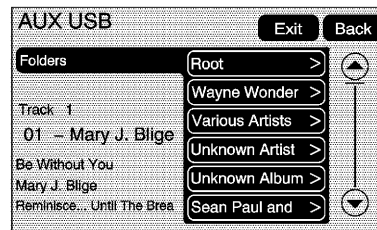


4. Touch to play the desired song.



Touch the single scroll arrows on the side of the screen to scroll through the list. Touching the double scroll arrows will scroll the list in 10 percent increments.

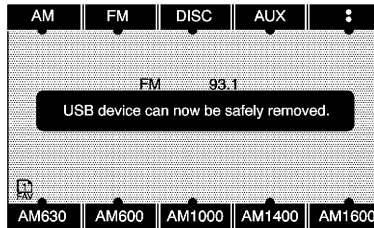

**Eject:** Touch when USB is to be removed. A message displays to safely remove it.

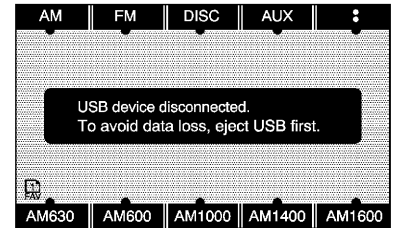

If the USB is disconnected without touching Eject, the files could become corrupted.

### Playing from an iPod®

iPod® is a trademark of Apple Inc., registered in the U.S. and other countries.

This feature supports the following iPod models:

- iPod (5th generation)
- iPod Nano (1st generation)
- iPod Nano (2nd generation)
- iPod Nano (3rd generation)
- iPod Classic
- iPod Touch

Video streaming or album art will not be supported from the iPod.

For proper operation, make sure the iPod has the latest firmware from Apple®. iPod firmware can be updated using the latest iTunes® application.

For more information, visit [www.apple.com/itunes](http://www.apple.com/itunes)

To connect and control an iPod, connect one end of the standard iPod USB cable to the iPod's dock connector. Connect the other end to the USB port, depending on the vehicle, in the center console or instrument panel in the APO connection on the passenger side.

iPod music information displays on the radio's display and begins playing through the vehicle's audio system.

The iPod battery recharges automatically while the ignition is on or in the accessory position. When the ignition is turned off while an iPod is connected using the iPod USB cable, the iPod battery stops charging and the iPod automatically turns off.

If the iPod is a model that is not supported, it can still be listened to in the vehicle by connecting it to the Auxiliary Input Jack using a standard 3.5 mm (1/8 inch) stereo cable. See *Auxiliary Devices on page 41*.

### iPod Music Menu

Once the iPod has been connected, the main music menu appears.

Select any of the following buttons on the iPod Music Menu to display the corresponding screen:

**Playlist:** Select this button to view the playlists that have been stored on the iPod. Select a playlist name to view a list of all songs in the playlist. Select the desired song from the list. Once a song has been selected "Playlist Mode" appears on the iPod main screen to show that music is playing from a playlist.

**Artist:** Select this button to view the artists that have been stored on the iPod. Select an artist name to view a list of all songs by the artist. Select the desired song from the list. Once a song has been selected "Artist Mode" appears on the iPod main screen to show that music is being played from a specific artist.

**Album:** Select this button to view the albums that have been stored on the iPod. Select an album name to view a list of all songs on the album. Select the desired song from the list. Once a song has been selected “Album Mode” appears on the iPod main screen to show that music is being played from a specific album.

**Genres:** Select this button to view the genres that have been stored on the iPod. Select a genre name to view a list of all songs of that genre. Select the desired song from the list. Once a song has been selected “Genre Mode” appears on the iPod main screen to show that music is being played from a specific genre.

**Composers:** Select this button to view the composers that have been stored on the iPod. Select a composer name to view a list of all songs of that composer. Select the desired song from the list.

Once a song has been selected “Composer Mode” appears on the iPod main screen to show that music is being played from a specific composer.

**Audio Book:** Select this button to view the audio books that have been stored on the iPod. Select an audio book name to view a list of all songs of that genre. Select the desired song from the list. Once a song has been selected “Audio Book Mode” appears on the iPod main screen.

Audio Book will only appear as a valid category if this option is on the iPod.

**Podcasts:** Select this button to view the podcasts that have been stored on the iPod. Select a name to view a list of all songs of that genre. Select the desired song from the list. Once a song has been selected “Podcast Mode” appears on the iPod main screen.

Podcasts will only appear as a valid category if this option is on the iPod.

To use the iPod music menu:



1. Touch the center button to go to the main list menu.



2. Touch Files, Folders, or Playlists to show a list of songs stored on the iPod device.




3. Touch to play the desired song.

**Eject iPod:** Select this button to remove the iPod. If the iPod is disconnected without selecting this button, the files on the iPod could be corrupted.

### Audio Book

Audiobooks can be downloaded from iTunes® or if in .mp3.

After inserting the USB or iPod, the following screen displays:

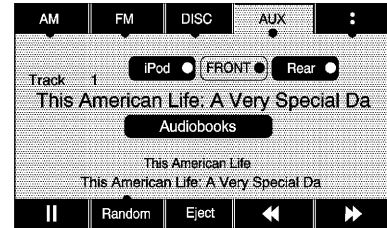


1. Touch the center button to go to the main list menu.





2. Touch Audiobooks or Podcasts to show a list of the media stored on the iPod device.

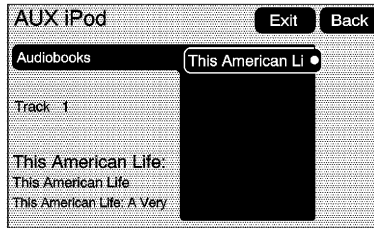

3. Touch to play the desired media.

## Auxiliary Devices

The navigation system has an auxiliary input jack located in the upper right corner of the faceplate. This is not an audio output; do not plug the headphone set into the front auxiliary input jack. You can however, connect an external audio device such as an iPod, laptop computer, MP3 player, CD changer, or cassette tape player, etc. to the auxiliary input jack for use as another source for audio listening.

Drivers are encouraged to set up any auxiliary device while the vehicle is in P (Park). See "Defensive Driving" in the Index of your vehicles owner manual for more information on driver distraction.

If your vehicle has rear audio/video input jacks, located in the rear of the center console, they can be used as another source for audio/video listening.

To use a portable audio player, connect a 3.5 mm (1/8 inch) cable to the auxiliary input jack. When a device is connected, the system will detect and automatically begin playing audio from the device over the vehicle's speakers.

If a device is connected and you are listening to another source (FM, CD, MP3, etc.), press the AUDIO key then press the AUDIO key repeatedly until AUX is selected or touch the AUX screen button.

An auxiliary device must be connected for the AUX screen button to appear as an option to select or the vehicle must have rear auxiliary jacks. See "Rear Seat Entertainment System" in the Index of your vehicle's owner manual for more information on the rear auxiliary jacks.

## Navigation

### Using the Navigation System


This section presents basic information needed to operate the navigation system.

Use the hard keys located on the navigation system along with the available touch-sensitive screen buttons on the navigation screen to operate the system. See "Hard Keys" after for more information.

Once the vehicle is moving, various functions will be disabled to reduce driver distractions.

### Hard Keys

The following hard keys are located on the navigation system:

 **(Power/Volume):** Press this knob to turn the system on and off. Turn the knob to increase or decrease the volume to the audio system.

If your vehicle has the Rear Seat Entertainment (RSE) and Rear Seat Audio (RSA), press and hold this knob for more than two seconds to turn off the navigation system, the RSE, and RSA.

### **(Tune/Speaker**

**Adjustment):** Press this knob to access the Sound screen to adjust bass, midrange, treble, and equalization or Digital Signal Processing (DSP), if the vehicle has the Bose<sup>®</sup> sound system. Turn the tune knob to go to the next or previous radio station. See *AM-FM Radio on page 14* and *Satellite Radio on page 21* for more information.

 **(CD/DVD Eject):** Press the eject button to eject CDs or DVDs.

**NAV (Navigation):** Press this key to view your vehicle's current position on the map screen. Each press of this key will cycle through Full Map and the tab that displays the current audio

source (AM, FM, CD, etc.). Full Map displays the screen in full map view. Selecting the audio tab will split the screen between the map screen and the current audio source screen menu. See “Audio” under *AM-FM Radio on page 14* and *Satellite Radio on page 21* for more information.

**DEST (Destination):** Press this key to access the Destination Entry screen to plan a destination or to change the search area. See *Destination on page 65* for more information.

**RPT (Navigation Repeat):** Press this key to repeat the last voice guidance prompt.

**FAV (Favorite):** Press this key to access the preset stations. See “Storing Radio Station Presets” under *AM-FM Radio on page 14* and *Satellite Radio on page 21* for more information.

**AUDIO:** Press this key to access the full Audio screen to change AM, FM, XM™ Satellite Radio Service (if equipped), CD, DVD (if equipped), and auxiliary input. See “Audio” under *AM-FM Radio on page 14* and *Satellite Radio on page 21* for more information.

**MENU:** Press this key to adjust features for sound, radio, navigation, and the display. See *Navigation Menu on page 53* for more information.

**▷ SEEK / ◀ SEEK:** Press the seek arrows to seek and scan radio stations, to seek tracks on a CD, and to seek chapters on a DVD. See *AM-FM Radio on page 14*, *Satellite Radio on page 21*, and *CD/DVD Player on page 24* for more information.

## Touch-Sensitive Screen Buttons

Touch-sensitive screen buttons are located on the screen. When a screen button has been selected, a beep will sound. Screen buttons are highlighted when a feature is available.

## Alpha-Numeric Keyboard


Letters of the alphabet, symbols, punctuation, and numbers, when available, will display on the navigation screen as an alpha or numeric keyboard. The alpha keyboard will display when the system requires entry of a city or street name.


All characters are touch-sensitive screen buttons. Touch a character to select it.

**A-Y (Accent Alphabet):** Select this screen button to select letters with accent symbols. This button may toggle to A-Z.

**A-Z (Alphabet):** Select this screen button to select letters from the alphabet. This button may toggle to A-Y.

**0-9 (Numbers):** Select this screen button to select numbers.

 **(Space):** Select the space screen button to enter a space between characters or the words of a name.

 **(Backspace):** Select the backspace screen button if an incorrect character has been selected.

To make name selections easier, the system will only highlight the characters that can follow the last one entered. For example, if a Z is entered, a T may not be available for selection.

If a name does not display after entry, it may need to be entered differently, the map DVD disc may not contain that information, or

the correct search area has not been selected. See *Database Coverage Explanations on page 80* for more information or *Destination on page 65* to change the search area.

### Maps

This section includes basic information needed to know about the map database.

#### Map Coverage

The maps are stored on a DVD. The 48 contiguous United States, along with Hawaii, Alaska, and portions of Canada are contained on one disc.


Refer to the “Navigation System Map Disc” manual to view a detailed explanation of map coverage and detailed city lists in each region. This manual will be in the map DVD case when the vehicle is delivered from the factory.

### Installing the DVD Map Disc

When a DVD Map Disc is installed, noise from the disc may occur, this is normal system operation.


The navigation system in this vehicle uses a DVD to store map information. When the system loads data from the disc, you may hear a very slight buzz sound from the navigation system. The sound is similar to that of a CD player seeking through different tracks. This is normal operation and may occur more frequently with the use of XM NavTraffic.

Your dealer may have installed the map DVD. If the map DVD was not installed, do the following to load it:

1. Turn the ignition on.
2. Press the  (power) knob to turn the navigation system on or press the NAV, DEST, or MENU hard keys. If the MENU hard key is selected, press

and hold until the NAV screen is active, or select the NAV tab manually.

3. Touch the OK screen button to agree to the Caution screen, if it appears. If the map is in split screen mode, you must push the NAV tab button to get the full map screen.

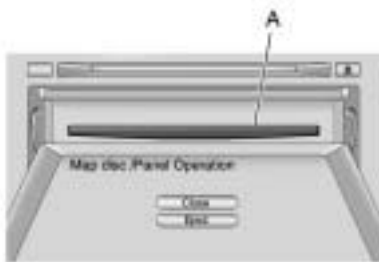

A. Map DVD Slot

4. Touch the Insert Map Disc screen button. The screen will tilt to access the map DVD slot.

5. Load the map DVD partway into the slot. The system will pull it in.
6. Once the map DVD is loaded, touch the Close screen button. The screen will close.
7. Set the search area. See “Setting the Search Area” under *Using the Navigation System* on page 42 for more information.

### Ejecting the DVD Map Disc

When the DVD map disc is not loaded, you will not be able to use the navigation portion of the system.

1. Press the MENU key to enter the Menu options, then press the MENU key repeatedly until Nav is selected or touch the Nav screen button.
2. Touch the Map Database Information screen button.

3. Touch the Change screen button. The screen will tilt, exposing the map DVD slot and the map DVD will eject. Pull the disc out.
4. Touch the Close screen button. The screen will close.

### Handling the DVD Map Disc

When handling the DVD map disc, be careful of the following:

- Handle the disc very carefully to avoid contamination or flaws. Signals may not read out properly if the disc gets contaminated or flawed.
- If the disc gets soiled, use a soft cloth to gently wipe it out from the center of the disc to the outside. Do not use photographic record cleaner, solvents, or other cleaners.
- Do not use the disc to rest on while writing or drawing using any writing utensil or attach a seal to any of the sides or the disc.

- Do not keep the disc in direct sunlight, high temperatures, or humidity.
- After using the disc, place it back into the original case.

### DVD Map Disc Messages

If Disc Read Error appears on the display and/or the disc comes out, it could be for one of the following reasons:

- If the map DVD disc was installed into the audio CD/ video DVD slot. See “Installing DVD Map Disc” earlier in this section.
- It is very hot. When the temperature returns to normal, the disc should work.
- You are driving on a very rough road. When the road becomes smoother, the disc should work.
- The disc is dirty, scratched, wet, or upside down.
- The air is very humid. If so, wait about an hour and try again.

### Map Adjustments

The system allows you to adjust the scale of view on the map. Also, as you drive, the map will scroll automatically based on the direction of travel.

### Map Scales

 /  **(Zoom In/Zoom Out):**

Touch the zoom in or out screen buttons or the scale on the bar to change the level of map detail. The scale will appear on the screen once the zoom in or zoom out screen buttons are selected. The system will adjust the map accordingly. The scale of a map can range from 150 ft. (50 m) to 250 mi. (400 km). To change from English or metric, see “Driver Information Center, DIC Operation and Displays” in the Index of your vehicle’s owner manual.

### Scrolling the Map



Touch anywhere on the map screen and the scroll symbol will appear. Use this feature to scroll across the map.

Move your finger in any direction on the map screen and the map will continue to scroll in that direction until you remove your finger.

If scrolling while your vehicle is in P (Park), the system will scroll initially at a slower rate. It will increase if you continue touching the map screen.

If scrolling while your vehicle is in motion, you have one scroll speed and a limited distance to scroll. You have to keep touching the map screen to scroll for a longer distance.

If you have used the scroll feature to scroll the map and your vehicle icon becomes lost, press the NAV (Navigation) key to return to the current vehicle location on the map.

You can use the scroll feature on the map to set a destination. See “Pick from Map” under *Destination on page 65* for more information.

When scrolling on the map without a planned route, press the GO screen button to calculate the route from your current position to the destination mark.

## Navigation Symbols

The following symbols are the most common symbols that will appear on a map screen.



Your vehicle is shown as this symbol. It indicates the current position and heading direction of your vehicle on the map.



The destination symbol will appear on the map, after a route has been planned, marking your final destination.




The waypoint symbol will display on the map after a waypoint has been added to your route.

The waypoint symbol will be numbered from one through three depending on how many intermediate waypoints have been set.



The distance to destination symbol indicates the distance to your final destination.

This symbol only appears when time is not available or when you are scrolling on the map.

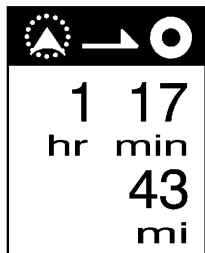

The distance and time to destination symbol indicates the distance and the estimated time remaining to your final destination.



The straight line to distance symbol indicates the straight-line distance to your destination.

This symbol will appear before you start driving on the route or if you are on a road where navigation guidance cannot be given.



The north up symbol indicates the map with North Up, known as North Up mode.

While in North Up mode, the vehicle icon will follow the north direction on the map regardless of which direction the vehicle is traveling. Select this screen symbol to switch between North Up and Heading Up modes.





 
The heading up symbol indicates the map with the vehicle travel direction up, known as Heading Up mode.

The shaded triangle indicates the North direction. While in Heading Up mode, the direction your vehicle is traveling will always be at the top of the map screen. The vehicle icon will always be headed in the direction your vehicle is traveling. Select this screen symbol to switch between Heading Up and North Up modes.



The No GPS symbol will appear when your vehicle is not receiving a Global Positioning System (GPS) satellite signal.

See *Global Positioning System (GPS)* on page 77 for more information.



Select the MARK screen button to store the location on the screen in your address book.


The system will automatically store the point in the address book. See “Adding Destinations to the Address Book” under *Destination on page 65* for more information.

### Displaying Points of Interest (POI) on the Map Screen



Select the POI screen button to display or delete POI icons from the map.

Displaying POI icons on the map let you know where POIs (i.e. restaurants, gas stations, etc.) are located. This screen will appear after selecting the POI screen button.

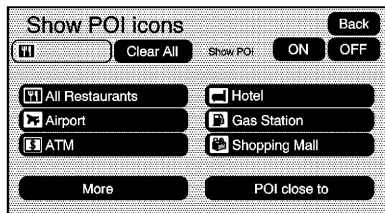

Select one of the POI categories to display or to delete POI icons from the map screen. Once a category has been selected, the POI icon will display at the top of the screen. Five categories can be selected to display on the map screen. When a category is selected those POI icons will display on the map. Press the POI screen button again to add more POI icons.

**More:** Select this screen button to view more POI categories.



**POI Close to:** Once a category has been selected, select this screen button to display the list of available POIs for the selected POI categories. The list provides the POI icon, the name, the direction, and the distance to the POI from your vehicles current position. Use the scroll arrows to move up and down the list. Use the Sort by DIST. (distance), Icon, Name, and, on Route as desired.

**Go:** Press this screen button, next to the desired POI, to make this POI a destination or a waypoint.

Select a POI name to receive information about the POI. From this screen you can select: Add to Address Book, Go, Map, or Call (if OnStar<sup>®</sup> personal calling is activated).

**Add to Address Book:** Press this screen button to add this POI to the address book. See “Nav” under *Navigation Menu on page 53* for information on editing address book entries.

**Go:** Press this screen button to make this POI a destination or a waypoint.

**Call:** Select to initiate a call using the OnStar Hands-Free system. The Call button is only available if OnStar personal calling is activated. For more information about OnStar Hands-Free Calling, see the OnStar Owner Guide.

**Map:** Press this screen button to display the map showing the location of the POI.

**Show:** Select this screen button to update the map screen and the list once a category has been selected.

**Show POI:** Select ON to display the POI icons on the map screen. Select OFF to remove the POI icons from the map screen.

**List all Categories:** Select this screen button to list all POIs sorted alphabetically.

**Clear:** To delete a category, do one of the following:

- To delete the last added POI category, select the Clear screen button.

- To delete a specific POI category:
  1. Select the category.
  2. Select the subcategory.
  3. A pop-up confirmation will display. Select the Delete screen button, the map screen will display with that POI category deleted.

**Clear All:** Select this screen button to clear all selected POI categories. A pop-up confirmation will display. Select the Delete screen button, the map screen will display with all POI categories deleted.


## Driving on a Route

When a destination has been routed and you are driving on route, the map screen will automatically display the next maneuver.



This next maneuver pop-up will display the next maneuver direction and how many miles or kilometers you are from it.


### Dual Mode

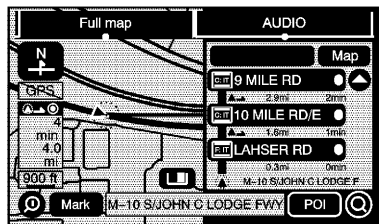

This dual screen symbol displays when the screen is in dual mode.

Dual mode displays the route on half of the screen and a maneuver or Interstate Exit list on the other half.

The Interstate Exit list advises of approaching exits. Press this button to switch between dual screen and full screen which displays the entire route.

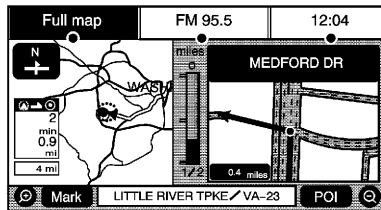

When approximately 1/2 mi. (.08 km) from the next maneuver, or two miles while on expressways, the screen displays the name and a detailed view of the next maneuver. Touch the dual mode button to hide the detailed turn maneuver view for this maneuver only.

### Auto Reroute

When your destination is set and you are off the planned route, the system will automatically plan a new route and begin to reroute. You will be able to see the new route highlighted on the screen.


### Traveling Across Regions

If you plan to drive across many states, you may have to change the region selected to represent the area you are traveling to. To change the region, do one of the following:

- Change the selected region in the search area when you get closer to your destination. See *Destination on page 65*.
- Change the selected region in the search area when entering your destination and route settings. See *Destination on page 65*.

For example, if you were traveling from Michigan to Florida, change the region currently selected in the search area to Florida. Enter a destination in Florida under the Destination Entry menu.

## Navigation Menu

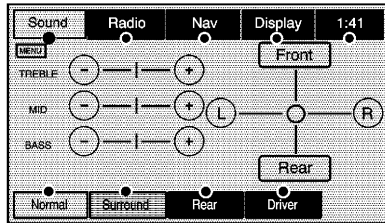

Press the MENU hard key to adjust several of your system's features and preferences. The last selected menu screen will be the screen that displays; Sound, Radio, Nav (navigation), Display or Time.


## Sound

Press the MENU key to enter the Menu options, then press the MENU key repeatedly until Sound is selected or touch the Sound screen button to make speaker and equalization or DSP (Digital Signal Processing) adjustments. See *AM-FM Radio on page 14* and *Satellite Radio on page 21* for more information.

## Radio


Press the MENU key to enter the Menu options, then press the MENU key repeatedly until Radio is selected or touch the Radio screen button to make changes for radio information displayed, preset pages, XM™ categories, and Automatic Volume Control or Bose® AudioPilot®. See *AM-FM Radio on page 14* and *Satellite Radio on page 21* for more information.

## Nav (Navigation)

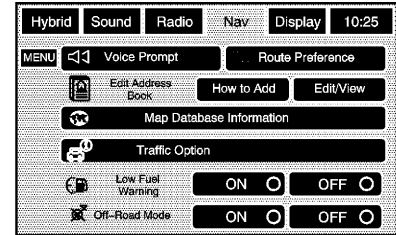


Press the MENU key to enter the Menu options, then press the MENU key repeatedly until Nav is selected or touch the Nav screen button.

### Off-Road Mode

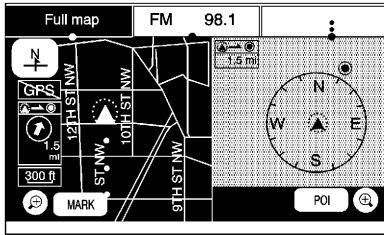


To turn the Off-Road Mode on or off, do the following:

1. Press the MENU key.
2. Press the Nav screen button.
3. Press the  Off-Road Mode ON or OFF screen buttons. The active button will be highlighted.

When the off-road mode is turned on, the navigation system will show the path being traveled by the vehicle when not on a marked road. This path

will be a simulation since the map database coverage will not have these roads on the DVD. This path will be stored in the navigation system's memory, see "Previous Destination" under *Destination* on page 65 for more information.

### Voice Prompt


 **Voice Prompt:** Touch the Voice Prompt screen button to change the volume of the voice prompts or to turn the voice prompts on and off.

**Voice Prompt Volume:** Touch the + (plus) or – (minus) screen buttons to increase or to decrease the volume of the voice prompts.

### Turn voice turn

**instruction:** Touch the ON or OFF screen buttons to turn voice instructions on and off while traveling on a planned route.

### Route Preference

Touch the  Route Preference screen button to change route options when the system calculates a route.

**Allow highway:** This feature allows the system to use major roads when calculating a planned route.

**Allow toll road:** This feature allows the system to use toll roads when calculating a planned route.

**Allow ferry:** This feature allows the system to use ferries when calculating a planned route.

### Allow time and seasonal

**restricted road:** This feature allows the system to use time restricted and seasonal roads when calculating a planned route.


## Edit Address Book


### How to Add

To add an address to the address book, see “Adding Destinations to the Address Book” under *Destination on page 65*.

### Edit/View


To edit the name of an address book:

1. Select the MENU hard key.
2. Select the NAV screen button.
3. Select the  Edit/View Address Book screen button.
4. Select the Address book entry.

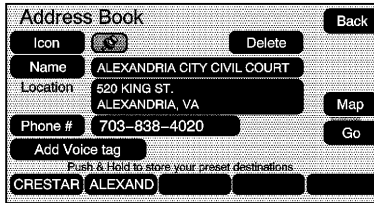


5. Touch the Name screen button and use the alpha keyboard to edit or add the name.
6. Touch the OK screen button to save your changes.


To add or change the phone number of an address book entry:

1. Select the MENU hard key.
2. Select the NAV screen button.
3. Select the  Edit/View Address Book screen button.
4. Select the address book entry to change.
5. Touch the Phone # screen button and use the numeric keyboard to input or change the phone number.
6. Touch the OK screen button to save your changes.


To change the map icon of an address book entry:

1. Select the MENU hard key.
2. Select the NAV screen button.
3. Select the  Edit/View Address Book screen button.
4. Select the address book entry to change.
5. Select the Icon screen button.
6. Select an icon from the list.


To add a voice tag to an address book entry:

1. Select the MENU hard key.
2. Select the NAV screen button.
3. Select the  Edit/View Address Book screen button.
4. Select the Add Voice tag screen button.
5. The system will ask for you to state the name. You will have five seconds to state the name. The system will respond back with the name.


To delete an address book entry:

1. Select the MENU hard key.
2. Select the NAV screen button.
3. Select the  Edit/View Address Book screen button.
4. Select the address book entry to delete.
5. Press the Delete screen button to delete the address book entry.

To delete the entire address book:

1. Select the MENU hard key.
2. Select the NAV screen button.
3. Select the  Edit/View Address Book screen button.
4. Select the address book entry to delete.
5. Press and hold the Delete screen button until the delete all address book entries pop-up confirmation displays. Select Yes to delete; select No to cancel the operation.

### Map Database Information

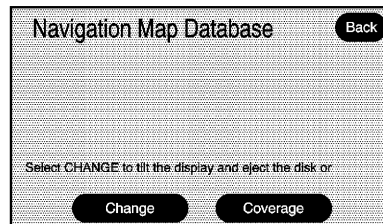


To change the map DVD and to view the coverage areas of the map DVD:

1. Press the Menu hard key.
2. Select the Nav tab.
3. Select the Map Database Information screen button.




**Change:** Touch this screen button to eject or change the map DVD. The screen will tilt, exposing the map DVD slot and, if loaded, the map DVD will eject. Pull the map DVD out. Insert the map DVD partway into the slot. The system will pull it in.

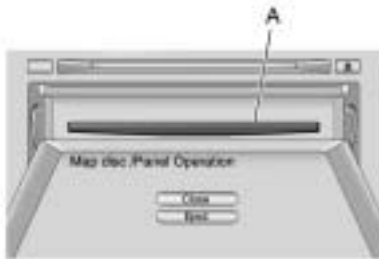

A. Map DVD Slot

Once the map DVD is loaded touch the Close screen button. The screen will close.

Once the screen is closed touch the OK screen button to proceed to the navigation system. See *Using the Navigation System on page 42.*

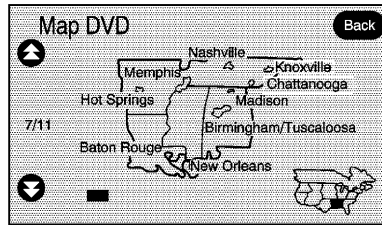


**Coverage:** Touch this screen button to view the areas covered by the map DVD.

Touch the up and down arrow screen buttons to view each region of the map DVD. The screen will display the major cities for the selected region.

### XM NavTraffic™ (USA and Canada)

The vehicle's navigation system may have an XM NavTraffic™ receiver. XM NavTraffic™ is a subscription service provided via XM™ Satellite Radio. XM NavTraffic™ provides real-time traffic information fully integrated to the navigation system to display current traffic conditions for a driver's chosen route and surrounding area. XM NavTraffic™ allows drivers to make the most informed, timesaving routing decisions.

If the Traffic touch screen button is pressed or if an attempt is made to turn on the traffic display in the Navigation Setup Menu without a subscription, a warning screen displays indicating that XM traffic is not activated.

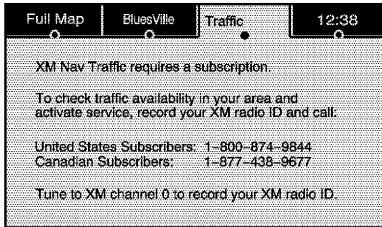

Three types of traffic information for major roadways are displayed on the navigation system:

- Unscheduled traffic incident data, such as accidents and disabled vehicles
- Scheduled traffic incident data, such as road construction and road closures
- Traffic flow information (rate of speed data)

Traffic information is delivered to the vehicle by the XM™ Radio satellites. XM NavTraffic™ makes it possible for the navigation system to provide continuously updated traffic information personalized for a driver's needs.

XM NavTraffic™ currently broadcasts the traffic information for many markets nationally, and the service may be available in more cities in the future. Visit [xmnavtraffic.com](http://xmnavtraffic.com) for more details on local coverage.

A service fee is required in order to receive the XM NavTraffic™ service.

### Turning XM NavTraffic™ On and Off

To turn traffic on or off:


1. Press the Menu hard key, then press the Menu key repeatedly until Nav is selected or press the Nav screen button.
2. Touch the Traffic Options button.
3. Touch the Traffic button. This button is highlighted when it is active.

Selecting Alert for Approaching Traffic Events enables the system to show a pop-up screen that notifies of possible traffic issues ahead.




When this feature is highlighted, while traveling on a route, accidents located on the route are indicated and can be avoided.

### Traffic Icon

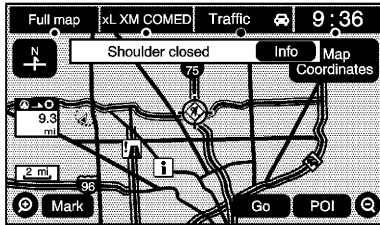The Traffic Icon appears on the Traffic Tab, next to the word Traffic, when traffic is found in the local area.




The Traffic Icon has three different condition displays. These are:

Condition	Traffic Status Icon
<ul style="list-style-type: none"> <li>• No XM NavTraffic™ subscription.</li> <li>• No Traffic is found in the local area.</li> <li>• The Traffic Feature is turned off.</li> </ul>	
<p>Traffic events are in the area, but none are on route.</p>	
<p>Traffic events are on route.</p>	

### Locations and Information of Traffic Conditions


The system may take some time to sort the information. The list of traffic conditions display in the order of distance from the vehicle, at a minimum of approximately 16 mi (25 km). If traveling on a planned route, the list can be filtered to see traffic conditions along the planned route. Not all traffic conditions may be listed.

To view the traffic condition location and information on the map:

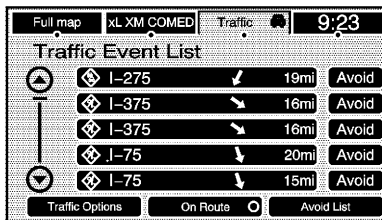

1. Press the NAV key, then press the NAV key repeatedly until Traffic is selected, or touch the Traffic screen button. A list of traffic conditions with the direction and distance from the vehicle's current position displays.
2. Select a traffic condition to get more detailed information of the event.


### Options

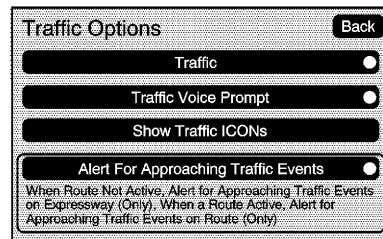

Select the Options screen button. A Traffic Options menu displays. Select the desired traffic related option.

**Traffic:** Select to enable or disable the traffic function.

**Show Traffic ICONS:** Select to display traffic icons on the map screen. This function allows which traffic information displays.

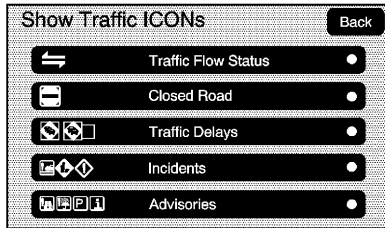

*Traffic Flow Status* — This touch screen button is used to enable or disable the green, yellow, red and orange arrows shown beside the roads and used to show the traffic flow or extent of a traffic event.

- Black indicates a closed road segment.
- Red indicates significantly impaired traffic flow with average speed less than 25 mph.

- Yellow indicates slightly impaired traffic flow with average speed between 25 and 45 mph.
- Green indicates normal traffic flow with average speed above 45 mph.

Traffic flow data arrows display on the map when scaled up to eight miles.

Closed Road, Traffic Delays, Incidents, and Advisories — These four touch screen buttons are used to turn on and to show traffic event ICONS that appear on the map screens.

### Traffic Event Display Categories

The following are traffic condition categories and symbols that can appear on the display:


#### *Category 1, Road Closure:*


 **(Road Closed):** Road and/or ramps closed.

#### *Category 2, Traffic Delayed:*

 **(Stopped/Slow Traffic):** Traffic stopped, stop and go traffic, delayed and congested traffic.


#### *Category 3, Incidents:*


 **(Alert):** Object in the roadway, disabled vehicle, or dangerous road conditions.

 **(Accident):** Roadway obstructed due to accident.

 **(Road Works):** Delayed traffic due to construction.

#### *Category 4, Advisories:*

 **(Road Condition):** Delayed or stopped traffic, lane blocked or closed due to a road condition.

 **(Weather):** Heavy rain, snow, or fog weather condition.

## 62 Infotainment System

**P (Parking):** Available parking area.

**i (Information):** Special event, general information, or warning.

### Alert for Approaching Traffic Events:


When On, if an approaching traffic event is within the alert range, one of two traffic alert pop-up screens display:

- With no route planned, while on expressways, Approaching Traffic Event without Avoid screen displays.
- With route planned, Traffic Event on Route screen displays.

If the Alert for Approaching Traffic Events is Off, the alert pop-up screen does not display and no voice announcement when approaching traffic.


### On-Route

Select the On Route touch screen button to display all events ahead on the current active route. If no traffic events have been reported on route, this list will be empty.

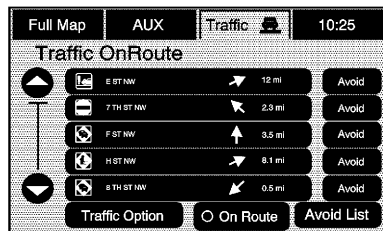


### Avoid List

Press to show previously avoided incidences. Select an incidence to cancel it from being on the avoided list.

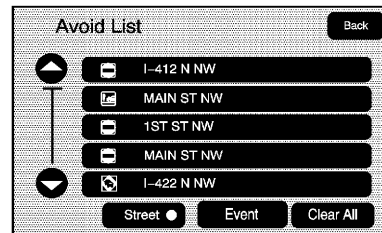

## Scrolling to Traffic Events on the Map

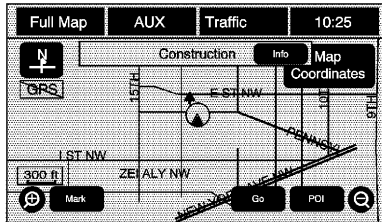


While scrolling the map, traffic condition icons may appear. To receive information about the traffic condition, place the cross hairs over the traffic condition icon. After selecting the INFO (information) screen button, the type of traffic condition, the street name, and a description of the traffic condition displays. See “Scrolling the Map” under *Maps on page 44* for more information.

Press the NAV hard key to return to the normal full map screen.

### Detailed Traffic Event Screens

There are different types of detailed traffic event screens. Each screen is a variance of the one shown on the Traffic Event Screen.

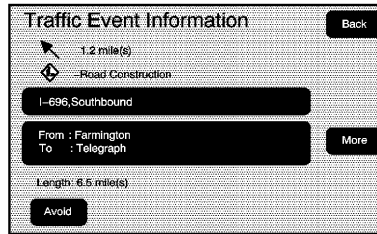

### Traffic Event Screen

The Traffic Event screen can be displayed by:

- Scrolling to an event on the map and then pressing INFO.
- Selecting a traffic event listed on the Traffic Event List screen.

- Selecting a traffic event listed on the Traffic On Route Screen.

### Back, Map, More, and Avoid

These buttons have common functions across all three Detailed Traffic Event screens.

**Back:** Press to return to the previous screen.

**Map:** Press to show the related traffic event on the map. If selected, the Map Traffic Event Icon screen displays.

**More:** Press to display more of the traffic event description.

**Avoid:** This button is used to avoid the location of an event on the route. If selected, a new route is calculated and the related traffic event is avoided. After the new route has been calculated, the navigation system goes to the full map screen and shows the new route.

## 64 Infotainment System

The Avoid button is only available if the route ahead and in the Traffic On Route List.

### Traffic Voice Prompts


If the voice prompts are on, whenever an Alert for Approaching Traffic is displayed, the system gives the related voice prompt. The content of the voice prompt depends on actual traffic event data.

The RPT (Repeat) hard key is for navigation traffic maneuvers only. It is not used to repeat traffic prompts. During a traffic voice prompt, if RPT is pressed, the current prompt playback cancels.

Anything that cancels the Alert for Approaching Traffic, also cancels the related voice prompt.

Traffic prompts are disabled during OnStar<sup>®</sup> or Voice Recognition activity.

### Display

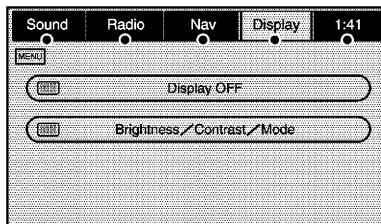


Press the MENU key to enter the Menu options, then press the MENU key repeatedly until Display is selected or touch the Display screen button.

#### Display Off

Touch this screen button to turn the display off. Press any hard key to view the display.

### Brightness/Contrast/Mode

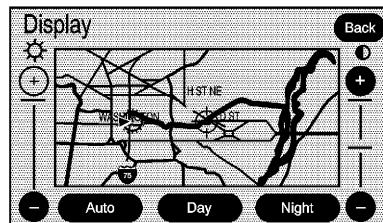

Touch this screen button to change the brightness, contrast, and mode of the display.

☀️ **(Brightness):** Touch the + (plus) or – (minus) screen buttons to increase or decrease the brightness of the screen.

● **(Contrast):** Touch the + (plus) or – (minus) screen buttons to increase or decrease the contrast of the screen.



**Auto (Automatic):** Touch this screen button for the system to automatically adjust the screen background depending on exterior lighting conditions.

At night, the brightness can be adjusted with the vehicle dimming knob near the headlamp switch.

**Night:** Touch this screen button and the system will make the map background darker.

**Day:** Touch this screen button and the system will make the map background brighter.

### Setting the Clock

Press the MENU key to enter the menu options, then press the MENU key repeatedly until the time is selected or touch the time screen button, then press the Set screen button.


**Hours:** Press the – (minus) or + (plus) signs to decrease or increase the hours.

**Minutes:** Press the – (minus) or + (plus) signs to decrease or increase the minutes.

**12/24 Format:** Select the 12 screen button for standard time; select the 24 screen button for military time.

### Destination


Press the DEST key to access the Destination Entry screen. From this screen, you can select from several options to plan a route by entering destination points.

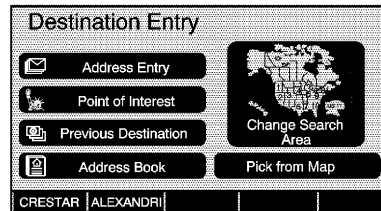

### Search Area

The Destination Entry screen allows you to select the area included in the search for your destination. A map that divides the 48 contiguous United States, along with Hawaii, Alaska, and a part of Canada into 14 regions is displayed.


Before selecting a method of destination entry, review the search area map to make sure your destination is located in the highlighted region.

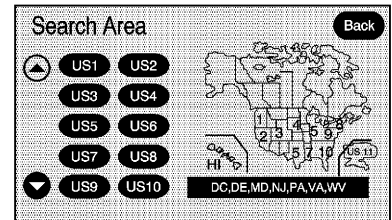

Touch the Change Search Area screen button to view the Search Area screen. Touch the numbered screen button to the left of the search area map that corresponds with the numbered region and to view a list of states included in the region selected. The selected area will be highlighted on the map. Touch the down arrow to select CAN (Canada). Touch the back screen button to return to the Destination Entry screen and to store the selected region.


To enter a destination, choose from one of the following destination entry methods:

### Address Entry


 **Address Entry:** The address entry destination method allows you to enter an address by providing the system with a city name or a street name.

If you are having trouble finding a city or a street name, do the following:

- Input the street name first instead of the city name, or vice versa.
- Input more characters or reduce the amount of characters to reduce or expand the available options.

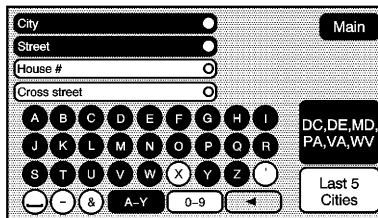

To enter a destination by entering the city name first, do the following:

1. Press the DEST hard key.
2. Select the  Address Entry screen button.
3. Select the City name button.
4. Enter the city name or touch the Last 5 Cities screen button.

The Last 5 Cities screen will display a list of the last five city names that had been entered. Select a city from the list and it will appear in the City name area.

If using the alpha keyboard, finish entering the city name. If five or less names are available, a list will display. If more than five are available, there will be a screen button with a number in it, it represents the number of available cities. Select this button to view the list and select a city.

5. Once a city has been selected the Street name category will automatically be selected for entry.

Start entering the street name. If five or less names are available, a list will display. If more than five are available, there will be a screen button with a number in it, it represents the number of available streets. Select this button to view the list.


6. Select the street name with the correct prefix (Dr., Ln, St., etc.) from the list.
7. Once a street has been selected, the numeric keyboard will display, allowing you to enter the house number. The system will display the house number range that is available for the street.
8. Select the Go screen button. The map screen, with the destination marked, will display.

9. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.

10. Select the Start Guidance screen button. You are now ready to start your route.

See "Getting Started on Your Route" later in this section for more information.

To enter a destination by entering the street name first, do the following:

1. Press the DEST hard key.
2. Select the  Address Entry screen button.
3. Select the Street screen button and start entering the street name.

If five or less names are available, a list will display. If more than five are available, there will be a screen button with a number in it, it represents the number of available streets. Select this button to view the list.


4. Select the street name with the correct prefix from the list (Dr., Ln., St., etc.).
5. Once a street has been selected the City name category will automatically be selected for entry.

If five or less cities are available for the selected street, the system will display the list of cities. If more than five cities are available the system will display the alpha keyboard. Start entering the city name. If five or less names are available, a list will display. If more than five are available, there will be a screen button with a number in it, it represents the number of available cities. Select this button to view the list and select a city.

6. Once a city has been selected, the numeric keyboard will display, allowing you to enter the house number. The system will display the house number range that is available for the street.

7. Select the Go screen button. The map screen, with the destination marked, will display.
8. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
9. Select the Start Guidance screen button. You are now ready to start your route.  
See “Getting Started on Your Route” later in this section for more information.

To enter a destination by entering a cross street, do the following:

1. Press the DEST hard key.
2. Select the  Address Entry screen button.
3. Select the Street screen button and start entering the street name.


If five or less names are available, a list will display. If more than five are available, there will be a screen button with a number in it, it represents the number of available streets. Select this button to view the list.

4. Select the desired street name with the correct prefix from the list (Dr., Ln., St., etc.).
5. Once a street has been selected the Cross Street screen button will become available. Select the Cross Street button and start entering the cross street name.  
If five or less names are available, a list will display. If more than five are available, there will be a screen button with a number in it, it represents the number of available cross streets. Select this button to view the list.

6. Select the street name with the correct prefix from the list (Dr., Ln., St., etc.). An Information screen will automatically display.
7. Select the Go screen button. The map screen, with the destination marked, will display.
8. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
9. Select the Start Guidance screen button. You are now ready to start your route.  
See “Getting Started on Your Route” later in this section for more information.

### **Point of Interest (POI)**

The Point of Interest (POI) destination entry method allows you to select a destination from the POI list.

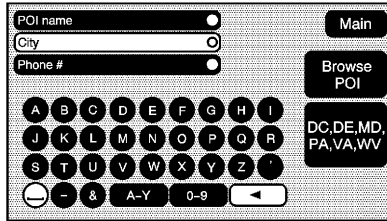

**Point of Interest:** Touch this screen button to access the Point of Interest (POI) screen. From this screen you have two options to select/enter a destination; enter the name using the alpha keyboard or select a category from the category list.

To use the point of interest destination entry method by entering the name, do the following:

1. Press the DEST hard key.
2. Select the Point of Interest screen button.

3. Enter the POI name.

If five or less names are available, a list will display. If more than five are available, there will be a screen button with a number in it, it represents the number of available POIs. Select this button to view the list.

4. Select the Go screen button next to the POI. The map screen, with the destination marked, will display.
5. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
6. Select the Start Guidance screen button. You are now ready to start your route.

See “Getting Started on Your Route” later in this section for more information.

To use the point of interest destination entry method by selecting a category, do the following:

1. Press the DEST hard key.
2. Select the Point of Interest screen button.
3. Select the Browse POI screen button to view the list of POI categories.
4. Select a category, and then a sub-category.

The system will display available POI names in the selected sub-category or if the list is too long the system will display the alpha keyboard.

If the alpha keyboard is displayed, enter the POI name until a list of available POIs appear. There is a screen button with a number in it, it represents the number of available POIs. Select this button to view the list and select the POI.


## 70 Infotainment System


5. Select the Go screen button next to the POI. The map screen, with the destination marked, will display.
6. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
7. Select the Start Guidance screen button. You are now ready to start your route.

See “Getting Started on Your Route” later in this section for more information.


### Address Book

The address book entry method allows you to select a destination by selecting an address that has been stored in your address book.

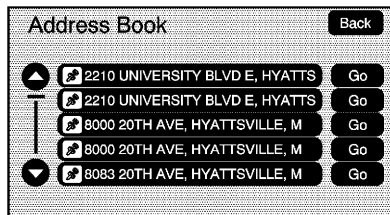

 **Address Book:** Touch this screen button to access the Address Book screen. From this screen you can select an address that already exists as the destination.

To use the address book entry method, do the following:

1. Press the DEST hard key.
2. Select the  Address Book screen button.

A list of your address book addresses will display.

3. Select the Go screen button next to the destination. The map screen, with the destination marked, will display.
4. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
5. Select the Start Guidance screen button. You are now ready to start your route.

See “Getting Started on Your Route” later in this section for more information.


See “Adding Destinations to the Address Book” later in this section.

## OnStar® Destination Download

OnStar® Destination Download (if equipped) is a service available for OnStar\* subscribers that makes operating your navigation system much simpler. It allows subscribers to request and receive navigation assistance on-the-go.

### Using OnStar® Destination Download


Press the blue OnStar button and an Advisor can locate a point-of-interest or an address and download the necessary information or coordinates to your navigation system. Once the destination is downloaded, the navigation system will search for the address in the mapping disc's database. When the address is found, it will be shown on your navigation system's screen along with the buttons described below.

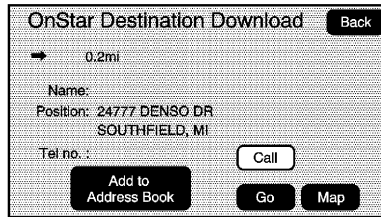

### OnStar Download Screen

- Select Go, the navigation system calculates route(s). Select a route (i.e. Shortest Route), and Start Guidance.
- Select Map, the navigation system displays the Destination Map Screen.
- Select Call, the navigation system initiates a call to your destination with your Bluetooth phone (if available) or OnStar Hands-Free Calling (if minutes are available).

- Select Add to Address Book, the navigation system copies the downloaded destination to the address book and displays the new address book entry.
- Select Back, the navigation system cancels your OnStar Destination Download and returns to the previous screen. The downloaded address will not be added to the previous destinations.

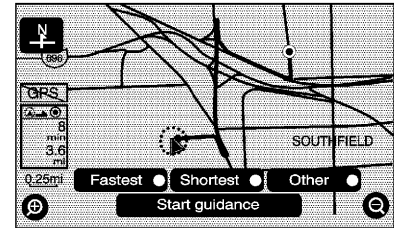

### Start Guidance Screen

### Route Guidance Not Active

If an OnStar destination is downloaded while route guidance is not active, the navigation system displays an OnStar Destination Download Screen and operations will continue as outlined in the Using OnStar Destination Download section:

### Route Guidance Active

If OnStar downloads a destination while route guidance is already active, the navigation system adds the downloaded destination as the next waypoint in the existing route. All features such as Call and Add to Address Book will be available for the waypoint. Refer to the section on Waypoints for more information.

### Previous Destinations

Previous OnStar Destination Downloads are saved under Previous Destinations in the navigation system where they can be accessed or saved to the address book.

Important Notes regarding OnStar Destination Download:


- The map disc must be installed in the radio for OnStar Destination Download to function.
- If the navigation system is turned off when the destination download is attempted, the navigation system will automatically turn on and display the OnStar Destination Download Screen. The radio will remain on after the download occurs.

- If the navigation system is turned off when the destination download is attempted, the navigation system will automatically turn on and display the OnStar Destination Download Screen. The radio remains on after the download occurs.
- If OnStar downloads a destination and the address is not found in the mapping disc's database and routing by coordinates is not available, the Go and Map buttons gray out and routing will not be available. Press the blue OnStar button for further assistance.
- The Call button grays out when there is no phone number available for your destination and while connected to OnStar.



### Map Destination Screen Functions


If the map screen is used to show destination, it will have map screen capabilities such as Go, Mark, Zoom, Scroll, etc. The address is shown at the top of the screen.

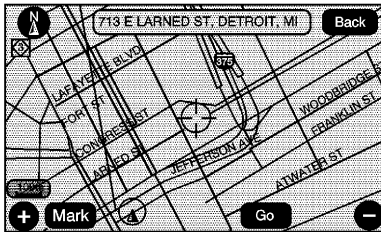

Destination Map Screen


### Getting Started on Your Route

Once you have entered a destination there are several functions that can be performed. Press the DEST hard key to access the Route screen.

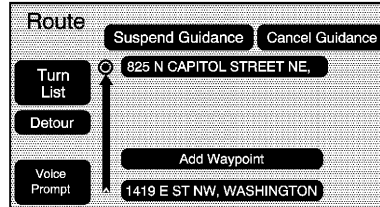

#### Turn List

**Turn List:** Touch this screen button to view the list of turn maneuvers for the entire route and to avoid turns on the route.

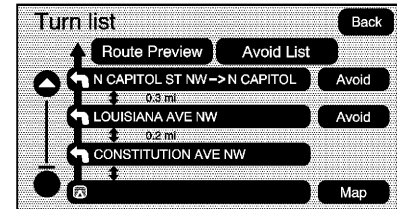


**▲ / ▼ (Scroll Arrows):** Touch the up and down arrow screen buttons to scroll through the list of maneuvers.

**Avoid:** Touch this screen button, next to the adjacent street name, to avoid the maneuver.

The map screen will display. Select the Fastest, Shortest, or Other screen buttons. Press the Start Guidance screen button. The route will re-calculate without the selected avoided maneuver.

**Avoid List:** Select this screen button to cancel an avoided turn. The list of selected avoided turns will display. Select the turn to cancel the turn from being avoided.

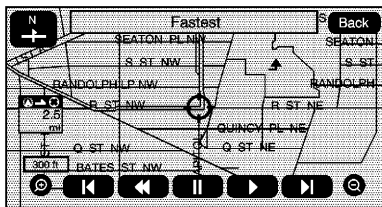

▶ **(Route Preview):** Select this screen button to preview the entire route in either direction.

◀ **(Reverse Skip):** Select this screen button to go back to the start point or previous waypoint.

◀ / ◀◀ **(Reverse Scroll):** Select this screen button to scroll to the start point or previous waypoint. This button will toggle between slow and fast speed.

|| **(Pause):** Select this screen button to pause the route preview, while in reverse or fast forward scroll.

▶ / ▶▶ **(Fast Forward Scroll):** Select this screen button to scroll to the next waypoint or to the final destination. This button will toggle between slow and fast speed.

▶▶ **(Fast Forward Skip):** Select this screen button to go to the next waypoint or to the final destination.


### Detour

**Detour:** Select this screen button from the Route screen, then select to detour 1 mile, 3 miles, or 5 miles (1 km, 3 km, or 5 km) around the current route. You may also select to detour the whole route if necessary. This option is only available while you are driving on your current planned route.

### Voice Prompt

Select this screen button from the Route screen to turn voice prompts on or off and to change the volume of voice prompts. See “Nav” under *Navigation Menu on page 53* for more information.

## Add Waypoint

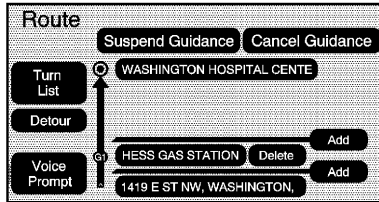

**Add Waypoint:** Select this screen button from the Route screen. This feature allows you to add up to three waypoints to the current route, between your start point and final destination. Once a waypoint has been added, the points can be edited or deleted.

To add a waypoint:

1. Press the DEST hard key.
2. Select the Add Waypoint screen button. This button will only appear if a route has been calculated.
3. Using the desired method of entering a destination, enter the waypoint. See "Destination" previously for more information.
4. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
5. Select the Start Guidance screen button. You are now ready to start your route.
6. To add the second and third waypoints, press the DEST hard key, then select the Add screen button, where you would like the next waypoint to fall on the route.

7. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
8. Select the Start Guidance screen button. You are now ready to start your route.

To delete a waypoint from your current route:

1. Press the DEST hard key.
2. Select the Delete screen button for the desired waypoint to delete.
3. The system will display a pop-up confirmation message. Choose Yes to delete the waypoint; touch No to cancel this operation.
4. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
5. Select the Start Guidance screen button. You are now ready to start your route.

### **Suspend Guidance**

Press this screen button, from the Route screen, to put the current route on hold.

### **Resume Guidance**

Press this screen button, from the Route screen, to resume guidance on the current route.

### **Cancel Guidance**

Press this screen button, from the Route screen, to cancel the current route.

### **Adding Destinations to the Address Book**

There are two ways to add a destination to the address book:

- To add the current final destination to the address book, press the Mark screen button from the map screen. The system will automatically save the final destination information in the address book.

- Press the Add to Address Book screen button when available on POI information screens, Destination Entry screens, or POI screens. The system will automatically save this information in the address book.

See “Nav” under *Navigation Menu on page 53* for information on editing address book entries.

### **Adding or Changing Preset Destinations**

This feature allows you to add or change one of five preset destinations. When a destination has been added as a preset destination, it will be available to select from the Destination Entry screen. See “Preset Destination” previously for information on how to select a preset destination as a final destination.

To store the current final destination as a preset destination:

1. Select the Mark screen button from the map screen to add the current final destination. The Address Book screen will appear.
2. Select the Name screen button. An alpha-keyboard will display. Enter the name.
3. Press and hold one of the buttons at the bottom of the screen until a pop-up confirmation displays.  
The name will appear in that preset destination screen button and is now available to select from the Destination Entry screen.

To store an address book entry as a preset destination:

1. Select the MENU hard key.
2. Select the Nav screen button or press the MENU key until the Nav screen button is selected or touch the Nav screen button.
3. Select the Edit/View screen button.
4. Select the address book entry that you would like to store as the preset destination. Select the Name screen button to add a name, if needed.
5. Press and hold one of the buttons at the bottom of the screen until a pop-up confirmation displays.

The name will appear in the that preset destination screen button and is now available to select from the Destination Entry screen.

## Global Positioning System (GPS)

The navigation system determines the position of the vehicle by using satellite signals, various vehicle signals, and map data.

At times, other interferences such as the satellite condition, road configuration, the condition of the vehicle and/or other circumstances can interfere with the navigation system's ability to determine the accurate position of the vehicle.

The GPS shows the current position of the vehicle using signals sent by the GPS Satellites of the United States Department of Defense. When the vehicle is not receiving signals from the satellites, a symbol appears on the map screen. Refer to *Navigation Symbols on page 47*.

This system may not be available or interferences may occur if:

- Signals are obstructed by tall buildings, trees, large trucks, or a tunnel.
- Objects that are placed on top of or near the instrument panel.
- Satellites are being repaired or improved.
- After-market glass tinting has been applied to the vehicle's windshield.

**Notice:** Do not apply after-market glass tinting to the vehicle's windows. Glass tinting interferes with the system's ability to receive GPS signals and causes the system to malfunction. The window might have to be replaced to correct the problem. This would not be covered by the warranty.

For more information if the GPS is not functioning properly, see *If the System Needs Service on page 79* and *Problems with Route Guidance on page 78*.

### Vehicle Positioning

At times, the position of the vehicle on the map may be inaccurate due to one or more of the following reasons:

- The road system has changed.
- The vehicle is driving on slippery road surfaces such as in sand, gravel, and/or snow.
- The vehicle is traveling on winding roads.
- The vehicle is on a long straight road.
- The vehicle is approaching a tall building or a large vehicle.
- The surface streets run parallel to a freeway.

- The vehicle has just been transferred by a vehicle carrier or a ferry.
- The current position calibration is set incorrectly.
- The vehicle is traveling at high speed.
- The vehicle changes directions more than once, or when the vehicle is turning on a turn table in a parking lot.
- The vehicle is entering and/or exiting a parking lot, garage, or a lot with a roof.
- The GPS signal is not received.
- A roof carrier is installed on your vehicle.
- The vehicle is being driven with tire chains.
- The tires are replaced.
- The tire pressure for your tires is incorrect.

- The tires are worn.
- The first time the map DVD is inserted.
- The battery is disconnected for several days.
- The vehicle is driving in heavy traffic where driving is at low speeds, and the vehicle is stopped and started repeatedly.

If problems are experienced with the navigation system, see your dealer.

### Problems with Route Guidance

Inappropriate route guidance may occur under one or more of the following conditions:

- You have not turned onto the road indicated.
- Route guidance may not be available when using automatic rerouting for the next right or left turn.

- The route may not be changed when using automatic rerouting.
- There is no route guidance when turning at an intersection.
- Plural names of places may be announced occasionally.
- It may take a long time to operate automatic rerouting during high-speed driving.
- Automatic rerouting may display a route returning to the set waypoint if you are heading for a destination without passing through a set waypoint.
- The route prohibits the entry of a vehicle due to a regulation by time or season or any other regulation which may be given.
- Some routes may not be searched.

- The route to the destination may not be shown if there are new roads, if roads have recently changed, or if certain roads are not listed on the map DVD. See *Ordering Map DVDs on page 79*.

To recalibrate the vehicle's position on the map, see your dealer.

### **If the System Needs Service**

If the navigation system needs service and the steps listed here have been followed but there are still problems, see your dealer for assistance.

### **Ordering Map DVDs**

The map DVD in the vehicle is the most up-to-date information available when the vehicle was produced. The map DVD is updated periodically, provided that the map information has changed.

For any questions about the operation of the navigation system or the update process, contact the GM Nav Disc Center toll-free phone number, 1-877-NAV-DISC (1-877-628-3472) or go to the center's website, [www.gmnavdisc.com](http://www.gmnavdisc.com). For any updates or replacements, call the GM Nav Disc Center or order a new disc online. Have the Vehicle Identification Number (VIN) available when ordering to ensure the correct and most up-to-date DVD map disc for the vehicle is sent. See "Vehicle Identification Number (VIN)" in the Index of the vehicle's owner manual for more information.

After receiving the updated disc, replace the old disc in the navigation system. See “Installing the DVD Map Disc” and “Ejecting the DVD Map Disc” under *Maps on page 44*. Dispose of the old disc to avoid confusion about which disc is the most current.

### Database Coverage Explanations

Coverage area depends upon the map detail available. Some areas have greater map detail than others. The navigation system works only as well as the information provided on the map disc. See *Ordering Map DVDs on page 79* on how to obtain updated map information.

### Voice Recognition

The navigation system’s voice recognition allows for hands-free operation of the navigation system, audio system, and OnStar<sup>®</sup> features. The DVD map disc must be installed in the navigation system for voice recognition to work. See “Installing the DVD Map Disc” under *Maps on page 44*. Voice recognition can be used when the ignition is on or when Retained Accessory Power (RAP) is active. See “Retained Accessory Power (RAP)” in the Index of your vehicle’s owner manual for more information.

To use voice recognition, do the following:

1. Push and hold the SRCE (source) steering wheel control until you hear a beep. The audio system, if on, will mute.
2. Clearly state one of the commands listed on the following pages.

### Helpful Hints for Stating Commands

- When a multiple command is available, choose the command that best works for you.
- Words that are in brackets are optional. For example, for the command Radio [band] [select] FM, stating Radio FM or Radio select FM are both valid commands.
- When the system recognizes the command the system will:
  - either perform the function
  - ask you to confirm your choice by clearly stating “yes or no”
  - issue an error message such as “System does not recognize this command” or direct you to “Please start speaking after the beep”
- If the system is not yet ready, the system may state “System is checking the disc. Please wait.”



- To cancel a command or if the system response does not match your verbal command, press and hold the talk symbol button. The system will reply, “System will cancel the voice recognition”.
- If you experience difficulty with the system recognizing a command, try saying it more softly, and wait for a few seconds after the beep, or you may just try saying it again.
- Background noise may cause voice commands to be misunderstood, including airflow noise from wind.
- To use the voice recognition system, the map DVD must be loaded.

This system is able to recognize commands in three different languages. The system will only recognize commands based on the language selected from the Driver Information Center (DIC).

See “Driver Information Center, DIC Vehicle Personalization” in the Index of your vehicles owner manual.

### Voice Recognition Commands

The following list shows all of the voice commands available for the navigation system with a brief description of each. The commands are listed with the optional words in brackets. To use the voice commands, refer to the instructions listed previously.

### Voice Tag Commands

The following are voice tag commands you can access by clearly stating the commands exactly as they are written. You may have up to 40 voice tag entries for destinations.

### Navigation go to [destination] (voice tag), navigation select [destination] (voice tag):

These commands instruct the system to select a destination saved under the voice tag you have stored.

When a destination is requested using a voice tag, the system will state, “Press or say cancel if not correct”. To cancel this voice tag destination, using voice recognition, push and hold the SRCE button on the steering wheel until you hear a beep, then say “cancel”. Canceling voice tag destination by voice recognition, must be done within five seconds after the voice prompt.

If you are not currently driving on a route, the system will automatically create the voice tag destination as the final destination. If you are currently driving on a route, the system will automatically create the voice tag destination as a waypoint. Up to three waypoints can be created.

### Storing Voice Tags

From the address book entry information page, press the Add Voice tag screen button. The system will respond “Name Please?”.

### Navigation Help

**Navigation Help:** This command instructs the system to assist with navigation commands.

### Display Commands

Use the following display commands to set the display mode.

**Display [set] day [mode]:** Use this command to set the display to daytime mode.

**Display [set] night [mode]:** Use this command to set the display to night mode.

**Display [set] auto [mode]:** Use this command to set the display to automatic mode. The system will change between day and night mode automatically.

**System help:** This command instructs the system to assist with display commands.

### Radio Commands

The following are radio commands you can access by clearly stating the commands exactly as they are written. The commands are only available when you are in one of the following audio modes, AM, FM, or XM™ (if equipped).

**Radio:** This command instructs the system to turn the audio system on.

**Radio [band] [select] AM, radio [band] [select] FM, radio [band] [select] XM, radio [band] [select] satellite:** These commands instruct the system to go to either the AM, FM, or XM (if equipped).

**Radio [select] (frequency) AM, radio [select] (frequency) FM:** These commands instruct the system to go to a specific frequency on either AM or FM.

**Radio [select] (channel) XM, radio [select] (channel) satellite:** These commands instruct the system to go to a specific channel on the XM™ band (if equipped). The channel must be a valid channel or the system will keep the radio at the current station setting. The system will pause while searching for the channel.

**Radio help:** This command instructs the system to assist with radio commands.

### CD Commands

The following are CD, MP3, and DVD commands that can be accessed by clearly stating the commands exactly as they are written.

**CD, DVD, Disc:** Use this command to select a CD, DVD, or disc that is currently loaded.

**CD, DVD, Disc, [select] track (one, two, three, etc.):** This command instructs the system to select a specific track number.

**CD, DVD, Disc select next folder:** Use this command to select the next folder on the MP3 or audio DVD.

**CD, DVD, Disc select previous folder:** Use this command to select the previous folder on the MP3 or audio DVD.

**CD help, DVD help, Disc help:** This command instructs the system to assist with CD and DVD commands.

### Auxiliary Commands

The following auxiliary commands can be accessed by clearly stating the commands exactly as they are written. The commands are available when the auxiliary source is available.

**Aux, Auxiliary:** Use this command to select the auxiliary device, when a device is connected.

### OnStar® Command

**OnStar:** This command instructs the system to connect to OnStar®. You will enter the OnStar® voice recognition system. Refer to your OnStar® manual for more information.

### Voice Help

**Voice help:** This command will provide a description of help commands that are available to use.



**A**

Adding Destinations to the  
Address Book ..... 76

Adding or Changing Preset  
Destinations ..... 76

Alpha-Numeric Keyboard ..... 43

AM-FM Radio ..... 14

Audio Book ..... 40

Auto Reroute ..... 52

Auxiliary Devices ..... 41

**C**

Canadian Vehicle Owners  
(Propriétaires des Véhicules  
Canadiens) ..... 4

Canceling Guidance ..... 13

CD  
DVD Player ..... 24

CD/DVD Messages ..... 33

Cleaning the Display Screen .... 13

**D**

Database Coverage  
Explanations ..... 80

Deleting Personal Information ..... 9

Destination, Navigation ..... 65

Devices, Auxiliary ..... 41

Display ..... 64

Driving on a Route ..... 51

DVD Map Disc Messages ..... 46

DVD Menu Options ..... 29

DVD/CD Player ..... 24

**E**

Edit Address Book ..... 55

Ejecting the DVD Map Disc ..... 45

**F**

Finding a Station ..... 15, 21

**G**

Getting Started on Your  
Route ..... 73

Global Positioning System  
(GPS) ..... 77

Guidance Volume ..... 13

**H**

Handling the DVD Map Disc ..... 45

Hard Keys ..... 42

Hybrid Screens ..... 13

**I**

Installing the DVD Map Disc ..... 44

Introduction ..... 3

**L**

Language — English/Metric ..... 9

Limit Features While Driving ..... 9

**M**

Map Adjustments ..... 46

Map Coverage ..... 44

Map Database Information ..... 56

Map Scales ..... 46

Maps ..... 44

**N**

Nav (Navigation) ..... 53

Navigation  
Destination ..... 65

Menu ..... 53

Symbols ..... 47

Using the System ..... 42

**O**

Off-Road Mode .....	54
OnStar® Destination Download .....	71
Ordering Map DVDs .....	79
Overview, Infotainment System .....	4

**P**

Playing a DVD .....	28
Playing an Audio CD .....	24
Playing from an iPod® .....	38
Playing from USB .....	34
Playing the Radio .....	14, 21
Problems with Route Guidance .....	78

**R**

Radio .....	53
Radio Data System (RDS) .....	20
Radio Menu .....	18, 23
Radios AM-FM Radio .....	14
CD/DVD Player .....	24
Satellite .....	21

## Radios (cont.)

Rear Seat Entertainment (RSE) .....	29
Route Preference .....	54

**S**

Satellite Radio .....	21
Scrolling the Map .....	46
Setting the Clock .....	10, 65
Setting the Search Area, Entering an Address and Point of Interest, and Storing Preset Destinations .....	10
Sound .....	53
Sound Menu .....	16, 22
Storing Radio Station Presets .....	9, 16, 22
Symbols, Navigation .....	47
System Needs Service, If .....	79

**T**

Touch-Sensitive Screen Buttons .....	43
Traveling Across Regions .....	52

**U**

USB Host Support .....	34
USB Music Menu .....	35
USB Supported Devices .....	34
Using an MP3 CD .....	25
Using OnStar® Destination Download .....	71
Using Your Stored Preset Destinations .....	13

**V**

Vehicle Positioning .....	78
Voice Prompt .....	54
Voice Recognition .....	80
Voice Recognition Commands ..	81

**X**

XM NavTraffic™ (USA and Canada) .....	57
XM™ Satellite Radio Service ....	23