



GETTING TO KNOW YOUR 2015 TAHOE/SUBURBAN



Review this Quick Reference Guide for an overview of some important features in your Chevrolet Tahoe or Suburban. More detailed information can be found in your Owner Manual. Some optional equipment† described in this guide may not be included in your vehicle. For easy reference, keep this guide with your Owner Manual in your glove box.

INSTRUMENT PANEL

- Instrument Panel Illumination Control/Exterior Lamp Control
- 4WD Control
- Integrated Trailer Brake Control
- Traction Control and StabiliTrak/ Front and Rear Parking Assist*/ Lane Departure Warning*/ Adjustable Pedals*/Power Assist Step* Buttons
- Turn Signal/ Windshield Wipers Lever
- Driver Information Center



- Cruise Control/ Collision Alert*/ Heated Steering Wheel* Buttons
- Audio Next/ Previous Favorite Station Controls (behind steering wheel)
- Tilt/ Telescopic* Steering Wheel Control
- Voice Recognition Buttons/Driver Information Center Controls
- Audio Volume Controls (behind steering wheel)

Instrument Cluster Symbols

- | | | | | | |
|--|------------------------|--|--------------------|--|-----------------------|
| | Low Fuel | | Cruise Control Set | | Lights On Reminder |
| | Traction Control Off | | StabiliTrak Active | | Airbag Readiness |
| | Lane Departure Warning | | StabiliTrak Off | | Check Engine |
| | BRAKE Brake System | | Security | | Antilock Brake System |
| | | | Tow/Haul Mode | | Low Tire Pressure |

Tow/
Haul
Button

Infotainment System
(8-inch* screen shown*)

Climate Controls



Engine
Start/Stop
Button*

Driver's Heated/
Cooled Seat
Buttons*

Accessory
Power Outlet/
USB Ports

Rear Climate
Controls

Passenger's
Heated/Cooled
Seat Buttons*



Door Ajar



Oil Pressure



Charging System



Safety Belt Reminder

Refer to your Owner Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See In Brief in your Owner Manual.


REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)

Unlock

Press to unlock the driver's door.
Press again to unlock all doors.

Lock

Press to lock all doors.

Note: Press and hold the Lock/Unlock buttons to automatically fold/unfold the power mirrors . To change the Auto Mirror Folding setting, go to Comfort and Convenience in the Vehicle Settings menu.

Liftglass

Press twice to open the liftgate.

Power Liftgate

Press twice to open or close the power liftgate.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The turn signal lamps will flash and the horn will sound.

Press and hold to activate the alarm. The turn signal lamps will flash and the horn will sound until the button is pressed again or the ignition is turned on.

POWER LIFTGATE

Open/Close the Power Liftgate

- ▶ Press the  Power Liftgate button on the RKE transmitter twice.
- ▶ Press the  Power Liftgate knob on the overhead console.
- ▶ Press the touchpad (A) on the liftgate handle to open the liftgate.
- ▶ Press the button (B) next to the liftgate latch to close the liftgate.







Programming the Liftgate Height

1. Turn the Power Liftgate knob to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button next to the liftgate latch for 3 seconds. The tail lamps will flash when the setting is saved.



Remote Vehicle Start

Press and release the  Lock button and then press and hold the  button until the turn signal lamps flash (about 4 seconds) to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 10 minutes.
- Remote Start can be extended once by repeating the remote start procedure.
- Press and hold the  button until the parking lamps turn off to cancel a remote start.
- The heated/cooled seats  will turn on during a remote start (if selected in the Vehicle Settings menu) when outside temperatures warrant.

Note: To change the remote lock, unlock, and remote start settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

See Keys, Doors and Windows in your Owner Manual.

KEYLESS ACCESS SYSTEM ♦

The Keyless Access System enables operation of the doors and ignition without removing the Remote Keyless Entry transmitter from a pocket or purse. The transmitter must be within three feet of the door being unlocked or the liftgate.

Keyless Unlocking

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.



Keyless Locking

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed.

Note: To change the door lock and unlock settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

See Keys, Doors and Windows in your Owner Manual.

KEYLESS ACCESS START ♦

Starting the Engine

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press and hold the **ENGINE START/STOP** button to start the engine.

Note: The transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the pocket in the center console to enable the engine to start. Replace the transmitter battery as soon as possible.



Stopping the Engine

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Accessory

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the accessory position.

See Driving and Operating in your Owner Manual.

POWER FRONT SEATS

Seat Adjustments



A. Seat Cushion Adjustment

Move the front horizontal control to move the seat forward or rearward, or to tilt, raise or lower the seat.

B. Seatback Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Adjustment

Move the rear control fore/aft to increase/decrease lumbar support or up/down to raise/lower the lumbar location.

Set Memory Positions



1. With the vehicle in Park, adjust the power driver's seat, power adjustable pedals, power outside mirrors, and power tilt/telescopic steering column to the desired positions.
2. Press and release the **SET** button and then press and hold button **1** on the driver's door until a beep sounds.
3. Repeat the steps using button **2** for a second driver.

Set Exit Position

1. Adjust the power driver's seat, power adjustable pedals power, and power tilt/telescopic steering column to the desired positions.
2. Press and release the **SET** button and then press and hold the **Exit** button on the driver's door until a beep sounds.

Recall Positions

- ▶ With the vehicle in Park and the ignition on, press and release button **1** or **2** or the **Exit** button to recall the stored position.
- ▶ With the vehicle off or not in Park, press and hold button **1** or **2** or the **Exit** button until the stored position is reached. Releasing the button before the stored position is reached cancels the recall.

Note: To change the memory recall and exit settings, go to Comfort and Convenience in the Vehicle Settings menu.

See Seats and Restraints in your Owner Manual.



Folding 2nd-Row Seats

The 2nd-row seats fold and tumble to provide more cargo space and access to the 3rd-row seats.

1. Lower the head restraint, unbuckle the safety belt, make sure nothing is under or in front of the seat, and move the front seat forward enough to allow room for the folded seat.
2. Lift the lever on the lower outboard side of the 2nd-row seat. The seatback will fold forward.
3. Lift the lever again to tumble the seat forward.



Power Folding 2nd-Row Seats[†]

1. Lower the head restraint, unbuckle the safety belt, make sure nothing is under or in front of the seat, and move the front seat forward enough to allow room for the folded seat.
2. Press the  **Seat Release** button (A) on the panel behind the rear doors or the  button (B) in the rear cargo area to fold the seat forward. Press either button again to tumble the seat forward.



Unfolding 2nd-Row Seats

1. Pull down the seat until it latches to the floor.
2. Lift up the seatback until it locks in place.

Folding 3rd-Row Seats

The 3rd-row seats fold to provide more cargo space.



1. Lower the head restraint, unbuckle the safety belt, and make sure nothing is on the seat.
2. Lift the lever on the rear of the seat. The seatback will fold forward.

Unfolding 3rd-Row Seats

- ▶ Pull the strap on the rear of the seat to raise the seatback to the upright position.



Power Folding/Unfolding 3rd-Row Seats[†]

1. With the vehicle in Park, lower the head restraint, unbuckle the safety belt, and make sure nothing is on the seat.
2. Press and hold the bottom of the  **Seat Release** button (C) in the rear cargo area to fold the seat flat.
3. Press and hold the top of the  button to raise the seatback.

See Seats and Restraints in your Owner Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages.

Use the control pad on the right side of the steering wheel to select the **Info** (includes trip and fuel information), **Audio**, **Phone**, **Navigation**, and **Settings** menus.



Menu Items

- ▶ Press the ◀ or ▶ button to move between the display zones.
- ▶ Press the △ or ▽ button to move through the menus.
- ▶ Press ✓ to open a menu or select/deselect a setting.

Reset an Item

1. Use the control pad to display the item.
2. Press and hold ✓ to reset or clear the item.

See *Instruments and Controls in your Owner Manual*.

AUDIO STEERING WHEEL CONTROLS



Push to Talk

Press to answer an incoming call or to use natural voice recognition* with the audio, Bluetooth*, navigation* or OnStar® system.

End Call/Mute

Press to end or reject a call.

Press to mute/unmute the vehicle speakers.

Next/Previous

With the Audio screen displayed on the DIC, press ▽ or △ to seek the previous or next radio station or track.

Volume

(behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station

(behind left side of steering wheel)

Press the top or bottom button to display the current station or track. Press the top or bottom button again to go to the next or previous favorite radio station or track.




Next/Previous Favorite Station button shown. Volume button is located behind the right side of the steering wheel.

RADIO WITH 4.2-INCH* COLOR SCREEN

Refer to your Owner Manual for important safety information about using the infotainment system while driving.

The radio is controlled by using the audio system buttons. The display is not a touch screen.

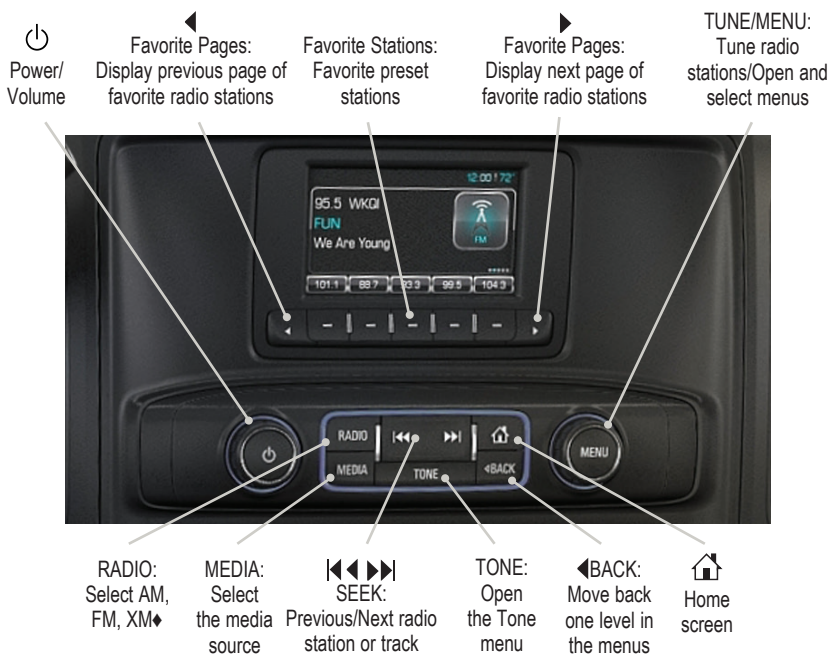

Setting the Time

1. Use the **MENU** knob to select **Settings** on the home page.
2. Use the **MENU** knob to select Time and Date; then select Time to adjust the clock.
3. Turn the **MENU** knob to adjust the hours, minutes and AM or PM. Press the knob to go to the next value.

Chevrolet MyLink◆

MyLink uses a Bluetooth or USB connection to link to a variety of compatible mobile devices. Refer to your Owner Manual for operating instructions.

Storing Favorite Stations

Up to 25 radio stations from all bands (AM, FM or XM◆) can be stored, in any order, on up to five pages.

1. Tune in the desired radio station.
2. Press the ◀ or ▶ button to display the page where the station is to be stored.
3. Press and hold one of the five push-buttons until a beep is heard.
4. Repeat the steps to store another favorite station.

See Infotainment System in your Owner Manual.

CHEVROLET MYLINK RADIO WITH 8-INCH* COLOR SCREEN

Refer to your Owner Manual for important safety information about using the infotainment system while driving.

The Chevrolet MyLink radio is controlled by using the audio system buttons and touch screen.



See your Infotainment System Owner Manual.

CHEVROLET MYLINK RADIO WITH 8-INCH* COLOR SCREEN

Setting the Time

1. Touch **Settings** on the home page.
2. Touch **Time and Date**.
3. Touch **Set Time**.
4. Touch the arrows to adjust the hours, minutes and AM or PM.
5. Touch **BACK** to exit the menu.



Storing Favorites

Up to 60 radio stations from all bands (AM, FM or XM[◆]), media (song, artist, album, and genre with device connected to a USB port), phone contacts and navigation destinations[◆] can be stored in any order.

1. Display or select the desired radio station, media favorite, navigation destination or contact.
 2. Touch and drag up the **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
 3. Touch and hold one of the favorite screen buttons until a beep is heard, indicating it is stored.
 4. Repeat the steps to store another favorite item.
- To change the number of favorites displayed, go to Radio in the Settings menu.

Home Page

Managing Home Page Icons

The home page icons (A) can be arranged in any order.

1. Press the **Home** button.
2. To enter edit mode, touch and hold the home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.
4. Press the **Home** button to exit edit mode.

Add Favorites to the Applications Tray

For quick access, 3–5 favorite applications can be displayed in the applications tray (B) at the top of the screen.

1. Press the **Home** button.
 2. Touch and hold the desired icon on the home page.
 3. Continue holding the icon and drag it to the applications tray at the top of the screen.
 4. Press the **Home** button to exit.
- To remove an icon from the applications tray, enter the edit mode and then touch and drag the icon down from the tray.



See your Infotainment System Owner Manual.


BLUETOOTH® SYSTEM ♦

Refer to your Owner Manual for important safety information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving.

Not all devices will support all functions. Bluetooth streaming audio is available with the MyLink system. ♦ For more information, visit www.gmtotalconnect.com.

Pair a Phone

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair phone," or
Use the **MENU** knob or the touch screen to select the Phone icon > Phones > Pair Device.
2. Start the pairing process on the phone. Locate Chevrolet MyLink on the phone.
3. Enter the four-digit code that appears on the touch screen into the phone or, if a six-digit code appears on the phone, confirm it on the touch screen.
4. If your phone prompts you to accept the connection or phone book download, click "yes" and always allow.

Streaming Audio

With a paired device connected via Bluetooth, press the **MEDIA** button until Bluetooth is displayed on the touch screen to stream audio from the device. Control audio operation using the device controls. For full control of the mobile device, it may be necessary to connect the device to the USB port.

See your Infotainment System Owner Manual.

PORTABLE AUDIO DEVICES



Note: Connect a mobile device USB cord after starting the vehicle for optimum performance.

An accessory power outlet, dual USB ports, an auxiliary jack and an SD card reader are located in the center console storage compartment.

An accessory power outlet ♦ and dual USB ports ♦ also are located in the center console front compartment.

- ▶ An iPod®, iPhone®, MP3 Player, a USB flash drive or a USB mass storage device can be connected to the USB port. Chevrolet MyLink ♦ will read the device and build a list of songs. Search for music on-screen or by voice commands.
- ▶ Press the **MEDIA** button to select a portable device as the audio source.

See your Infotainment System Owner Manual.

Chevrolet MyLink uses a Bluetooth or USB connection to link a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®. MyLink enables streaming audio through a smartphone and hands-free voice control. Music also can be played from a USB flash drive.

For assistance with the MyLink system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit www.chevrolet.com/mylink.

Natural Voice Recognition

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will say "Command please," followed by a beep.
3. After the beep, say what you want it to do using natural speech.

- **Phone (using your paired phone):**

Example command: "Call Amanda" or "Dial 555-1212"

- **Media Music Device Search (when connected to USB only):**

Example command: "Play artist [name]" or "Play song [name]"

- **Radio control:**

Example command: "Tune FM 104.3" or "Tune XM Classic Vinyl"

- **Help:**

Say "Help" for voice recognition assistance

PANDORA® Internet Radio

Listen to personalized radio stations based on favorite artists or genres.

- ▶ Download the Pandora app to your smartphone. Restart the smartphone and sign in to Pandora.
- ▶ Create a station on your phone to listen to a customized song list in the vehicle.
- ▶ Connect your smartphone/device to the system by Bluetooth or, for Apple devices, by a USB cable.
- ▶ Touch the Pandora icon on the touch screen to access Pandora. A slight delay may occur when loading a song or changing a station.

Voice Pass-Thru and Siri® Eyes Free

Voice pass-thru allows access to the voice recognition commands on a paired cell phone, i.e. Siri or Voice Command. See the cell phone manufacturer's user guide to determine whether the cell phone supports this feature.

- ▶ To activate voice pass-thru, touch the  microphone icon on the touch screen.

See your Infotainment System Owner Manual.

VEHICLE PERSONALIZATION

Some vehicle features can be customized using the audio controls and menus or the touch screen buttons✦.



Changing Vehicle Settings

The Vehicle Settings menu may include **Climate and Air Quality, Collision/ Detection Systems, Comfort and Convenience, Lighting, Power Door Locks, and Remote Lock/Unlock/Start.**

Use the **MENU** knob or the touch screen to:

1. Select **Settings** on the home page.
2. Select **Vehicle**.
3. Select the desired menu item.
4. Select the desired feature and setting. Settings are saved automatically.
5. Select **BACK** to exit each menu.

See Instruments and Controls in your Owner Manual.

DRIVER ASSISTANCE SYSTEMS

The driver assistance systems use advanced technologies to help avoid collisions by providing visual and audible alerts under some imminent collision conditions.

Forward Collision Alert✦ – When approaching a vehicle directly ahead too quickly, the system flashes a visual alert and pulses the Safety Alert Seat✦. See Safety Alert Seat.

The **Vehicle Ahead** indicator will illuminate in green on the instrument cluster when a vehicle is detected and will illuminate in amber when following a vehicle ahead too closely. If your vehicle approaches another vehicle too rapidly, the **Vehicle Ahead** indicator will flash, a visual alert will flash on the windshield and the Safety Alert Seat✦ will pulse. See Safety Alert Seat.

- ▶ Press the **Collision Alert** button on the left side of the steering wheel to set the alert sensitivity to Far, Medium, Near, or Off. The setting is displayed in the Driver Information Center.



Lane Departure Warning✦ – When crossing a detected lane marking without using a turn signal, the system flashes an amber visual alert on the instrument cluster and pulses the left or right side of the Safety Alert Seat✦. See Safety Alert Seat.

- ▶ Press the **Lane Departure Warning** button on the left side of the instrument panel to turn the system on or off.

Safety Alert Seat♦ – The driver's seat pulses, left side, right side, or simultaneously, to alert the driver of potential hazards.

- ▶ Audible notification may be selected instead of Safety Alert Seat pulsing notification. To change the alert setting, go to Settings > Vehicle > Collision/Detection > Alert Type.



Rear Vision Camera – Provides a view directly behind the vehicle when backing up.

- ▶ To turn the Rear Vision Camera Guidelines or Rear Park Assist Symbols on or off, go to Settings > Rear Camera.

Rear Cross Traffic Alert♦ – Warns of traffic coming in either direction behind the vehicle by displaying a visual alert on the Rear Vision Camera display and pulses the left or right side of the Safety Alert Seat. ♦ See Safety Alert Seat.

- ▶ To turn the system on or off, go to Settings > Rear Camera > Rear Cross Traffic Alert.

Automatic Collision Preparation♦ – Prepares the brakes or applies the brakes and slows the vehicle if an emergency collision appears imminent or the driver does not react to previous alerts.

Side Blind Zone Alert/Lane Change Alert♦ – While driving, the Side Blind Zone Alert/Lane Change Alert displays a warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that side blind zone area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Side Blind Zone Alert.






Front and/or Rear Parking Assist♦ – During low-speed parking maneuvers, the system provides “distance to closest object” information in the Driver Information Center and a caution symbol on the Rear Vision Camera. When the vehicle should be stopped immediately to avoid a collision, a continuous audible tone sounds or the Safety Alert




- ▶ To turn the system on or off, press the **P** Parking Assist button on the left side of the instrument panel.

See Driving and Operating in your Owner Manual.

AUTOMATIC CLIMATE CONTROLS

- AUTO:**
Driver's Temp. Control/
Automatic Operation
- A/C/**
Air Conditioning Control/
Recirculation Mode
- 
Vent Mode/
Floor Mode
- 
Fan Speed Control/
On/Off
- 
Defog Mode/
Bi-level Mode
- 
Defrost Mode/
Rear Window/
Outside Mirror Defogger
- SYNC:**
Passenger's Temp. Control/
Link setting to driver's setting



- 
Driver's Heated/
Cooled Seat Buttons ◆
- 
Rear Power Control
- AUTO:**
Rear Automatic Operation
- 
Rear Fan Speed
- 
Rear Air Delivery
- 
Rear Temperature
- R CTRL** 
Rear Control Lock-out
- 
Passenger's Heated/
Cooled Seat Buttons ◆

Automatic Operation

 

1. Press **AUTO**.
2. Set the temperature. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature.

If the air delivery mode or fan speed is manually adjusted, automatic operation is turned off.

Sync Temperature Settings

- ▶ Press **SYNC** to link the passenger's temperature setting to the driver's setting. When the passenger's setting is adjusted, the different passenger's temperature setting is displayed.

Rear Climate Controls


- ▶ Press the  **Power** button to turn the rear climate controls on/off.
- ▶ Press the **R CTRL**  button to lock out the rear controls. Rear climate control operation is controlled using the front controls.

See *Climate Controls in your Owner Manual*.

WIPERS AND WASHERS

Windshield Wipers

Rotate the band on the lever to activate the wipers.

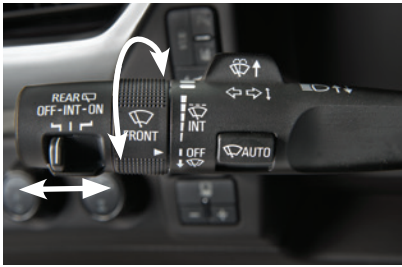

Rear Wiper

Slide the switch to activate the rear wipers.

 **Fast Wipes**

 **Slow Wipes**

 **INT Intermittent**

Rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

 **AUTO – Rainsense™ On/Off**

Press to have the wipers operate automatically when moisture is detected on the windshield. Rotate the INT band to adjust the sensitivity setting.

OFF

 **Mist** Single wipe.

 **Washer Fluid**

Push the paddle forward to spray washer fluid on the windshield.

OFF

INT Intermittent

ON

See Instruments and Controls in your Owner Manual.

LIGHTING

Dome Lamps



Instrument Panel Lighting



OFF

Press to turn off the lamps at all times, even when a door is open.

DOOR

Press to have the lamps turn on automatically when a door is open.

ON

Press to turn on all dome lamps.




 **Instrument Panel Brightness**

Rotate the thumbwheel on the left side of the instrument panel to adjust the instrument panel lighting.

See Lighting in your Owner Manual.

CRUISE CONTROL

Setting Cruise Control

1. Press the  **On/Off** button. The  **Cruise Control** symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **SET-** button to set the speed. The  symbol will illuminate in green on the instrument cluster.

Adjusting Cruise Control

RES+ Resume/Accelerate

Press to resume a set speed.

When the system is active, press once to increase speed 1 mph; press and hold to continue increasing speed.

SET- Set/Coast

When the system is active, press once to decrease speed 1 mph; press and hold to continue decreasing speed.

Cancel


Press to cancel the cruise control without erasing the set speed from memory.

Pressing the brake pedal also will cancel the cruise control.



The cruise control set speed is erased when cruise control or the vehicle ignition is turned off.

Adaptive Cruise Control[◆]

Adaptive Cruise Control enhances traditional cruise control by maintaining a driver-selected following gap between your vehicle and a vehicle detected directly ahead. Once a speed is set, the vehicle will maintain the selected gap distance by braking or accelerating.

When a slower vehicle is detected ahead, the  **Vehicle Ahead** symbol is displayed and the vehicle brakes moderately to maintain the selected following gap. If driver action is required to apply sufficient braking, a visual alert flashes on the windshield and the Safety Alert Seat[◆] pulses.

Selecting the Following Gap

- ▶ Press the  **Follow Distance Gap** button (or  **Collision Alert** button[◆], if equipped) on the left side of the steering wheel to set a following gap of Far, Medium or Near.





See Driving and Operating in your Owner Manual.

TRACTION CONTROL AND STABILITRAK SYSTEMS

The traction control system limits wheelspin and the StabiliTrak® stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/StabiliTrak Off** button on the left side of the instrument panel to turn traction control off or back on. The  Traction Control Off light will illuminate on the instrument cluster when the system is off.

See Driving and Operating in your Owner Manual.

INTEGRATED TRAILER BRAKE CONTROL (ITBC)◆

The ITBC system can be used to adjust the amount of power output, or Trailer Gain, available to the trailer brakes. The control panel is located on the left side of the instrument panel. ITBC information is displayed on the Driver Information Center.


- ▶ Adjust the Trailer Gain by pressing the +/- adjustment buttons on the control panel.
- ▶ Slide the lever to the left on the control panel to manually apply the trailer brakes.



See Driving and Operating in your Owner Manual.


TOW/HAUL MODE

The Tow/Haul Mode adjusts the transmission shifts to reduce shift cycling, such as when towing or hauling heavy loads or driving on steep grades.

- ▶ Press the  **Tow/Haul Mode** button on the end of the shift lever to turn the system on or off.

See Driving and Operating in your Owner Manual.

TIRE PRESSURE MONITOR

The  **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures. The proper tire pressures for the vehicle are listed on the Tire and Loading Information label, located below the driver's door latch. **Current tire pressures can be viewed in the Driver Information Center.**

Tire pressure is affected by cold weather and distance driven. If the low tire pressure warning light illuminates when the vehicle is first started in cooler temperatures and then turns off as the vehicle is driven, check for the proper tire pressures.

Refer to your Owner Manual for additional information about normal monthly tire maintenance.

See Vehicle Care in your Owner Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA
(1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/100,000 miles, whichever occurs first, at no expense to you. This value-added service is intended to provide you with peace of mind as you drive across town or travel the open road.

Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

Roadside Assistance and OnStar®

If you require roadside service and have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

MYCHEVROLET AND ONSTAR® MOBILE APPS



The myChevrolet and OnStar Remotelink mobile apps connect owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance, as well as enabling users to perform Remote Keyless Entry transmitter commands, including locking and unlocking the doors and starting the vehicle.



An active OnStar account is required to use the OnStar mobile app. Download the mobile apps from your mobile device's app store. To learn more about OnStar services, press the OnStar button, refer to your Owner Manual, call 1-888-466-7827 or visit **OnStar.com**.

CHEVROLET OWNER CENTER

The Chevrolet Owner Center, a complimentary service for Chevrolet owners, is a one-stop resource designed to enhance your Chevrolet ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at **my.chevrolet.com**.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2014 General Motors. All rights reserved.



* 2 3 4 5 8 2 4 8 A *



23458248 A