

Office Wireless Mouse User's Quick Guide

Notice:

Federal Communications Commission (FCC) requirements, Part 15
This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Congratulations on your purchase of this Office Wireless Mouse. Please carefully read the User's Quick Guide to learn about the installation and the powerful functions of your new Office Wireless Mouse.

Contents of the Package

- ✓ Office Wireless Mouse (Ergonomic or Symmetric)
- ✓ Mouse Receiver (PS/2, USB or UP Combo)
- ✓ Two AAA Batteries
- ✓ Office Mouse Driver CD-ROM
- ✓ User's Quick Guide

Install Hardware

■ Connect the Receiver to Your Computer

1. Please turn off your computer.
2. Plug the connector of the receiver into the PS/2 or USB port of the computer.

■ Select the Channel

Notice:

- Please skip this section if the mouse has only one channel.
- The location of the mouse channel switch may be different due to various mouse shapes.

1. The two-channel switch is located at the back of the mouse or inside the battery case. Select Channel "1" or "2".
2. Put the batteries into the battery box.

■ Link the Mouse with the Receiver

1. Turn on the computer. The LED indicator on the receiver will light.


2. Press the ID Link Button on the receiver and the LED indicator will blink. The receiver is ready to automatically link with the mouse.
3. Press the ID Link Button on the back of the mouse. The indicator will stay in light while successfully finish the linkage.
4. The LED indicator will blink while you move the mouse.
5. If you need to re-link the mouse or after changing the mouse batteries, please repeat the above linkage step 2-3.
6. If the selected channel is interfered by other wireless-mouse users nearby, please change the Link ID by re-linkage or select the other channel immediately.
7. There are 256 Link IDs per channel.

Install Driver

Notice:

- The driver supports Windows 98, Windows NT, Windows 2000, Windows ME and Windows XP.

1. Insert the driver CD-ROM to your computer. The PC system may automatically install the driver through selecting the PC auto-install function.
2. If the PC system does not set the auto-install function, please double click the file "Setup.exe" and follow the setup instructions to complete the driver installation.
3. A Mouse Setting icon will appear on the task bar of Windows after you successfully finish the installation.
4. Restart the computer.
5. Double click the Mouse Setting icon and then follow the instructions of the selection items to set the mouse properties.
6. Introduction of the Office Application Software: You can simply apply the Office application functions through the one-touch hot key on the top of the Office mouse.

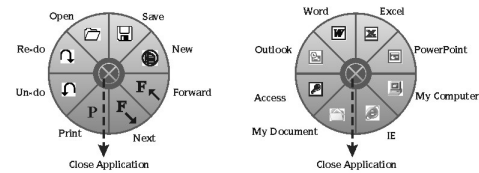

Battery Notice

- The LED indicator or the scroll wheel on the mouse will light while the mouse is low battery. Please change the batteries immediately.
- Move or press any button to wake up the mouse while the mouse is in the sleeping mode.

PMU-C188,192-Wireless-P2 (2472x1795x256).jpeg



Office Wireless Mouse

User's Quick Guide