



 
 




	<b>Web Refresh</b>	Update the information on an active Web page or the contents of a particular window.
	<b>Web Search</b>	Open the Internet Explorer Search pane.

**Multimedia Hot Keys:** Having the total control of multimedia functions.

	<b>Media Player</b>	Play CD and media content.
	<b>Play/Pause</b>	Play or Pause media. Once paused, press this key again to resume playing.
	<b>Stop</b>	Stop playing media.
	<b>Volume up</b>	Increase the volume. Hold down to increase the volume more quickly.
	<b>Volume down</b>	Decrease the volume. Hold down to decrease the volume more quickly.
	<b>Mute</b>	Turn off the sound. Press again to turn the sound back on.
	<b>Pre Track</b>	Switch to the previous media track. Press once for each preceding track.
	<b>Next Track</b>	Switch to the next media track. Press once for each subsequent track.

**LED Indicator (For the Wireless Version):** Specially designed for low-battery notice.

	<b>Low-battery Indicator</b>	The LED Low-battery indicator shows the battery status. The LED will light while the batteries are low.
-----------------------------------------------------------------------------------	------------------------------	---------------------------------------------------------------------------------------------------------

### Notification

- This equipment is intended for use in the following countries.  
18 European Countries:  
Austria, Belgium, Denmark, Finland, France, Germany, Greece, Iceland, Ireland, Italy, Luxembourg, Netherlands, Norway, Portugal, Spain, Sweden, Switzerland and United Kingdom.
- The low-battery LED indicator of the wireless keyboard will light while the keyboard is in the status of low battery and a low-battery icon will appear on the taskbar of Windows. Please change the batteries immediately.
- If the product is malfunction, please change the batteries or move the receiver away from the computer and the monitor.
- If the keyboard does not work properly, please make sure the PS/2 or the USB port of the computer is valid. Besides, check the connector or the cable of the receiver if there is broken or tangled.
- Please avoid using the keyboard under direct sunlight, extreme hot, cold or dusty environment.

# Multimedia Keyboard

## User's Quick Guide

© 2004 All Rights Reserved. The copyright is the property of its respective owners.

Federal Communications Commission (FCC) requirements, Part 15  
This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-Reorient or relocate the receiving antenna.  
-Increase the separation between the equipment and receiver.  
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Any changes of modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

### CE Declaration Of Conformity

Hereby, the manufacturer, declares that this Multimedia Keyboard is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.  
Essential requirements - Article 3 Protection requirements for health and safety - Article 3.1a --Testing for electric safety according to EN 60950 has been conducted. These are considered relevant and sufficient.  
Protection requirements for electromagnetic compatibility -Article 3.1b --Testing for electromagnetic compatibility according to EN 301 489-1 and EN 301 489-03 has been conducted. These are considered relevant and sufficient.  
Effective use of the radio spectrum -Article 3.2  
--Testing for radio test suites according to EN 300 220-3 has been conducted. These are considered relevant and sufficient.

**CAUTION:** The batteries may explode or leak if they are improperly recharged, inserted, disposed in fire or mixed with used or different battery types.

**Congratulations on your purchase of the Multimedia Keyboard or the Multimedia Wireless Keyboard featured with the unique Smart Link function. Please carefully read the User's Quick Guide to learn about the installation and the powerful functions of your new Multimedia Keyboard.**

### Contents of Package

- ✓ Multimedia Keyboard (Wireless or Wired)
- ✓ Receiver (PS/2, USB or UP)
- ✓ USB to PS/2 Adapter (Option)
- ✓ Keyboard Battery: AA \* 2 (for the wireless version)
- ✓ Driver CD-ROM
- ✓ User's Quick Guide

### Install Hardware

**Note:**

- If you install a wired keyboard, please skip the sections of "Install Receiver", "Select Channel" and "Link Receiver".
- Please select the instruction section for the connector type of the keyboard.
- The location of the channel switch and the link button may be different due to various keyboard shape.
- Some models may be designed as a one-channel version, which will not have a channel switch, please skip the channel-setting step.