

- If you are running Windows 98 and plug the connector into the computer, you may find a pop-up window that requires to insert the Windows 98 CD-ROM. Please follow the window instruction to install the required driver or set the driver path as "Windows\system" or the other path that the driver located.

■ Install Wired Keyboard

- PS/2 Version:
 - 1) Please turn off the computer.
 - 2) Plug the keyboard PS/2 connector into the keyboard port of the computer.
- USB Version:
 - 1) You may turn on the computer.
 - 2) Plug the keyboard USB connector into the USB port of the computer.
- UP Version:
 - 1) Please turn off the computer.
 - 2) Connect the USB-to-PS/2 adapter with the keyboard USB connector. Plug the adapter into the keyboard PS/2 port of the computer.



■ Install Receiver


- Install the Receiver with PS/2 Connector
 - 1) Please turn off your computer.
 - 2) Plug the keyboard PS/2 connector on the receiver into the keyboard PS/2 port of the computer.
- Install the Receiver with USB Connector
 - 1) You may turn on the computer.
 - 2) Plug the keyboard USB connector on the receiver into the USB port of the computer.
- Install the Receiver with UP Connector
 - 1) Please turn off the computer.
 - 2) Connect the USB-to-PS/2 adapter with the keyboard USB connector of the receiver. Plug the adapter into the keyboard PS/2 port of the computer.

■ Select Channel

Note:

- Please skip this section if the keyboard is the one-channel version.


- 1) The two-channel switch is located at the back of the keyboard. Select Channel "1" or "2"
- 2) Put the batteries into the battery case.

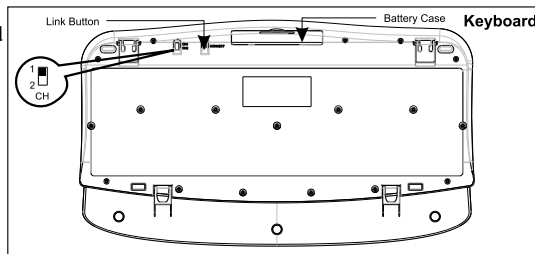

■ Link Receiver

Note:

- Please link the keyboard within the effective distance.
- The linkage period is 15 seconds. Once press the receive's Link Button, please complete the keyboard linkage process within the linkage period.

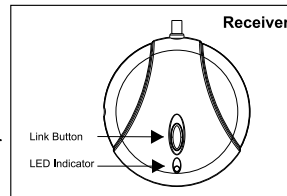

- 1) Please turn on the computer. The LED indicator on the receiver will light.
- 2) Press the ID Link Button on the receiver and the LED indicator will blink. There are 15 seconds for the keyboard linkage.
- 3) Press the ID Link Button of the keyboard.
- 4) The keyboard is linked with the receiver.
- 5) The LED indicator of the receiver will blink while you use the keyboard.
- 6) The Wireless Keyboard designs with the unique Smart Link function. Once the linkage process is complete, you don't have to re-link the keyboard even if you change batteries or restart the computer.

- 7) If the keyboard does not link with the receiver, please repeat Step 1~3.
- 8) If the selected channel is interfered by other wireless-keyboard users nearby, please change the Link ID by re-linkage or select the other channel immediately.
- 9) There are 256 changeable IDs for a keyboard channel.

Install Driver

Note:

- The driver supports Windows 95/ 98/ NT/ 2000/ ME and XP.
- When you change the interface port, please reinstall the driver.




- 1) Remove any existing keyboard drivers completely.
- 2) Insert the driver CD-ROM to your computer.
- 3) Please open the folder "Keyboard" and double click the file "Setup.exe" to complete the driver installation.
- 4) Restart the computer. A Keyboard Setting icon will appear on the task bar of Windows.
- 5) Double click the icon to set the programmable hot keys.









Introduction of Hot Keys

19 useful multimedia hot keys provide a timesaving way to access Web/ Internet shortcuts and PC/ multimedia control.

PC Hot Keys: Computer Hot Keys: Saving time to operate the basic computer applications.

	PC Sleep	Put the system into sleep mode if the PC supports power management and has it enabled. The user can put the computer to sleep at the press of any button, protecting data and saving energy. If power management is not enabled, this key will not work.
	My computer	Open My Computer. My computer shows the contents of your floppy disk, hard disk, CD-ROM drive and network drives. You can also search for and open files and folders, and gain access to options in Control Panel to modify the computer's settings.
	Calculator	Start Microsoft Calculator.

Web & Internet Hot Keys: Surfing Web and checking E-mail in a second.

	Web Backward	Go back to the previously viewed item in programs that support the "Back" command, such as a Web browser.
	Web Forward	Go to the next item - if it was previously viewed in the same session - in programs that support the "Forward" command, such as a Web browser.
	Web Stop	Stop loading or refreshing a Web page or the contents of a particular window.
	Home	Start the default Web browser or go to the Home Web page. If the Web browser is already activated it opens the Home Web page. You can reassign the Home key to start another Web browser, another Home Web page or another application.
	Email	Start the default e-mail program. If you are not sure what the default e-mail program is, press this key to find out. You can reassign the Email key to start another e-mail program or another application.
	My Favorite	Open the Internet Explorer Favorites pane. This is where you can store shortcuts to frequently used files, websites or other items for easy access.