



6. The functions of the 4<sup>th</sup> and 5<sup>th</sup> mouse buttons must be enable and set through the Mouse Setting application. Please do not select the function "System Default" for the 4<sup>th</sup> and 5<sup>th</sup> buttons.
7. Introduction of the Office Application Software: You can simply apply the Office application functions through the hot key on the top of the Office mouse.

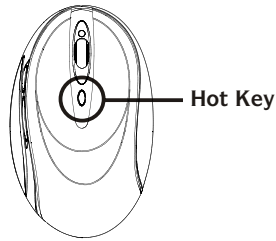

**Notice:**  
**The mouse shape**  
**may be different due**  
**to various mouse models.**

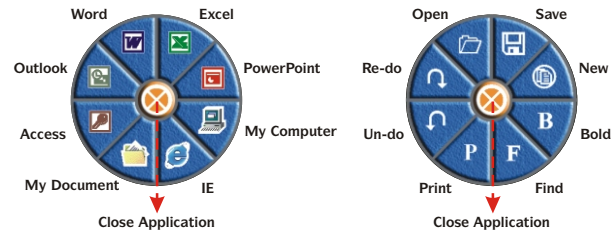

## Optional Charging Modes

### Notice:

- **There are three charge modes. Some mice may have only one or two charge modes.**
- **Please use rechargeable batteries for the chargeable mouse.**

1. Charge from PC  
 Connect the mouse to the USB port of the computer with the USB to DC cable.
2. Charge from Adapter  
 Connect the mouse with the AC to DC adapter.
3. Charge from Cradle  
 The cradle must be connected with the required AC to DC adapter in advance and then place the mouse on the cradle precisely.

## Charging Notice

At the first time of usage, please charge the AAA batteries at least 6 to 8 hours or 10 to 12 hours for the AA batteries.  
 The LED indicator or the scroll wheel on the mouse will light while the mouse is low battery. Please recharge or change the batteries immediately.  
 Press any button to wake up the mouse while the mouse is in the sleeping mode.



Office Wireless Optical Mouse

User's Quick Guide