

Wireless Keyboard/Mouse/Dongle Users Manual

Getting Started

Thank you for choosing this 2.4G Wireless keyboard, Mouse and Dongle Kits. It operates with digital radio technology to ensure no hinder communication between the keyboard, the mouse and your computer without connecting cable.

The transmission and receiving of keyboard and mouse are free from angle restriction.

Package Content

- 1 x Keyboard (KG-1177)
- 1 x Mouse (MG-0975 Optical Mouse for worldwide except Japan)
- 1 x Mouse (MG-1178 Laser Mouse for Japan only)
- 1 x Dongle (RG-1179)
- 4 x AAA Batteries

Features

- Complies with Directive 1995/5/EC of the European Parliament and Commission.
- Complies with the mutual recognition of conformity 1999 for radio and telecommunications Equipment.
- Manufactured with environmental friendly recycled materials.
- Fully compliant with original USB version 2.0.

Product Specification

1. Dimension

Keyboard : 380 (L) x 143(W) x 27 (H) mm (± 0.3 mm)

Mouse: 101 (L) x 58 (W) x 40 (H)mm (± 0.3 mm)

Dongle: 33.7(L) x 17.89 (W) x 10.1(H) mm (± 0.3 mm)

2. Weight

Keyboard : 605 +/- 10g (without batteries)

Mouse: 64g \pm 5g (without batteries)

Dongle: 3g \pm 1g

3. Frequency Range: 2.403 GHz ~ 2.480 GHz

4. Input Voltage / current:

Keyboard: 3VDC. 30mA

Mouse: 3VDC. 50mA

Dongle 5VDC 100mA

5. Battery State:

Keyboard: Battery low detect voltage: 2.2V +/- 0.1V

Cut off detect voltage : 2.0V +/- 0.1V

Mouse: Battery low detect voltage: 2.1V +/- 0.1V

Cut off detect voltage : 2.0V +/- 0.1V

6. Operation Distance: 10 meter at free space

7. Keyboard Hot Keys

Fn-F1	Windows Lock
Fn-F2	Power Profile Switch
Fn-F3	Sleep (S3)
Fn-F4	Hibernate (S4)
Fn-F5	None
Fn-F6	Brightness down
Fn-F7	Brightness up
Fn-F8	Wireless Switch
Fn-F9	Eco utility
Fn-F10	Keypad lock for A4 KB
Fn-F11	Numpad lock for A4 KB
Fn-F12	Scroll lock for A4 KB
Fn-Esc	Mute On/Off
Fn-1	Zoom out
Fn-2	Zoom in
Fn-3	Volume down
Fn-4	Volume up
Fn-z	Backlight KB On/Off for B/L KB
Fn-Space	Switch screen resolution

Preparing Keyboard, mouse and receiver

 
Note: The distance between the keyboard, mouse and PC system should not exceed 10 M.

Do not move mouse on following surface:


- Glass or any transparent materials
- Dark surface
- Mouse pad with too many colors
- Rough surface

Step 1: Insert batteries (Set Power Switch is Off)

The Keyboard requires two Zinc-Carbon AAA batteries.

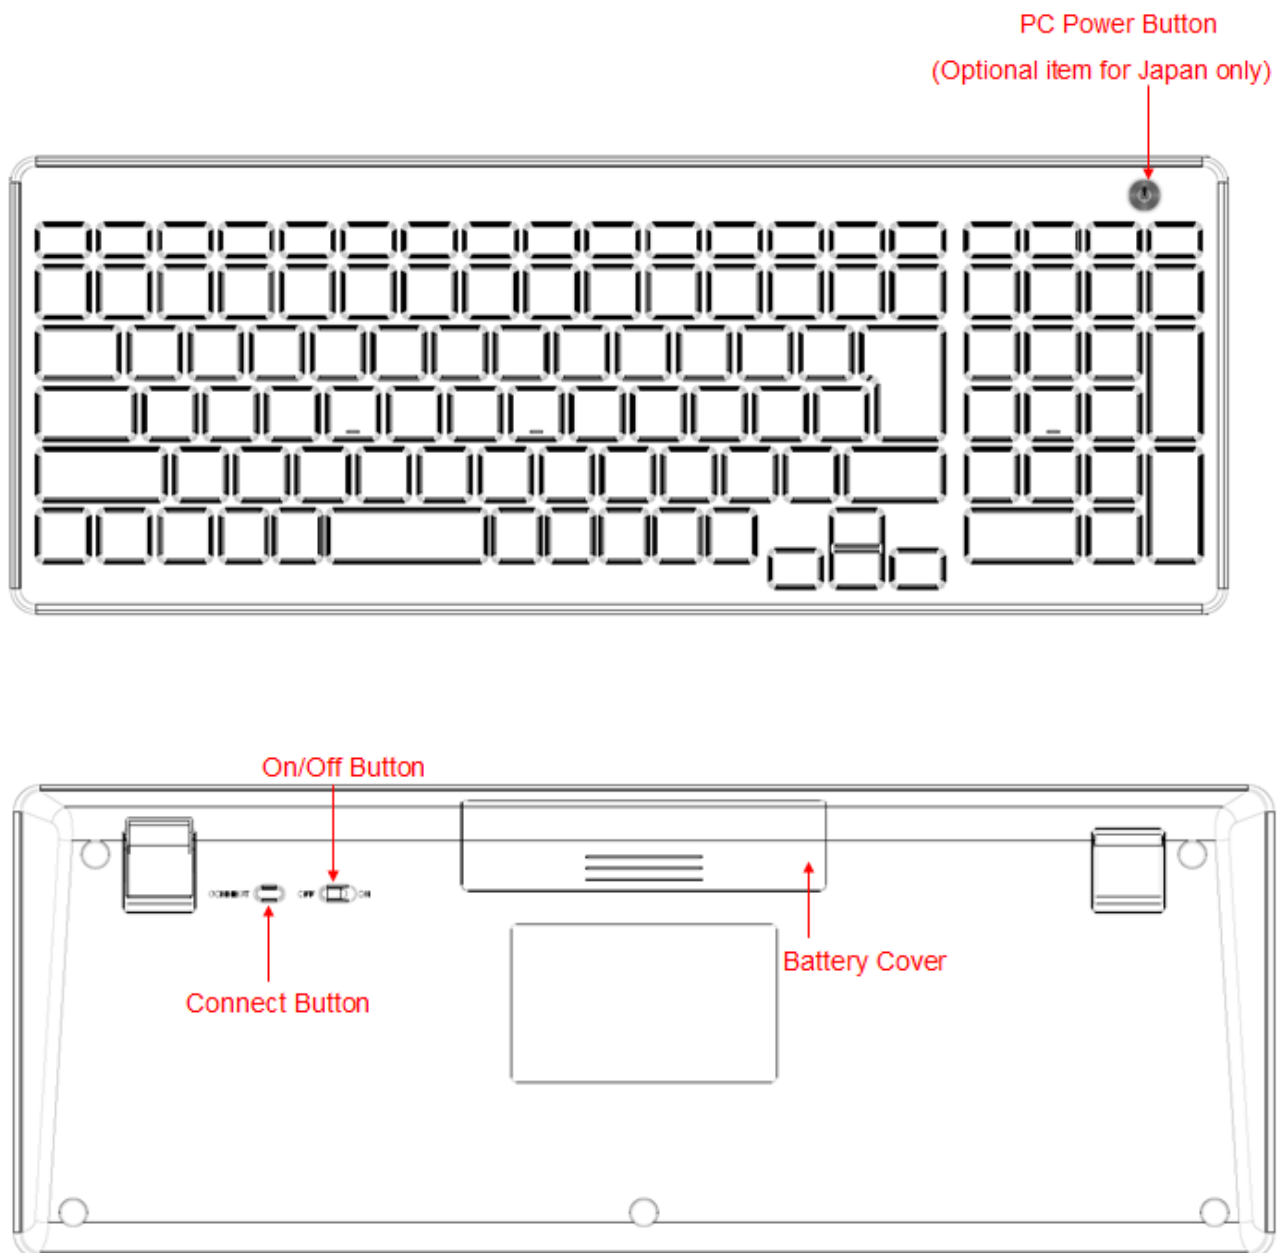

 The Mouse requires two Zinc-Carbon AAA batteries.

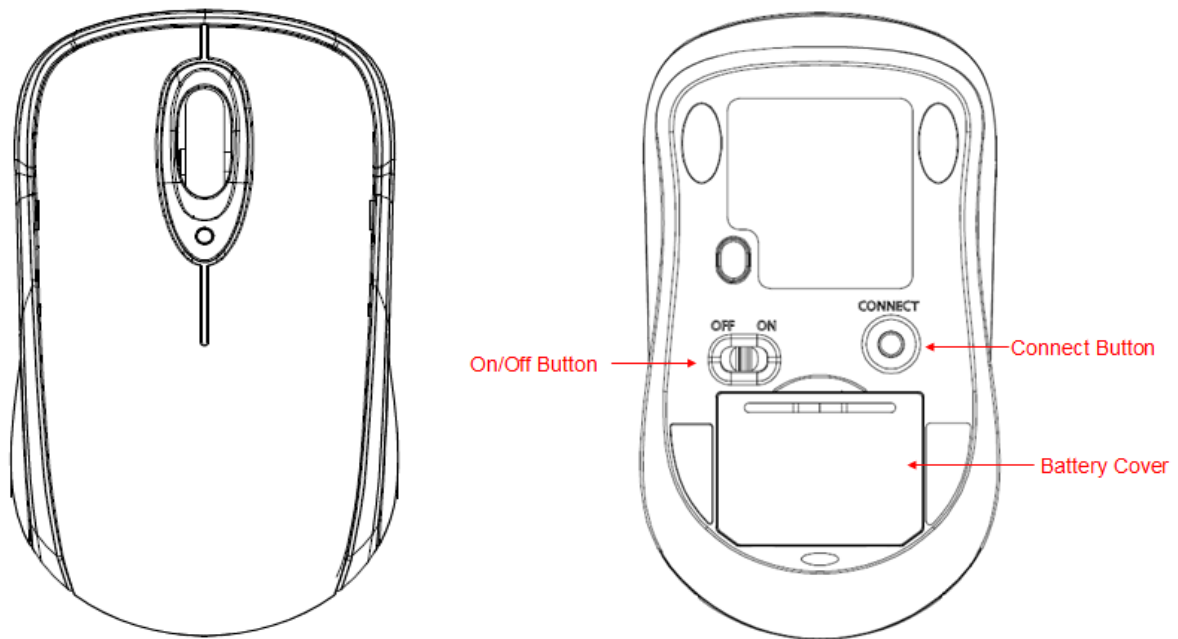


CAUTION: Risk of explosion if battery is replaced by an incorrect type.
Dispose of used batteries according to instructions.
Refer to "Important Battery Information" for disposal instructions.

Step 2: Connection (Set Power Switch is On)

[Dongle type]

Turn on the Keyboard/Mouse power switch.

 Insert dongle into PC USB port and wait few seconds for auto device configure.

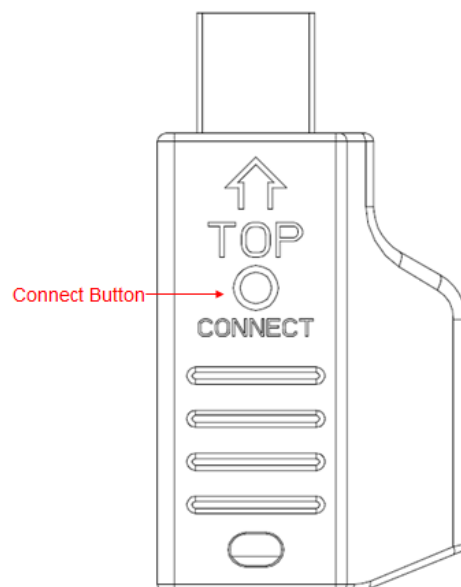

Cleaning the keyboard and the mouse

- Use disinfectant wipes to clean the keyboard and the mouse.
- Do not use any dissolvent, which may damage the surface of your keyboard and mouse.

Troubleshooting and Tips

The keyboard does not operate following installation or is not recognized.

- Make sure the batteries are not too weak.
- To determine whether the keyboard, mouse or computer causes the problem test the keyboard and mouse on a second computer if possible; or test another keyboard and mouse on your current computer.

If you are still unable to solve the problem, please contact your point of sale or your dealer.

If you need to exchange the keyboard, please note that you must return it to your dealer in its original packaging and also a produce proof of purchase (receipt). Keep your receipt in a safe place after purchase.

FEDERAL COMMUNICATIONS COMMISSION (FCC) STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, Pursuant to Part 15 the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful Interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Industry Canada Statement:

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Ce dispositif est conforme à la norme CNR-210 d'Industrie Canada applicable aux appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

WARNING:

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

CAUTION: AVOID PROLONGED USE OF THE KEYBOARD WITHOUT BREAKS.

Take regular breaks and keep a good posture. Consult your physician promptly if you notice any loss of motion or pain in your wrist when using the keyboard.

IMPORTANT BATTERY INFORMATION

- Keep batteries out of reach of children.
- Insert the batteries in the proper direction as indicated by the positive (+) and negative (-) markings in the battery chamber.
- Do not mix old and new batteries or batteries of different types (for example, carbon and alkaline batteries).
- Always remove old, weak, or worn-out batteries promptly and recycle or proper disposal of them in accordance with Local and National Disposal Regulations.
- If a battery leaks, remove all batteries and recycle or dispose of them in accordance with the battery manufacture's instructions and Local and National Disposal Regulations. Before inserting new batteries, thoroughly clean the compartment with a damp paper towel, or follow the battery manufacture's recommendations for cleanup. If fluid from the battery comes into contact with skin or clothes, flush skin with water immediately.
- Remove the batteries if your device is to be stored for an extended period of time without being used.