


Front

billboard® WIRELESS KARAOKE MIC & SPEAKER

for use with Bluetooth™ enabled devices

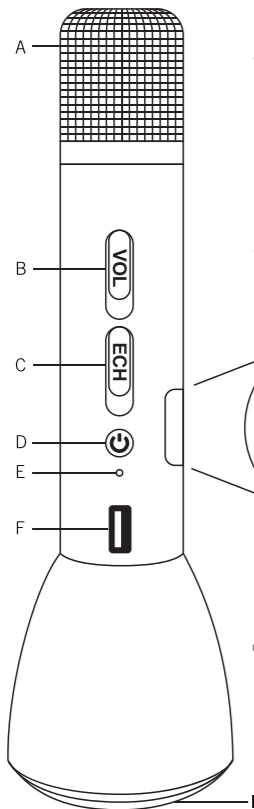

Contents & Functions

- A. Microphone
- B. Volume Control
- C. Echo Control
- D. Power Button
- E. LED Indicator
- F. USB Port
- G. Audio Out (Earphone Jack)
- H. Micro USB charging/Audio Input/Recording Interface
- I. Speaker
- J. Micro USB Charging Cable
- K. 3.5mm Audio/Recording cable

Charging the Microphone

1. The microphone can work properly during charging
 2. Plug the micro USB charging cable into the micro USB port on the side of the Karaoke Mic & speaker and connect the other end of the cable to either a computer USB port or a USB-compatible car or wall charger.
 3. The red LED light will flash during charging.
 4. When the battery is fully charged, the LED indicator will go red.
 5. Charging time is approximately 3 hours.
 6. 1,200mAh battery provides up to 3 hours of singing time and can additionally be used as power bank to charge your phone.
- ** To use as power bank, when the Karaoke Mic & Speaker is OFF, connect the Micro USB charging cable to the USB port of the Karaoke Mic & Speaker and the other end to the Micro USB port of your phone.

Turn On/Off

- Press the Power Button to turn on and the LED turns blue.
- Press the Power Button to turn off and the LED turns off.

Bluetooth™ Connect with a new device

1. Turn on the Karaoke Mic & Speaker and enter into Bluetooth mode.
 2. Activate the Bluetooth™ feature on your device, and set the device to search for wireless devices (See the User Manual for your device)
 3. The Karaoke Mic & Speaker will show on your device as BB-BT-MIC. (If passcode is requested, enter 0000 or 1234)
 4. The voice prompt will tell you if the pairing is successful.
 5. Once your device is paired to the microphone, it will automatically pair with it whenever they are both on, and your device isn't paired to another wireless device.
- If using AUX input feature, when the Karaoke Mic & Speaker is ON, connect one end of 3.5mm Audio/Recording Cable to the MicroUSB port and the other end to the 3.5mm jack on your device.
- ** Connecting this cable disables Bluetooth™ functions.

- If using USB input feature, connect USB drive to the USB port of the Karaoke Mic & Speaker.
- ** Connecting USB drive disables Bluetooth™ functions.

How to Sing

1. Once you have connected to your Bluetooth™ enabled device (refer to the "Bluetooth™ Connect with a new device" section) open an audio or karaoke playing source on your device, and begin playback.
Note: accompaniment volume can be adjusted via your device
2. Adjust your singing volume and echo on the microphone.
3. Begin singing

How to Record

1. When the Karaoke Mic & Speaker is ON, connect one end of 3.5mm Audio/Recording Cable to the Micro USB port of the Karaoke Mic & Speaker.
 2. Connect the other end to the 3.5mm jack on your device.
- ** Connecting this cable disables Bluetooth™ functions.
3. Open an audio recording app on your device, such as "Sing Party" and begin recording.
 4. Select your song from the app you used to sing in the instructions above and start singing.
 5. When you're finished, hit stop in the app you used to record yourself.



Back

Specifications

Pickup Device:	Capacitance
Output Power:	10mW (headphone output) 3W (speaker output)
Frequency Range:	100 Hz-10KHz
Max Sound Pressure:	>115dB 1KHz THD<1%
Reverb Mode:	Echo Sound Reverberation
Power Supply:	Rechargeable Lithium-ion Battery
Battery Capacity:	1200mAh
Charging Source:	DC5V



It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for listening to music.

Battery information

- Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out.
- Do not leave a fully charged battery connected to a charger, overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.
- Never use any charger that is damaged.
- Leaving the device in hot or cold places will reduce the capacity and lifetime of the battery. Optimal temperature for the battery is between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.
- Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged.
- Always dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

© 2017 Billboard IP Holdings, LLC. All rights reserved. Billboard®, the Billboard logo, HOT 100 and associated characters, trademarks and design elements are owned and licensed by Billboard IP Holdings, LLC and used under license by:
ESI Cases & Accessories, 44 East 32nd Street, New York, NY 10016

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation. Federal Communications Commission (FCC) Statement This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving equipment.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard. FOR HOME OR OFFICE USE.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

LIMITED WARRANTY

ESI Cases and Accessories warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser, will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect or replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.

This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor to any product the exterior of which has been damaged or defaced which has been subjected to misuse, abnormal service or handling or which has been altered or modified in design or construction. The limited warranty described herein is in addition to an applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty last, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ESI Cases and Accessories.

The warranties described herein shall be the sole and exclusive warranties granted by ESI Cases and Accessories and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ESI Cases and Accessories to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liability or otherwise. In no event shall ESI Cases and Accessories be liable or in any way responsible, for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Send device with the product to:
ESI Cases and Accessories,
44 East 32nd Street, 6th floor
New York, New York 10016
* Enclose proof of purchase and \$5.95 for Shipping and Handling.

TECHNICAL SUPPORT: 212 883-8838
E-MAIL: techsupport@esicases.com