

FRONT

MEASUREMENT:
width: 5 INCHES
height: 7.5 INCHES

BACK

Music Gear

 
 
 
FM Transmitter with LCD USER GUIDE


Congratulations on purchasing the FM Transmitter
Follow these easy steps to get started

SD/ MMC CARD & USB FLASH DISK


- 1) Insert the SD/MMC Card into the SD/MMC Card slot of transmitter
Insert the USB Device in USB Port of transmitter
Insert the audio device in the audio jack of transmitter


- 2) The LCD will display the screen shown in Fig. 4 press the button once to start playing an MP3 file.
Press again to pause.
- 3) Press the button once to advance to the next file. Press and hold the button to increase the volume.
- 4) Press the button once to go to the previous file. Press and hold the button to decrease the volume.

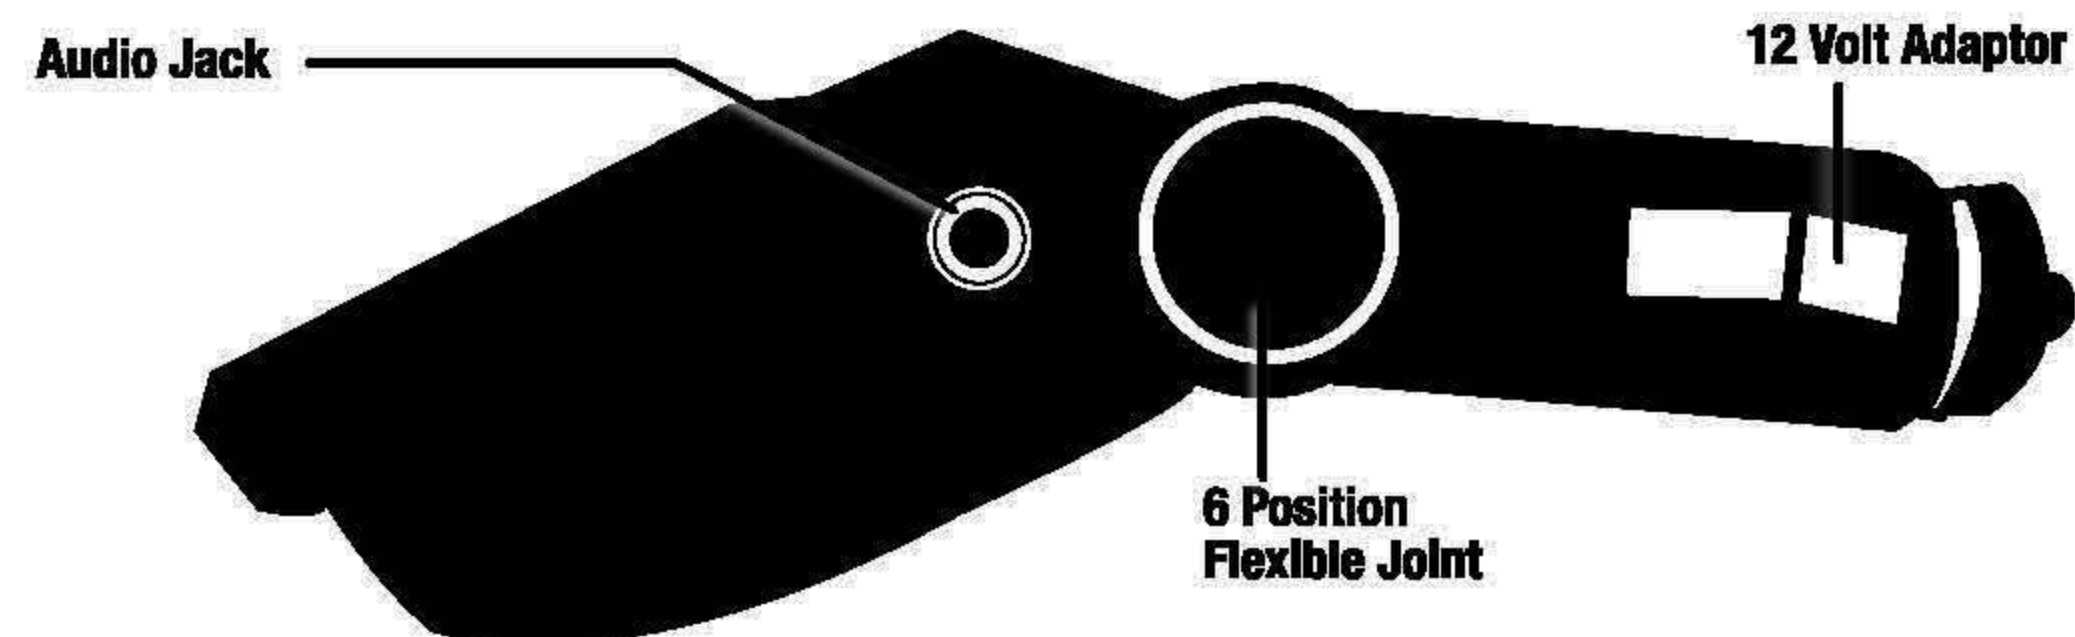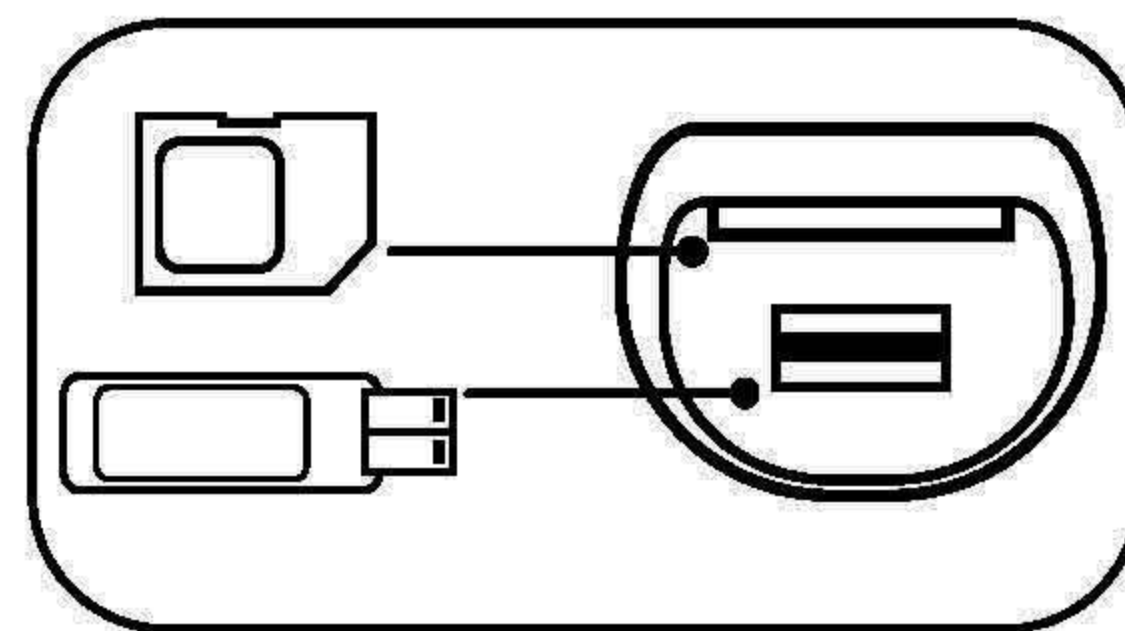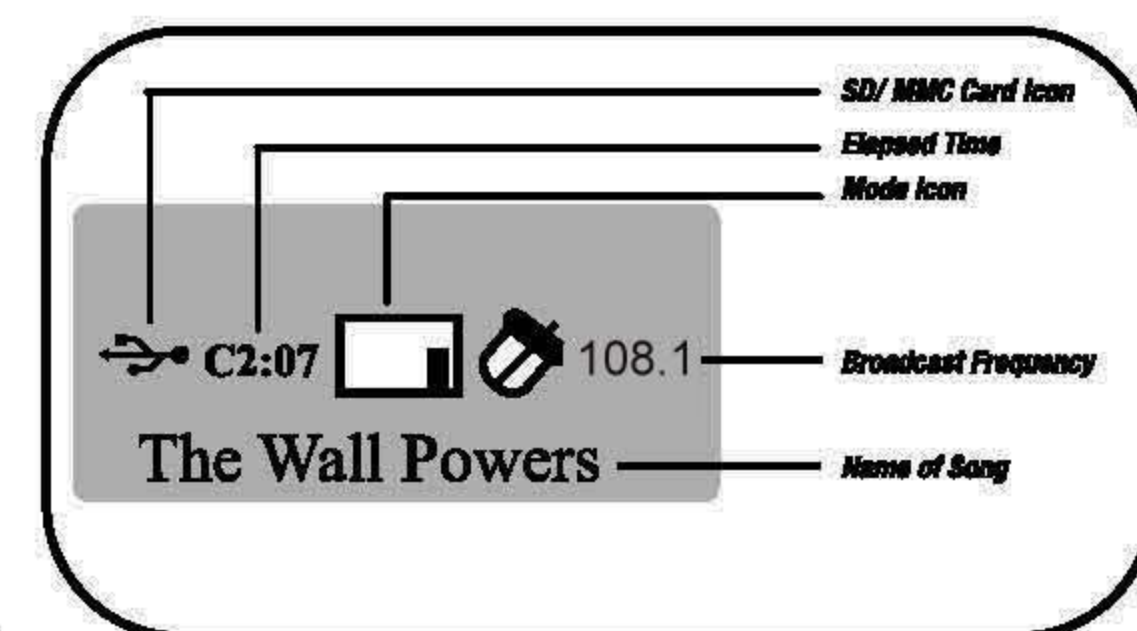

 Previous Track & Volume Decrease
(USB FLASH DISK & SD/MMC CARD)
Press this button once to return to the previous file. Press and hold to decrease the volume.

  Play/Pause/Shuffle
(USB FLASH DISK & SD/MMC CARD)
Press this button once to start playing an MP3 file. Press it again to pause.

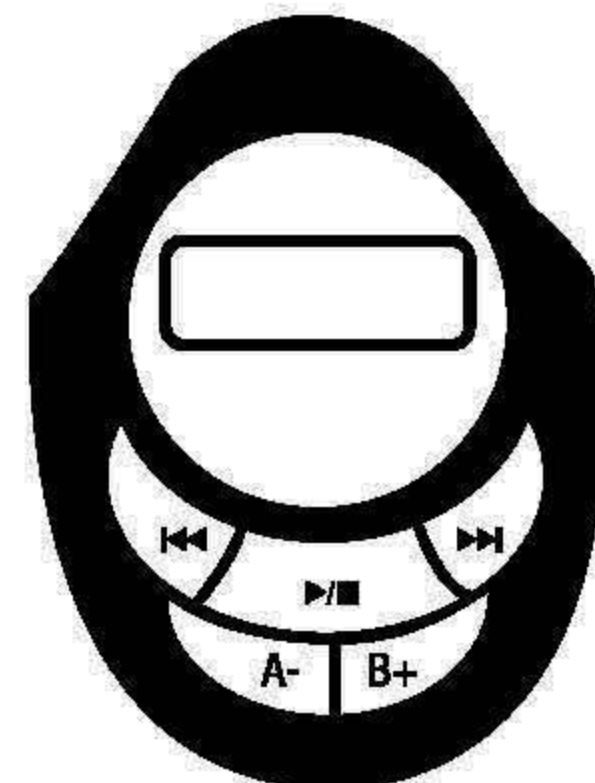


 Next Track & Volume Increase
(USB FLASH DISK & SD/MMC CARD)
Press this button once to advance to the next file. Press and hold to increase the volume.

 
 Channel Button
(USB FLASH DISK & SD/MMC CARD)
Press the channel button to change the broadcasting frequency. The transmitter remembers the last broadcast frequency.

Music Gear

FM Transmitter with LCD USER GUIDE

REMOTE INSTRUCTION

- 1) When you plug in your USB Flash drive or SD Card it will list your songs in order of the upload to your device, it will also associate a track number to the song. To go to a song, press the track number associated with the song and then press "PLAY/PAUSE"
(Example: To go to the #135 song press the numbers "1", "3", "5" then press "PLAY/PAUSE" The FM transmitter screen will flash the track number and song name)
- 2) Press the CH+ or CH- to change the frequency or press a frequency number then press CH+
(Example: To go to FM frequency 107.5 press the numbers "1", "0", "7", "5"
The screen will flash the FM frequency)
- 3) To change the volume on the remote press the - to decrease or + to increase the volume.
- 4) Press the EQ button to change the mode of the transmitter from: NORMAL, POP, ROCK, CLASSIC, JAZZ etc.
- 5) Press  to Play/ Pause your music.

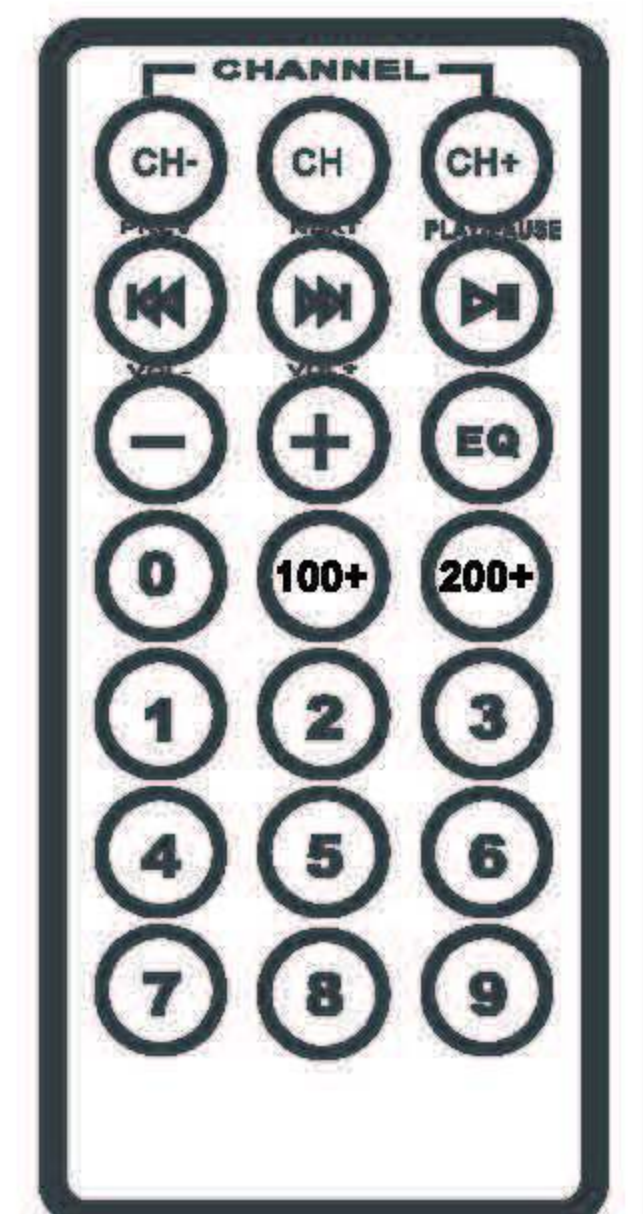

LG5041 FM TRANSMITTER

FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Federal Communications Commission (FCC) Statement

This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.

Lifetime Warranty

Music Gear™ warrants to the first consumer purchaser that this Music Gear™ Product, when shipped in its original container, will be free from defective workmanship and materials and agrees that it will, at its option, either repair the defect or replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described below.

This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor to any product the exterior of which has been damaged or defaced which has been subjected to misuse, abnormal service or handling or which has been altered or modified in design or construction. The limited warranty described herein is in addition to law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD(S) FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty last, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of Music Gear™.

The warranties described herein shall be the sole and exclusive warranties granted by Music Gear™ and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Music Gear™ to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liability or otherwise. In no event shall Music Gear™ be liable or in any way responsible, for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Warranty period:	Lifetime on parts and labor from date of purchase
Technical support:	212 883-8838
Where to ship product:	ESI Cases & Accessories
*Enclose \$5.95 for shipping & handling	240 Madison Avenue 11th floor; New York, NY 10016