 


LCD TV

OWNER'S MANUAL
MODEL: L26GAM4
L32GAM4

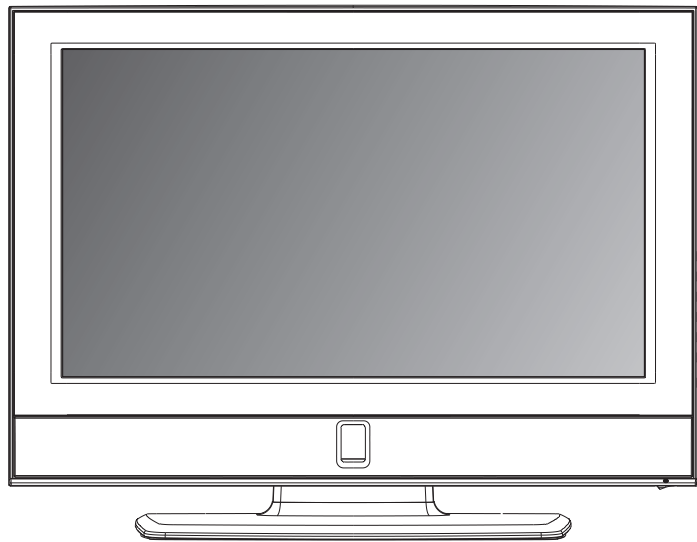

Read this manual before operation

LCD TV

Safety precaution

- ◆ Don't place the TV set on the unstable surface to prevent it from falling off .
- ◆ Do not expose the TV to extreme temperature and humid environment.
- ◆ Avoid subjecting the TV to direct sunlight and other heat sources.
- ◆ Do not put the TV into any liquid.
- ◆ Do not put anything inside the TV, or place water container on top of the TV.
- ◆ In thunder rainy days (especially with lightning), please unplug the power and antenna cables.
- ◆ Do not step on the power cables, or tangle them together.
- ◆ Avoid overload of the exterior electric outlet to prevent fire hazard and electric shock.
- ◆ Clean the TV with dry and soft cloth (without evaporative matter).
- ◆ If your TV is broken or damaged, please contact your place of purchase or the local service center for help instead of repairing it by yourself to prevent any personal danger.
- ◆ If the remote control is left unused for a long time, please take the batteries out and store them in dry places.
- ◆ Avoid dropping the remote control.
- ◆ If the LCD TV is installed for exhibition purpose, please do not place it in an airtight place and avoid covering its vents to ensure good ventilation.
- ◆ This equipment should be avoided from waterdrops “and ” things that filled with liquid, such as vases, cannot be placed on such equipment.
- ◆ This equipment is predetermined to work constantly(unless adding switch on this equipment)
- ◆ Please disconnect the power cord when it is left unused for a long time.

Basic operations

Power on/off

1. Please connect the TV's power cable to the a wall outlet with AC 100~240V only. Out of spec power supply may overload the device and cause damage to it.
2. If the screen of the TV is not on after you have plugged the power cable to an electric outlet , press the power button on the remote control or on the TV.
3. If you want to shut down the TV temporarily. please press the power button on the remote control or on the TV.
4. If you want to shut off the TV completely, please unplug the power cable from wall outlet.

Auto screen shut off function

1. In TV/AV state, the TV will enter idle state if there is no signal input detected within 15 minutes.
2. In PC state, the TV will enter idle state if there is no signal input detected within 2 minutes.

Memorization of changed settings before TV shuts down

1. Any settings changed when the TV is in operation will be saved before the TV is shut down and be applied to next operation.





Precaution of signal source application

1. When using a PC as the signal source, please adjust the resolution of the graphic card to one of the following recommended resolutions:(1024*768 60 Hz, 800*600 60 Hz, 640*480 60 Hz)
2. If there is line-by-line output of the signal used by the user, signal source with line-by-line output is recommended.

All the illustrations inside the manual and the product accessories provided are for reference only. The actual content of the package may vary. The company reserves the right to change the bundled accessories without prior notice.

LCD TV




Notes:

 <p>WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN</p> 	<p>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	<p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>	

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

Check the accessories

(TV accessories)

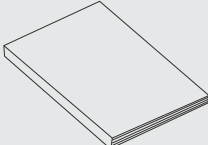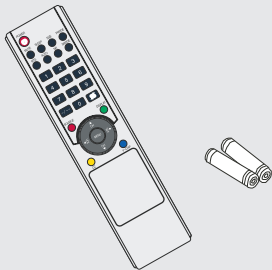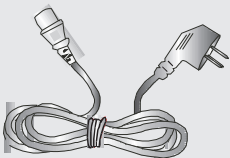	
<p>User manual</p>	<p>Remote control / Batteries</p>
	
<p>Power cord</p>	


LCD TV

Contents

Safety precaution	1
Basic operation	1
Notes	2
Contents	3
LCD TV panel	4
LCD TV panel (continue)	5
Remote control	6
Application instruction of remote control	6
Wall Mount Installation Guide	7
Connecting to antenna or TV radio network	8
Connecting to satellite receiver or decoder	8
Connecting to exterior devices	9
Picture	10
Sound	12
Function	14
TV	18
Advance	19
Trouble shooting	21
FCC Rules	21
Supported operating modes	22

LCD TV

Front View

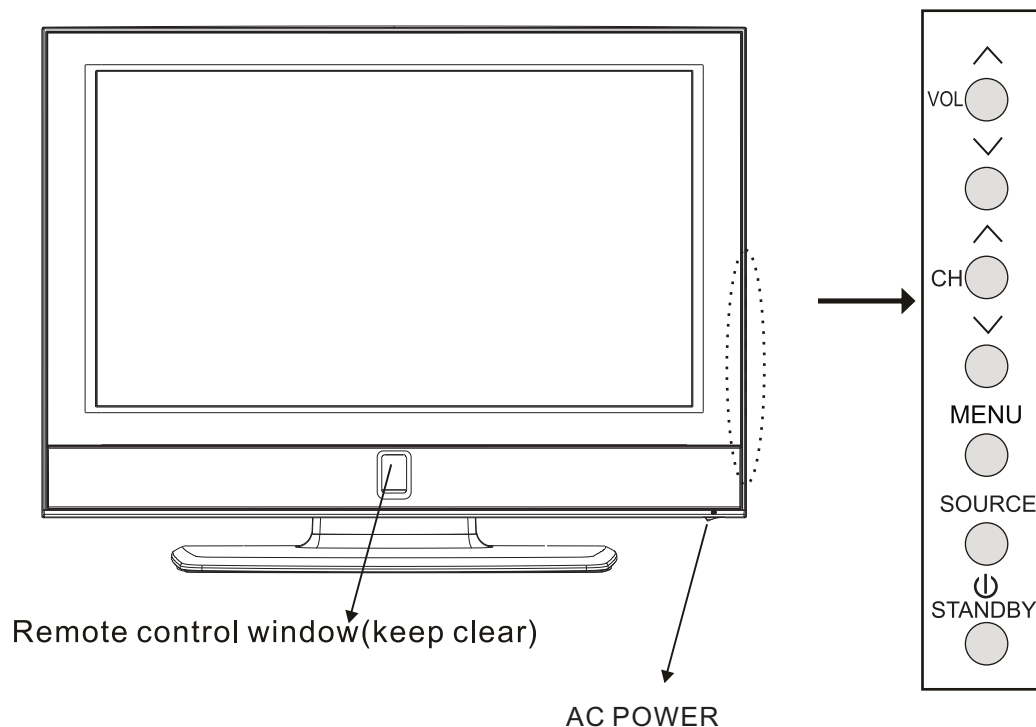

1(IR)Infrared Receiver: Receives IR signal from the remote control.
(Power on/Standby)LED Indicator: Press **STANDBY** to turn on and off.
In operation(Blue) Standby mode(Red)

The effective receiving scope for the signal is 5-8 meters from the front of the remote control window, and 30° to the left or right side and 20° above or below the control window.

2 The functions of the buttons are described as bellows:

CH+/-: Press to scan through channels.

VOL+/-: Press to adjust the volume.



MENU: Press to display the OSD menu, Press again to exit the menu.

SOURCE: Press to select the input source.

Power: Turn on/standby the TV set.

LCD TV

LCD TV Panel (continued)

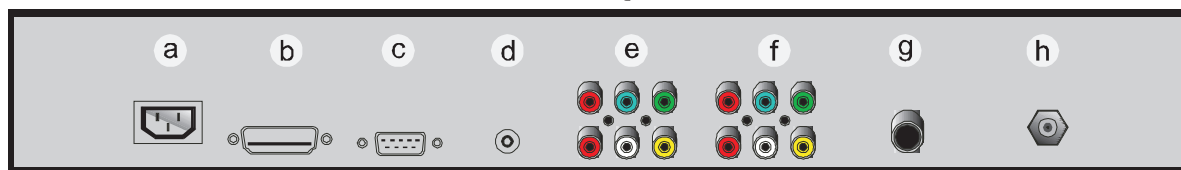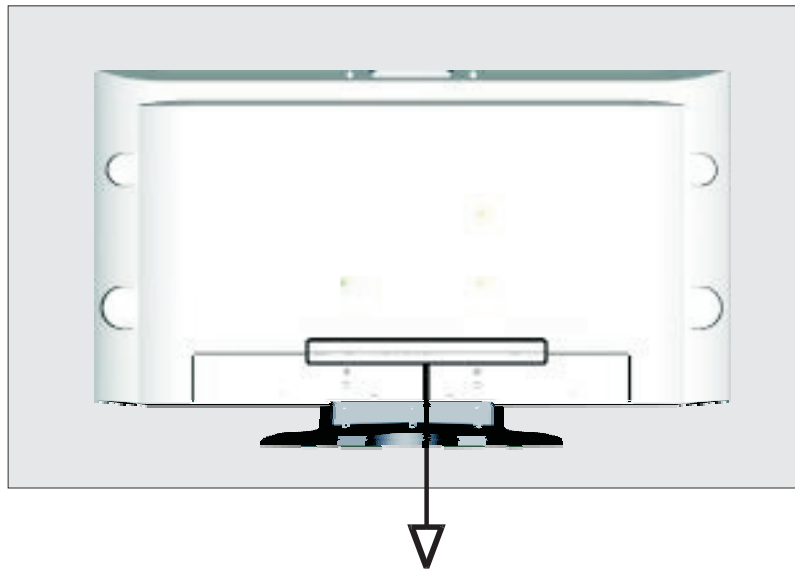

a) POWER

AC power input terminal

b) HDMI

High-definition multimedia interface

c) D-SUB

Input terminal of simulation signal of PC

d) Audio in

Sound input terminal of RGB input

e) Y PbPr2 AV2 R L

Color difference component input terminal and AV2 input terminal and audio input terminal

Note: Acceptable video signal 480P/576P/720P/1080i for Y PbPr2

f) Y PbPr1 AV1 R L

Component input terminal and AV1 input terminal and audio input terminal

Note: Acceptable video signal 480P/576P/720P/1080i for Y PbPr1

g) S-Video


Color and brightness separation input terminal

h) VHF/UHF

Antenna/close circuit TV network port (75 Ohm VHF/UHF)

LCD TV

Remote control


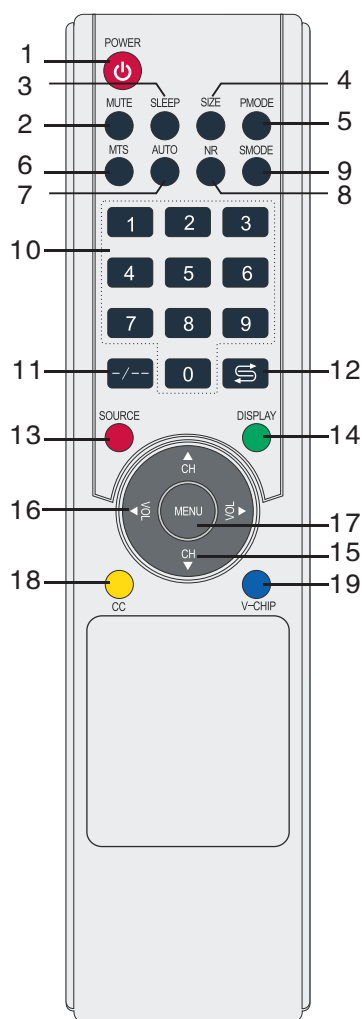


1. POWER
2. MUTE
3. SLEEP
4. SIZE
5. P-MODE
6. MTS
7. AUTO
8. NR
9. S-MODE
10. 0~9
11. -/--
12. ↶
13. SOURCE
14. DISPLAY
15. CH▲ and CH▼
16. VOL▶ and VOL◀
17. MENU
18. CC
19. V-CHIP

- Switch on/off the unit
- Switch on/off the speakers
- Press to set a preset time interval for automatic shutdown.
- Press to switch size (4:3, 16:9,)
- Select the desired picture modes
- Press to select from SAP, Mono or Stereo mode.
- Under VGA mode, the screen position could be auto matically adjusted by pressing "Auto" button, when the screen image is slanted.
- Press to select noise reduction function
- Select the sound modes
- Select the desired channel directly
- To select one digital or two digital channels directly
- Return to previous channel
- Select the desired signa Input mode
- Press to display the information of current channel number and time
- Press to scroll through all available program channels.
- Press to adjust volume.
- Press to show the on screen display menu.
- Close Caption
- Press to v-chip function

Installing Batteries

- 1** Open the battery compartment cover on the back side.
- 2** Insert two 1.5V AA size batteries in correct polarity. Do not mix old or used batteries with new ones.
- 3** Closed the cover.

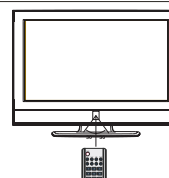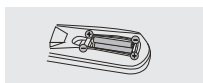


- ✦ Point the remote towards the remote control sensor of the wireless TV and use it within 7 meters.
- ✦ Put the dead batteries into the recycling bin since it can negatively affect the environment.

LCD TV

Wall Mount Installation Guide

Thank you for purchasing our LCD color TV, the wall-mounted device is its accessory. Please read this instruction carefully before using this production. For further reference.

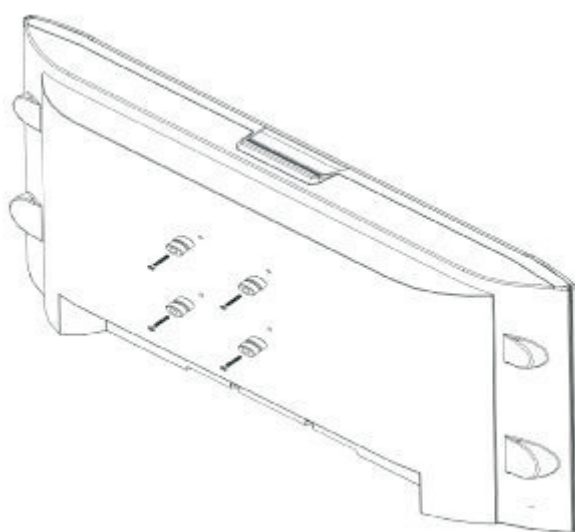

Installation Steps


1. Fix the wall-mounted rack on the wall with bulking bolt in accessory bag 1 (notice the distance between wall-mounted racks).
2. Fix the wall-mounted fastener on the back case with bolts in accessory bag 2. Note: the head of the bolt should enter the wall-mounted fastener. (see the above figure)
3. Lift the LCD TV, points the wall-mounted fastener to the holes in wall-mounted racks, lower the TV slowly to make the stuck the wall-mounted fastener inside the slots of wall-mounted racks.

Main accessories (wall-mounted racks: left/right, 1 bolt, bulking bolt, wall-fastener)
(see the following figure)



wall-mounted racks: left/right 1 bolt (4pcs) Wall-fastener (4pcs) bulking bolt (4pcs)

LCD TV

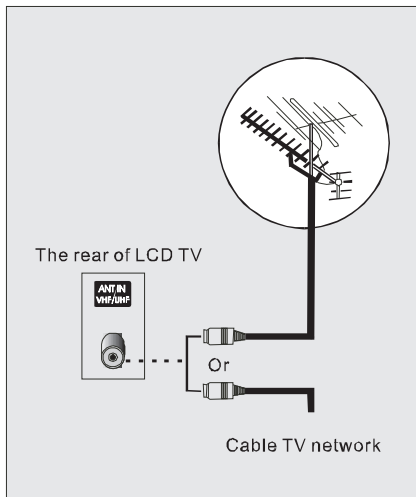

In order to receive TV program, signal should be received from one of the following signal sources:


- ◆ Outdoor antenna.
- ◆ Cable TV network
- ◆ Satellite broadcast network

1. In these three cases, the end of antenna or cable TV network should be plugged into the 75 Ohm coaxial connector which locates on the rear of TV set
2. If you are using indoor antenna and quality of displayed picture is not satisfactory, you can adjust the position of the antenna until the picture is clear.

When installing LCD TV, please use dedicated 75 Ohm Coaxial cable. Otherwise, there may be noise and image disturbances.



Connecting to satellite receiver or decoder

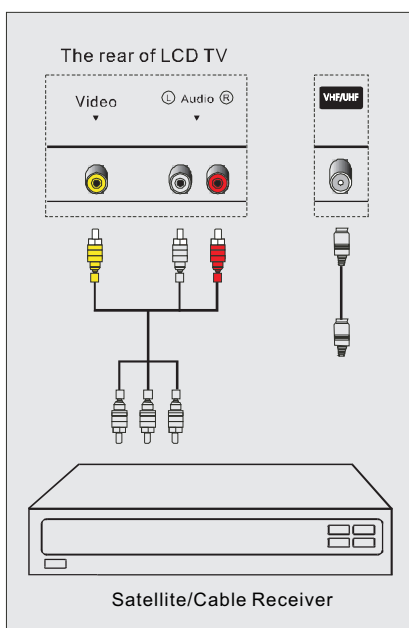

In order to receive TV programs transmitted by satellite, a satellite receiver should be connected to the rear of the LCD TV. Meanwhile, in order to receive encoded signal, a decoder should be connected to the rear of LCD TV.

Using the coaxial cable

Connect the coaxial (AV or Component) cable connectors to


- ◆ The decoder output terminal.
- ◆ The TV input terminal.

If you want to connect the TV to satellite receiver (or decoder) and video recorder at the same time, the following operation should be followed:

- ◆ Connect receiver (or decoder) to video recorder.
- ◆ Connect video recorder to LCD TV, or connect receiver (or Decoder) directly to LCD TV.

LCD TV

Connecting to exterior devices

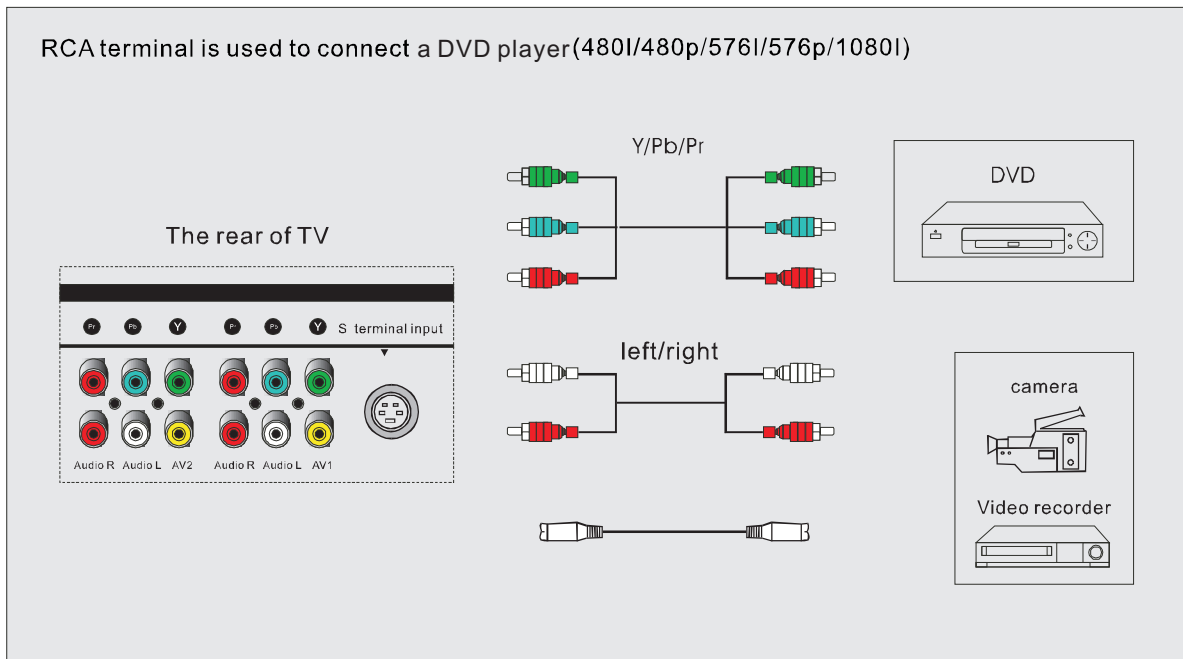

Notes:

1. Y PbPr1 AV1 S-Video use a common Audio in.
Supported video signal 480P/576P/720P/1080i for Y PbPr1
2. Y PbPr2 AV2 use a common Audio in.
Supported video signal 480P/576P/720P/1080i for Y PbPr2
3. Y PbPr of DVD is corresponding to Y PbPr of LCD TV.


LCD TV

Picture




Picture Mode Set

1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "Picture" menu.
2. Press the "VOL▶" button on the remote control to enter the "Picture" menu, then press "CH▲/CH▼" button to select "Picture mode" and press "VOL◀/▶" button to select the picture mode such as standard, soft vivid and user.
3. Press the "MENU" button on the remote control to return to upper menu.

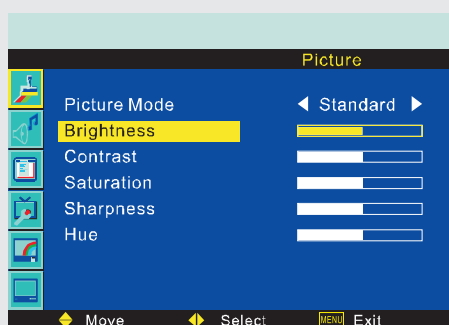


Brightness Set

1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select The "Picture" menu.
2. Press the "VOL▶" button on the remote control to enter the "Picture" menu, then press "CH▲/CH▼" button to select "Brightness".
3. Press the "VOL◀/▶" button on the remote control button to enter brightness adjustment menu to adjust "Brightness".
4. Press the "MENU" button on the remote control to return to upper menu.

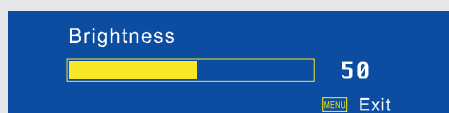


Contrast Set

1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select The "Picture" menu.
2. Press the "VOL▶" button on the remote control to enter the "Picture" menu, then press "CH▲/CH▼" button to select "Contrast".
3. Press the "VOL◀/▶" button on the remote control button to enter Contrast adjustment menu to adjust "Contrast".
4. Press the "MENU" button on the remote control to return to upper menu.

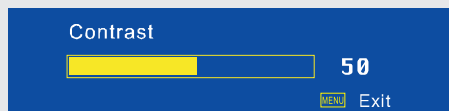



LCD TV

Picture

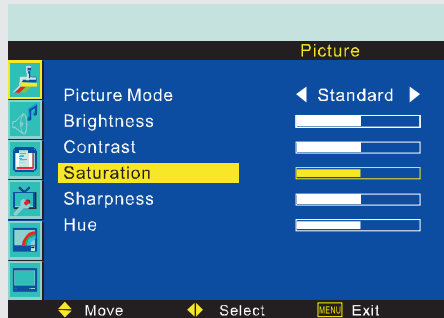


Saturation Set

 1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select The "Picture" menu.
2. Press the "VOL▶" button on the remote control to enter the "Picture" menu, then press "CH▲/CH▼" button to select "Saturation".
3. Press the "VOL◀/▶" button on the remote control button to enter Saturation adjustment menu to adjust "Saturation".
4. Press the "MENU" button on the remote control to return to upper menu.

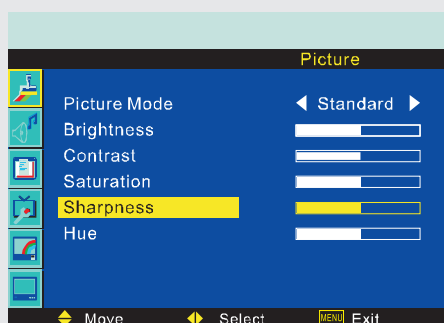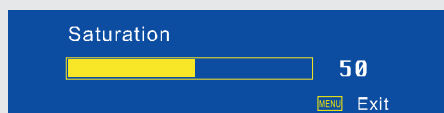

Sharpness Set

1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select The "Picture" menu.
2. Press the "VOL▶" button on the remote control to enter the "Picture" menu, then press "CH▲/CH▼" button to select "Sharpness".
3. Press the "VOL◀/▶" button on the remote control button to enter Sharpness adjustment menu to adjust "Sharpness".
4. Press the "MENU" button on the remote control to return to upper menu.

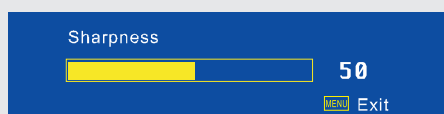

Hue Set

1. Press the "MENU" button on the remote control to enter the OSD menu, then press "CH▲/CH▼" button to select the "Picture" menu.
2. Press the "VOL▶" button on the remote control to enter the "Picture" menu, then press "CH▲/CH▼" button to select "Hue" (For NTSC System only).
3. Press the "MENU" button on the remote control to return to upper menu.