

User Manual



Table of Contents

Major Functions	1
Precautions	1
Specifications	2
Instructions on Buttons and Ports	2
Operational Instructions	4
1. Power on/off Digital Photo Frame	4
2. Menu Operation	4
3. Photo Browse	5
4. Music Playback	6
5. Video Playback	6
6. Music and Picture Playing Mode	7
7. File Management	7
8. Calendar	8
9. USB Connection	8
10. System Setting	9
What's in the Box?	10

Federal Communications Commission (FCC) Statement

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment

FCC-Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Major Functions

- Support JPEG format pictures, thumbnail browsing, picture rotate and zoom, picture slideshow and background music.
- Support MP3 format of music.
- Support MPEG1/2/4, DIVX and XVID coding method.
Format: MPG, AVI, MP4, MPEG, DAT.
- Support calendar / clock / alarm clock function.
- Support external storage devices: SD/SDHC, MMC, MS and USB flash drive.
- Support button operation and remote control operation.

Precautions

- Do not use the product in high temperature, low temperature, damp, dusty and erosive environment.
- Do not drop the frame or strike hard objects during using, otherwise, damages may be caused to the surface or inner components of the frame.
- Please power off the frame before cleaning. Wipe the frame with a clean, soft, lint-free cloth. Do not use ammonia, alcohol or abrasive detergent cleaning agents.
- Please cut off the power when the frame is going to lay idle for a long time.

Specifications

- Screen size: 8-inch TFT screen
- Resolution: 800 x 600
- Memory capacity: no built-in Flash; support external storage devices.
- Power: 5V/2000mA DC
- Working temperature: -20°C~70°C
- Working humidity: 5%~95%


Instructions on Buttons and Ports

Buttons and ports of the product are shown below as picture (subject to the real product)



- ① Power : power on and off
- ② USB Slave
- ③ USB Host
- ④ Menu : Quit from current state and go to the parent menu
- ⑤ Up,Down,Left,Right and OK
- ⑥ Slideshow
- ⑦ SD/MS/MMC card reader ⑧ Headphone jack
- ⑨ DC in

Remote control's instruction is shown as picture :

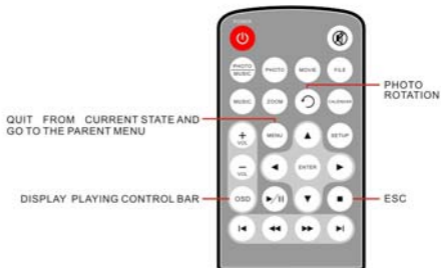

Operational Instruction

1. Power on/off Digital Photo Frame

Connect the frame with power adapter,press "POWER" button on the frame to turn on or turn off the frame.

2. Menu operation

When the frame is not connected with any external storage device, the frame will enter into the basic menu after power on, as the picture shows. You can select "SETUP" and "CALENDAR" function.



When the frame is connected with external storage device, icon of the storage device will show in the basic menu, e.g. USB flash drive, storage card etc.



Select corresponding storage device, press "ENTER" button to enter into the main menu of movie/music/photo/file.



3. Photo Browse

Select "PHOTO" in the main menu, press "ENTER" button to enter into photo playing mode. The frame will show thumbnail of all pictures in the storage device. Select pictures by "LEFT", "RIGHT", "UP" and "DOWN" buttons and confirm to enable auto-playing, or press "PHOTO" button on the remote control to start auto-playing (default as starting from the first picture in the root directory of the current storage device).



During slideshow, press "OSD" button, and playing control bar shows. Select "PLAY/PAUSE", "NEXT", "LAST", "ROTATE", "ZOOM", "STOP" etc, or control by pressing corresponding buttons on the remote control.

4. Music Playback

Select "Music" in main menu, press "ENTER" button to enter into playing list interface. Select music by "UP" and "DOWN" buttons, and press "ENTER" button to play, or press "MUSIC" button on remote control to enter into playing list and start auto-playing (default as starting from the first audio file in the root directory of the current storage device).



5. Video Playback

Select "MOVIE" in main menu, press "ENTER" button to enter into video playing list interface. Press "UP" and "DOWN" buttons to select video files and press "ENTER" button to play, or press "MOVIE" button on remote control to start auto-playing (default as starting from the first video file in the root directory of the current storage device).



During video playing, press "OSD" button, and playing control bar shows. Select "PLAY/PAUSE", "FF", "REW", "NEXT", "LAST", "ZOOM", "STOP" etc, or control by pressing corresponding buttons on the remote control.

6. Music and Picture Playing Mode

Press "PHOTO/MUSIC" button on the remote control in any interface to enter into music and picture playing mode which enables simultaneous playing of picture and music files in the root directory of current storage device. (If you want to return to picture thumbnail interface, press "MENU" button)

7. File Management

Select "FILE" in the main menu, press "ENTER" button to enter and press "UP" and "DOWN" buttons to select files. Press "ENTER" button to start browsing.

Copy and deletion of files: select file to be copied or deleted, press "Right" button to tick off the file and press "OSD" button. Choose "COPY" or "DELETE" and press "ENTER" button to confirm. If you choose "COPY", then

choose target memory device. Press "Right" to enter memory device. Press "Enter" to start copying. If you want to copy to a certain folder, choose the folder and press "Right" to enter. Then press "Enter" to start copying. In this case, you can copy file between memory card and flash drive.



8. Calendar Playing Mode

Select "CALENDAR" in basic menu, press "ENTER" button to enter calendar mode. Calendar displays along with picture slideshow, or press "CALENDAR" button on remote control to enter calendar playing mode.



9. USB Connection

When the frame is connected to PC with USB cable, the screen will display "PC connected". The frame under this mode can be used as a card reader. You can copy and delete the file in memory card, e.g. SD card.

10. System Setting

Select "SETUP" in basic menu, press "ENTER" button to enter system setting. Setting list shows. Press "UP" and "DOWN" buttons to select setting option, and press "LEFT" and "RIGHT" buttons to select setting value. Press "ENTER" button to confirm the setting value. See the following table for details:

Option	Function
Language	Set menu language
Slideshow time	Set slideshow interval
Transition effect	Set dynamic shifting effects of slideshow
Music repeat mode	Set music repeating mode as Repeat one/repeat all/repeat off
Movie repeat mode	Set movie repeating mode as Repeat one/repeat all/ repeat off
Display mode	Set displaying scale of the screen (crop/stretch/cinema)
Effect comparison	Enable/Disable picture optimization comparison function
Time	Set date and time

Alarm clock	Set time, ringing tone, repeat mode (off/everyday/once)
Default	Reset all settings, restore to factory setting

What's in the Box?

- Digital photo frame
- Power adapter
- User manual
- Remote Control

