- Remove batteries from appliance that will not be used again for a long time.
- Please remember that small button cells and AAA batteries should be kept away from young children as they could be easily swallowed. Seek medical advice if you believe a cell has been swallowed.

Never:

- Mix different types of batteries.
- Mix old and new batteries.
- Dispose of batteries in a fire.
- Attempt to recharge ordinary batteries.

Consumers have a significant role to play in reducing the impact of waste electrical and electronic equipment on the environment, you can help by re-using or recycling such equipment.


The crossed out wheelie-bin symbol indicates that the product & batteries must not be disposed of in domestic waste as they contain substances which can be damaging to the environment and human health. If you cannot re-use or recycle the product or batteries, please use designated collection points, or civic recycling facilities to dispose of them.

Spare parts are available by emailing tkc@wowstuff.co.uk

NOW	ECLARATION OF CONFORMITY
Manufacturer's Name	Loyal Technology Co. Ltd.
Manufacturer's Address	Block 1, 11/F Valiant Industrial Centre, 2-12 Au Pui Wan Street Fo Tan, Shatin, Hong Kong
Importer's Name:	China Indistries Ltd T/A Wow! Stuff
	Creative Industries Centre, Wolverhampton Science Park,
	Wolverhampton, WV10 9TG, UK
Type of Equipment: Model Number:	Radio controlled Rattlesnake NHM-1065
Year of Manufacture:	2009
Application of Council Directiv	e(s): 1999/5/EEC The Radio Equipment and Telecommunications
Chandrad(a) to which Ocadema	Terminal Equipment Regulations 2000 (and its amending directives)
Standard(s) to which Conform	ity is Declared: EN62115, EN300220, EN301489
	oment named above has been tested and found to comply with the referenced specifications. The unit complies with all essential requirements
Place: Wolverhampton, UK	
Date: 08 April 2009	Graeme Taylor (Full name)
	Director (Position)



Radio-controlled rattlesnake

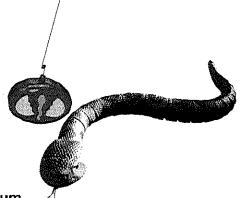

About the Natural History Museum

The Natural History Museum is home to around 70 million specimens, and looks after one of the world's most important collections of natural history. It is an irreplaceable record of the planet's astonishing diversity. Every year, more than three million people visit the Museum, making it a vibrant, fun, buzzing place in which to discover the natural world.

It began as the natural history department of the British Museum in the 1700s, but soon outgrew the buildings in Bloomsbury. In 1881, the present building in South Kensington was opened, a world-famous construction designed by Alfred Waterhouse using groundbreaking materials and techniques.

Inside, the wonders continue. From the fossil-filled *Dinosaurs* gallery to the living exhibition of the *Wildlife Garden*, the Museum explains and investigates all aspects of the natural world. Massive natural forces shape the world in *Earth's Treasury* and *The Power Within*. Living things interact in the *Ecology* gallery and in the hands-on *Investigate Centre* visitors can touch, weigh and examine thousands of real specimens. The Darwin Centre shows some of the Museum's 70 million specimens, and the libraries hold the largest collection of natural history books in the world, including more than one million printed books and 500,000 original drawings, paintings and prints.

But far from being a dusty building full of dead things, the Museum is a vibrant scientific organisation, the largest in the UK. About 300 scientific staff work here furthering our knowledge of the natural world, tackling global issues such as threats to wildlife and the causes of disease.

For more information, please visit www.nhm.ac.uk

If you would like to further support the work of the Museum why not become a Member? Tel 020 7942 5792 or email members@nhm.ac.uk


Sales of this product support the Natural History Museum.




Distributed by: China Industries Ltd, T/A Wow! Stuff, Creative Industries Centre, Wolverhampton Science Park, Wolverhampton, WV10 9TG. www.wowstuff.co.uk




Preparation

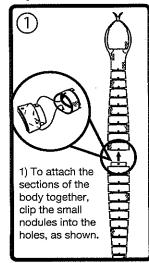


Inserting the batteries

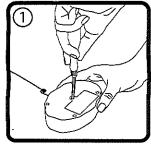


1) To insert batteries into the controller, unscrew and remove the rear panel using a Philips screwdriver.

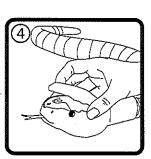


4) To insert batteries into the snake, lift off the upper head section revealing the panel below.

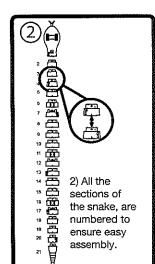


2

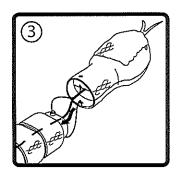


3) To attach the head onto the body, thread the wire through into the body of the snake. Make sure the small nodules are clipped into the holes, as shown above.

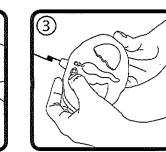

2) Insert one 9V (6LR61) 3) On the controller slide the battery, following the polarities switch to the ON position. indicated on the battery compartment. Re-screw the back panel removed in step one.

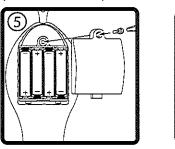


5) Un-screw the battery cover using a Philips head Screwdriver and remove. Insert 4x AAA batteries, into the head section, following the polarities indicated on the battery compartment.

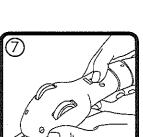

7) Re-screw the battery cover and replace the head section.Turn the rattlesnake upside down and slide the switch to ON.

Operating the rattlesnake

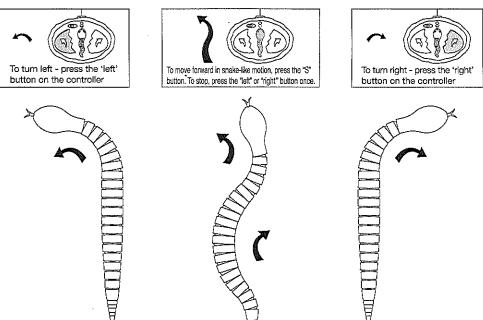

Safety Information

Adult supervision required.

Ê

Not recommended for use by children under 5 years old.

Not suitable for children under 3 years old due to small parts which may represent a choking hazard.

Warning! Do not use close to the ear! Misuse may cause damage to hearing. Do not put fingers or anything in the gap when the snake is moving. Please retain this information for future reference.

Battery Information

- · Non-rechargeable batteries are not to be recharged;
- Rechargeable batteries are only to be charged under adult supervision;
- Rechargeable batteries are to be removed from the toy before being charged;
- Different types of batteries or new and used batteries are not to be mixed;
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are to be removed from the toy;
- The supply terminals are not to be short-circuited.

Always :

- Make sure battery compartments are secure.
- Use batteries of the correct size and type.
- Fit batteries correctly observing the plus and minus marks on the battery and compartment.
- · Replace a whole set of batteries at one time.
- · Remove dead batteries from equipment.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.