

⚠ WARNING: CE

Not suitable for children under 3 years old due to small parts which may represent a choking hazard. Recommended for use by children over 5 years old. Do not operate during thunderstorms or rain. Do not submerge in water. Keep fingers, hair and loose clothing away from the tires, gears and motor. Please retain this information for future reference. Adult supervision required. Operates on 27 MHz frequency. Made in China.

Battery Information

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd) batteries.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

Always :

- Make sure battery compartments are secure.
- Use batteries of the correct size and type.
- Fit batteries correctly observing the plus and minus marks on the battery and compartment.
- Replace a whole set of batteries at one time.
- Remove dead batteries from equipment.
- Remove batteries from appliance that will not be used again for a long time.
- Please remember that AA batteries should be kept away from young children as they could be easily swallowed. Seek medical advice if you believe a cell has been swallowed.
- Please ensure that batteries are installed by an adult prior to use.

Never

- Never dispose of batteries in a fire.

Consumers have a significant role to play in reducing the impact of waste electrical and electronic equipment on the environment, you can help by re-using or recycling such equipment.



The crossed out wheeled-bin symbol indicates that the product & batteries must not be disposed of in domestic waste as they contain substances which can be damaging to the environment and human health. If you cannot re-use or recycle the product or batteries, please use designated collection points, or civic recycling facilities to dispose of them.

Troubleshooting

Problem	Cause	Correction
Buggy doesn't move.	Power switch turned off. Vehicle is too far away from the handset. The battery in the Buggy or handset is flat.	Turn the power switch on. Move the handset closer to the Buggy. Change the batteries.
Buggy does not respond to the handset.	Interference from other RC devices.	Remove or switch off conflicting devices.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

DECLARATION OF CONFORMITY

Manufacturer's Name: China Industries Ltd. T/A Wow! Stuff
 Manufacturer's Address: Creative Industries Centre, Wolverhampton Science Park, Wolverhampton, WV10 9TG, UK
 Type of Equipment: Stunt Buggy Xtreme
 Model Number: TX-1013
 Year of Manufacture: 2014
 Application of Council Directive(s): 1999/5/EC The Radio Equipment and Telecommunications Terminal Equipment Regulations 2000 (and its amending directives)



Standard(s) to which Conformity is Declared: EN62479, EN62115, EN301 489-1/3, EN300 220-1/-2

Hereby, China Industries Ltd. T/A Wow! Stuff, declares that this Stunt Buggy Xtreme is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Place: Wolverhampton, UK
 Date: April 2014
 Dr. Graeme Taylor
 Director

CE 0678

Distributed by: China Industries Ltd. T/A Wow! Stuff,
 Creative Industries Centre, Wolverhampton Science Park,
 Wolverhampton, WV10 9TG,
www.wowstuff.com

Designed by TX Juice in the UK, California and Asia.
 Manufactured and assembled in China.



R/C

 
STUNT
BUGGY
Xtreme™

Instructions

INSERTING THE BATTERIES


Handset

1. Use a cross head screwdriver to unscrew the cover on the back of the handset
2. Insert the battery (1x9V, not included) in accordance with the polarity
3. Replace the battery cover
4. Slide the switch to the ON position

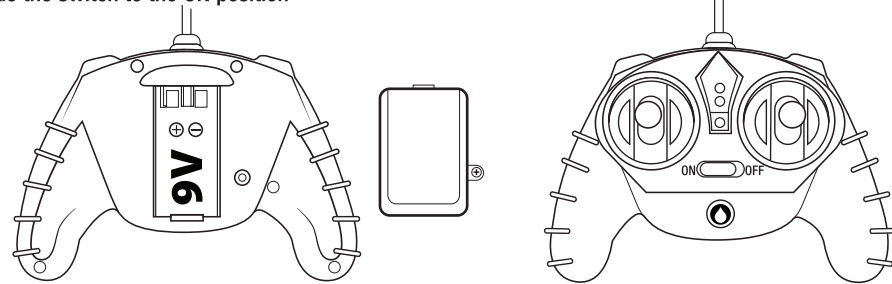


Mega Stunt Buggy

 1. Unscrew the battery door on the back of the Buggy (see Fig. 1)
2. While pushing in the battery compartment, move the battery door upwards and clip it fully off (see Fig. 2).
3. Completely slide out the battery compartment and insert the batteries (6 x AA, not included) in accordance with the polarity (see Fig. 3)
4. While pushing the battery compartment in, clip on the battery door, close the door and screw shut with a cross head screwdriver
5. Slide the switch to the ON position

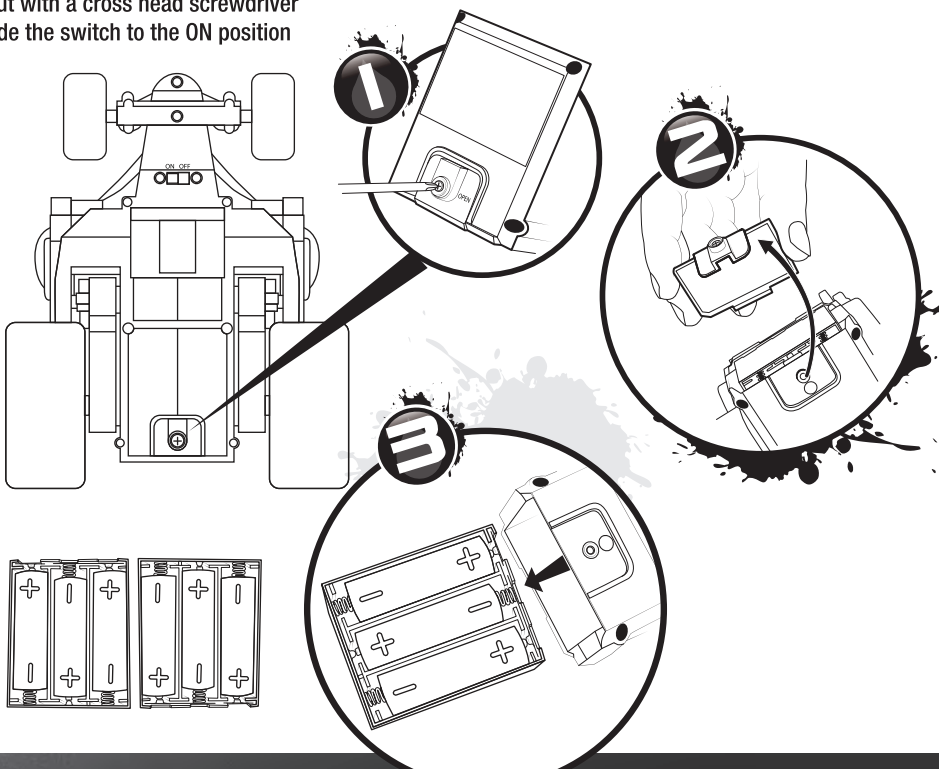


The Gameplay

 Pressing the Juice Button shows all the stunts in sequence. Can you do them all? Here are 3 of the best...

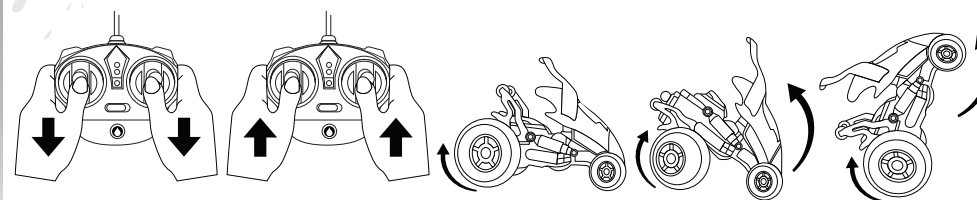

 To make Stunt Buggy stand upright pull both toggle sticks backwards then instantly press both forwards!

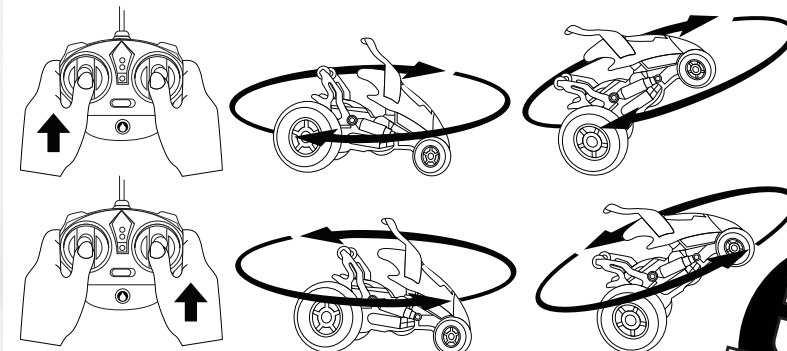

For extreme 360° degree spins simply press one of the toggle switches forwards



5 FEET PER SECOND ACCELERATION!

Press both toggle sticks forward for full on 5 feet per second acceleration!



ONE PRESS!

Press the Juice Button™ to activate Auto-Stunt System™ Buggy will perform a multitude of extreme stunts automatically!

Touch any control on the TX handset to revert to manual operation!

