

Battery Information

BATTERY INFORMATION:

- 5 x 1.5V AAA (Included)

PLEASE RETAIN THIS INFORMATION FOR FUTURE REFERENCE.

- Non-rechargeable batteries are not to be recharged;
- Rechargeable batteries are only to be charged under adult supervision;
- Rechargeable batteries are to be removed from the toy before being charged;
- Different types of batteries or new and used batteries are not to be mixed;
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are to be removed from the toy;
- The supply terminals are not to be short-circuited.

Always:

- Make sure battery compartments are secure.
- Use batteries of the correct size and type.
- Fit batteries correctly observing the plus and minus marks on the battery and compartment.
- Replace a whole set of batteries at one time.
- Remove dead batteries from equipment.
- Remove batteries from appliance that will not be used again for a long time.

- Please remember that small button cells and all batteries should be kept away from young children as they could be easily swallowed. Seek medical advice if you believe a cell has been swallowed.

Never:

- Mix different types of batteries.
- Mix old and new batteries.
- Dispose of batteries in a fire.
- Attempt to recharge ordinary batteries.

Consumers have a significant role to play in reducing the impact of waste electrical and electronic equipment on the environment, you can help by re-using or recycling such equipment.

The crossed out wheellie-bin symbol indicates that the product & batteries must not be disposed of in domestic waste as they contain substances which can be damaging to the environment and human health. If you cannot re-use or recycle the product or batteries, please use designated collection points, or civic recycling facilities to dispose of them.



DECLARATION OF CONFORMITY

Manufacturer's Name: Mech RC Limited
Room 805, B&H Plaza
1077 Nantai Ave, Shekou, Shenzhen, China.

Importer's Name: China Industries Ltd. T/A Wow! Stuff
Importer's Address: Creative Industries Centre, Wolverhampton Science Park,
Wolverhampton, WV10 9TG, UK
Type of Equipment: Remote-Controlled Toy
Model Number: WS1038
Year of Manufacture: 2010

Application of Council Directive(s): 1999/5/EEC The Radio Equipment and Telecommunications
Terminal Equipment Regulations 2000 (and its amending directives)

Standard(s) to which Conformity is Declared: EN50371, EN50088, EN301 489-1/-3, EN300 220-1/-3

I hereby declare that the equipment named above has been tested and found to comply with the relevant sections of the above referenced specifications. The unit complies with all essential requirements of the Directives.


Place: Wolverhampton, UK
Date: 9th July 2010

Graeme Taylor
Director

CE 0681

Attaching the Monkey

 Shoulder-Support

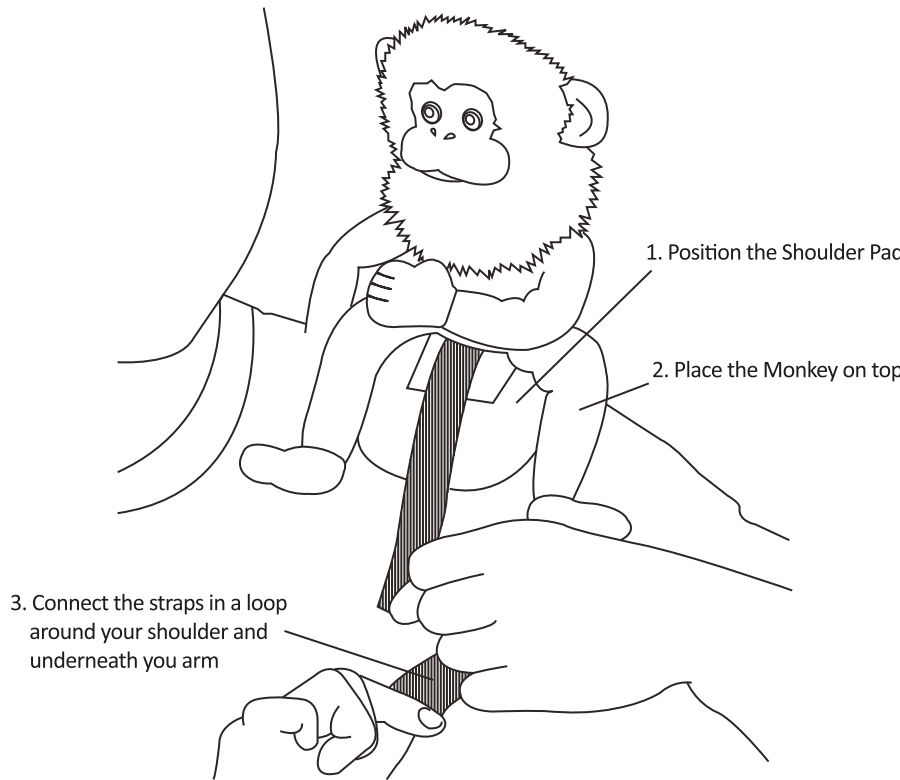



Dave loves nothing more than sitting on peoples shoulder's. But he wouldn't want to fall off... Thats why this pack also includes a "Monkey Shoulder-Support" to ensure that Dave travels in comfort and style.

Attaching the Shoulder-Support couldn't be easier. Simply place the cushioned pad on your shoulder and position Dave on top. The hook and loop tabs will ensure Dave doesn't slide around. Then, loop the straps around your shoulder and underneath your arm. Make sure the monkey is sitting comfortably and then attach the hook and loop tabs on the strap.

Battery Installation

The Remote Control

Remove the battery cover on the reverse of the handset using a philips-head screwdriver. Then install 2 x AAA (1.5V) batteries according to the polarity shown. (Figure 1)

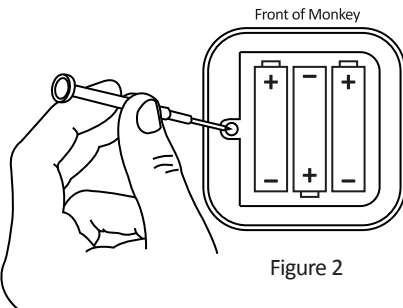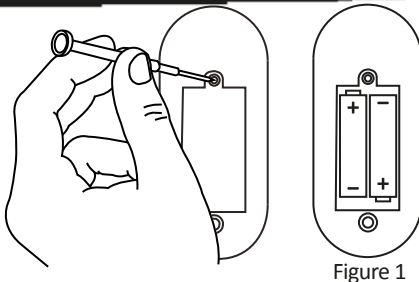

Dave the Monkey

Open the base of the monkey to expose the battery cover. Then, using a philips-head screwdriver, remove the cover and install 3 x 1.5V AAA batteries according to the polarity shown. (Figure 2)


Operating The Handset

Dave comes complete with a specially designed remote control, giving you complete control of his personality.

Using the remote couldn't be easier...

Press one of the four different mode buttons (Conversation Mode, Greeting Mode, Puppet Mode and Action Mode) to select the type of action you want Dave to perform. Within each of these different modes, there are a number of behaviours that can be activated. Use the keypad to select the action you want Dave to perform and then watch as he struts his stuff!

Dave offers over 30 different behaviours. By pressing the keypad multiple times, further actions can be activated. A full list of Dave's behaviours are listed on the following page...

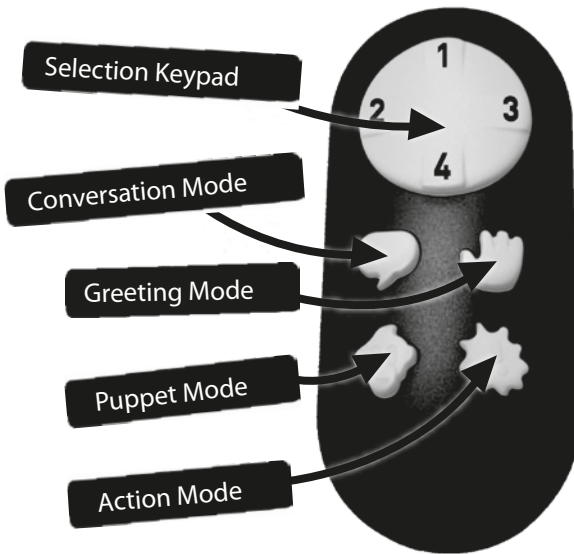

DAVE
The Robotic Shoulder Monkey



No.	Behaviour	Mode	Button	Sequence
1	Look Front Wave	Greeting	1	Press Once
2	Look Front Wave (harder)	Greeting	1	Press Twice
3	Act Shy	Greeting	2	Press Once
4	Still Shy	Greeting	2	Press Twice
5	Look Left Wave	Greeting	3	Press Once
6	Look Left Wave (harder)	Greeting	3	Press Twice
7	Look Right Wave	Greeting	4	Press Once
8	Look Right Wave (harder)	Greeting	4	Press Twice
9	Look Left	Puppet	1	Press Once
10	Double Take Left	Puppet	1	Press Twice
11	Look Right	Puppet	2	Press Once
12	Double Take Right	Puppet	2	Press Twice
13	Look Down	Puppet	3	Press Once
14	Sleeping	Puppet	3	Press Twice
15	Wake Up	Puppet	3	Press Three Times
16	Freak Out 1!	Puppet	4	Press Once
17	Freak Out 2!	Puppet	4	Press Twice
18	Nod Head	Conversation	1	Press Once
19	Conga Drums	Conversation	1	Press Twice
20	High Five 1!	Conversation	2	Press Once
21	High Five 2!	Conversation	2	Press Twice
22	Shake Head	Conversation	3	Press Once
23	Bored Yawn	Conversation	3	Press Twice
24	Handshake 1	Conversation	4	Press Once
25	Handshake 2	Conversation	4	Press Twice
26	Giggle!	Action	1	Press Once
27	Guffaw!	Action	1	Press Twice
28	Burp (Cover Mouth)	Action	2	Press once
29	Fart!	Action	2	Press Twice
30	Dance!	Action	3	Press Once
31	Blow Raspberry	Action	3	Press Twice
32	Scratch Left	Action	4	Press Once
33	Scratch Right	Action	4	Press Twice

Magic Buttons

Learning all of Dave's actions will take a little bit of time. That's why we included some "Magic Buttons" to get you started. Magic Buttons are basically shortcuts for some of Dave's behaviours. Press and hold down one of the mode buttons and Dave will spring into life and perform one of his signature moves. Each of the four mode buttons has its own behaviour meaning you'll never be short of things to do!

Note:

The Remote Control features an internal antenna. Avoid covering the top of the Remote as this may affect its performance.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE
CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH
MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.