


# DC POWER CEILING FAN REMOTE CONTROL MANUAL

## LEARNING PROCESS

**NOTE:** The Hand Held Remote Control is equipped with a learning ID function which has code combinations to prevent potential interference from other remote units.

Step: 1. Install the batteries AAA 1.5V\*2 PCS in transmitter. Within 30 seconds of turning the

Receiver AC power ON, press the transmitter  button

Step: 2. Hold  button about 5 seconds, once the receiver has detected the ID, the light of ceiling fan will be blinking twice. This will indicate the receiver has learned the ID that was previously selected on the transmitter.

 
Note: After the AC power is on, do not press any other buttons on the transmitter before learning ok. Because doing so will cause the procedure to fail.

After completing the steps above, you should be able to operate the ceiling fan and light. If the ceiling fan is not responding to the transmitter, please turn the power off to the receiver and repeat step 1 and 2.


Remove the batteries if not used for long periods of time to prevent damage to the hand held remote. The batteries must be removed from the transmitter before it is scrapped and the batteries shall be disposed of safety.

### Light function select switch:


 
Slide the D/O switch, located in the battery compartment, to match the bulb type in your fan. "D"(DIMMER) for incandescent bulbs and "O"(ON/OFF) indicates compact fluorescent bulbs (CFL). Use a small screwdriver or ballpoint pen to slide firmly left or right.

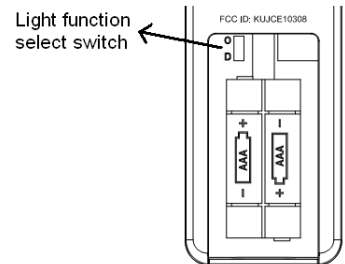

## FUCNTIONS OF TRANSMITTER

1.  : Turn on/off ceiling fan


2. FAN SPEED


Press  button to increase speed and LED bar will show at same time. All LED is brighten for the highest speed. Press  button to decrease speed.

3..FAN TIMER



Setting up that the ceiling fan and light will turn off after 2, 4 or 8 hours automatically.

 
4  .: For setting natural wind that the fan speeds turn and change at random. It's three modes for choose.

5.  : Press this button for forward/reverse airflow of ceiling fan.


6. LIGHT :



—Press this and release instantly to turn on or off the light.



 —Press and hold to dim or brighten lights to the desired level and release. (Tungsten bulb only and light O/D switch at D position).

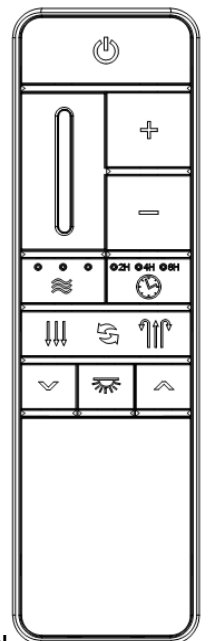

**To assure continued FCC compliance:**

**FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver.  
--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:**

**To assure continued FCC compliance:**

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

**FCC ID:** KUJCE10308

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.