

DC POWER CEILING FAN REMOTE CONTROL MANUAL

LEARNING PROCESS

NOTE: The Hand Held Remote Control is equipped with a learning ID function which has code combinations to prevent potential interference from other remote units.

Step: 1. Install the batteries AAA 1.5V*4 PCS in transmitter. Within 30 seconds of turning the Receiver AC power ON, touch the transmitter “ON OFF” icon.

Step: 2. Touch **ON OFF** about 5 seconds, once the receiver has detected the ID, the receiver will make sound, Bi Bi, twice. This will indicate the receiver has learned the ID that was previously selected on the transmitter.

 
Note: After the AC power is on, do not touch any other icons on the transmitter before touching **ON OFF** icon. Because doing so will cause the procedure to fail.

After completing the steps above, you should be able to operate the ceiling fan and light. If the ceiling fan is not responding to the transmitter, please turn the power off to the receiver and repeat step 1 and 2.

Remove the batteries if not used for long periods of time to prevent damage to the hand held remote.


Light function select switch:

Slide the D/O switch, located in the battery compartment, to match the bulb type in your fan. “D”(DIMMER) for incandescent bulbs and “O”(ON/OFF) indicates compact fluorescent bulbs (CFL). Use a small screwdriver or ballpoint pen to slide firmly left or right.

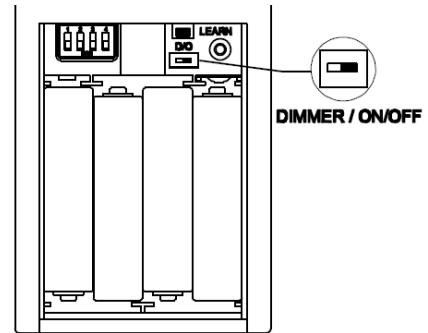

FUCNCTIONS OF TRANSMITTER

1. FAN **ON OFF** : Turn on/off ceiling fan


2. FAN 
1. Turn on ceiling fan at 1st speed (lowest speed).
 2. Turn on ceiling fan at 2nd speed.
 3. Turn on ceiling fan at 3rd speed.
 4. Turn on ceiling fan at 4th speed.
 5. Turn on ceiling fan at 5th speed.
 6. Turn on ceiling fan at 6th speed(high speed).

3..FAN TIMER



: Setting up that the ceiling fan will turn off after 1~9 hours automatically.

4. CW/CCW : Touch icon for forward/reverse airflow of ceiling fan.

5. : For setting natural wind that the fan speeds turn and change at random.

6. LIGHT :



 
ON/OFF—Touch this icon and release instantly to turn on or off the light.

DIMMER—Press and hold to dim or brighten lights to the desired level and release. (Tungsten bulb only and light O/D switch at D position).


7 **DELAY** : Setting the light to be turn off after 3 minutes.

8. While Battery power is low as  shown on LCD, please replace new batteries.

9. Remote holder could set onto the wall.

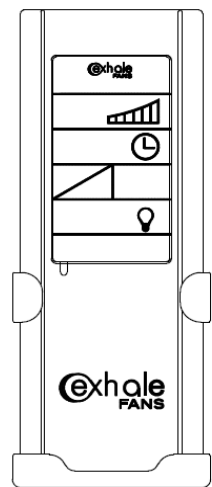

TR138A

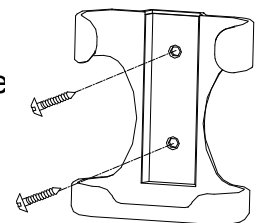 

CAUTION:

To assure continued FCC compliance:

FCC ID : KUJCE10310

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.