

# CEILING FAN REMOTE CONTROLLER OPERATION AND INSTALLATION INSTRUCTIONS

(Please keep this instruction pamphlet.)

## IMPORTANT

YOU MUST SET CEILING FAN MANUAL SWITCH TO HIGH SPEED AND LIGHT KIT (IF ANY) TO ON POSITION BEFORE OPERATING REMOTE CONTROL.

 
## IMPORTANT POINTS TO REMEMBER:

1. Read and save these instructions.
2. Please note that all fixed wiring appliances should be installed by a qualified electrician.
3. The supply to the remote control receiver should be connected through a mains switch, i.e. existing wall switch.
4. Disconnect from power supply at wall switch before working on remote control receiver or ceiling fan.
5. Install receiver into the ceiling fan canopy of the fan to ensure proper protection.
6. This unit is to be used for the control of ceiling fan and in a AC110/120V 60Hz power supply only.
7. Do not install in damp locations or immerse in water. (For indoor use only.)
8. Do not pull on or cut leads shorter.
9. Do not drop or bump the unit.
10. PLEASE NOTE: The battery will weaken with age and should be replaced before leaking takes place as this will damage the transmitter. Dispose of used battery properly, keep the battery out of reach of children.
11. CAUTION: To reduce the risk of fire or injury, do not use this product in conjunction with any variable (rheostat) wall control.

## INSTALLATION INSTRUCTIONS

CAUTION: INCORRECT WIRE CONNECTION WOULD DAMAGE THIS RECEIVER.

1. Ceiling fan must be set at HIGH speed and light kit (If any) at ON position by pressing the "Light Switch" after installation.
2. Once the connection has been made, the receiver inserts into the drop rod hanging bracket. The canopy comes up to cover the receiver and bracket.
3. For better remote performance with Wink system, let T-shape antenna stuck or screw on ceiling and outside of the steel canopy.

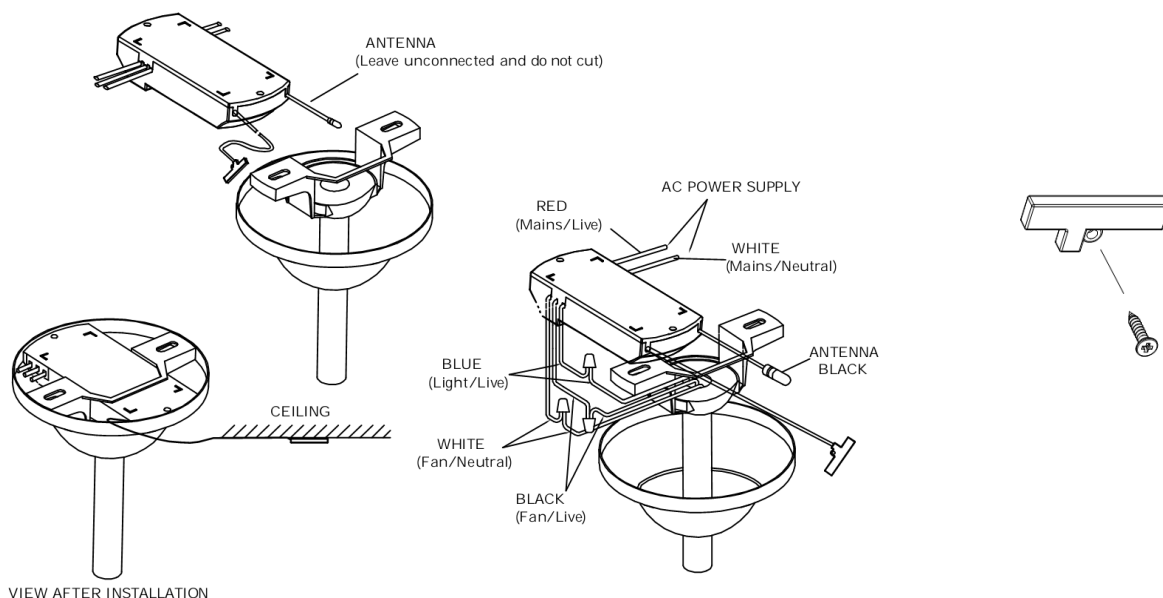


# CODE SWITCH

1.CODE SWITCH: Codes are set by pushing dip switches up or down. It is imperative that the code used for both transmitter and receiver is exactly the same, otherwise remote controller will not work. Please note the code switch will enable you to operate a second remote controller independently. For example, if you have two ceiling fans with 2 remote control units, set 2 different codes for each set of transmitter/receivers. This means you can operate each ceiling fan independently.

2.Your remote control is ready for use after 2pcs DC1.5V/AAA batteries installation.

# LIGHT FUNCTION SELECT SWITCH

 If installed energy light onto ceiling fan, please set the “light function select switch” “light function select switch” to on/off position,” O”. If installed tungsten light onto ceiling fan, please set the “light function select switch” to dimmer position,” D”.

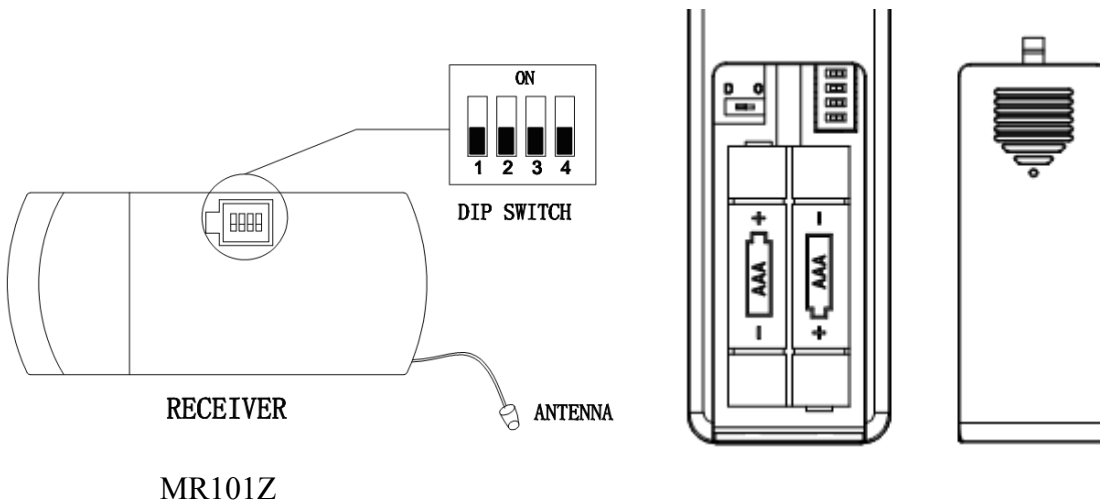


MR101Z

# TRANSMITTER
 
## FUNCTIONS OF TRANSMITTER

The power button will turn the fan and light power on or off when press this button within 3 seconds. When you hold the power button over 3 seconds, the “walk away time delay” function is activated. When press the button each time, the 4pcs LEDs will on. If you want to cancel “walk away time delay” function, you could press any button of transmitter. If dip switch to ON, then light kit will blink once, turn off in 30 seconds. If dip switch to DIM, then light kit will dim to 50%, turn off in 30 seconds.

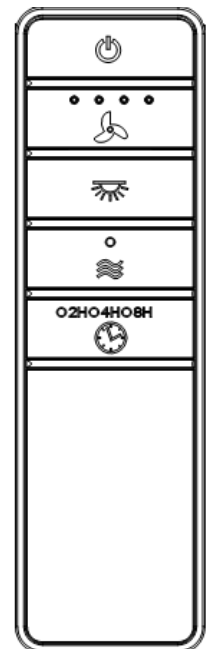

- 1<sup>st</sup> time press the button, four LEDs are on and turn fan on high speed
- 2nd time press the button, left three LEDs are on and turn fan on medium speed
- 3rd time press the button, left two LEDs is on and turn fan on low speed
- 4th time press the button, left one LED is on and turn fan on lower speed
- 5th time press the button, and turn fan off

Press the button, LEDs will on about 3 seconds, for set fan speed being turned and changed at random. If you want to cancel this function, press fan button or power button.

When fan is on, press this button for set fan turn off automatically after 2 hours, 4 hours, 8 hours or off directly. The LED for each timer is on about 3 seconds as pressing the button for selection. If you want to cancel this function, press fan button or power button or timer off.

ON/OFF- Press and release immediately to turn on or off the light

DIMMER- Press and hold on to dimmer or brighten the light. (For the tungsten bulb and “light function select switch” is at D position.)

## To assure continued FCC compliance:

### FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver. --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help.

#### **CAUTION:**

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

#### **FCC ID : KUJCE10406**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## IC

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

#### **French:**

Cet appareil radio est conforme au CNR-247 d'Industrie Canada. L'utilisation de ce dispositif est autorisée seulement aux deux conditions suivantes : (1) il ne doit pas produire de brouillage, et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.