

IMPORTANT
 YOU MUST SET CEILING FAN MANUAL SWITCH TO HIGH SPEED AND LIGHT KIT (IF ANY) TO ON POSITION BEFORE OPERATING REMOTE CONTROL.

**CEILING FAN REMOTE CONTROL
 OPERATION AND INSTALLATION INSTRUCTIONS**
 (Please keep this instruction pamphlet.)

IMPORTANT POINTS TO REMEMBER:

 
1. Read and save these instructions.
2. Please note that all fixed wiring appliances should be installed by a qualified electrician.
3. The supply to the remote control receiver must be connected through a main switch, i.e. existing wall switch.)
4. Disconnect from supply at wall switch before working on remote control receiver or ceiling fan.
5. Install receiver into the ceiling fan canopy of the fan to ensure proper protection.
6. This unit is to be used in a 100V/120V 60Hz supply only.
7. Do not install in lamp locations or immerse in water. (For indoor use only.)
8. Do not pull on or cut leads shorter.
9. Do not drop or bump the unit.
10. PLEASE NOTE: The battery will weaken with age and should be replaced before leaking takes place as this will damage the transmitter.

INSTALLATION INSTRUCTIONS

CAUTION: INCORRECT WIRE CONNECTIONS WILL DAMAGE THIS UNIT.


IMPORTANT:

1. Ensure that the fan speed switch is set at HIGH and light kit (if any) at ON position after installation.
2. To reverse the unit, switch over at fan.

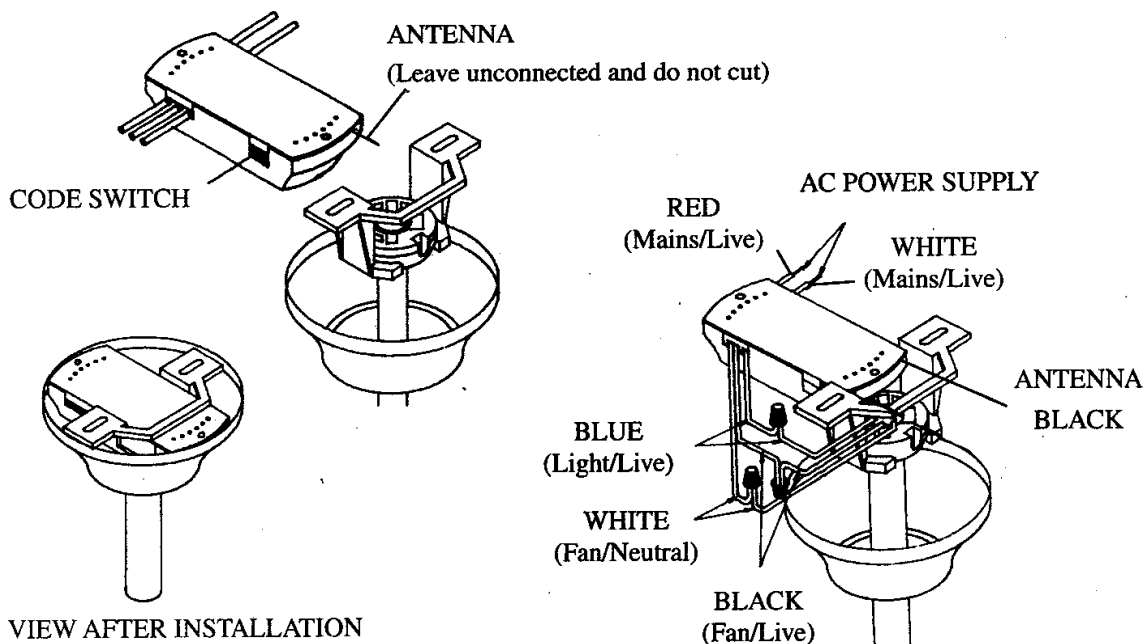


CODE SWITCH

 - 1.CODE SWITCH:** Codes are set by pushing dip switches up or down. It is imperative that the code used for both transmitter and receiver is exactly the same, otherwise remote controller will not work. Please note the code switch will enable you to operate a second remote controller independently. For example, if you have two ceiling fans with 2 remote control units, set 2 different codes for each set of transmitter/receivers. This means you can operate each ceiling fan independently.
- 2.** Your remote control is ready for use after battery installation.

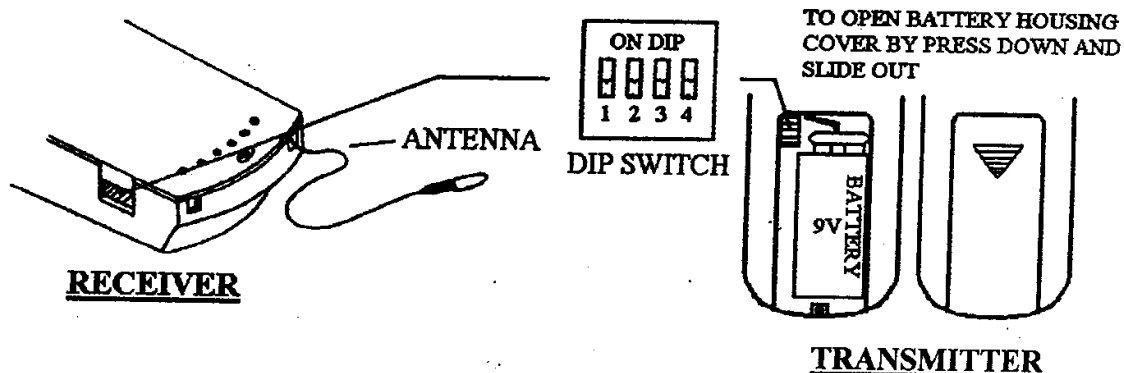


FUNCTIONS OF TRANSMITTER

 
- OFF : Turn off the ceiling fan.
- HI : High fan speed
- MED : Medium fan speed
- LOW : Low fan speed
- LIGHT ON: Press and release immediately to turn on the light
- LIGHT OFF: Press and release immediately to turn off the light

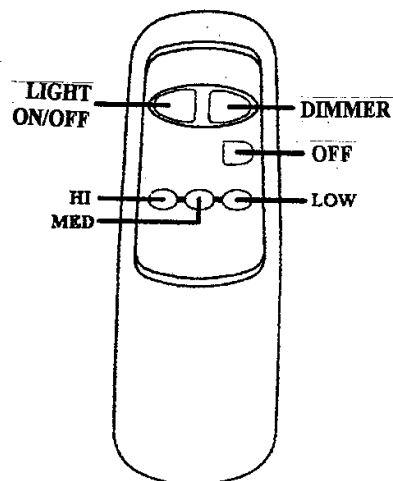

 Ceiling Fan Remote Control Wiring Connection

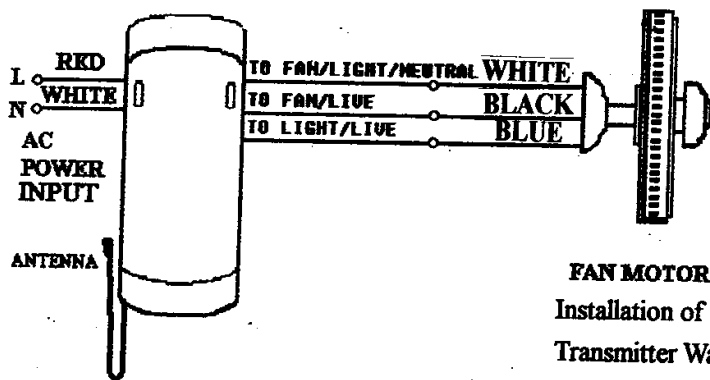

 FAN MOTOR
Installation of Transmitter Wall Mount Holder with two screws.

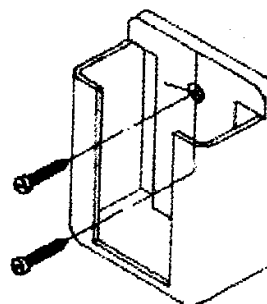

**FEDERAL COMMUNICATIONS COMMISSION
INTERFERENCE STATEMENT**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:**To assure continued FCC compliance:**

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

FCC Label Compliance Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.