

Levana®

Lila™

Digital Baby Video Monitor
Moniteur vidéo bébé numérique
Video Monitor Digital para Bebé



Manual / Manuel / Manual



CAUTION: Keep small parts away from children.

ATTENTION: Gardez les petites pièces hors de la portée des enfants.

PRECAUCIÓN: Mantenga las piezas pequeñas fuera del alcance de los niños.

mylevana.com

SAFETY INSTRUCTIONS



CAUTION: Keep small parts away from children.

Strangulation Hazard: Children can become entangled in cords. Power cords should be kept more than 3 feet away from the crib and baby's reach at all times. Baby monitors and cameras with power cords should never be hung on or near the crib.



This product is not a toy and should be kept out of children's reach.



This product contains small parts. Exercise care when unpacking and assembling the product.



Read and Keep Instructions: All the safety and operating instructions should be read before the video baby monitor is operated.



This product cannot replace responsible adult supervision.

Water and Moisture: This product is designed for indoor use only. The unit should not be exposed to rain, moisture, dripping or splashing. No objects filled with liquid should be placed on top of, or beside the product, such as a glass or vase. This item should not be used near water.

Non-Use Periods: Always unplug the AC adapters from the wall outlets during long periods of non-use.

Ventilation: This baby monitor should not be used on a bed, sofa, rug or similar surface that may block the ventilation openings, or be placed in an enclosed area, such as a bookcase or drawer that may impede air flow.

Keep Away from Sources of Heat: This unit should not be exposed to direct heat sources such as a candle, fireplace, radiator, heat register, stove or other appliance that emits heat. The unit should not be left in direct sunlight.

Power Source: This unit should only be used with the AC power adapters included in this package (rated 6V 800mA)

Damage Requiring Service: This unit should be serviced by qualified personnel only when:

- a. Objects have fallen or liquid has been spilled into the product
- b. The units have been exposed to rain
- c. The units do not appear to operate normally or exhibits a distinct change in performance
- d. The units have been dropped or the enclosure damaged



FCC STATEMENT

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the users' authority to operate the equipment

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC /IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

IC STATEMENT:

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. The manufacturer is not responsible for any radio or TV interference caused by Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.



Please visit our website at www.mylevana.com for information about your product's warranty.

We take quality very seriously. That is why all of our products come with a one-year warranty from the original purchase date against defects in workmanship and materials. If you have warranty or support issues, please contact us using any of the following methods:

Web: www.mylevana.com

Support: www.mylevana.com/support

LEVANA Canada

4080 Montrose Road
Niagara Falls, ON
Canada L2H 1J9

LEVANA USA

60 Industrial Parkway #Z64
Cheektowaga NY
USA 14227

Warranty Terms

1. LEVANA® products are guaranteed for a period of one year from the date of purchase against defects in workmanship and materials. This warranty is limited to the repair, replacement or refund of the purchase price at LEVANA's option.
2. This warranty becomes void if the product shows evidence of having been misused, mishandled or tampered with contrary to the applicable instruction manual.
3. Routine cleaning, normal cosmetic and mechanical wear and tear are not covered under the terms of this warranty.
4. The warranty expressly provided for herein is the sole warranty provided in connection with the product itself and no other warranty, expressed or implied is provided. LEVANA assumes no responsibilities for any other claims not specifically mentioned in this warranty.
5. This warranty does not cover the shipping cost, insurance or any other incidental charges.
6. You **MUST** contact LEVANA at www.mylevana.com/support before sending any product back for repair. You will be sent a Return Authorization form with return instructions. When returning the product for warranty service, please pack it carefully in the original box with all supplied accessories, and enclose your original receipt or copy, and a brief explanation of the problem (include RA #).
7. This warranty is valid only in Canada and the continental U.S.
8. This warranty cannot be re-issued.

mylevana.com

4



TABLE OF CONTENTS

SAFETY INSTRUCTIONS	2
FCC STATEMENT.....	3
WARRANTY	4
WHAT'S INCLUDED	6
BUTTONS AND CONNECTIONS - MONITOR.....	7
BUTTONS AND CONNECTIONS - CAMERA.....	8
SETUP.....	9
Battery installation.....	9
Get the Most Out of Your Rechargeable Battery.....	9
Connecting Power to the Monitor / Charging Battery.....	10
Connecting Power to the Camera	10
Screen Icons	11
OPERATION	12
Turn on the Monitor	12
Pairing the Cameras & Monitor	12
Placement of the Monitor	13
Placement of the Camera	13
Mounting the Camera on a Tabletop Safely	13
Mounting the Camera on a Wall Safely	14
Night Vision.....	15
Adjusting the Camera Angle	15
MONITOR.....	16
Volume.....	16
Using the Talk to Baby™ Two-Way Intercom.....	16
Using Power Save	17
Selecting a different camera view	17
Setting the Brightness.....	18
Contacting Customer Support.....	18
TROUBLESHOOTING.....	19
MAINTENANCE	19

WHAT'S INCLUDED

- Night Vision Camera
- Baby Video Monitor
- Rechargeable Battery
- 2 Power Adapters
- Instruction Manual
- 1 Year Warranty
- Lifetime Live Customer Support



This product is not a toy.

This product contains small parts. Exercise care when unpacking and assembling the product.

This product does not replace responsible adult supervision. Check on your child at regular intervals and make sure your monitor is always adequately charged.

LEVANA® does not endorse any LEVANA® products for illegal activities. Levana is not responsible or liable in any way for any damage, vandalism, theft or any other action that may occur while a LEVANA® product is in use by the purchaser.

 
We reserve the right to change models, configuration, or specifications without notice or liability. Product may not be exactly as shown.

©2012 LEVANA®. All rights reserved. LEVANA®, the LEVANA® logo, Lila™ and other LEVANA® marks may be registered. All other Trademarks are the property of their respective owners.



MONITOR


- 1. LED SOUND BAR**
LED lights show different levels of sound
- 2. LCD SCREEN**
- 3. POWER / VIDEO ON-OFF BUTTON**
- 4. VOLUME DOWN / MOVE LEFT BUTTON**
- 5. TALK TO BABY™ BUTTON**
Press and hold to talk, release to listen
- 6. MENU / SELECT BUTTON**
- 7. MICROPHONE**
- 8. VOLUME UP / MOVE RIGHT BUTTON**
- 9. ANTENNA**
Extend to improve signal
- 10. SPEAKER**
- 11. REMOVEABLE STAND CLIP**
- 12. TABLE STAND**
- 13. BATTERY COMPARTMENT**

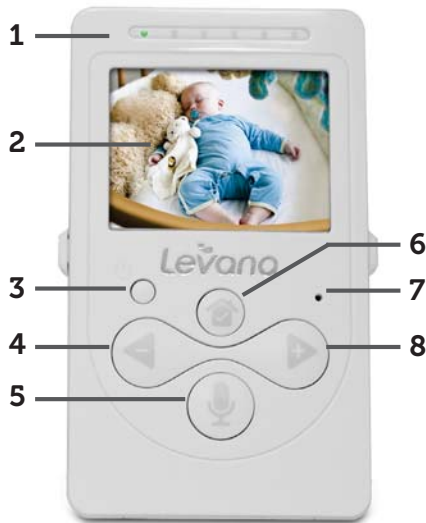



CAMERA

 1. MICROPHONE
2. POWER ON/OFF BUTTON
3. PAIRING BUTTON
4. INVISIBLE NIGHT VISION LEDs
5. CAMERA
6. LIGHT SENSOR
7. POWER LED
8. SPEAKER
9. POWER INPUT

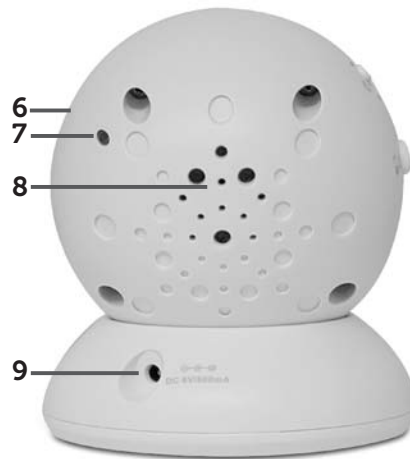



SETUP


LET'S GET STARTED!

Battery Installation

1. Gently remove the STAND CLIP on the back of the monitor to allow access to the BATTERY COMPARTMENT COVER.
2. Slide the BATTERY COMPARTMENT COVER down to remove.
3. Insert the battery with the words "Rechargeable Battery" facing towards you. The battery connectors should line up with the connectors inside the battery compartment.
4. Slide the BATTERY COMPARTMENT COVER back into place and reinstall the STAND CLIP.



Get the Most Out of Your Rechargeable Battery

- Fully charge battery (4 hours) before first use.
- To maximize battery life, charge battery before battery is fully drained.
- Avoid extreme heat or cold as this will affect the life of the battery.
- Turn LCD screen OFF; press POWER  button on the front of the monitor ONCE.
- Lila™ menu settings that increase battery life:



Power Save Mode: After 1 minute of inactivity, monitor enters standby/sleep mode.




Adjustable Brightness: Decreasing screen brightness will extend battery life.

 
6. For extended periods of non-use, please remove battery from baby monitor.





SETUP


Connecting Power to the Monitor / Charging Battery

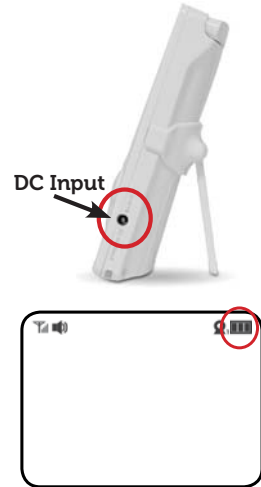1. Connect the small end of power adapter marked **MONITOR**  into the DC input on the side of the monitor as shown in the diagram.
2. Connect the other end of the adapter into an available wall outlet. For safety reasons, **ONLY** use the adapters included in the package.
3. Press the **POWER / VIDEO ON-OFF BUTTON**
4. The icon in the top right corner of the main screen will show you the **battery power status**.



Connecting Power to the Camera

 1. Connect the small end of the power adapter marked **CAMERA**  into the DC input on the back of the camera base as shown in the diagram. For safety reasons, **ONLY** use the adapters included in the package.
2. On the side of the camera, slide the **POWER** switch  **UP** to the **ON** position. The **POWER LED** will light up.

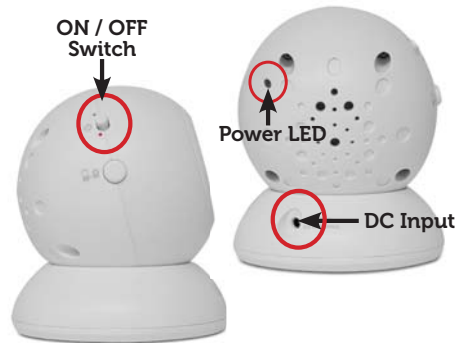


Note: Baby monitors and cameras with power cords should never be hung on or near the crib as it is a strangulation hazard. Power cords should be kept no less than 3 feet away from the crib and the baby's reach at all times.




SCREEN ICONS

 
SIGNAL STRENGTH



BRIGHTNESS

 


BATTERY STRENGTH

 

POWER SAVE



 
CAMERA



TALK TO BABY™



 PAIRING



SUPPORT



VOLUME




EXIT



OPERATION











 

 



Turn on the MONITOR

Press and hold the POWER  button on the front of the monitor.

Pairing the Camera(s) and Monitor

The camera and monitor come paired (connected) to each other automatically. However, if upon opening this package the devices do not automatically connect and transmit, you may do so manually.

Note: Before you begin pairing, be sure to have the monitor and the camera(s) side by side.

1. To pair your camera and monitor, press the MENU  button. Using the navigational arrows   on the front of the monitor, highlight the PAIRING icon and press the MENU  button once to select.
2. Use the navigational arrows   to select the  icon.
3. Press MENU . When you see  flashing next to camera , quickly press and hold the PAIRING  button on the side of the camera. A checkmark  will appear next to camera , confirming pairing is successful. Video/audio will be transmitted automatically.
4. To pair additional cameras, repeat steps 1 to 3 and be sure to select camera number ,  or  in the Pairing menu when pairing each additional camera.



**ICONS ARE ORANGE
WHEN SELECTED**



OPERATION

Placement of the Monitor

This monitor can be placed on a tabletop.

- You can place the monitor on a tabletop by using the retractable table stand on the back of the monitor. When not in use, simply tuck the table stand away into the back of the monitor until you hear a "click".



 
Placement of the Camera

This camera can be placed on a tabletop or hung on the wall above the area being monitored.

- Place the camera within 15 feet of the area being monitored for best picture results.
- Do not place objects within 2 feet of the field of vision of the camera as the night vision will not activate correctly if objects are too close.

Mounting the Camera on a Tabletop Safely:

- Place the camera on a tabletop no less than 3 feet away from your baby's crib.
- Feed the power cord down the back of the table or use wall clips (not included) to secure the cord away so the baby cannot reach it.
- Plug in the power cord, check the monitor to ensure that you are getting a good view of your child and there are no obstructions.

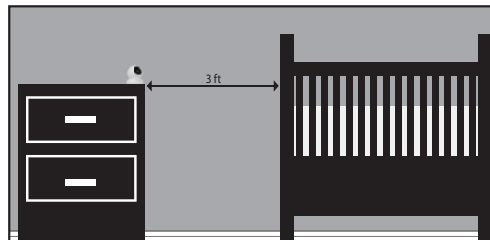

Note: Baby monitors and cameras with power cords should never be hung on or near the crib as it is a strangulation hazard. Power cords should be kept no less than 3 feet away from the crib and the baby's reach at all times.



 
OPERATION

Mounting the Camera on a Wall Safely:

Before drilling the holes, it is important to check the reception and camera positioning in the intended location on the wall. Ensure you are hanging the camera no less than 3 feet away from baby's crib.

Note: Baby monitors and cameras with power cords should never be hung on or near the crib as it is a strangulation hazard. Power cords should be kept no less than 3 feet away from the crib and the baby's reach at all times.

1. Pre-drill two holes in the wall using a 3/16", 4.8mm drill bit.
2. Insert wall anchors (not included) into each hole and tap gently with a hammer until the anchor is flush with the wall.
3. Insert a screw (not included) into each wall anchor and tighten until the screws only stick out about a 1/2 inch.
4. Plug the power cord into the power input of the camera.
5. Locate the wall mounting holes on the bottom of the camera base.
6. Slide the holes over the screws sticking out of the wall.
7. Confirm that the camera is secure, if it is loose you may have to tighten the screws more.
8. Use wall clips (not included) to secure the power cord away from the crib or the baby's reach.
9. Connect the other end of the adapter into an available wall outlet.

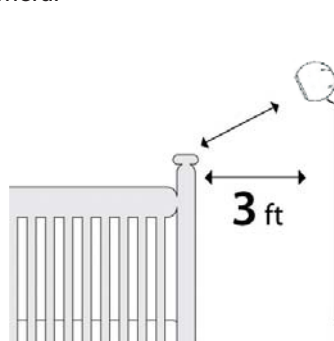



OPERATION

 
Night Vision

The camera is equipped with **NEW Invisible IR (infrared)** LEDs which keep the nursery dark. The LEDs are located on the front of the camera and allow you to see up to 12 feet in complete darkness so you can check on your baby at any time of night. The night vision LEDs will activate automatically when the **Light Sensor** on the camera detects that the light levels are too low.



Adjusting the Camera Angle

The camera has a track built into the base. The track allows the camera to pivot UP and DOWN and turn side to side. **Always** return the camera to the **CENTER POSITION** before changing the camera angle.

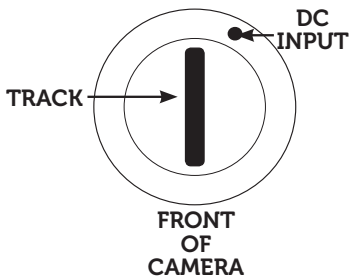






Note: Camera does not rotate freely 360°. Rotating it past the point where resistance is felt will result in permanent damage to the device.

 


MONITOR

Volume



Use the navigational arrows   to increase /decrease /mute the VOLUME.

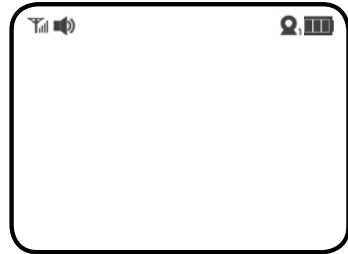
- Press the  button to INCREASE the volume in LIVE VIEW; the VOLUME icon will display the volume level in the top left corner of the screen.
- Press the  button to DECREASE the volume; to MUTE, decrease the volume until the  icon appears in the top left corner of the screen.



Using the Talk to Baby™ Two-Way Intercom

With the simple press of a button you can talk to your child at any time without entering the nursery.

 1. To talk, press and hold the  button on the front of the monitor and release to listen.
2. To talk when using multiple cameras, select the camera in the MENU and press the  button, release to listen.

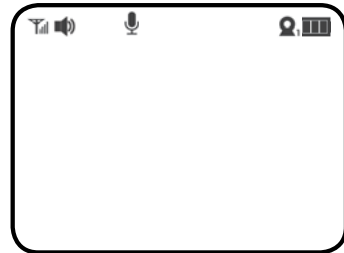















MONITOR

Using Power Save



 
 





When in **Power Save Mode**, the monitor enters standby/sleep mode after 1 minute of inactivity. When sound is detected, the screen changes to live view.


- To access live view manually when the screen is off, press the POWER  button ONCE.
- **Power Save Mode** extends the battery life over 48 hours.

1. To set **Power Save Mode**, press the MENU  button. Using the navigational arrows   on the front of the monitor, highlight the POWER SAVE icon and press the MENU  button once to select.
2. Use the navigational arrows   to select the POWER SAVE ON  icon and press the MENU  button once to select.
3. To return to continuous live view, use the navigational arrows   to select the POWER SAVE OFF  icon.



Selecting a Different Camera View



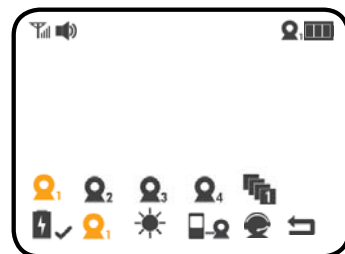 




1. To change the camera view, press the MENU  button. Using the navigational arrows   on the front of the monitor, highlight the CAMERA icon and press the MENU  button once to select.
2. Use the navigational arrows   to select the CAMERA icon of your choice and press the MENU  button once to select.
3. Select  to cycle through cameras 1 through 4 and press the MENU  button once.

 


MONITOR

Setting the Brightness



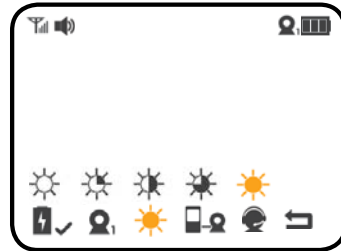



Brightness Mode sets the brightness of the screen. **Reducing** the brightness also extends the battery life.


1. To set the **Brightness Mode**, press the MENU  button. Using the navigational arrows   on the front of the monitor, highlight the BRIGHTNESS icon and press the MENU  button once to select.
2. Use the navigational arrows   to select the desired brightness and press the MENU  button once to select.



Contacting Customer Support

 Customer Support is just a click away whenever you need it! Our customer support team can be reached by email, live web chat or on our website at www.mylevana.com/support. Our experts will be happy to assist you in English, French and Spanish.

 1. To access **Customer Support**, press the MENU  button. Using the navigational arrows   on the front of the monitor, highlight the SUPPORT  icon and press the MENU  button once to select.
2. This will take you to the screen which displays Customer Support contact information. Press the MENU  button once to EXIT the **Customer Support** screen.

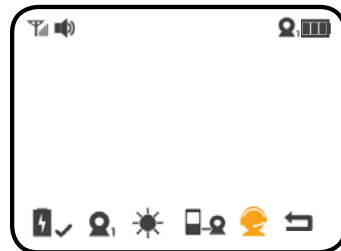

Support: www.mylevana.com/support
Web: www.mylevana.com
Online Live Web Chat: www.mylevana.com



TROUBLESHOOTING

ISSUE	POSSIBLE SOLUTION
Equipment does not function	<ul style="list-style-type: none"> • Confirm that the camera and monitor are ON • The battery may be depleted; charge battery • The power adapters may not be properly connected
No reception	<ul style="list-style-type: none"> • Camera and monitor may not be properly paired; follow PAIRING instructions • Camera may be too far away from the monitor • Extend the antenna on the monitor
Reception Interference (static)	<ul style="list-style-type: none"> • The camera and monitor may be too far apart • The battery power may be too low • Other electronic devices may be interfering with the signal • The camera or monitor may be placed too close to many metal objects
Feedback (screeching, static)	<ul style="list-style-type: none"> • The camera and monitor may be too close together • The volume on the monitor may be set too high
Noise (static, beeping)	<ul style="list-style-type: none"> • Battery power may be too low
Picture works but there is no sound	<ul style="list-style-type: none"> • Volume setting may be too low
Picture is black and white	<ul style="list-style-type: none"> • Night vision LEDs may be ON; increase the amount of light in the room being monitored
The rechargeable battery will not charge	<ul style="list-style-type: none"> • The power adapters may not be connected • Battery pack may not be properly connected inside the battery compartment

Maintenance

- Clean the surfaces of the camera and monitor with a soft, lint-free cloth
- If the units become dirty, use a lightly damp cloth to wipe surfaces, taking care to not allow water into any openings
- Never use cleaning agents or solvents





Levana[®]

Do **More** Knowing
Your Child Is **Safe**[™]

mylevana.com

