

- unicast mode **4-57**
- unique device identifier (UDI)
- described **8-120**
 - retrieving
 - using the CLI **8-121**
 - using the GUI **8-120 to 8-121**
- Upload button **6-120, 8-62, 10-26, D-17, D-23**
- Upload CSV File parameter **15-23**
- Upload File from Controller page **8-61, 10-25, 10-28, D-16, D-22**
- URL parameter **11-19**
- URL to Send the Notifications parameter **4-27**
- USB console port, using on a 5500 series controller **3-34 to 3-35**
- Use AES Key Wrap parameter **6-7**
- User Access Mode parameter **11-3**
- user accounts, managing **11-1 to 11-24**
- User Attribute parameter **6-38**
- User Base DN parameter **6-38**
- User Credentials parameter **6-38**
- User Name parameter **6-33, 15-12**
- Username parameter **8-34, 8-38, 8-39**
- User Object Type parameter **6-38**
- User parameter **10-26**
- User Profile Name parameter **4-46**
- Using CLI to monitor the Air quality **12-19**
- Using CLI to predownload **10-13**
- Using GUI to monitor air quality **12-18**
- Using GUI to predownload **10-12**
- Using Our SSID parameter **6-94**
- using the GUI **6-66, 6-67**
-
- V**
- Validate Rogue Clients Against AAA parameter **6-93**
- Valid Client on Rogue AP parameter **6-94**
- Validity parameter **10-26**
- VCCI warnings for controllers **B-2**
- VCI strings **8-52**
- Verify Certificate CN Identity parameter **6-47**
- video information, viewing for mesh networks using the CLI **9-101 to 9-103**
- video settings
- configuring
 - using the CLI **4-88**
 - using the GUI **4-79 to 4-80**
 - viewing
 - using the CLI **4-89 to 4-91**
 - using the GUI **4-80 to 4-85**
- virtual interface
- configuring
 - using the CLI **3-16**
 - using the GUI **3-11 to 3-14**
 - described **3-8 to 3-9**
- VLAN Identifier parameter
- for AP-manager interface **3-13**
 - for dynamic interface **3-18, 3-20**
- VLAN ID parameter **7-70, 15-16**
- VLAN interface. *See* dynamic interface
- VLAN Mappings
- button **15-15**
 - page **15-15**
- VLAN Pooling **3-49**
- VLANs
- described **3-9**
 - guidelines **3-11**
- VLAN Select **3-49**
- VLAN Support parameter **15-15**
- VLAN tag, and identity networking **6-84**
- Voice & Video Optimized parameter **4-95**
- voice information, viewing for mesh networks using the CLI **9-101 to 9-103**
- Voice Optimized parameter **4-95**
- voice-over-IP (VoIP) telephone roaming **4-63**
- Voice RSSI parameter **13-21**
- voice settings
- configuring
 - using the CLI **4-87 to 4-88**

- using the GUI [4-77 to 4-79](#)
 - viewing
 - using the CLI [4-89 to 4-91](#)
 - using the GUI [4-80 to 4-85](#)
 - VoIP calls, error codes [7-45 to 7-47](#)
 - VoIP snooping
 - configuring
 - using the CLI [7-44 to 7-47](#)
 - using the GUI [7-43 to 7-44](#)
 - described [7-42](#)
 - VoIP Snooping and Reporting parameter [7-43](#)
 - VPN Gateway Address parameter [7-33](#)
 - VPN passthrough
 - configuring using the CLI [7-33](#)
 - configuring using the GUI [7-33, ?? to 7-37](#)
 - described [7-32](#)
-
- W**
 - warnings
 - translated [A-1 to A-26](#)
 - warranty [C-4 to C-6](#)
 - webauth.tar files [11-24](#)
 - webauth bundle [11-20](#)
 - web authentication
 - certificate
 - obtaining using the CLI [11-8 to 11-9](#)
 - obtaining using the GUI [11-6 to 11-8](#)
 - configuring a WLAN for
 - using the CLI [7-34](#)
 - using the GUI [7-33](#)
 - described [11-9](#)
 - process [11-9 to 11-11](#)
 - successful login page [11-11](#)
 - Web Authentication Certificate page [11-7](#)
 - web authentication login page
 - assigning per WLAN
 - using the CLI [11-25](#)
 - using the GUI [11-24](#)
 - choosing the default
 - using the CLI [11-13 to 11-15](#)
 - using the GUI [11-12 to 11-13](#)
 - customized example [11-23](#)
 - customizing from an external web server
 - using the CLI [11-20](#)
 - using the GUI [11-19](#)
 - default [11-10](#)
 - downloading a customized login page
 - guidelines [11-20](#)
 - using the CLI [11-22](#)
 - using the GUI [11-21 to 11-22](#)
 - modified default example [11-15](#)
 - previewing [11-13, 11-22](#)
 - verifying settings using the CLI [11-23](#)
 - Web Authentication option [11-30](#)
 - Web Authentication Type parameter [11-12, 11-19, 11-22](#)
 - Web Auth Type parameter [11-24, 11-31](#)
 - web-browser security alert [11-9](#)
 - Web Login page [11-12, 11-19](#)
 - web mode
 - configuring
 - using the CLI [2-19](#)
 - using the GUI [2-18](#)
 - described [2-18](#)
 - Web Passthrough option [11-30](#)
 - Web Policy parameter [6-69, 7-34, 7-65](#)
 - web redirect [7-62](#)
 - Web Server IP Address parameter [11-19](#)
 - Web Session Timeout parameter [2-19](#)
 - WEP keys, configuring [7-24](#)
 - WGB parameter [8-91](#)
 - WGB Wired Clients page [8-92](#)
 - wired guest access
 - configuration overview [11-28](#)
 - configuring
 - using the CLI [11-32 to 11-36](#)
 - using the GUI [11-29 to 11-31](#)
 - described [11-26 to 11-28](#)

- guidelines **11-28**
- one-controller example **11-27**
- two-controller example **11-28**
- wireless intrusion prevention system (wIPS)
 - configuring on an access point **6-129 to 6-130**
 - described **6-128**
 - viewing information **6-130 to 6-131**
- wireless sniffing
 - configuring
 - using the GUI **D-45 to D-47**
 - prerequisites **D-45**
 - supported software **D-44**
- WLAN ID parameter **7-5, 7-83**
- WLAN mobility security values **14-26**
- WLAN override **10-1**
- WLAN Profile parameter **6-34, 15-12**
- WLANS
 - assigning web login, login failure, and logout pages
 - using the CLI **11-25**
 - using the GUI **11-24**
 - checking security settings **7-24**
 - configuring
 - conditional web redirect **7-63 to 7-66**
 - static and dynamic WEP **7-25**
 - connecting clients to **15-18**
 - creating
 - using the CLI **7-6**
 - using the GUI **7-4 to 7-6, ?? to 7-83**
 - deleting
 - using the CLI **7-7**
 - using the GUI **7-4**
 - described **1-14, 7-2 to 7-3**
 - enabling or disabling
 - using the CLI **7-7**
 - using the GUI **7-6**
 - searching **7-7**
 - session timeout
 - configuring **7-31**
 - described **7-31**
 - splash page web redirect **7-63**
 - wired security solution **1-5**
 - WLANS > Edit (Advanced) page **7-43, 7-48, 7-67**
 - applying an ACL to a WLAN **6-69**
 - configuring AAA override **6-88**
 - configuring infrastructure MFP for a WLAN **6-76**
 - configuring IPv6 bridging **7-52**
 - configuring NAC out-of-band integration **7-72**
 - configuring the diagnostic channel **D-27**
 - WLANS > Edit (QoS) page **7-41**
 - WLANS > Edit (Security > AAA Servers) page
 - assigning LDAP servers to a WLAN **6-39**
 - choosing RADIUS or LDAP servers for external authentication **11-24**
 - disabling accounting servers on a WLAN **7-66**
 - enabling local EAP on a WLAN **6-49**
 - WLANS > Edit (Security > Layer 2) page **7-27, 7-30**
 - WLANS > Edit (Security > Layer 3) page
 - applying a preauthentication ACL to a WLAN **6-69**
 - configuring a WLAN for VPN Passthrough **7-36**
 - configuring web redirect **7-65**
 - configuring wired guest access **11-30**
 - WLANS > Edit page **7-5, 7-83, 11-29, 15-9**
 - WLANS > New page **7-5, 11-29, 15-9**
 - WLANS page **7-4, 7-9, 7-83, 14-22**
 - WLAN SSID parameter
 - configuring for guest user **11-4**
 - creating a centrally switched WLAN **15-9**
 - creating WLANs **7-5**
 - mapping an access point group to a WLAN **7-59, 7-73**
 - WMM
 - configuring **4-35, 7-41**
 - described **7-39**
 - with CAC **4-75**
 - WMM parameter **4-95, 4-96**
 - WMM Policy parameter **7-41**
 - workgroup bridges (WGBs)
 - debugging **8-94**
 - described **8-88**

guidelines **8-88**
illustrated **8-69, 8-81, 8-85, 8-86, 8-88**
sample configuration **8-90**
viewing status
 using the CLI **8-93**
 using the GUI **8-91 to 8-93**
world mode **4-31, 4-32**
WPA1+WPA2
 configuring
 using the CLI **7-27**
 using the GUI **7-26 to 7-27**
 described **7-25**
WPA2 Policy parameter **7-27**
WPA Policy parameter **7-27**
wplus license. *See* licenses