




12-468

## AM/FM/TV/WX pocket radio

Thank you for purchasing your AM/FM/TV/WX Pocket Radio from RadioShack.

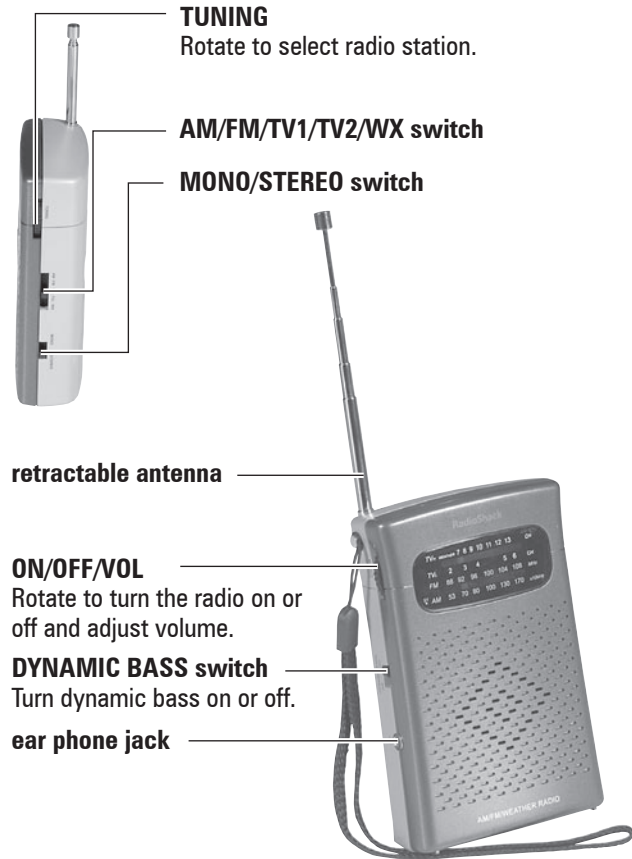

**TUNING**

Rotate to select radio station.

**AM/FM/TV1/TV2/WX switch**

**MONO/STEREO switch**

**retractable antenna**

**ON/OFF/VOL**

Rotate to turn the radio on or off and adjust volume.

**DYNAMIC BASS switch**

Turn dynamic bass on or off.

**ear phone jack**

### what's included

**Pocket Radio**

**User's Guide**

### installing batteries

Your RadioShack AM/FM Pocket Radio requires three AA batteries (not supplied, available at RadioShack or online at [www.radioshack.com](http://www.radioshack.com)) for power.

1. Remove the battery compartment cover. Replace when finished.
2. Place batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.



**battery notes**

- Dispose of old batteries promptly and properly. Do not burn or bury them.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries or batteries of different types, capacities, or chemistries.
- If you do not plan to use your radio for a month or longer, remove the batteries. Batteries can leak chemicals that may destroy electronic parts.
- Keep batteries out of reach of children. They can be fatal if swallowed.

### using your pocket radio

NOTE: **ST LED** lights up when an earphone is inserted into the earphone jack and the **MONO/STEREO** switch is set to **STEREO**.

**listening safely**

To protect your hearing, follow these guidelines when you use ear phones or head phones.

- Set the volume to the lowest setting before you begin listening with your ear phones. After you begin listening, set the volume to a comfortable level.
- Do not listen at extremely high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- Once you set the volume do not increase it. Over time, your ears adapt to the volume level, so a volume level that does not cause discomfort might still damage your hearing.

**traffic safety**

Do not wear ear phones or head phones while operating a motor vehicle or riding a bicycle. This can create a traffic hazard and could be illegal in some areas.

Even though some earphones or headphones let you hear some outside sounds when listening at normal volume levels, they can still present a traffic hazard.

NOTE: Actual product may vary from images found here.

### caring for your pocket radio

- Keep your radio dry. If it gets wet, wipe it dry immediately.
- Use and store your radio only in room temperature environments.
- Handle the radio carefully. Do not drop it.
- Keep your radio away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.
- Modifying or tampering with your radio's internal components can cause a malfunction and might void your FCC authorization to operate it.

### limited go-day warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. For complete warranty details and exclusions, check with your local RadioShack store.

RadioShack Customer Relations  
300 RadioShack Circle, Fort Worth, TX 76102

04/04

### the FCC wants you to know

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult your local RadioShack store or an experienced radio/TV technician for help. If you cannot eliminate the interference, the FCC requires that you stop using your radio. Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.