

clarion®

Owner's manual & Installation manual
Mode d'emploi et manuel d'installation
Manual de instrucciones y de instalación

CX305

Bluetooth® CD/USB/MP3/WMA RECEIVER
LECTEUR Bluetooth® CD/USB/MP3/WMA
RECEPTOR Bluetooth® CD/USB/MP3/WMA

CLARION PRODUCT REGISTRATION INFORMATION

For USA and Canada only

www.clarion.com

Dear Customer,

Congratulations on your purchase of a Clarion mobile electronic product. We are confident that you'll enjoy your Clarion experience.

There are many benefits to registering your product. We invite you to visit our website at www.clarion.com to register your Clarion product.

We have made the product registration process simple with our easy to use website.

The registration form is short and easy to complete. Once you're registered, we can keep you posted on important product information.

Register at www.clarion.com - it's easy to keep your Clarion product up to date.

INFORMATIONS DE L'ENREGISTREMENT DE PRODUITS CLARION

Pour les États-Unis et le Canada seulement

www.clarion.com

Cher(e) client(e),

Nous vous remercions d'avoir acheté ce produit électronique mobile Clarion. Nous sommes confiants que vous apprécierez votre expérience Clarion.

Il y a beaucoup d'avantages à enregistrer votre produit. Nous vous invitons à visiter notre site Web www.clarion.com pour enregistrer votre produit Clarion.

Nous avons facilité la tâche de l'enregistrement de produit sur notre site Web. Le formulaire d'enregistrement est court et facile à compléter. Une fois enregistré(e), nous pouvons vous tenir informé(e) des informations importantes sur les produits.

Enregistrez-vous sur www.clarion.com - c'est facile de mettre à jour votre produit Clarion.

INFORMACIÓN DEL REGISTRO DE PRODUCTO DE CLARION

Para EE. UU. y Canadá solamente

www.clarion.com

Querido Cliente:

Felicitaciones por su compra de producto electrónico móvil de Clarion. Estamos seguros de que gozará de su experiencia con el producto de Clarion.

Hay muchas ventajas al registrar su producto. Le invitamos a que visite nuestro sitio en Internet www.clarion.com para registrar su producto de Clarion.

Hemos hecho el registro del producto en nuestro sitio fácil de usar. El formulario de registro es breve y fácil de completar. Una vez que lo registre, podremos proporcionarle la información de su producto.

Regístrese en www.clarion.com: es fácil mantener su producto de Clarion actualizado.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a certain type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be chosen so that the equivalent isotropically radiated power (e.i.r.p.) is no more than the required one for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Contents


Thank you for purchasing this **Clarion** product.

- Please fully read this owner's manual before operating this equipment.
- Check the contents of the enclosed warranty card and store it in a safe place with this manual.


1. FEATURES	3
2. PRECAUTIONS	3
Front Panel / Generalities	4
USB Port	4
3. CONTROLS	5
Operational Panel	5
Names of Buttons	5
Notes for use of Remote Control	5
Remote Control (RCX001)	6
4. CAUTIONS ON HANDLING	7
Handling Discs	7
5. OPERATIONS	7
Basic Operations	7
System Setup	8
Audio Setup	8
Radio Operations	9
SiriusXM [®] Satellite Radio Operations	9
CD/MP3/WMA Operations	11
USB Operations	12
iPod & iPhone Operations	12
Bluetooth Operations	13
AUX Operations	14
6. TROUBLESHOOTING	15
7. ERROR DISPLAYS	16
8. SPECIFICATIONS	16
9. INSTALLATION / WIRE CONNECTION GUIDE	17

1. FEATURES

- Built-in Bluetooth® Hands-Free Profile (HFP) and Audio Streaming (A2DP with aptX® & AVRCP)
- Compatible with iPod® / iPhone® with Pandora® Internet radio App
- SiriusXM-Ready™ with iTunes® Tagging

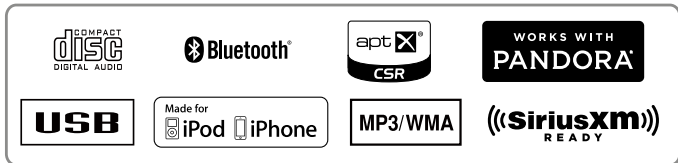

Expanding Systems

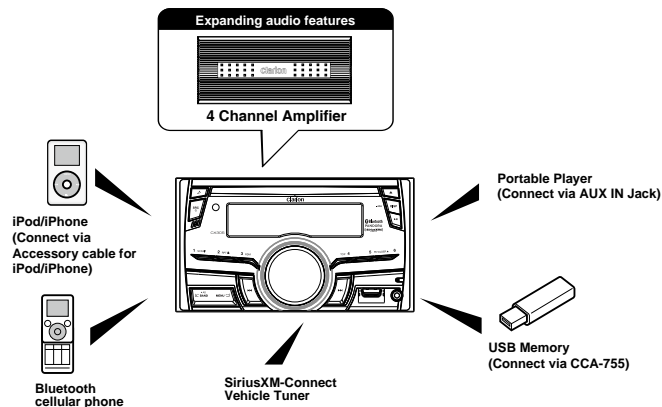

Note:

- The items listed only show connectivity options and are not included with the unit.
- CCA-755: Sold separately.
- Optional CCA-750 (iPod cable) also available, but CX305 doesn't have iPod Video function, so even if connected to the Monitor, CX305 doesn't play back the video.

2. PRECAUTIONS

⚠ WARNING

For your safety, the driver should not operate the controls while driving. Also, while driving, keep the volume to a level at which external sounds can be heard.

- When the interior of the car is extremely cold and the player is used soon after switching on the heater, moisture may form on the disc or the optical parts of the player and proper playback may not be possible. If moisture forms on the disc, wipe it off with a soft cloth. If moisture forms on the optical parts of the player, do not use the player for about one hour. The condensation will disappear naturally allowing normal operation.
 - Driving on extremely bumpy surfaces can cause the disc to skip during playback.
 - This unit uses precision parts and components for its operation. In the event that trouble arises, never open the case, disassemble the unit, or lubricate the rotating parts. Contact your Clarion dealer or service center.
 - FCC STATEMENT
 - This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - This device may not cause harmful interference.
 - This device must accept any interference received, including interference that may cause undesired operation.
 - Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- FCC Radiation Exposure Statement
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.
- "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

iPhone, iPod and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries.


6. Pandora, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc. used with permission. Pandora is currently only available in the United States, Australia and New Zealand. If you have any issues with the Pandora application on your mobile phone, please direct them to pandora-support@pandora.com.
7. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Clarion Co., Ltd is under license. Other trademarks and trade names are those of their respective owners.
8. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All rights reserved.
9. The aptX® mark and the aptX logo are trade marks of CSR plc or one of its group companies and may be registered in one or more jurisdictions.

10. - English:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

- French:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

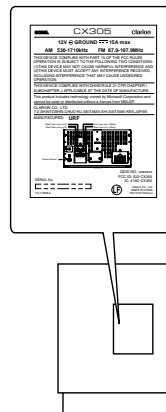

INFORMATION FOR USERS:

Changes or modifications to this product unapproved by the manufacturer will void the warranty and will violate FCC approval.

Front Panel / Generalities

For a longer service life, be sure to read the following cautions.

- Do not allow any liquids on the unit from drinks, umbrellas, etc. Doing so may damage the internal circuitry.
- Do not disassemble or modify the unit in any way. Doing so may result in damage.
- Do not let cigarettes burn the display. Doing so may damage or deform the body.
- If a problem should occur, have the unit inspected at your store of purchase.
- The remote control unit may not work if the remote control sensor is exposed to direct sunlight.

Cleaning the body

- Use a soft, dry cloth and gently wipe off any dirt or dust.
- For tough dirt, apply some neutral detergent diluted in water to a soft cloth, wipe off the dirt gently, then wipe again with a dry cloth.
- Do not use benzene, thinner, car cleaner, etc., as these substances may damage the body or cause the paint to peel. Also, leaving rubber or plastic products in contact with the body for long periods of time may cause stains.

USB Port

- The USB memory stick may stick out when inserted, so it may cause danger during driving. When connecting a USB memory stick to the source unit, please use the USB extension cable (CCA-755).
- The USB memory sticks must be recognized as "USB mass storage class" to work properly. Some models may not operate correctly.


When the memorized data is lost or damaged by any chance, Clarion shall not be liable for any damage.

When using the USB memory stick, we recommend that you backup your data stored on it before using a personal computer, etc.

- Data files may be broken when using USB memory sticks in the following situation: When disconnecting the USB memory stick or turning the power off while reading data. When affected by static electricity or electric noise. Connect/disconnect the USB memory stick when it is not accessed.
- Connecting with the computer is not available.

3. CONTROLS

Operational Panel

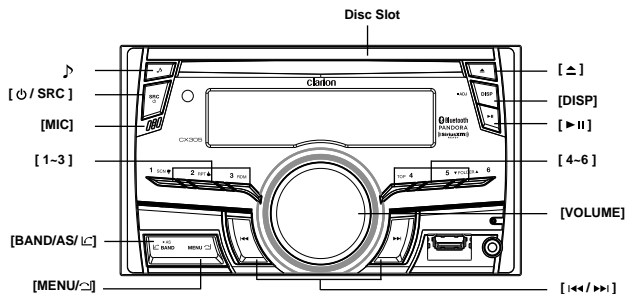

Names of Buttons

[SRC] Button

- Toggle the audio source
- Power on / Power off (long press)

[BAND/AS/LC] Button

- **RADIO** mode – Select tuner band / Auto memory store (long press)
- **BT** mode – Dial / Answer / Transfer call / Redial (long press)
- **SiriusXM** mode – Select tuner band / Select category (long press)

[MENU/OK] Button

- **MP3/WMA** mode – Search function
- **CD** mode – No function
- **RADIO** mode – No function
- **AUX** mode – No function
- **USB** mode – Search function
- **iPod** mode – iPod menu
- **Pandora** mode – Station select
- **BT** mode – Terminate call
- **SiriusXM** mode – Direct select

[EJECT] Button

- Press to eject disc

[PAUSE] Button

- Play / Pause

[SKIP] Buttons

- **RADIO** mode – Manual tuning / Auto search (long press)
- **MP3/WMA/CD/USB/iPod** mode – Previous / next track
- **Pandora** mode – Skip track (▶▶)

[VOLUME] Button

- Sound effect setting

[VOLUME] Knob

- Adjust volume level / Confirm (press)
- **Pandora** mode – Bookmark track
- **SiriusXM** mode – iTunes tagging (long press)

[1-6] Buttons

- [1] Button: Scan play / Preset station 1 / Preset station memory 1 (long press) / **Pandora** mode - Thumbs down
- [2] Button: Repeat play / Preset station 2 / Preset station memory 2 (long press) / **Pandora** mode - Thumbs up
- [3] Button: Random play / Preset station 3 / Preset station memory 3 (long press) / **Pandora** mode - Create new station by Artist / by Track (long press)
- [4] Button: Top play / Preset station 4 / Preset station memory 4 (long press)
- [5] Button: Previous folder / Preset station 5 / Preset station memory 5 (long press) / **Pandora** mode – Previous station 10 tracks down (long press)
- [6] Button: Next folder / Preset station 6 / Preset station memory 6 (long press) / 10 tracks up (long press) / **Pandora** mode – Next Station

[DISP] Button

- Display change
- System setup (long press)

[MIC] Hole

- Internal microphone

Notes for use of Remote Control

1. Aim the remote control at the remote sensor on the unit.
2. Remove the battery from the remote control or insert a battery insulator if the battery has not been used for a month or longer.
3. **DO NOT** store the remote control under direct sunlight or in a high temperature environment, or it may not function properly.
4. Use a "button shaped" lithium battery "CR2025" (3V) only.
5. **DO NOT** recharge, disassemble, heat or dispose of the battery in fire or water.
6. Insert the battery in the proper direction according to the (+) and (-) polarities.
7. Store the battery in a place where children cannot reach to avoid the risk of accident.

Inserting the Battery

1. Slide the remote control unit's rear cover in the direction shown.
2. Insert the battery (CR2025) into the insertion guides with the side printed (+) facing up.
3. Press the battery into the compartment as shown.
4. Replace the battery and slide the cover until it clicks into place.



Remote Control (RCX001)

[SRC / ϕ] Button

- Toggle the audio source
- Power on / Power off (long press)

[\ll , \gg] Buttons

- Preset station up / down
- Previous / next track
- Search (long press)
- **Pandora** mode – Skip track (\gg)

[SCN/PS/AS] Button

- Scan play / Preset scan
- Auto store (long press)
- **Pandora** mode – Thumbs down
- **SiriusXM** mode– Channel scan (in current category) / Preset scan (long press)

[BAND/TOP] Button

- **CD/MP3/WMA/USB** mode – Top play
- **RADIO** mode – Select tuner band
- **Pandora** mode – Next station
- **SiriusXM** mode – Select tuner band / Select category (long press)

[\blacktriangle , \blacktriangledown] Buttons

- Volume up / down

[\blacktriangleright] Button

- Play / Pause

[ISR] Button

- **SiriusXM** mode – iTunes tagging

[DISP] Button

- Display change

[RDM] Button


- Random play
- **Pandora** mode – Bookmark track

[RPT] Button

- Repeat play
- **Pandora** mode – Thumbs up

[MUTE] Button

- Mute volume

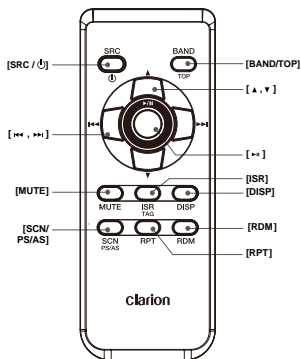


4. CAUTIONS ON HANDLING

Handling Discs

Handling

- New discs may have some roughness around the edges. If such discs are used, the player may not work or the sound may skip. Use a ball-point pen or the like to remove any roughness from the edge of the disc.

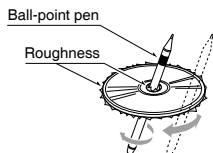

- Never stick labels on the surface of the disc or mark the surface with a pencil or pen.
- Never play a disc with any cellophane tape or other glue on it or with peeling off marks. If you try to play such a disc, you may not be able to get it back out of the player or it may damage the player.
- Do not use discs that have large scratches, are misshapen, cracked, etc. Use of such discs may cause misoperation or damage.
- To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.
- Do not use commercially available disc protection sheets or discs equipped with stabilizers, etc. These may damage the disc or cause breakdown of the internal mechanism.

Storage

- Do not expose discs to direct sunlight or any heat source.
- Do not expose discs to excess humidity or dust.
- Do not expose discs to direct heat from heaters.

Cleaning

- To remove fingermarks and dust, use a soft cloth and wipe in a straight line from the center of the disc to the circumference.
- Do not use any solvents, such as commercially available cleaners, anti-static spray, or thinner to clean discs.
- After using special disc cleaner, let the disc dry off well before playing it.

On Discs

- Never turn off the power and remove the unit from the car with a disc loaded.

CAUTION

For your safety, the driver should not insert or eject a disc while driving.

5. OPERATIONS

Basic Operations

Note:

- Refer to the diagrams in "3. CONTROLS" when reading this chapter.

CAUTION

When the unit is turned on, starting and stopping the engine with its volume raised to the maximum level may harm your hearing. Be careful about adjusting the volume.

Power on / off

Notes:

- Start the engine before using this unit.
 - Be careful about using this unit for a long time without running the engine. If you drain the battery too far, you may not be able to start the engine and this can reduce the service life of the battery.
- Start the engine. The power button / knob illumination on the unit will light up.



- Press the [DISP / SRC] button on the front panel or the remote control to turn on the power under standby mode. The unit goes back to the last status after power on.
- Press and hold the [DISP / SRC] button on the front panel or the remote control to turn off the power.

Mute

Press the [MUTE] button on the remote control to mute the volume from the unit.

Note:

Doing the operation above again or adjusting volume will release muting.

Volume adjustment

Rotate the [VOLUME] knob on the front panel or press the [▲] or [▼] button on the remote control.

The adjustable range of volume is 0 to 40.

CAUTION

While driving, keep the volume at a level at which external sounds can still be heard.

Playing source selection

Press the [DISP / SRC] button on the front panel or remote control repeatedly to choose the desired playing source.

Note:

Playing source selection means selecting which mode, such as **DISC** mode, **RADIO** mode and **AUX** mode.

Display system time

Press the [DISP] button on the front panel or remote control to change the display information from clock, station information (radio mode), or track information (CD mode).

 
RESET

If you have the following problems, please press the [RESET] button.

- Unit can not power on
- Nothing happens when buttons are pressed
- Display is not accurate

Note:

- When the [RESET] button is pressed, preset radio stations, audio setting, etc. stored in the memory are cleared.



System Setup

In any mode, press and hold the [DISP] button to enter system setup. Press the [◀] or [▶] button to select options, rotate the [VOLUME] knob to adjust.

CLOCK

Press the [VOLUME] knob to enter clock setting mode, rotate the [VOLUME] knob to set the clock, press the [◀] or [▶] button to select hour or minute, press and hold the [VOLUME] knob to confirm.

DX/LO (RADIO mode)

Rotate the [VOLUME] knob to choose local or distant radio in RADIO mode.

- **LO:** Only stations with a strong signal can be received.
- **DX:** Stations with strong and weak signals can be received.

S-CTRL (iPod mode) : ON/OFF

Rotate the [VOLUME] knob to choose S-CTRL (Simple control) ON or OFF.
* Refer to Page 12.

AUX SENS (AUX mode)

Rotate the [VOLUME] knob to choose AUX Input sensitivity LOW, MID or HIGH in AUX mode.

PARENTAL PASSWORD (SiriusXM mode)

Change parental password. Original code is "0000"

LOCK CH (SiriusXM mode)

Lock the current channel

UNLOCK ALL CH (SiriusXM mode)

Unlock all parental locked channels.

SELECT

This "SELECT" menu is intended to perform automatic pairing by selecting a stored mobile phone.

This unit can store three mobile phones. The mobile phones will be stored in paired order to the unit. A fourth mobile phone can not be stored. If you want to store a fourth mobile phone, please delete an unwanted mobile phone from the "DELETE" menu.

1. Rotate the [VOLUME] knob to choose the paired mobile phone name from the pairing list.
2. Press and hold the [VOLUME] knob to confirm.

DELETE

1. Rotate the [VOLUME] knob to choose the paired mobile phone name from the pairing list.
2. Press and hold the [VOLUME] knob to confirm.

DISCON (BT mode)

Disconnect currently connected mobile phone.

1. Rotate the [VOLUME] knob, mobile phone displays are currently connected.
2. Press and hold the [VOLUME] knob to disconnect.

MIC GAIN (BT mode)

Rotate the [VOLUME] knob to choose Mic gain: LOW, MID, HIGH.
You can change the MIC gain when a telephone partner cannot hear your voice.

MIC SEL (BT mode)

Rotate the [VOLUME] knob to choose the EXTERNAL or INTERNAL Microphone.

AUTO ANS (BT mode)

To answer incoming calls automatically.

Rotate the [VOLUME] knob to choose AUTO ANS ON or OFF.

AUTO CON: ON/OFF (BT mode)

Automatically connects the mobile phone that was last connected.

Rotate the [VOLUME] knob to choose AUTO CON ON or OFF.

PIN CODE

Rotate and press the [VOLUME] knob to choose a 4-digit password. Press the [VOLUME] knob more than 1 second to confirm.

The PIN CODE default setting is "0000".

SCRN SVR: ON/OFF

Rotate the [VOLUME] knob to choose SCR N SVR (screen saver) ON or OFF.

SCROLL: ON/OFF

For track information that is longer than the display panel:

When SCROLL is ON, the LCD will scroll the ID3 TAG information across the display, e.g.: FILE->FOLDER->TITLE->ARTIST->ALBUM->FILE...

When SCROLL is OFF, the LCD will display one of the ID3 TAG data, the default is TRACK, but the user can adjust it to other ID3 TAG data by pressing the [DISP] button.

REAR/S-W

Rotate the [VOLUME] knob to choose REAR or S-WOOFER (SUB-WOOFER).

SW PHASE

Rotate the [VOLUME] knob to choose SUBWOOFER phase REVERSE or NORMAL.

TEL-SW

Rotate the [VOLUME] knob to choose MUTE, ON or OFF.

Audio Setup

Press the [J] button to enter sound effect setting mode. First press shows current EQ. Rotate the [VOLUME] knob to change BEAT EQ in this order:
OFF -> B-BOOST -> IMPACT -> EXCITE -> CUSTOM

Rotate the [VOLUME] knob to change CUSTOM, and press the [VOLUME] knob, then press the [◀] or [▶] button to select a value including: BASS-G -> BASS-F -> BASS-Q -> MID-G -> MID-F -> MID-Q -> TREBLE-G -> TREBLE-F -> TREBLE-Q, rotate the [VOLUME] knob to select a value.
BASS-G / MID-G / TREBLE-G: (-7) - (+7)
BASS-F: 50 / 100 / 200
BASS-Q: 0.7 / 1.0 / 1.4 / 2.0
MID-F: 500 / 1K / 2K
MID-Q: 0.7 / 1.0 / 1.4 / 2.0

• MUTE:

The sound from this unit is muted during telephone calls.

• OFF:

This unit continues normal operation even when the cellular phone is used.

• ON:

You can listen to your telephone calls from the speakers connected to this unit.

*When listening to your calls on your car speakers, you can adjust the volume by turning the [VOLUME] knob.

DIMMER: ON/OFF

Rotate the [VOLUME] knob to choose DIMMER ON or OFF.

- **ON:** LCD dimmer is active when the small light of the vehicle is turned ON.
- **OFF:** LCD is always at maximum brightness regardless of the vehicle's small light.

BEEP: ON/OFF

Rotate the [VOLUME] knob to choose button beep sound ON or OFF.

12/24H

Rotate the [VOLUME] knob to choose time format: 12 or 24 hours.

TREBLE-F: 5k / 10k / 15k

TREBLE-Q: 0.7 / 1.0 / 1.4 / 2.0

Press the [J] button, then press the [◀] or [▶] button to select USER preset including:

BALANCE -> FADER -> M-B EX -> HPF (high pass filter) -> LPF (low pass filter) -> SUBW VOL (Subwoofer Volume), rotate the [VOLUME] knob to select a value.

BALANCE: LEFT 1-7 -> CENTER -> RIGHT 1-7

FADER: FRONT 1-7 -> CENTER -> REAR 1-7

M-BEX: ON / OFF

 
HPF: THROUGH / 60 / 90 / 120

LPF: THROUGH / 60 / 90 / 120

SUBW VOL: (-6) - (+6)

Radio Operations

 

 

Select tuner as playing source

Press the [ / SRC] button once or more to enter RADIO mode.



Selecting the radio band

Press the [BAND] button on the panel or on the remote control to select one radio band among FM1, FM2, FM3, AM.

Manual tuning

During manual tuning, the frequency will be changed in steps.
Press the [] or [] button on the panel to tune in a lower / higher station.
Press the [] or [] button on the remote control to select preset stations.

Auto tuning

Press and hold the [] or [] button to seek a lower / higher station.
To stop searching, repeat the operation above or press other buttons having radio functions.

Note:

When a station is received, searching stops and the station is played.

Preset scan

Preset scan receives the stations stored in the preset memory in order. This function is useful when searching for a desired station in the memory.

1. Press the [SCN/PS/AS] button on the remote control.
2. When a desired station is tuned in, press the [SCN/PS/AS] button again to continue receiving that station.

Note:

Be careful not to press and hold the [SCN/PS/AS] button for 1 second or longer, otherwise the auto store function will begin and the unit starts storing stations.

Auto store

The unit stores the strongest stations found in the entire Band.
Press and hold the [BAND/AS/L] button (1 sec.) or [PS/AS] button on the remote control to start automatic station search.
To stop auto store, press other buttons having radio functions.

Notes:

1. After auto store, the previous stored stations will be overwritten.
2. The unit has 4 bands, such as FM1, FM2, FM3 and AM. FM3 and AM can store by AS function. Each band can store 6 stations, CX305 can store 24 stations in total.


Manual store

When one expected radio station has been detected, press and hold number button 1-6 to store it in the memory.

Recall the stored stations

Press one numeric button among 1 to 6 on the panel to select the corresponding stored station.

Local seeking

When LOCAL seeking is ON, only those radio stations with strong radio signal can be received. To select the local function, press and hold the [DISP] button on the front panel, then press the [] button repeatedly until LO or DX displays on the screen, and rotate the [VOLUME] knob to select Local or Distant mode.

Note:

The number of radio stations that can be received will decrease when Local mode is ON.




SiriusXM Satellite Radio Operations

Only SiriusXM® brings you more of what you love to listen to, all in one place.
Get over 140 channels, including commercial-free music plus the best sports, news, talk, comedy and entertainment. Welcome to the world of satellite radio.

A SiriusXM Vehicle Tuner and Subscription are required. For more information, visit www.siriusxm.com.

Displaying the Radio ID

Before you listen to satellite radio, you must subscribe to the service using the SiriusXM Radio ID number.

1. Press the [ / SRC] button to activate SiriusXM-mode.
2. Press [] or [] to select channel "0". The unit displays Radio ID.
Radio ID. Note that the unit does not display "OCH" when you tune in to channel "0".

Activating your SiriusXM Subscription

After installing your SiriusXM-Connect Vehicle Tuner and antenna, power on your headunit and select SiriusXM mode. You should be able to hear the SiriusXM preview channel on Channel 1. If you cannot hear the preview channels, please check the installation instructions to make sure your SiriusXM Connect tuner is properly installed.

Once you can hear the Preview channel, tune in to Channel 0 to find the Radio ID of your tuner. In addition, the Radio ID is located on the bottom of the SiriusXM Connect Vehicle Tuner and its packaging. You will need this number to activate your subscription. Write the number down for reference.

Note: the SiriusXM Radio ID does not include the letters I, O, S or F.

- In the USA, you can activate online or by calling SiriusXM Listener care:
- Visit www.siriusxm.com/activatenow
 - Call SiriusXM Listener Care at 1-866-635-2349

For Canadian Subscriptions, please:

- Visit www.siriusxm.ca/activatexm

- Call XM customer Care at 1-877-438-9677
- As part of the activation process, the SiriusXM satellites will send an activation message to your tuner. When your radio detects that the tuner has received the activation message, your radio will display: "Subscription Updated". Once subscribed, you can tune in to channels in your subscription plan. Note, the activation process usually takes 10 to 15 minutes, but may take up to an hour. Your radio will need to be powered on and receiving the SiriusXM signal to receive the activation message.

Storing Channel Presets

1. Press [BAND/AS/L] to select the desired band you want to store the preset in. There are 3 Satellite Radio Preset bands. Each press of [BAND/AS/L] changes the band:
SXM1 -> SXM2 -> SXM3 -> SXM1
2. Tune in to the desired channel and then press and hold one of the preset buttons (1 through 6), to store the channel.
3. Repeat the procedure to store up to 5 other channels on to the same band.


 
Note:

- A total of 18 channels can be stored in the preset memory, 6 channels for each band (SXM1, SXM2 and SXM3).

Tuning Channels using Presets

1. Press [BAND/AS/L] to select the desired band of Presets you wish to access.
2. Press the preset button (1 through 6) that has your desired Satellite Radio channel stored in the memory.

Category Browsing

1. Press and hold [BAND/AS/L] to activate the Category Browsing mode.
2. Rotate the [VOLUME] knob to select the desired category.
3. Press [] or [] to select the desired channel within the selected Category. You can see channel name,

SiriusXM Satellite Radio Operations

channel number, artist, title or content by pressing **[DISP]**.

4. Press **[VOLUME]** to tune in to a selected channel.

Note:

If no operation is performed for 10 seconds, the Category Browsing mode is canceled.

Preset scan

Preset scan receives the channels stored in the preset memory in order. This function is useful when searching for a desired channel in the memory.

1. Press and hold the **[▶||]** key or press and hold the **[SCN/PS/AS]** button on the remote control.
2. When a desired channel is tuned in, press the **[SCN/PS/AS]** button again to continue receiving that channel.

Channel scan (in current category)

Channel scan receives the channels (in the current category) in order. This function is useful when searching for a desired channel in the current category.

1. Press and hold the **[SCN/PS/AS]** button on the remote control.
2. When a desired channel is tuned in, press the **[SCN/PS/AS]** button again to continue receiving that channel.

Note:

- Be careful not to press and hold the **[SCN/PS/AS]** button for 1 second or longer, otherwise the preset scan function will begin and the unit starts scanning presets.

iTunes® song tagging

With iTunes song tagging, you can tag songs you hear while listening to SiriusXM Satellite Radio. The tagging information is saved in your radio until you connect your iPod or iPhone and then the tagging information is transferred to your iPod/iPhone. When your iPod/iPhone is connected to iTunes, you will then be able to preview and purchase the song that you heard while listening to SiriusXM Satellite Radio. Information on using the iTunes song tagging feature is described below.

1. A song may be tagged while listening to a SiriusXM channel if the display shows the "TAG" icon.
2. Press and hold the **[VOLUME]** knob while the desired song is playing.
3. When completed, "STORED TAG X OF 64" is displayed.
X means the number of the tag stored.

Notes:

- During tagging, the iPod/iPhone takes priority to save the tag information. If no iPod/iPhone is connected, the tag information is saved to this unit.
- This unit can store up to 64 pieces of tag information. When the memory of the unit is full, "MEMORY FULL" may be displayed.
- When an iPod/iPhone that doesn't support the tagging function is connected, "TRANSFER FAIL" may be displayed.
- If there is stored tag information on the unit, when an iPod/iPhone supporting the tag function is connected, the stored tag information will be transferred to iPod/iPhone automatically.
- If tag information already exists, "ALREADY TAGGED" will be displayed when you try to tag information again.
- Tagging may be canceled by changing the frequency or channel.
- If a song is tagged and the remaining storage volume of the connected iPod/iPhone is sufficient to hold the song's tag information, it will be saved on the iPod/iPhone.

Changing the Display

Text information, such as the channel name, artist name/feature, song/program title and content is available with each SiriusXM channel. The unit can display this text information as explained below.

1. In SiriusXM mode, press the **[DISP]** button. Each time you press this button, the display changes as shown below.
Band/Channel number/channel name => Artist Name => Song Title=> Content Info => Category Name => Clock => Band/Channel number/channel name
* If there is no text information, nothing will be displayed.

Parental Lock / Unlock

The SiriusXM Parental Control feature allows you to control access to channels that you consider inappropriate for younger listeners. When enabled, the Parental Control feature requires you to enter a password to tune in to the locked channels. Information on setting up the password, setting up the channels to be locked, and the method to access the locked channels is described below.

1. To set up the password, press and hold **[DISP]** then release **[DISP]** and press **[▶▶]** to scroll to "PARENTAL PASSWORD". Press the **[VOLUME]** knob to change the password. Enter the old password, then enter a new password. To enter a password, rotate the **[VOLUME]** knob to choose the numbers (0-9) and press **[◀◀]** or **[▶▶]** to enter the next number in the password. Once all 4 numbers are entered, press and hold the **[VOLUME]** knob to confirm the password. (The original password is "0000")
2. To set up the channels to be locked, tune in to the channel you wish to lock. Press and hold **[DISP]** then release **[DISP]** and press **[▶▶]** to scroll to "LOCK CH", press the **[VOLUME]** knob to confirm. Input the password as explained in step 1 and then press and hold the **[VOLUME]** knob to set the locked channel. You will be asked to input the password. Enter the password and "LOCK" will be displayed if it is successful.
3. For unlocking the locked channel, press and hold **[DISP]**, and press **[▶▶]** to select "UNLOCKCH". Enter the password and you can unlock the channel.
4. To access the locked channels, select a channel by "DIRECT SELECT". Press and hold **[MENU/↵]** and select "DIRECT SELECT" by pressing the **[VOLUME]** knob. Input the desired locked channel (you need to input 3 digits) and input the password, then you can tune in to that locked channel.

CD/MP3/WMA Operations

This unit can play back MP3/WMA files

Note:

- If you play a WMA file with active DRM (Digital Rights Management), there will be no audio.

To disable DRM

(Digital Rights Management)

When using Windows Media Player 9/10/11, click on Tool -> Options -> Copy Music tab, then under Copy settings, unclick the Check box for copy project music. Then, reconstruct the files.

Personally constructed WMA files are used at your own responsibility.

Precautions when creating MP3/WMA files

Usable sampling rates and bit rates

- MP3: Sampling rate 8 kHz-48 kHz, Bit rate 8 kbps-320 kbps / VBR
- WMA: Bit rate 8 kbps-320 kbps

File extensions

- Always add a file extension “.MP3”, “.WMA” to MP3, WMA files by using single byte letters. If you add a file extension other than specified or forget to add the file extension, the file cannot be played.
- Files without MP3/WMA data will not play. The files will not play if you attempt to play files without MP3/WMA data.
- When VBR files are played, the displayed play time may not accurately represent the actual playtime of the media file.
- When MP3/WMA files are played, a short break with no sound is left between tunes.

Logical format (File system)

- When writing MP3/WMA files on a CD-R disc or CD-RW disc, please select “ISO9660 level 1, 2 or Joliet” or Apple ISO as the writing software format. Normal play may not be possible if the disc is recorded in another format.

- The folder name and file name can be displayed as the title during MP3/WMA play but the title must be within 32 single byte alphabetical letters and numerals (including an extension).
- Do not affix a name to a file inside a folder having the same name.


Folder structure

A disc with a folder having more than 8 hierarchical levels will be impossible.

Number of files or folders

- Up to 999 files can be recognized per folder.
 - Up to 3000 files can be played.
 - Up to 99 folders can be recognized.
- Tracks are played in the order that they were recorded onto a disc. (Tracks may not always be played in the order displayed on the PC.)
- Some noise may occur depending on the type of encoder software used while recording.


Eject function

Just pressing the [] button ejects the disc.

Notes:

- If you force a CD into the player before auto reloading, this can damage the CD.
- If a CD (12 cm) is left ejected for 15 seconds, the CD is automatically reloaded (Auto reload).

Listening to a disc already loaded in the unit

 

Press the [ / SRC] button to select the CD/MP3/WMA mode.

When the unit enters the CD/MP3/WMA mode, play starts automatically.



Loading a CD

Insert a CD into the center of the CD SLOT with the label facing up. The CD plays automatically after loading.

Notes:

- Never insert foreign objects into the CD SLOT.
- If the CD is not inserted easily, there may be another CD in the mechanism or the unit may require service.
- Discs without the  or  mark and CD-ROMs cannot be played by this unit.
- Some CD-R/CD-RW discs may not be usable.

 Pausing play

- Press the [] button to pause play. “PAUSE” appears in the display.
- To resume CD play, press the [] button again.

Displaying CD titles

This unit can display title data for MP3/WMA discs.

When SCROLL is OFF, each time you press the [DISP] button the title display will change.

MP3/WMA disc

 
 
 
FILE->FOLDER->TITLE->ARTIST->ALBUM->FILE...

Notes:


 

- If an MP3/WMA disc has no ID3 TAG, “NO TITLE” appears in the display.
- Only ASCII characters can be displayed in Tags.

Selecting a track

Track-up


- Press the [] button to move ahead to the beginning of the next track.
- Each time you press the [] button, the track moves forward to the beginning of the next track.
- For MP3/WMA discs, press and hold the [] button (1 sec.) to move forward 10 tracks.

Track-down


- Press the [] button to move back to the beginning of the current track.
- Press the [] button twice to move back to the beginning of the previous track.
- For MP3/WMA discs, press and hold the [] button (1 sec.) to move back 10 tracks.

Fast-forward/Fast-reverse

Fast-forward

Press and hold the [] button .

 

 
 


Fast-reverse

Press and hold the [] button .

- For MP3/WMA discs, it may take some time for the search to start and there may be breaks between tracks. In addition, some errors may occur in the play time.

Folder Select

This function allows you to select a folder containing MP3/WMA files and start playing from the first track in the folder.

- Press the [] or [] button.
- Press the [] button to move on to the next folder. Press the [] button to move back to the previous folder.
- To select a track, press the [] or [] button.

Search Function

- Press the [MENU] button to enter FOLD SCH mode. Press the [VOLUME] button to enter the folder list search mode.
- Turn the [VOLUME] knob to select a folder.
- Press the [VOLUME] button to enter the file list search mode. And then the track list appears in the display.
- Turn the [VOLUME] knob to select a track.
- Press the [VOLUME] knob to play.
- When playing back MP3 / WMA files, this function is performed in the current folder.

CD/MP3/WMA Operations

Top function

The top function resets the CD player to the first track of the disc. Press the [4] button to play the first track (track No. 1) on the disc.

- * In case of MP3/WMA, the first track of the current folder will be played.

Other various play functions

Scan play

This function allows you to locate and play the first 10 seconds of all the tracks recorded on a disc.

Press the [1] button to perform scan play.

Repeat play

This function allows you to play the current track repeatedly or play a track currently being played in the MP3/WMA folder repeatedly.

CD:

1. Press the [2] button once or more until "RPT ON" appears on the LCD to perform repeat play.

2. Press the [2] button again to cancel repeat playback. "RPT OFF" appears on the LCD.

MP3/WMA:

1. Press the [2] button once or more until "TRACK RPT" appears on the display to perform repeat play, and the "RPT" indicator on the display is activated.
2. For MP3/WMA files, press the [2] button repeatedly until "FOLD RPT" appears on the display for folder repeat play.
3. Press the [2] button repeatedly until "RPT OFF" appears on the display to cancel repeat playback, and the "RPT" indicator on the display is extinguished.


Random play

This function allows you to play all tracks recorded on a disc in a random order.

Press the [3] button to perform random play.

USB Operations

1. Open the cover of the USB connector to the right. Insert a USB cable (optional CCA-755) into the USB connector. Insert a USB device into the USB cable. When connecting a USB device, the unit will read the files automatically.
2. To remove the USB device, you should first select another source or turn off the power, in order to avoid damaging the USB device. Then remove the USB device. Close the cover.
3. Operation is the same as MP3/WMA operation.

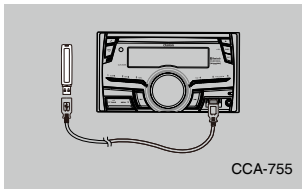


iPod & iPhone Operations

Connect

Connect an iPod or iPhone to the USB connector via an accessory cable for iPod/iPhone.

When connecting a device, the unit will read the files automatically. The track information displays on the screen once playback starts.

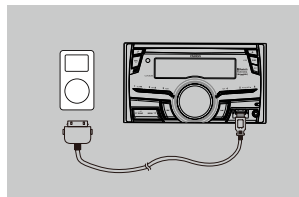

MENU

In the S-CTRL OFF mode, press the [MENU] button, then press the [VOLUME] knob and the word "MUSIC" will appear. Then, rotate the [VOLUME] knob to select PLAYLISTS / ARTISTS / ALBUMS / SONGS / GENRES / COMPOSERS, and press the [VOLUME] knob to confirm.

Play/Pause

Press the [▶||] button on the panel or on the remote control for play/pause.

Repeat play

This function allows you to play the current track repeatedly or play all tracks in your iPod/iPhone repeatedly.

1. Press the [2] button once or more until "RPT ON" appears on the LCD to perform repeat play.
2. Press the [2] button repeatedly until "RPT OFF" appears on the LCD to cancel repeat playback.

Random play

This function allows you to play all tracks recorded on your iPod/iPhone in a random order.

1. Press the [3] button repeatedly until "RDM ALBUM" appears on the LCD for album random play.
2. Press the [3] button once or more until "RDM SONG" appears on the LCD to perform random play.
3. Press the [3] button repeatedly until "RDM OFF" appears on the LCD to cancel random playback.

Setting iPod simple control mode

Use this function if you wish to operate through your iPod connected to this unit via the USB cable.

* The factory default setting is "OFF".

1. Press and hold the [DISP] button to enter system setup.
2. Press the [◀◀] or [▶▶] button to select "S-CTRL".
3. Rotate the [VOLUME] knob to select "ON" or "OFF".
When using iPhone 5s with iOS 8.1 and S-CTRL OFF, operations can still be made through the iPod.

Notes:

- When performing iPod operations using simple control mode, make the operations slowly. If repetitive operations are performed too quickly, unforeseen errors may occur.
- When performing iPod operations using simple control mode, please do not operate the iPod and the unit at the same time, otherwise unexpected events may occur.
- Some iPod models do not support this function. Consult your nearest Clarion dealer or website to confirm which models do not support this function.

iPod menu alphabet search

This function searches the subfolders for desired alphabetical letters.

iPod & iPhone Operations

1. Press the **[MENU]** button to select the iPod menu mode.
2. Press the **[VOLUME]** knob to switch between categories.
MUSIC: PLAYLISTS, ARTISTS, ALBUMS, SONGS, GENRES, COMPOSERS
3. Press the **[VOLUME]** knob. (The contents of the category are displayed.)
4. Press and hold the **[DISP]** button (1 sec.).
5. Rotate the **[VOLUME]** knob to select the desired letter to search.
6. Press the **[DISP]** button again to perform the search.
7. Press the **[VOLUME]** knob to confirm.

Listening to Pandora®

You can stream Pandora internet radio by connecting an iPhone/iPod that has the Pandora mobile application already installed.

To start streaming, connect the iPod/iPhone with Pandora already launched.

When the unit displays **"PLEASE LAUNCH Pandora APPLICATION ON MOBILE DEVICE"** in Pandora mode, please launch the Pandora Application by operating the iPod/iPhone connected.

1. Press the **[Φ / SRC]** button to enter Pandora mode.

Selecting a station from the list

Press the **[MENU]** button and select **"BY DATE"** or **"A-Z"** by rotating the **[VOLUME]** knob and press the **[VOLUME]** knob.

- BY DATE: List in order of created date
- A-Z: List in alphabetical order

Go to next station or previous station (an alphabetical order)

Press the **[5]** button on the panel to go to the previous station.

Press the **[6]** button on the panel or the **[BAND/TOP]** button on the remote control to go to the next station.

Thumbs up/down

Thumbs up:

press the **[2]** button on the panel or the **[RPT]**

button on the remote control for thumbs up. Giving a track the thumbs up will tell Pandora to play more tracks like that one.

Thumbs down:

Press the **[1]** button on the panel or the **[SCN]** button on the remote control for thumbs down. Giving a track the thumbs down will skip to the next track (subject to skip limit), and Pandora will remember not to play that track on the station again.

Notes:

- You can personalize your stations using "thumbs up" or "thumbs down".
- If you give a track the thumbs down after the skip limit has been exceeded, your feedback will be saved but the current track will continue to play.

BOOKMARK track

Short-press the **[VOLUME]** knob or the **[RDM]** button on the remote control to Bookmark the current track.

Creating new stations

Short-press the **[3]** button on the panel to create a new station from the current artist.

Long-press the **[3]** button on the panel to create a new track.

Note:

If the name of the station you wish to create for a track title or an artist name is the same as the station name currently playing, **"NOW PLAY"** appears on the display and the station will not be created.

Skip

Press the **[▶▶]** button on the panel or on the remote control for the next tracks in the station.

Note:

- Pandora limits the number of skips allowed on their service. If you attempt to skip tracks beyond the limit, **"SKIP LIMIT"** is displayed.

Play/Pause

Press the **[▶||]** button on the panel or on the remote control for play / pause.

Bluetooth Operations

Bluetooth allows you to utilize your car's built-in audio system for wireless mobile phone or music hands-free communication. Some Bluetooth mobile phones have audio features, and some portable audio players support the Bluetooth feature. This system can play audio data stored in a Bluetooth audio device. The audio system with Bluetooth will be able to retrieve phonebook contacts, received calls, dialed calls, missed calls, incoming calls, outgoing calls and listen to music.

Notes:

- Do not leave the Bluetooth hands-free microphone in places where wind passes, such as the air outlet of the air conditioner. This may cause a malfunction.
- If left in places exposed to direct sunlight or high temperatures, this can cause distortion or discoloration, which may result in a malfunction.
- This system will not operate or may operate improperly with some Bluetooth audio players.
- **Clarion** cannot guarantee the compatibility of all mobile phones with the unit.
- Audio playback will be set to the same volume level as set during telephone calls. This might cause problems, if extreme volume levels are set during telephone calls.

Hands-Free Operations Pairing

1. Turn on the Bluetooth function of your mobile phone.
2. Enter the mobile phone's Bluetooth setup menu.
3. Search for new Bluetooth devices.
4. Select **CX305** from the pairing list on the mobile phone.
5. Enter **"0000"** as the password (The password default setting is **"0000"**).
6. After pairing successfully, the unit will enter Bluetooth mode automatically, and **"BLUETOOTH Mobile Phone name"** will appear on the LCD.

7. The unit can connect three units.

- * During pairing, depending on the type of mobile phone, a six digit PIN code will be shown on both the source unit's display and the mobile phone.

In this case, please make sure that you have the same PIN code on both devices, and then confirm on the mobile phone.

Making a call

Operation from Bluetooth menu

Press the **[Φ / SRC]** button to switch the source to **"BLUETOOTH"**. Press the **[MENU/↵]** button to select a way to make outgoing calls:

• Dial Number

1. Press the **[MENU/↵]** button.
2. Rotate the **[VOLUME]** knob to switch **"DIAL NUMBER"**.
3. Press the **[VOLUME]** knob to confirm the selection.
4. Rotate the **[VOLUME]** knob to select a number, press the knob to confirm and get ready to input the next digit. Repeat the above until all numbers have been inputted.
5. Press the **[BAND/AS/LC]** button to dial.
6. Press **[MENU/↵]** to terminate the call.

• Dialed/Missed/ Received

You can search for any Dialed/Missed/ Received calls.

1. Rotate the **[VOLUME]** knob to select **"DIALED"**, **"MISSED"**, **"RECEIVED"**.
 2. Press the **[VOLUME]** knob to enter the selected call history.
 3. Rotate the **[VOLUME]** knob to scroll through the contacts.
 4. When the contact name or mobile phone No. is displayed, press the **[VOLUME]** knob to call the mobile phone No. of that contact.
- * Press the **[MENU/↵]** button to end the call.

Bluetooth Operations

• Call from Phonebook

You can search for the contact name in the phonebook and make a call.

1. Rotate the [VOLUME] knob to select "USER PHONEBOOK".
2. Press the [VOLUME] knob to enter the selected phonebook.
3. Rotate the [VOLUME] knob to scroll through the contacts.
4. The phone number and contact name will scroll on the display. When the contact name is displayed, press the [VOLUME] knob to call the mobile phone No. of that contact.
 - * Press the [MENU/↵] button to end the call.

Notes:

- Some mobile phones may not be able to transfer data of Phonebook.
- After RESET, please wait a few minutes until the data are transferred following Bluetooth mode selection. During that time, "PHONEBOOK UPDATING" is shown on the display.

• Redial

You can call the last dialed number. Press the [BAND/AS/LC] button to display "REDIAL", and push [VOLUME] knob to call the last dialed number.

• Call Transfer

You can switch between hands-free call and mobile phone call. Press the [BAND/AS/LC] button during the call.

• Answering a call

You can answer an incoming call by pressing the [BAND/AS/LC] button.

- * Press the [MENU/↵] button to reject an incoming call.

Audio Streaming Operations

What is audio streaming?

Audio streaming is a technique for transferring audio data such that it can be processed as a steady and continuous stream. Users can

stream music from their external audio player to their audio system wirelessly and listen to the tracks through the car's speakers. Please consult your nearest Clarion dealer for more information on the products of wireless audio streaming transmission offered.

CAUTION

Please avoid operating your connected mobile phone while audio streaming as this may cause noise or choppy sound on the song playback.

Audio streaming may or may not resume after a telephone interruption as this is dependent on the mobile phone.

The system will always return to Radio mode if audio streaming is disconnected.

Note:

Be sure to read the chapter on "Pairing" before proceeding.

Play / Pause a track

1. Push the [▶||] button to pause audio playback.
2. To resume audio playback, push the [▶||] knob again.

Selecting a track

Track-up

1. Press the [▶▶] button to move to the beginning of the next track.
2. Each time the [▶▶] button is pressed, playback proceeds to another track in the advancing direction.

Track-down

1. Press the [◀◀] button to move to the beginning of the previous track.
2. Each time the [◀◀] button is pressed, playback proceeds to the previous track in the reverse direction.

Note:

Playing order will depend on the Bluetooth audio player. When the [◀◀] button is

pressed, some A2DP devices will restart the current track. This depends on the duration. During music streaming playback, "A2DP" will be shown on the display. When the A2DP and HFP device is disconnected, "BLUETOOTH DISCONNECT" will be shown on the display and the system will return to the previously selected audio source. Some Bluetooth audio players may not have play / pause synchronized with this unit. Please make sure both the device and the main unit are in the same play / pause status in BT MUSIC mode.

ID3TAG display

During music streaming playback, for music information that is longer than the display panel: When SCROLL is ON, the LCD will display ID3 TAG information cyclically, e.g.: ALBUM->TITLE ->ARTIST...

When SCROLL is OFF, the LCD will display one of the ID3 TAG data. The default is TRACK, but the user can adjust it to other ID3 TAG information by pressing the [DISP] button.

AUX Operations

The front AUX terminal of this system is provided to allow playback of sounds and music from external devices connected to this unit.

Press the [⊕ / SRC] button on the panel to select "AUX".

AUX Input sensitivity setting

1. Press and hold the [DISP] button (1 sec.).
2. Press the [◀◀] or [▶▶] button to select "AUX SENS".
3. If the output level of the connected external audio player is "HIGH", rotate the [VOLUME] knob and choose "MID" or "LOW". And if the output level is "LOW", choose "MID" or "HIGH".

6. TROUBLESHOOTING

GENERAL

Problem	Cause	Measure
Unit can not power on.	Unit fuse blown.	Replace with new fuse of correct rating.
	Car battery fuse blown.	Replace with new fuse of correct rating.
Unit can not power on. Nothing happens when buttons are pressed.	The microprocessor has malfunctioned due to noise, etc.	Turn off the power and remove the DCP. Press the [RESET] button with a thin rod. Note: When the [RESET] button is pressed, turn off the ACC power.*
Display is not accurate.		* When the [RESET] button is pressed, frequencies of radio stations, audio settings, etc. stored in the memory are cleared.
No/low audio output.	Improper audio output connection.	Check wiring and correct.
	Volume set too low.	Increase volume level.
	Speakers damaged.	Replace speakers.
	Heavily biased volume balance.	Adjust the channel balance to center position.
	Speaker wiring is in contact with metal part of car.	Insulate all speaker wiring connections.
Poor sound quality or distortion.	Non-standard disc used.	Use a standard disc.
	Speaker power rating does not match unit.	Replace speakers.
	Wrong connections.	Check wiring and correct.
	Speaker is shorted.	Check wiring and correct.
Unit resets itself when engine is off.	Incorrect connection between ACC and Battery.	Check wiring and correct.

DISC Player

Problem	Cause	Measure
Disc cannot be loaded.	Another disc is already loaded.	Eject the disc before loading the new one.
	There is a foreign object stuck inside the unit.	Remove the object inside the unit.
Sound skips or is noisy.	Compact disc is dirty.	Clean the compact disc with a soft cloth.
	Compact disc is heavily scratched or warped.	Replace with a compact disc with no scratches.
Sound is bad when power is first turned on.	Condensation may form on the internal lens when the car is parked in a humid place.	Let dry for about 1 hour with power on.

USB device

Problem	Cause	Measure
USB device cannot be inserted.	The USB device has been inserted in the wrong direction.	Try again after reversing the connection direction of the USB device.
	The USB connector is broken.	Replace with a new USB device.
USB device is not recognized.	The USB device is damaged.	Disconnect the USB device and reconnect. If the device is still not recognized, try replacing it with a different USB device.
	Connectors are loose.	
No sound heard with the display "No File" shown.	No MP3/WMA file is stored in the USB device.	Store these files properly in the USB device.
Sound skips or is noisy.	MP3/WMA files are not encoded properly.	Use properly encoded MP3/WMA files.

Bluetooth

Problem	Cause	Measure
Cannot pair the Bluetooth enabled device with the audio system.	The device does not support the profiles required for the system.	Use another device to connect.
	The Bluetooth function of the device is not enabled.	Refer to the user manual of the device for how to enable the function.
The audio quality is poor after connection with a Bluetooth-enabled device.	The microphone is not correctly positioned.	Adjust the position of the microphone. For example, stick the microphone onto the dashboard close to the driver.
	The Bluetooth reception is poor.	Move the device closer to the audio system or remove any obstacle between the device and the system.

SiriusXM Advisory Messages

Message	Description
CHK ANTENA	The radio has detected a fault with the SiriusXM antenna. The antenna cable may be either disconnected or damaged. Verify that the antenna cable is connected to the SiriusXM Connect Vehicle Tuner. Inspect the antenna cable for damage and kinks. Replace the antenna if the cable is damaged. SiriusXM products are available at your local car audio retailer or online at www.shop.siriusxm.com .
CHEK TUNER	The radio is having difficulty communicating with the SiriusXM Connect Vehicle Tuner. The tuner may be disconnected or damaged. Verify that the SiriusXM Connect Vehicle Tuner cable is securely connected to the radio.
NO SIGNAL	The SiriusXM Connect Vehicle Tuner is having difficulty receiving the SiriusXM satellite signal. Verify that your vehicle is outdoors with a clear view of the sky. Verify that the SiriusXM magnetic mount antenna is mounted on a metal surface on the outside of the vehicle. Move the SiriusXM antenna away from any obstructions. Inspect the antenna cable for damage and kinks. Consult the SiriusXM Connect Vehicle tuner installation manual for more information on antenna installation. Replace the antenna if the cable is damaged. SiriusXM products are available at your local car audio retailer or online at www.shop.siriusxm.com .
SUBSCRIPTIN UPDATED	The radio has detected a change in your SiriusXM subscription status. Press the rotary knob to clear the message. Visit www.siriusxm.com or call 866-635-2349 if you have questions about your subscription.
CH UNAVAIL	The channel that you have requested is not a valid SiriusXM channel or the channel that you were listening to is no longer available. You may also see this message briefly when first connecting a new SiriusXM Connect Vehicle tuner. Visit www.siriusxm.com for more information about the SiriusXM channel lineup.
CHANNEL LOCKED	The channel that you have requested is Locked by the radio Parental Control feature. See the Parental Lock/Unlock feature on page 10 for more information on the Parental Control feature and how to access locked channels.

7. ERROR DISPLAYS

If an error occurs, one of the following displays is displayed.

Take the measures described below to solve the problem.

Display	Cause	Measure
ERROR 3	Disc is inserted incorrectly.	Eject the disc then reload it properly.
	Disc format not supported.	Try another disc.
ERROR 5	Deck mechanism failure.	Consult your store of purchase.

If an error display other than the ones described above appears, press the [RESET] button. If the problem persists, turn off the power and consult your store of purchase.

* When the [RESET] button is pressed, frequencies of radio stations, audio settings, etc. stored in the memory are cleared.

8. SPECIFICATIONS

FM Tuner

Frequency range: 87.9 - 107.9MHz
Usable sensitivity: 12dBf
Frequency response: 30Hz-15kHz
Stereo separation: 30dB(1kHz)
Signal/noise ratio: >55dB

AM Tuner

Frequency range: 530 - 1710KHz
Usable sensitivity (S/N=20dB): 30dBμ

CD Player

System: Disc digital audio system
Frequency response: 20Hz-20kHz
Signal/noise ratio: >94dB
Total harmonic distortion: Less than 0.1% (1kHz)
Channel separation: >60dB

MP3/WMA mode

MP3 sampling rate: 8 kHz to 48 kHz
MP3 bit rate: 8 kbps to 320 kbps / VBR
WMA bit rate: 8 kbps to 320 kbps
Logical format: ISO9660 level 1,2
Joliet file system

USB

Specification: USB 1.0/2.0
Playable audio format:
MP3(.mp3): MPEG 1/2/Audio Layer-3
WMA(.wma): Ver 7/8/9.1/9.2

Bluetooth

Specification: Bluetooth Ver. 2.1+EDR
Profile: HFP (Hands-free Profile)
A2DP (Advanced Audio Distribution Profile)
AVRCP (AV Remote Control Profile)
PBAP (Phone Book Access Profile)
Send/Receive Sensitivity: Class 2

Audio Amplifier


Maximum power output:
200W (50W x 4)
Speaker impedance: 4Ω (4 to 8 Ω allowable)

Input

Audio input sensitivity:
High: 320mV (at 1V output)
Mid: 650mV (at 1V output)
Low: 1.3V (at 1V output)
(input impedance: 10 kΩ or greater)
Aux-in level: ≤2V

General

Power supply voltage:
14.4VDC (10.8 to 15.6V allowable),
negative ground
Pre-Amp output voltage:
2.0V (CD play mode: 1kHz, 0dB, 10kΩ load)
Fuse: 15A
Dimensions of the Main Unit:
178mm Width × 100mm Height × 160mm
Depth
6-2/3(width) × 2(Height) × 6-1/3(Depth)
Weight of the Main Unit: 3.72lb.(1.69kg)
Dimensions of the Remote Control unit:
43mm Width × 11mm Height × 113mm Depth
1-2/3(Width) × 2/5(Height) × 4-2/5(Depth)
Weight of the Remote Control Unit:
1.16oz. (36g) (including battery)

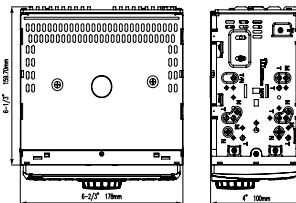

Note:

- Specifications and design are subject to change without notice for further improvement.

Power Output:
22W RMS x 4 Channels at 4Ω
and 1% THD+N

Signal to Noise Ratio:
93dB(A (reference: 1W into 4)



9. INSTALLATION / WIRE CONNECTION GUIDE

CONTENTS

1) Before Starting	17
2) Package Contents	17
3) General Cautions	17
4) Cautions on Installation	17
5) Installing the Source Unit	17
6) Wiring and Connections	19
7) Connecting the accessories	19

1) Before Starting

1. This set is exclusively for use with a negative ground 12 V power supply.
2. Read these instructions carefully.
3. Be sure to disconnect the battery "terminal" before starting. This is to prevent short circuits during installation. (Figure 1)

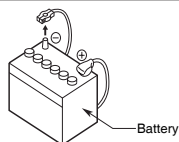


Figure 1

2) Package Contents

Source unit	1	Remote control unit	1
Trim ring	1	Battery (CR2025).....	1
Power supply cable	1	Screws M5x6mm Flush mount	8
Owner's manual.....	1		
Warranty card.....	1		
Screws M5x6 mm Double Sems	8		

3) General Cautions

1. Do not open the case. There are no user serviceable parts inside. If you drop anything into the unit during installation, consult your dealer or an authorized **Clarion** service center.
2. Use a soft, dry cloth to clean the case. Never use a rough cloth, thinner, benzene, or alcohol etc. For tough dirt, apply a little cold or warm water to a soft cloth and wipe off the dirt gently.

4) Cautions on Installation

1. Prepare all articles necessary for installing the source unit before starting.
2. Install the unit within 30° of the horizontal plane. (Figure 2)
3. If you have to do any work on the car body, such as drilling holes, consult your car dealer beforehand.
4. Use the enclosed screws for installation. Using other screws can cause damage. (Figure 3)

 


Figure 2

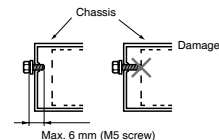


Figure 3

 
5) Installing the Source Unit

1. Before installation, please make sure proper connections are conducted and the unit operates normally. Improper connection may result in damage to the unit.
2. Use only accessories designed and manufactured for this unit as other unauthorized accessories may result in damage to the unit.
3. Before installation, please fasten all power cables.
4. DO NOT install the unit close to hot areas to prevent damage to electrical components such as the laser head.
5. Install the unit horizontally. Installing the unit at a vertical angle of more than 30 degrees may result in worse performance.
6. To prevent electric sparks, connect the positive pole first and then the negative pole.


Unit Installation

1. When installing the main unit in NISSAN vehicles, use the parts attached to the unit (see "■NISSAN"). When installing the main unit in TOYOTA vehicles, use the parts attached to the vehicle (see "■TOYOTA").
2. Wire as shown in "Wire Connection".
3. Reassemble and secure the unit in the dashboard and set the face panel and center panel.

Mounting Screw Holes (Side View of the Main Unit)




NISSAN

 


TOYOTA

■ NISSAN

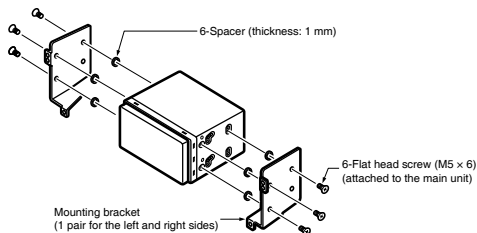

■ TOYOTA

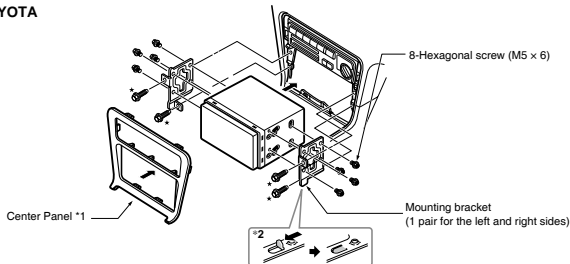

Screws marked ★ are included in the vehicle.

Note:

*1 Some panel openings are too small for the unit depending on the vehicle type and model. In such a case, trim the upper and lower sides of the panel frame by about 0.5 to 1.5 mm so the unit can be inserted smoothly.

 
*2 If a hook on the installation bracket interferes with the unit, bend and flatten it with a nipper or similar tool.

■ Vehicles other than NISSAN and TOYOTA

In some cases the center panel may require modification. (Trimming, filling, etc.)

■ Typical Mounting Brackets

In some cases the center panel may require modification. (Trimming, filling, etc.)



Examples 1-3


Affix the screws to the marks. Affix the screws to the ● mark

Cautions On Wiring

- Be sure to turn the power off before wiring. Be particularly careful where you route the wires.
- Keep them well away from the engine, and exhaust pipe, etc. Heat may damage the wires.
- If the fuse should blow, check to see if the wiring is correct. If a fuse is blown, replace it with a new one of the same specification as the original.
- To replace the fuse, remove the old fuse of the power supply cord and insert the new one.



Note:

- There are various types of fuse holder. Do not let the battery side touch other metal parts.

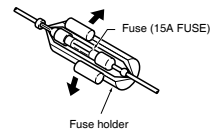

- After connection, fix the cord using a clamp or insulation tape for protection.

6) Wiring and Connections

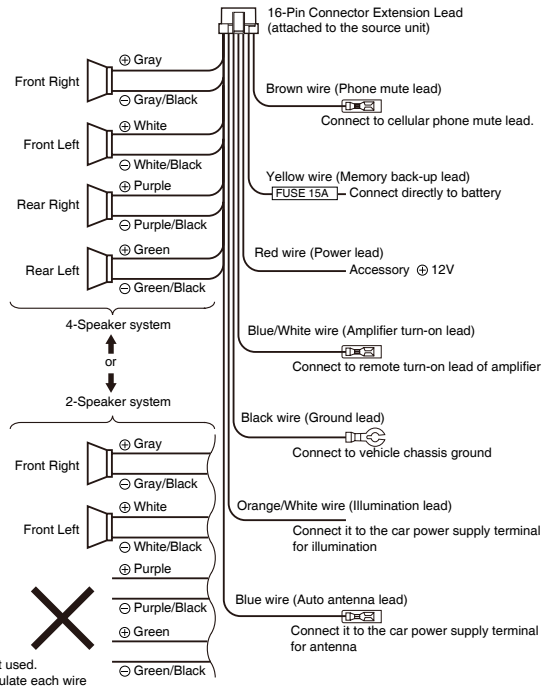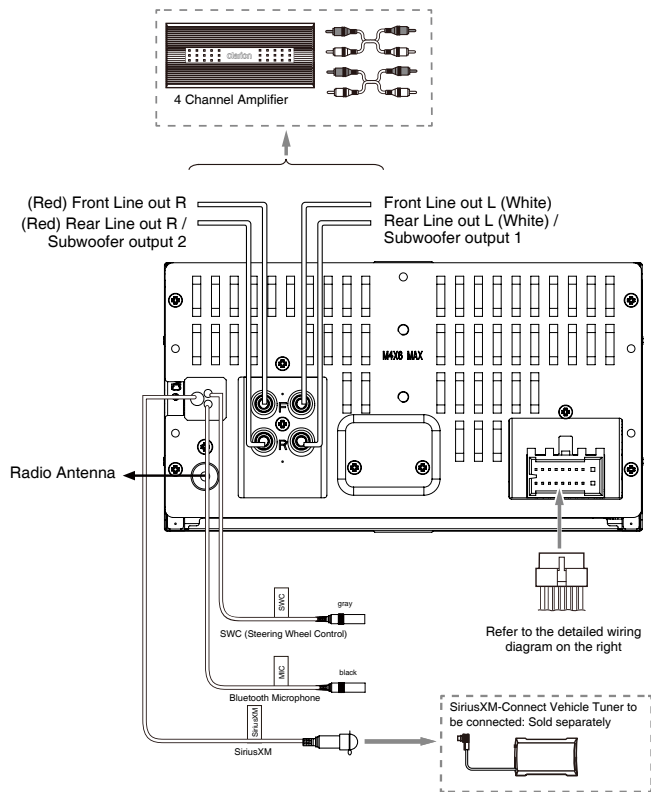

7) Connecting the accessories

• Connecting to the external amplifier

External amplifiers can be connected to the 4 channel RCA output connections. Ensure that the connectors are not grounded or shorted to prevent damage to the unit.

Clarion Co., Ltd.

Copyright © 2015 Clarion Co., Ltd.

Printed in China / Imprimé en Chine / Impreso en China