

clarity[®]



TL100 TV Listener

WHAT'S IN THE BOX?



TL100 headset



TL100 transmitter



Power adapter and
cord (2 sets)



RCA stereo Cable
(for option 1)



 
headphone cable
(for option 2)

Your new Clarity TL100 TV Listener is ready to provide high quality television sound. Setup is easy and should take just a couple of minutes.


BASIC SETUP

STEP 1 Before connecting power to the transmitter, connect the transmitter to your TV, cable box, or satellite box, by choosing one of the two options below.

Option 1 (recommended, if available): Plug the red and white ends of the RCA stereo cable from the transmitter into the corresponding red and white **audio output** jacks on the back of your TV **or** on the back of your cable or satellite box. This allows you to adjust the headset volume while others can adjust the volume of the television speakers.

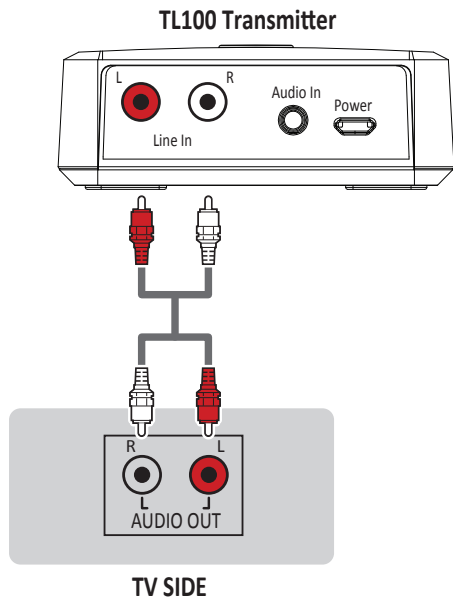

 STEP 1 (continued)

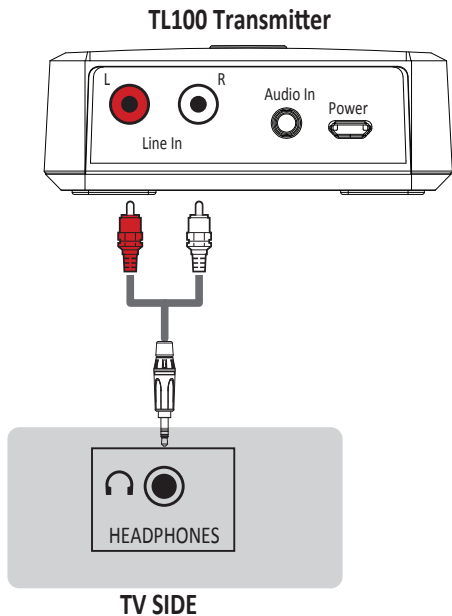

Option 2: Plug the headphone cable into the headphone jack on your TV. On most televisions, this disables the television's speakers, so this option is not ideal for multiple viewers. Check the settings on your TV for available functionality.

STEP 2 Plug one of the supplied power adapters into a power outlet, then plug the loose end of the power cable in the back of the transmitter. The light atop the transmitter will blink **red** three times to indicate that it has power, then starts blinking blue (searching for the headset).

STEP 3 Please make sure the headset is within range of the transmitter (up to 30ft). Turn on the headset by moving the small round switch on the right side of the headset into center position. The headset and transmitter are pre-paired and will connect automatically within 15 seconds. The transmitter light will turn solid blue when the headset is connected.

WHAT THE TRANSMITTER LIGHT MEANS:

Blinks red and turns off – transmitter off

Steady blue – headset connected

Blinking blue – searching for headset or headset out of range

Steady purple – headset off

HEADSET ADJUSTMENTS:

Toggle the Volume +/- wheel forward or backward to control the volume.

Tap the red Mute button to hear your natural surroundings. Tap the button again to return to listening to your TV.

Adjust the headset to fit your head comfortably by pulling downward gently on each side, until the earphone cushions fit comfortably over each ear.

 
PAIRING TO YOUR BLUETOOTH-ENABLED MOBILE PHONE

1. While in TV listening mode, press the Call button once ([]).
2. Slide and hold the power button towards the Bluetooth icon until the LED's flash red and blue.
3. Activate Bluetooth on your mobile phone and set it to search for new devices.

iPhone: Settings > Bluetooth > On

Android: Settings > Bluetooth: On > Scan for devices

NOTE: Menus may vary by device.

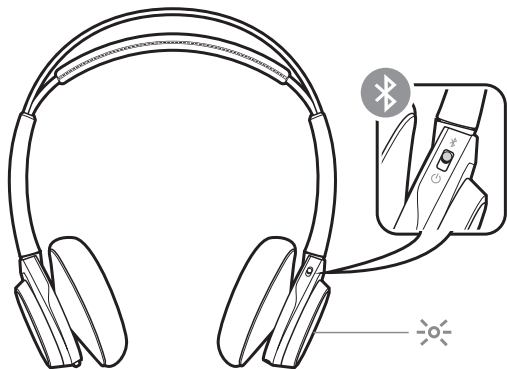

4. Select "Clarity TL100 Headset". If necessary, enter four zeroes (0000) for the passcode or accept the connection.

Once successfully paired, the LED's stop flashing.

5. Press the Call ([]) button to return to listening to the TV.

Make/Take/End Calls:

1. To make a call, press the Call button ([]), then dial the number from the mobile phone.
2. You will hear an incoming call alert while listening to the TV. Press the Call button to answer. TV audio is muted during the call; streaming audio from the mobile phone is muted and paused.
3. Press the Call button to end the call. Headset returns to TV listener mode or resumes audio from mobile phone, respectively.
4. Decline a call by pressing and holding the Call button for 2 seconds; you will resume the previous audio activity from before the incoming call.

 
Mute: during a call, press the red Mute button. You hear "mute on/off". While muted, taking off the headset transfers the call to your phone.

IMPORTANT: In order to preserve battery charge, we recommend turning off the headset when not in use.

LISTENING TO MUSIC (from mobile phone)

When you use your headset to listen to music through your mobile phone, the left headphone includes buttons for pause/play, next, and back. Removing the headset automatically pauses playback, and it resumes when you put the headset.

To mute the streaming audio, tap the red Mute button. This allows you to hear your natural surroundings (audio streaming from mobile phone will pause). Press same button to resume streaming music/audio from mobile phone.

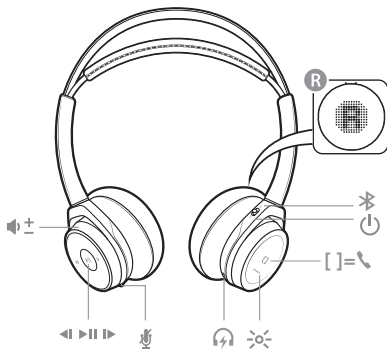

(controls for music from mobile phone ONLY)



Track forward



Play/pause music



Track backward

(controls for TV audio and music from mobile phone)



Volume up/down



Mute/unmute; Open mic



Charge port



Headset LEDs



Call button



Power switch



Bluetooth pair button

CHARGING

Use the second power adapter and cable to charge your headset. It takes up to 2.5 hours to fully charge your headphones. The LED's turn off once charging is complete.



To check the headphones battery status, tap the Call button [] while wearing your headphones. Headphones must be in idle state. Your headphones have up to 18 hours of listening time.

TECHNICAL DETAILS

- TL100 HEADSET

- Weight: 140 grams
- Up to 18 hours of wireless listening time from rechargeable battery
- 5 LED battery gauge
- Up to 21 days standby time
- High quality audio
- Low latency performance
- Multipoint technology

- TL100 TV LISTENER

- Range: up to 30 ft
- Answer mobile calls from headset (when Bluetooth-enabled mobile phone is paired to the headset)

Registering Your Product

Visit http://shop.clarityproducts.com/support/warranty_registration to register your product online so we can provide you with the best service and technical support.

We recommend that you refer to the complete user guide located at (to be added when website is complete).

Limited Warranty

Clarity offers a one (1) year limited warranty. For warranty details, conditions and technical assistance, please visit our website: <http://shop.clarityproducts.com/>

¹⁰support/returns.

en

Safety Instructions To reduce the risk of fire, electric shock, injury to persons and damage to property, read all operating instructions and the following safety instructions before using your Clarity product.

Operating, storage and charging temperature is 10°C to 40°C (50°F to 104°F).

- Only use those Clarity products and accessories designed for use with this product.
- If you experience a skin irritation after using this product, discontinue use and contact Clarity.
- CHILDREN. Never allow children to play with the product-small parts may be a choking hazard.
- Do not disassemble the product as this may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock or fire when the product is subsequently used.
- Unplug, discontinue use and contact Clarity if the product overheats or has a damaged outer casing, cord or plug.
- Exposure to high volume sound levels or excessive sound pressure may cause temporary or permanent damage to your hearing. Although there is no single volume setting that is appropriate for everyone, you should always use your headset/headphones with the volume set at moderate levels and avoid prolonged exposure to high volume sound levels. The louder the volume, the less time is required before your hearing could be affected. You may experience different sound levels when using your headset/headphones with different devices. The device you use and its settings affect the level of sound you hear. If you experience hearing discomfort, you should stop listening to the device through your headset/headphones and have your hearing checked by your doctor. To protect your hearing, some hearing experts suggest that you:
 1. Set the volume control in a low position before putting your headset/headphones on your ears and use as low a volume as possible.

2. Avoid turning up the volume to block out noisy surroundings. Whenever possible, use your headset/headphones in a quiet environment with low background noise.
3. Limit the amount of time you use headsets/headphones at high volume levels.
4. Turn the volume down if the sound from the headset/headphones prevent you from hearing people speaking near you.

See plantronics.com/healthandsafety for more information on headsets/headphones and hearing.

- If you use your headset/headphones while driving, check local laws regarding use of a mobile phone and headset, and ensure your attention and focus remain on driving safely. Use of a headset/headphones that covers both ears will impair your ability to hear other sounds and in most regions is illegal to use while operating a motor vehicle or riding a bicycle and may be a serious hazard for you and others.
- If this product includes earbuds/eartips, install and use them in accordance with the instructions provided. Do not force earbuds/eartips down the ear canal. Consult a doctor if they become lodged in the ear canal.
- Plug the mains adapter or charger into a socket-outlet that is near to the equipment and will be easily accessible.

Charging Warnings

- Use only the charger supplied by Clarity to charge the product and follow the charging instructions provided. Alternatively, if your headset is designed to be charged with your cell phone charger, use only cell phone chargers approved and provided by your cell phone manufacturer. Do not use the charger for any other purpose. Ensure that the voltage rating corresponds to the power supply you intend to use.

Battery Warnings

- If your product has an embedded, non-replaceable battery, do not attempt to open the product or remove the battery as this may cause injury and/or damage the product.
- If your product has a replaceable battery, use only the battery type supplied by

Clarity. Remove a spent battery promptly.

- Do not dispose of the product or battery in a fire or heat above 40°C (104°F).
- Do not open, deform or mutilate the battery. There may be corrosive materials which can cause damage to eyes or skin and may be toxic if swallowed.
- Never put batteries in mouth. If swallowed, contact a physician or poison control center.
- Always store batteries where children cannot reach them.
- Do not allow any battery or its holder to contact metal objects such as keys or coins.
- RECYCLING The product battery must be recycled or disposed of properly. Contact your local recycling center for battery removal and proper disposal.

fr

Consignes de sécurité Pour réduire les risques d'incendie, de décharge électrique, de blessure corporelle et de dommages à la propriété, lisez toutes les instructions d'utilisation et les consignes de sécurité qui suivent avant d'utiliser votre produit Clarity.

- Pour le fonctionnement, le rangement et le chargement de votre produit, maintenez-le à des températures comprises entre 10° C et 40 °C (50°F à 104°F).
- Utilisez uniquement des produits et accessoires Clarity conçus pour votre produit.
- Si une irritation de la peau se manifeste après avoir utilisé ce produit, cessez de l'utiliser et communiquez avec Clarity.
- ENFANTS. Ne laissez pas les enfants jouer avec le produit; ils risqueraient de s'étouffer avec les petites pièces.
- Ne démontez pas le produit; il peut vous exposer à des tensions dangereuses ou à d'autres risques. Un mauvais remontage de l'appareil pourrait causer une décharge électrique lors d'une utilisation ultérieure du produit.
- Si votre produit surchauffe ou si la prise ou le câble de celui-ci est endommagé, débranchez-le, cessez de l'utiliser et communiquez avec Clarity.
- L'exposition à une pression sonore excessive ou à un volume élevé peut endommager votre audition de manière temporaire ou permanente. Même si aucun réglage de volume n'est approprié pour tous, vous devez toujours régler le volume d'écoute à

une intensité modérée et éviter d'utiliser un volume élevé de façon prolongée. Plus le volume est élevé, plus vous risquez d'endommager rapidement votre audition. Le volume de l'écouteur peut varier en fonction de l'appareil avec lequel il est utilisé. L'appareil que vous utilisez ainsi que ses paramètres modifient le volume. Si vous ressentez une gêne auditive, arrêtez d'utiliser l'appareil avec les écouteurs et consultez un médecin. Pour protéger votre audition, voici ce que des experts en matière d'audition recommandent :

1. Réglez le volume à bas niveau avant de placer les écouteurs sur vos oreilles et conservez le niveau sonore le plus bas possible lorsque vous l'utilisez.
2. Évitez d'augmenter le volume pour vous isoler des bruits qui vous entourent. Utilisez, si possible, les écouteurs dans un endroit tranquille, sans trop de bruits de fond.
3. Limitez le temps d'utilisation à volume élevé.
4. Baissez le volume si le son provenant des écouteurs vous empêche d'entendre les personnes qui parlent autour de vous.

Consultez le site plantronics.com/healthandsafety pour obtenir de plus amples renseignements sur les écouteurs et l'audition.

- Si vous utilisez vos écouteurs dans votre voiture, consultez les lois locales concernant l'utilisation d'un téléphone cellulaire et d'écouteurs au volant, et assurez-vous de maintenir votre attention sur la route afin de conduire prudemment. L'utilisation d'écouteurs couvrant vos deux oreilles, ce qui vous rendra incapable d'entendre d'autres sons, est illégale dans la plupart des régions lorsque vous conduisez un véhicule motorisé ou un vélo, car vous pourriez constituer un danger pour vous-même ou pour d'autres personnes.
- Si ce produit comprend des embouts ou des écouteurs-boutons, installez-les et utilisez-les selon les instructions fournies. Ne forcez pas les embouts et les écouteurs-boutons dans le conduit auditif. Consultez un médecin s'ils restent coincés dans le conduit auditif.
- Branchez l'adaptateur secteur ou le chargeur à une prise suffisamment près de

l'équipement et facilement accessible.

Avertissements relatifs au chargement

- Utilisez l'adaptateur d'alimentation fourni par Clarity pour le chargement du produit. Suivez les instructions sur le chargement. Ou encore, si les écouteurs sont conçus pour être chargés avec votre cellulaire, utilisez uniquement les chargeurs approuvés et fournis par le fabricant du cellulaire. N'utilisez l'adaptateur à aucune autre fin. Vérifiez si la tension nominale convient à la prise électrique utilisée.

Avertissements concernant les piles

- N'essayez pas d'ouvrir votre produit s'il contient une pile intégrée non remplaçable. N'essayez pas de retirer la pile intégrée. L'un ou l'autre de ces gestes pourraient causer des blessures ou endommager le produit.
- Si votre écouteur est doté d'une pile remplaçable, utilisez uniquement la pile livrée avec le produit. Retirez rapidement la pile lorsqu'elle est usée.
- Ne jetez pas le produit au feu et ne l'exposez pas à une chaleur excédant 40 °C (104 °F).
- Ne tentez pas d'ouvrir ou de perforer la pile. Elle peut contenir des matières corrosives toxiques pouvant causer des blessures aux yeux et à la peau.
- Ne mettez jamais la pile dans votre bouche. Si vous l'avalez, communiquez avec un médecin ou un centre antipoison.
- Gardez toujours les piles hors de portée des enfants.
- Évitez tout contact entre une pile ou un porte-pile et des objets métalliques, tels que des clés ou de la monnaie.
- RECYCLAGE La pile du produit doit être recyclée ou éliminée correctement. Communiquez avec votre centre de recyclage pour le retrait de la pile et son élimination de façon adéquate.



Clarity

6131 Preservation Dr.
Chattanooga, TN 37416
United States

©2016 Plantronics, Inc. Plantronics, Clarity, TL100, the logo design, are trademarks or registered trademarks of Plantronics, Inc. Bluetooth is a registered trademark of Bluetooth SIG, Inc. and any use by Plantronics is under license. All other trademarks are the property of their respective owners.

NEED MORE HELP? CALL 800-426-3738

For a more thorough user manual, go to www._____.