 


# MODEL W-9001

## USER MANUAL for CORDLESS TELEPHONE

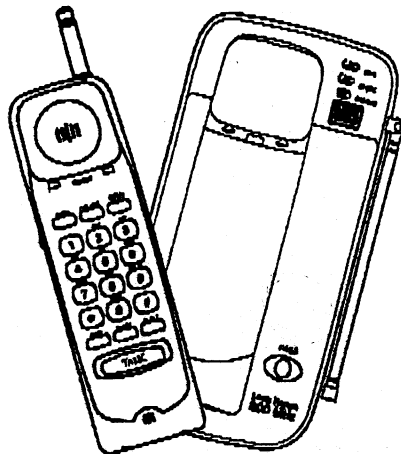

 
Fold open this manual for information about this telephone  
Installation and operation.  
Please read the **IMPORTANT SAFETY INSTRUCTIONS**  
included in this manual.

## INSTALLATION .....



### CAUTION

1. Never install a telephone during a lightning storm.
2. Never install a telephone in a wet location.
3. Never touch uninsulated telephone wires or terminals.
4. Use caution when installing a telephone line.

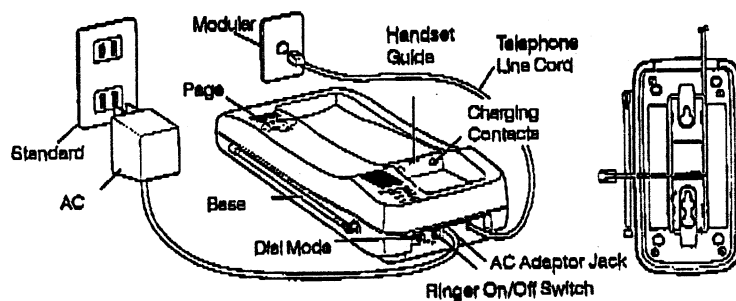

### 120 VOLT OUTLET/TELEPHONE JACK

1. This phone requires a modular phone jack (RJ11) and a standard 120 volt outlet
2. Plug phone directly into outlet.
3. Do not plug other appliances into outlet or have outlet controlled by a wall switch.

**WALL MOUNT INSTALLATION**

Base unit may be mounted on a standard wall plate.

1. Insert AC adaptor into back of base unit.
2. Plug the line cord into modular jack.
3. Mount base on wall plate studs and gently press until the unit locks in place.
4. Plug AC adaptor directly into standard 120 volt outlet.

 
 
**DESK TOP INSTALLATION**

1. Plug the line cord into modular jack.
2. Press unit locking lever clicks.
3. Connect AC adaptor into back of unit and plug directly into standard 120 volt outlet.

## INSTALLATION .....


### ANTENNAS

Adjust base antenna to upright position.

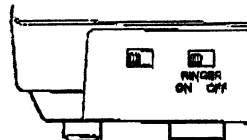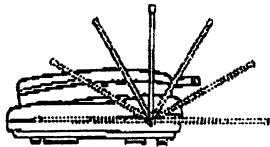

### SET TONE/PULSE SWITCH

 Set switch (back of base) to correct dialing mode TONE or PULSE.

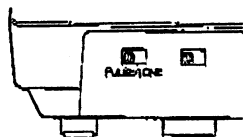


Please check with local phone company if uncertain of type of service.

### RINGER ON/OFF

 Set switch (back of base) to ON or OFF. Ringer switch must be ON for handset to ring during incoming calls.

### RECEIVER VOLUME CONTROL


1. Refer to *Placing a Call* to establish a phone conversation.
2. Press **BOOST** Button.
3. Adjust the rotary **VOLUME CONTROL** to a desired receiving sound level.
4. After hang-up the sound level will go back to normal level.
5. Next time, during a call, you can press **BOOST** button to get your set sound level.

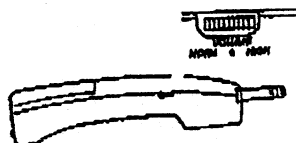

### HANDSET BATTERY CHARGING

The battery pack in the handset must be fully charged 10-14 hours before using the telephone for the first time.

 1. Place handset in base. The **CHARGE LED** on base will light.
2. After batteries are fully charged, check for dial tone by pressing **TALK** on handset.
3. When handset battery gets low, there will be 2 beeps every 30 seconds. The **TALK BUTTON** will flash. Return to cradle for charging.
4. If battery becomes low while you are on a call, you will be disconnected after about 2 minutes. Terminate the call quickly and recharge battery.

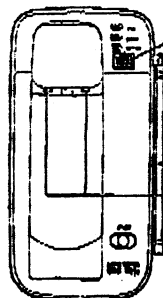


1. Lights with handset in base: Charging
  2. Lights when phone is using: In Use
  3. Flashes: Ringing
- Base Antenna  
Charging Contact

To recharge battery pack, place handset in base and:


1. Make sure contact points are touching and **CHARGE LED** is lit.
2. Be careful not to short battery with conducting materials such as rings, bracelets and keys.

Replace battery every 2 years. Use only a **WALKER EQUIPMENT** approved NiCad battery in your cordless phone.

**To Replace Battery:**

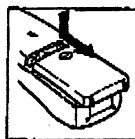 

 1. Remove battery cover.

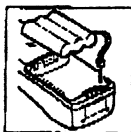

2. Install new battery.



3. Close battery cover.  
Charge 10-14 hours before first use.

**OPERATIONS** .....**40-CHANNEL OPERATION**

The W-9001 cordless telephone automatically searches and selects the clearest of 40 channels when it is being used.

**SECURITY CODE**

The security code prevents your cordless telephone conversation from being accessed by a phone on a different line. Once the handset battery is fully charged, the handset will automatically select the code from a total of over 65,000 combinations. The code is changed every time the handset is placed in the cradle.

If you experience difficulty with placing or receiving calls, a lost security code may be the cause of the problem. When this occurs, the handset can no longer communicate with the base. Reset by placing handset on base for 5-10 seconds. If that does not work, unplug the AC adaptor from the wall outlet. Disconnect the handset battery for 5-10 seconds, then reconnect. Place handset back on base and then replug the AC adaptor.

**PLACING CALL**

1. Press TALK button.
2. TALK BUTTON on handset will light.
3. When you hear a dial tone, place your call.
4. While on a call, if you experience noise or static:
  - a. Press CHANNEL on handset until a clear channel is found; the call will not be interrupted.
  - Or
  - b. Move closer to base.

*Note:* You must be in usable range to change channels. Base antenna should be in upright position.

**RECEIVING A CALL**

1. IF THE HANDSET IS OUT OF THE BASE UNIT, press TALK.
2. IF THE HANDSET IS IN THE BASE UNIT, lift the handset.  
*Do not* press TALK. You will automatically be connected.

**ENDING A CALL**

1. Place the handset in the base or press **TALK** to be disconnected from the line.
2. **TALK BUTTON** on handset will turn off.

**FLASH**

Use the **FLASH** button to activate custom calling services such as Call Waiting or Three-Way Calling (\*Special sub-scripton from your local telephone company required).

**TEMPORARY TONE (\*)**

**PULSE** (rotary) service users may access touch-tone features needed to operate answering machines or use electronic banking, calling cards, etc., by pressing the **TONE (\*)** button. Phone will automatically return to pulse dialing after the call ends.

**OUT OF RANGE**

If you experience static while using the telephone, move closer to the base or change the channel by pressing the channel button.

**REDIAL/PAUSE**

Redial Feature:

This button contains two features

- (1) Redial the Last dialed number.
- (2) A 4-second pause.

Last number dialed (up to 32 digits) is stored in redial memory until another number is dialed.

1. Press **TALK** on handset.
2. When you hear a dial tone, press **REDIAL/PAUSE**.

Pause Feature:

A 4-second **PAUSE** may be inserted into the speed dialing of telephone numbers. Press **PAUSE/PAUSE** button at required point during storage of a number in memory.

**BOOST**

Press to toggle **ON/OFF** the **RECEIVER VOLUME CONTROL** feature during a call.



### PAGE/HANDSER LOCATOR

Send a signal from the base to handset. Press **PAGE** button on base and a series of rings will sound from handset.

To locate the handset (if it is away from the base), press and hold the **PAGE** button for about 5 seconds. A series of rings will sound for approximately 60 seconds. Return the handset to the base or press the **TALK** button to cancel the page.

### MEMORY FEATURE

Store up to 10 numbers in memory for quick dialing.

#### To Program Frequently Called Numbers

1. Pick up handset, with **TALK** off.
2. Press **MEMO (MEMORY)** button.
3. Dial phone number (up to 16 digits).
4. Press **MEMO** button again.
5. Press a number key (0-9) for the memory location where the number is to be stored.

6. A long beep will confirm the number has been successfully stored.

7. Record numbers to be speed dialed on memory index label, which can be adhered to the base or other desired locations.

 
*Note:* If a 17th digit is accidentally pressed or a pause of more than 30 seconds occurs during programming, an error tone will sound. Try again. Each **TONE (\*)** or **PAUSE** entered uses one of the 16 available memory digits.

#### CHANGE STORED NUMBER

Replace a stored number by programming a new number in its place.

#### DIALING A NUMBER STORED IN MEMORY

1. Lift handset. Press **TALK**.
2. With **TALK** button lit, press **MEMO**.
3. Press memory location (0-9) assigned to number being called.

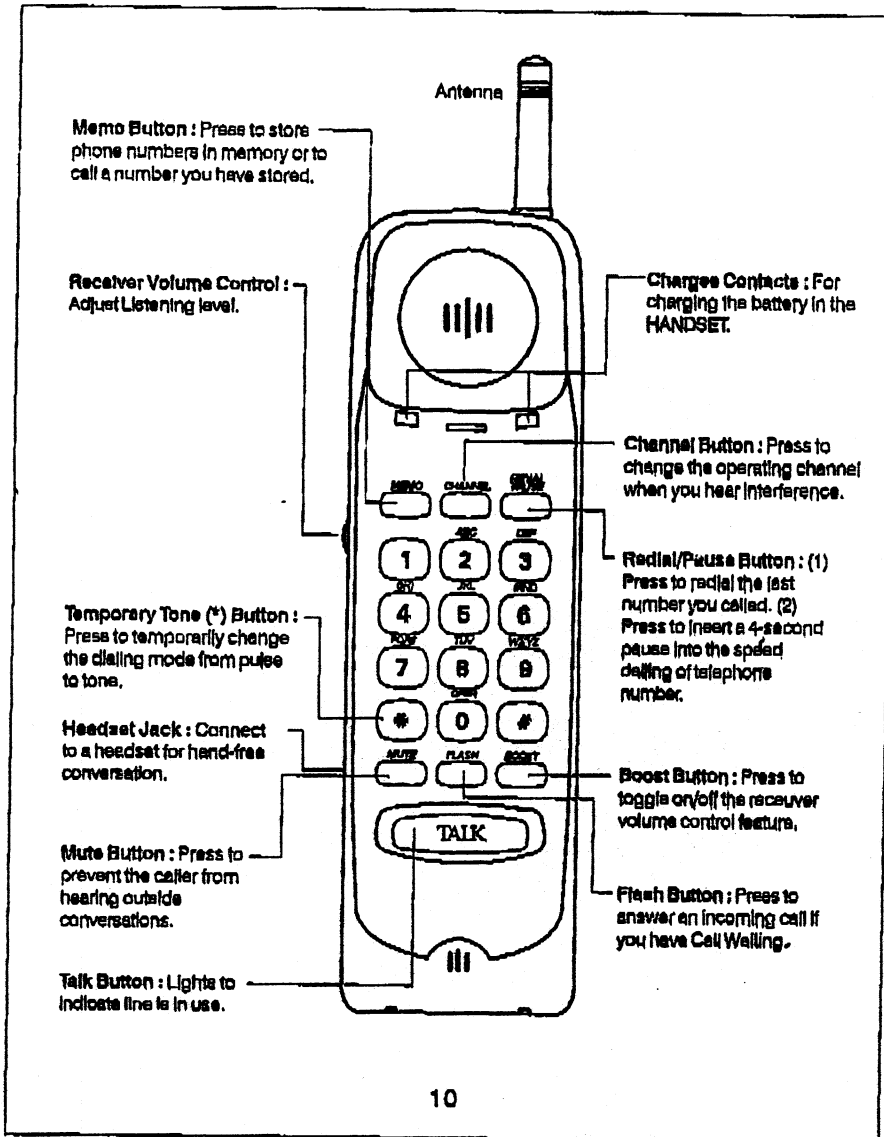

## TROUBLESHOOTING .....

If you experience difficulty operating your cordless phone, try the suggestions below.

If the trouble persists, call the **WALKER EQUIPMENT** Retail Sales Toll Free Help Line at 1-800-XXX-XXXX, Monday - Friday between the hours of 8:30 a.m.-4:30 p.m. (EST)

### THE UNIT WILL NOT OPERATE/ NO DIAL TONE:

- Make sure TALK BUTTON is lit.
- Make sure AC adaptor is plugged into base unit and wall outlet.
- Make sure telephone line cord is plugged into wall jack.
- Make sure base antenna is in upright position.
- Make sure handset battery is fully charged.
- Make sure you have selected correct dialing mode, tone (touch) or pulse (rotary).
- Make sure you are within usable range of the base station.

- Reset security code by placing handset in base for 5-10 seconds.

### THE PHONE DOES NOT RING WHEN YOU RECEIVE A CALL:

- Make sure the RINGER switch on base is turned ON.
- Make sure AC adaptor is plugged into base unit and wall outlet.
- Make sure telephone line cord is plugged into wall jack.
- Make sure you are within usable range of the base station.
- You might have too many extension phones on your line. Try unplugging a few.

### NOISE, STATIC, INTERFERENCE OR OTHER CALLS HEARD WHILE USING HANDSET:

- Try changing channels.
- Make sure base antenna is in upright position.
- Make sure you are within usable range of the base station.

- Make sure AC adaptor is not plugged into wall outlet with other appliances.

- Try relocation base unit to another location.

- Make sure handset battery is fully charged.

#### **PHONE WILL NOT HOLD CHARGE:**

- Make sure charging contacts on the handset and base are free of dust and dirt. Clean contacts with a soft cloth.

- Make sure CHARGE LED on base is lit when handset is in cradle.

- If necessary, replace handset battery. (See Handset Battery Charging)

#### **DIFFICULTY IN PLACING OR RECEIVING CALLS:**

- Move closer to base and try again.

- If moving closer doesn't work, you may have lost security code.

Reset code by placing handset back on base for 5-10 seconds. (See Security Code section)

- Make sure you have selected correct dialing mode, tone or pulse.

- Make sure AC adaptor is not plugged into wall outlet with other appliances. Disconnect for 5-10 seconds then reconnect. Place handset back on base and then replug AC adaptor.

- Make sure handset battery is fully charged.

## FCC WANTS YOU TO KNOW .....

This equipment complies with Part 68 of the FCC rules. On the bottom of the base of this equipment is a label that contains, among other information, the FCC Registration Number, Ringer Equivalence Number (REN) and the Universal Service Order Code (USOC), which is RJ-11C, for this equipment. You must, upon request, provide this information to your telephone company.

The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the REN of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

If your telephone equipment causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in

advance. But if advance notice isn't practical, you will be notified as soon as possible. You will be informed of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service. If you experience trouble with this telephone equipment, disconnect from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs.

This equipment is hearing aid compatible.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the

limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. ( This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.) However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

**IMPORTANT SAFETY INSTRUCTIONS .....**

**BEFORE USING YOUR TELEPHONE EQUIPMENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSONS, INCLUDING THE FOLLOWING:**

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
4. Do not use this product near water; for example, near a bathtub, wash bowl, kitchen sink, laundry tub, swimming pool, or in a wet basement.
5. Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to the product.
6. Slots or openings in the cabinet and the back and bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be damaged by persons walking on it.
9. Do not overload wall outlets extension cords, as this can result in fire or electric shock.
10. Never push objects of any kind into this product through cabinet

slots, as they may touch dangerous voltage points or short out parts. This could result in fire or electric shock.

11. Never spill liquid of any kind on this product.

To reduce the risk of electric shock, do not disassemble this product. Instead, when some repair work is required, take the unit to a qualified technician. Opening or removing covers may expose you to dangerous voltages or other risks.

- Incorrect reassembly can cause electric shock when the appliance is subsequently used. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power supply cord
- a. or plug is damaged or frayed.
  - b. If liquid has been spilled into the product.
  - c. If the product has been to rain exposed or water.
  - d. If the product does not operate normally and proper operating instructions have been followed, adjust only those

controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.

- e. If the product has been dropped or cabinet has been damaged.
  - f. If the product exhibits a distinct change in performance.
13. Avoid using telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
14. Do not use the telephone to report a gas leak in the vicinity of the leak.

#### **SAVE THESE INSTRUCTIONS**



### SAFETY INSTRUCTIONS FOR BATTERIES.....

**CAUTION:** To reduce the risk of fire or personal injury, read and follow these instructions.:

battery or conduction material may overheat and cause burns.



CONTAINS NICKEL-CADMIUM BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY.

- 5. Charge the battery (ies) provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.
- 6. Observe proper polarity orientation between the Battery Pack and battery charger.

- 1. Use only a **WALKER EQUIPMENT** approved battery pack in the handset of your cordless telephone.

FOR HANDSET UNIT:

- a. GP40AAK 3.6V 400mAh  
GPI International Ltd. or
- b. D-2/3AA400BC 3.6V  
400mAh.,BYD Battery Co. Ltd.

- 2. Do not dispose of the battery in a fire, as it may explode. Check with local codes for possible special disposal instructions.
- 3. Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes and skin. It may be toxic if swallowed.
- 4. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets and keys. The



The RBRC Seal on the nickel-cadmium (Ni-Cd) battery indicates that **WALKER EQUIPMENT** Retail

Sales is voluntarily participating in a program to collect and recycle these batteries at the end of their useful life, when taken out of service within the United States. Please call the RBRC toll-free at 1-800-8-BATTERY or contact your local recycling center for information on where to return the spent battery.

RBRC is a trademark of the Rechargeable Battery Recycling Corporation.