

APPENDIX 5
USERS MANUAL

USER INSTRUCTIONS FOLLOW THIS SHEET

USERS MANUAL
FCC ID: BBOFRS100

APPENDIX 5

Cobra

Cobra MICROTALK™

Cobra Electronics Corporation
6500 West Cortland Street
Chicago, IL 60707

If You Think You Need Service

For technical assistance, please call our Automated Help Desk which can assist you by answering the most frequently asked questions about Cobra products.

(773) 889-3087

24 hours a day, 7 days a week.

A Consumer Service Representative can be reached through this same number 8:00 am - 8:00 pm, Monday through Friday, CST.

Technical assistance is also available on-line in the Frequently Asked Questions (FAQ) section of www.cobraelec.com or by e-mail to productinfo@cobraelec.com

If you think you need service call 1.773.889.3087

If your product should require factory service please call Cobra first before sending your unit in. This will ensure the fastest turn-around time on your repair.

 
You may be asked to send your unit to the Cobra factory. It will be necessary to furnish the following in order to have the product serviced and returned.

1. For Warranty Repair include some form of proof-of-purchase, such as a mechanical reproduction or carbon or a sales receipt. If you send the original receipt it cannot be returned.
2. Send the entire product.
3. Enclose a description of what is happening with the unit. Include a typed or clearly print name and address of where the unit is to be returned.
4. Pack unit securely to prevent damage in transit. If possible, use the original packing material.
5. Ship prepaid and insured by way of a traceable carrier such as United Parcel Service (UPS) or First Class Mail: to avoid loss in transit to: Cobra Factory Service, Cobra Electronics Corporation, 6500 W. Cortland St., Chicago, IL 60707.

6. If the unit is in warranty, upon receipt of your unit it will either be repaired or exchanged depending on the model. Please allow approximately 3 to 4 weeks before contacting us for status. If the unit is out of warranty a letter will automatically be sent informing you of the repair charge or replacement charge. If you have any questions, please call 1.773.889.3087 for assistance.

Cobra Electronics Corp © 1998
Printed in Thailand
Part No. 490-278-P-001

Operating Instructions for your Cobra MicroTalk FRS 100 Family Radio Service 2 Way Radio

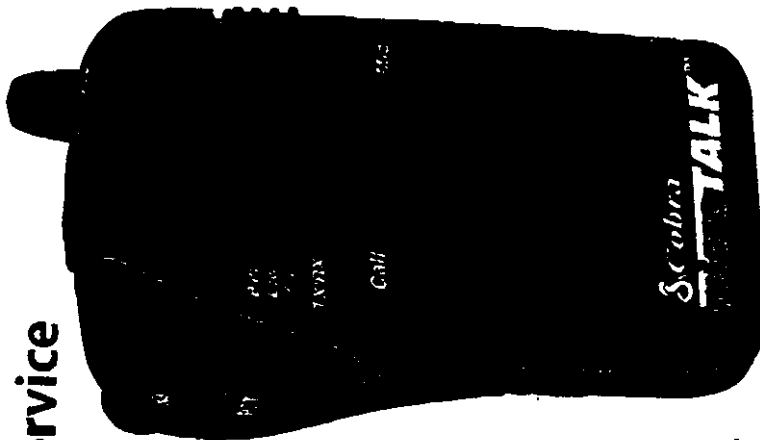

Ingenious Products for Easier Communication.™

The Family Radio Service Story

The Family Radio Service Story

Ever wish you could talk to someone who wasn't within earshot? Like contacting ski partners back at the lodge? Or letting a friend know how to find you in a busy mall? Cobra's MicroTalk FRS 100 is a great way for friends or family to increase their fun-and safety-by staying in touch while on the go.

 
The FCC (Federal Communications Commission) has created 14 license free frequency bands, or channels, called Family Radio Service (FRS) frequencies. Two of these 14 channels (channel 8 and 13) are easily accessed on your Cobra FRS radio. These channels are in the UHF (Ultra High Frequency) band which means great penetration through buildings, thick forests, hills, and other dense structures. They are also FM (Frequency Modulation) signals which means crystal clear reception even in crowded noisy environments.

FCC Warnings

Replacement or substitution of transistors, regular diodes or other parts of a unique nature, with parts other than those recommended by Cobra, may cause a violation of the technical regulations of part 95 of the FCC Rules, or violation of Type Acceptance requirements of Part 2 of the Rules.


Included with your MicroTalk

- ▶ Removable Belt Clip
- ▶ Wrist Strap



Controls and Indicators

 - 1 Retractable Antenna
- 2 Belt Clip
- 3 On/Off Volume Control
- 4 Speaker Jack
- 5 Microphone Jack
- 6 Battery Charge Pads
- 7 TX (talk)/Bat Low (batteries are low) indicator
- 8 Call/Ring Button
- 9 Channel Select Button
- 10 Microphone
- 11 Maximum Range Extender Button
- 12 PTT (Push To Talk) Key
- 13 Battery Chamber

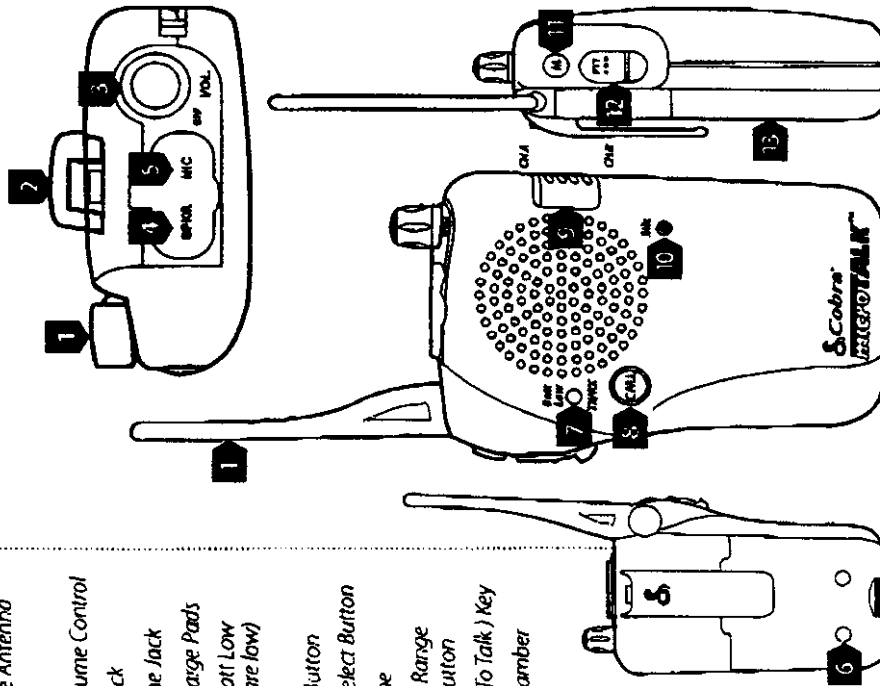

Thank you for purchasing the Cobra FRS 100 2-way Radio. Properly used, this Cobra product will give you many years of reliable service.

Customer Support

Should you encounter any problems with the product or not understand its many features, please refer to this owner's manual. If, after referring to the manual, you still need help, call Cobra Customer Service at 773.889.3087.

Cobra Customer Service
Live operators are available
M-F 8:00 am - 8:00 pm CST
at: 773.889.3087

Automated Technical Assistance available 24 hours a day, seven days a week.
E-mail questions to:
productinfo@cobraelec.com

Cobra on the World Wide Web
Frequently Asked Questions (FAQ) can be found on-line at: www.cobraelec.com

A3

A2

How to Use Your Cobra **microTALK™ 2-Way Radio**

Contents

Features.....	1
The FRS Story.....	A1
FCC Warnings.....	A1
Included Accessories.....	A2
Controls & Indicators.....	A3
Our Thanks to You.....	A3
Customer Support.....	A3
Operating your MicroTalk.....	
Battery Installation.....	2
Turning On.....	4
Auto Squelch.....	4
Maximum Range Extender.....	4
Select Channel.....	5
Auto Battery Save.....	5
Calling Another Party.....	6
Talking To Another Party.....	7
Talk Confirmation Tone.....	8
Listening For Another Party.....	8
MicroTalk Range.....	9
Making Life Easier And Safer.....	10
External Microphone/Speaker Jack.....	12
Frequency Ranges.....	13
Caring for Your MicroTalk.....	14
MicroTalk Specifications.....	16
Limited Two Year Warranty.....	18
Optional Accessories.....	19
Order Form.....	20
If You Think You Need Service.....	Back Cover

Features of This Product

- UHF FM Frequencies
- No License Required
- No Air Time Fees
- Up to 2 mile range
- 2 User Selectable Channels
- Talk Confirmation Tone
- Call/Ring Button
- Recharging Pads
- Retractable Antenna
- Battery Saver Circuitry
- Auto Squelch
- Wrist Strap/Belt Clip

 
Operation

Operation


Battery Installation

Note
Batteries not included with Microtalk 2-way radio.


Install Batteries

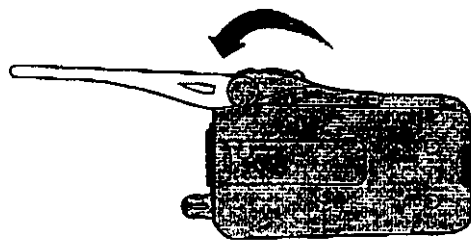

1 Clear antenna.

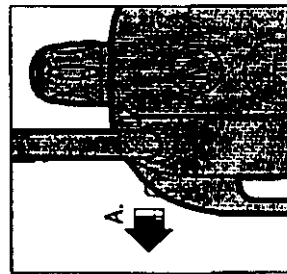 

 2 Remove belt clip by (A.) pulling tab out and (B.) Sliding belt clip up and off unit.

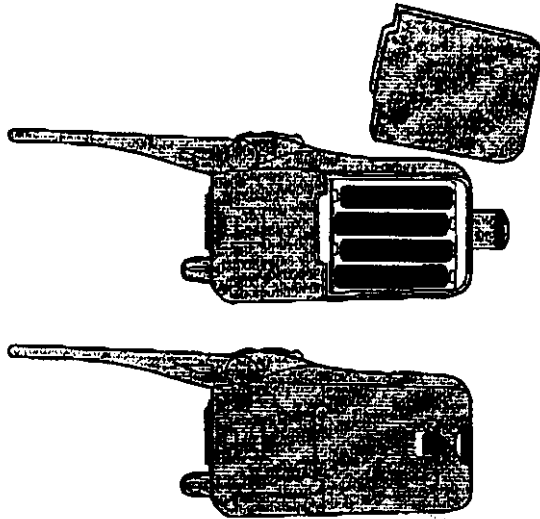

1 Pull lock tab down to remove battery cover.

2 Insert four "AAA" batteries. Position batteries according to polarity markings.

Note
Always use high quality alkaline or NiCad batteries. Incorrect positioning can damage both the batteries and the unit.


Note
Only the NiCad battery pack can be recharged. See Accessories on page 19. Charge ports for recharging NiCad battery pack are located on back of unit.

 
Note
When batteries are low or need charging the BATT LOW indicator will remain on. Replace alkaline batteries or recharge NiCad battery pack.

Operation

Operation

Turning On Your MicroTalk

Rotate ON - OFF Volume Control  clockwise. An audible "tone" will indicate the unit is on and the TX/RX indicator on the front of the unit will illuminate green.

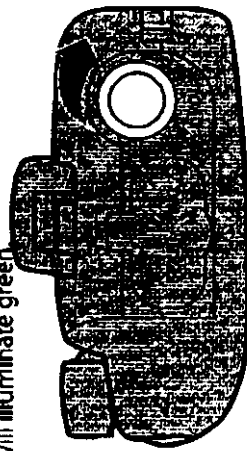

Note
Whenever the unit is on you can receive communications.

Auto Squelch

Your MicroTalk is equipped with Auto Squelch, which automatically shuts off weak transmissions and unwanted noise due to terrain conditions or if you have reached your range limit.

 
Maximum Range Extender

Note
To learn more about the range of your MicroTalk, see page 9.

Range is dependant on battery condition and geographic territory.

Select Channel

1 Turn on the MicroTalk 2-Way Radio.

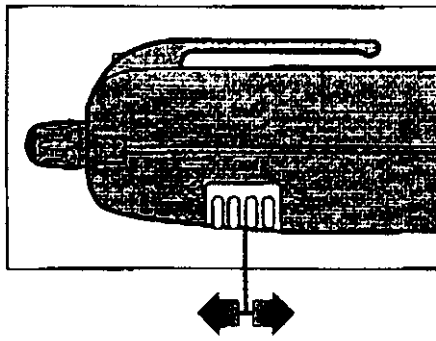

2 Select channel by moving the channel button up or down. Select either Channel A or B for optimum clarity.

Note
Units must be on same channel to communicate. Choose Channel A or B.

 
Note
You can also communicate with other 2-way radios (some have as many as fourteen channels).

Channel A = Channel 8 on other units
Frequency is 467.5625
Channel B = Channel 13 on other units
Frequency is 467.6875

Auto Battery Save

Your FRS 100 has a unique circuit designed to extend battery life. If there are no transmissions within 10 seconds, the unit will automatically switch to battery save mode.

1 Push and hold the M/RANGE EXTENDER button to allow all signals to enter.

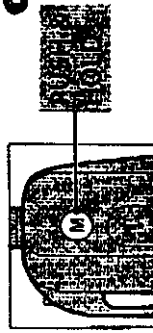


Operation

Operation

Calling Another Party

 To alert another party that you wish to communicate:

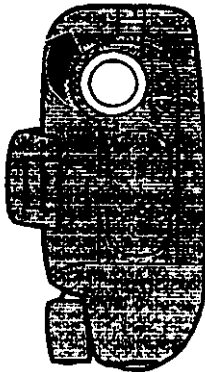


- 1 Turn on your MicroTalk 2-way radio. An audible "tone" will indicate the unit is on and the TX/RX indicator on the front of the unit will illuminate green.

Note
Units must be on same channel to communicate. Choose Channel A or B.

Note
You can also communicate with other 2-way radios (some have as many as fourteen channels).
Channel A = Channel 8 on other units
Frequency is 467.5625
Channel B = Channel 13 on other units
Frequency is 467.6875

Calling Another Party

 
Push and release CALL button. The unit you are calling will hear a two second ring/tone.

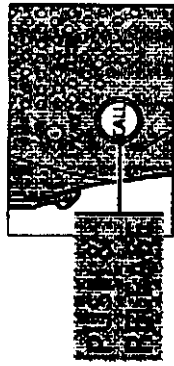

Note
Your incoming Call signal level is dependent on your unit volume setting.

Talking To Another Party

 
To send your outgoing message:

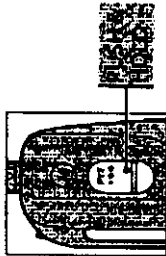

- 1 Push and hold PTT button.
- 2 The TX/RX indicator will illuminate red.
- 3 Release PTT button and listen for response.
- 4 Hold mic about 2 inches from mouth. Speak in a normal voice.

Note
While PTT button is depressed you cannot receive incoming calls.

 - 1 Select Channel A or Channel B by moving the CHANNEL button up or down.
- 2 Place antenna in full upright position.

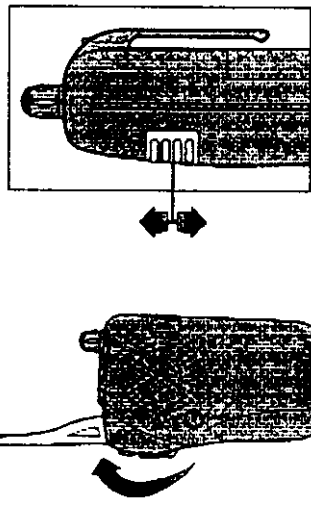


Operation

Operation

Talk Confirmation Tone

 Talk Confirmation Tone

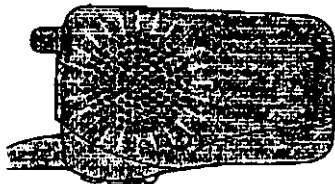


Your listener will hear an audible tone when you release the PTT button.

This alerts the other party that you are finished talking and it's OK for them to begin talking.

Listening For Another Party

 Listening For Another Party When finished talking:

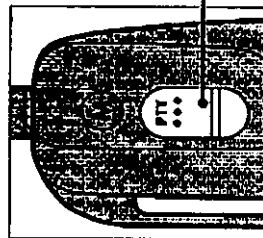


Note
While PTT button is depressed you cannot receive incoming calls.

- 1 Release PTT button to receive incoming transmissions.


Your MicroTalk is always in listening mode when the PTT button is not pressed.

MicroTalk Range

 
Your MicroTalk Radio has a range of up to 2 miles. This effective range can be shortened under some conditions.

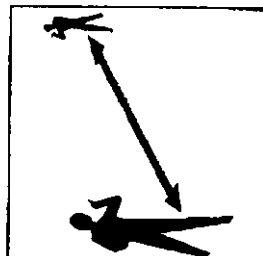

 - 1. Under flat, open conditions you will experience the MicroTalk's maximum range.

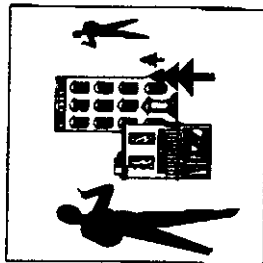

 - 2. Range can be reduced by buildings and foliage in the path of the signal.

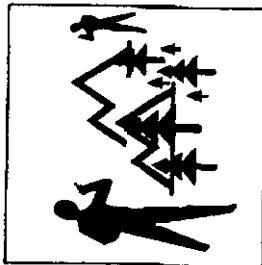

- 3. Range will be further reduced by dense foliage and hilly terrain.

To achieve maximum range the auto squelch can be overridden. Refer to Maximum Range Extender section on page 4.


Making Life Easier and Safer

MicroTalk 2-Way Radio Can Make Life Easier and Safer


MicroTalk 2-Way Radio Can Make Life Easier and Safer

As you become familiar with your MicroTalk Radio you will find many of your own uses for the unit.

 
Some suggestions include:

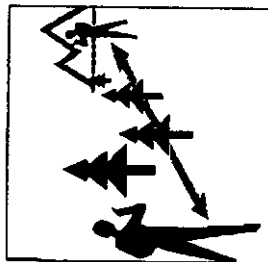

 
1. Talking with fellow hikers.

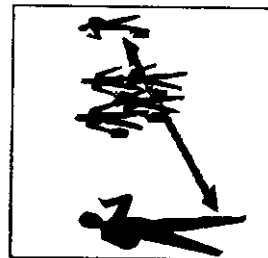

 
2. Keeping track of the kids in a shopping mall.

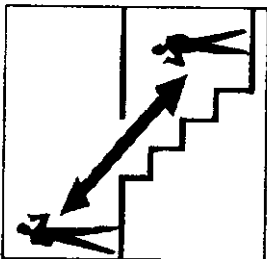

 
3. Communicating between basement and first, second or third floor.

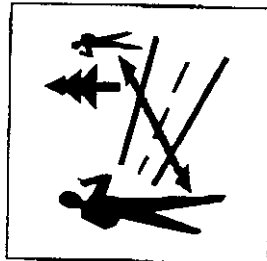

 4. Talking to a neighbor or a friend.

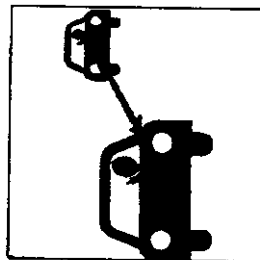

 5. Checking on traveling companions in another car.

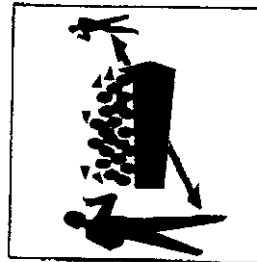

6. Agree on a meeting spot after an event.

External Microphone/Speaker Jack

Frequency Range

 
External Microphone/Speaker Jack

Note


External microphone/speaker is not included with the unit. See Accessories on page 19 for available units.

External Microphone/Speaker Jack
Your MicroTalk 2-Way Radio can be fitted with an external microphone/speaker, (not included) freeing your hands for other tasks.

To attach the external microphone/speaker:

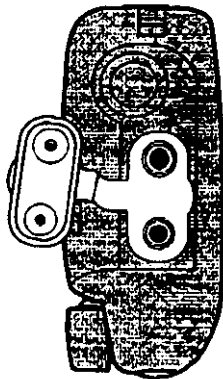

1 Open SPKR/MIC tab on top of unit.

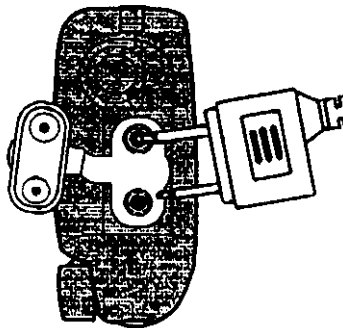 

2 Insert jack into the SPKR/MIC ports.

The MicroTalk unit represents one of the most advanced FM two-way radios used.

Frequency Ranges

Channel	FRS Channel	Channel Frequency In MHz
A	8	467.5625
B	13	467.6875

Caring for Your **microTALK™** Radio

Caring for Your MicroTalk Radio

The MicroTalk 2 Way Radio will give you years of service if cared for properly.

 
Here are some suggestions:

Note


Modifying or tampering with the radio's internal components can cause malfunction and will invalidate the warranty. If your radio is not performing as it should, please call Cobra at 773.889.3087. Do not return the unit to the retailer.




1. Handle unit gently.

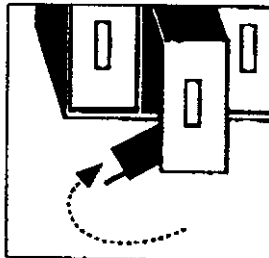

 2. Keep away from dust.

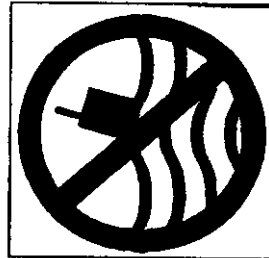

 3. Never place the unit in water or in a moist place.

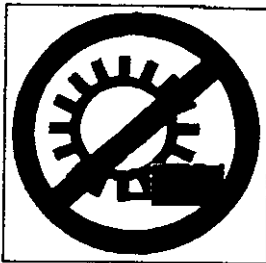

4. Avoid exposure to extreme temperatures.

MicroTALK™ Specifications

MicroTALK™ Specifications

I. GENERAL SPECIFICATIONS

A. GENERAL
CH=14 CHANNELS WITHIN 462-467 MHz

B. RECEIVER

	UNIT	NOMINAL	LIMIT
1. SENSITIVITY FOR 12 DB SINAD FOR CALL SIG. DETECTION	uV	0.25	0.4
	uV	0.2	0.4
2. MAX. AUDIO OUTPUT @ 10% THD	MIW	100	±10
3. MAX. S/N RATIO @ 1mW RF INPUT	DB	45	40
4. SQUELCH			
a) SENS.	uV	0.2	0.3
b) ATTACK TIME	ms	120	150
c) CLOSING TIME	ms	200	250
5. AUDIO FREQUENCY RESP.			
@ 300 HZT	DB	-6	±3
@ 3000 HZ	DB	-6	±3
6. SIGNAL DISPLACEMENT BW	+/-HZ	5	4
7. ADJACENT CH. REJECTION	DB	55	50
8. INTERMODULATION REJECTION	DB	55	50
9. SPURIOUS RESPONSE REJECTION	DB	65	60

C. TRANSMITTER

	UNIT	NOMINAL	LIMIT
1. EFFECTIVE RADIATED POWER	mW	500	300
2. CARRIER FREQ. STABILITY	KHZ	500	1000
3. MODULATION LIMITING	3.0	5.0	
4. CARRIER ATTACK TIME	ms	80	100
5. AUDIO FREQUENCY RESPONSE			
@ 300 HZ	DB	-6	±3
@ 3000 HZ	DB	-6	±3
6. AUDIO DISTORTION	%	3	5
7. HUM NOISE	DB	45	40
8. TRANSIENT FREQ. BEHAVIOR			
a) TX ON	ms	30	35
b) TX OFF	ms	5	10

D. POWER SUPPLY

1. BATTERY LIFE (1:1:0 RATIO)	HR	24	20
2. BATTERY	V	4.8	

Limited Two Year Warranty

COBRA ELECTRONICS CORPORATION warrants that its COBRA CB Radios, and the component parts thereof, will be free of defects in workmanship and materials for period of two (2) years from the date of first consumer purchase. This warranty may be enforced by the first consumer purchaser, provided that the product is utilized within the U.S.A.

 
COBRA will, without charge, repair or replace, at its option, defective CB radios, products or component parts upon delivery to the COBRA factory Service Department, accompanied by proof of the date of first consumer purchase, such as a duplicated copy of a sales receipt.

You must pay any initial shipping charges required to ship the product for warranty service, but the return charges will be at Cobra's expense, if the product is repaired or replaced under warranty.

Exclusions: This limited warranty does not apply; 1) to any product damaged by accident; 2) in the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs; 3) if the serial number has been altered, defaced or removed; 4) if the owner of the product resides outside the U.S.A.


All implied warranties, including warranties of merchantability and fitness for a particular purpose are limited in duration to the length of this warranty. COBRA shall not be liable for any incidental, consequential or other damages, including, without limitation, damages resulting from loss of use or cost of installation.

Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

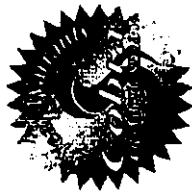

Cobra Electronics Corporation
6500 West Cortland Street
Chicago, Illinois 60707

 Optional Accessories

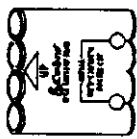


(1) Ni-Cad Rechargeable Battery Pack
High performance battery pack for multiple recharging
FA-8P \$34.95




2 Port Desktop Charger
Charges your Micro Talk Radio and (1) NiCad battery pack
FA-CH \$24.95



 
Camouflage Cover Carrying Case
Durable nylon case perfectly fits your FRS radio
FA-CC \$19.95

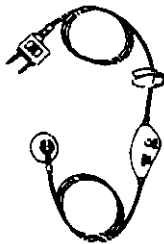

 Ear Bud Mik with PTT
Integrated speaker/mic adapter that fits in your ear. Includes shirt clip
MA-EBA \$29.95

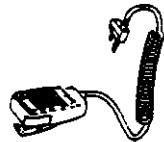

 Lapel Microphone
Remove microphone/speaker connection.
CA-40 \$75.95



Replacement Belt Clip
FA-8C \$4.95



Vox Mik
VOX (Voice Operated Transmitter) adapter allows you hands-free operation.
MA-VOX \$49.95

You Can Find These Fine Accessories At Your Local Cobra CB Dealer
If you wish, you can order directly from Cobra.

Order by phone
Call 1.773.889.3087
(Press 1 from the main menu) 8 a.m.-8 p.m. M-F CST.)

Order by mail or fax
Please fill out order form on next page, and mail/fax directly to Cobra.

Accessory Order Form

Item #	Description	Cost Ea.	Qty.	Amount
EA-8P	Ni-Cad Rechargeable Battery Pack	\$34.95		
EA-EBM	Ear Bud Mic with PTT	\$29.95		
EA-VOK	Yew Mic	\$49.95		
EA-CH	2 Port Desktop Charger	\$24.95		
EA-40	Lapel Microphone	\$25.95		
EA-CC	Camouflage Cover Carrying Case	\$19.95		
EA-BC	Replacement Belt Clip	\$4.95		
Subtotal				
(Tax If applicable)				
Shipping/handling				\$4.00
Total				

Prices subject to change without notice.

Tax Table
 Illinois residents add 7%
 California residents add 2% (2.5% cash)
 Chicago residents add 1% (2.5% cash)
 Indiana residents add 7%
 Michigan residents add 4%
 Minnesota residents add 6%
 Ohio residents add 6%
 Wisconsin residents add 7%

For credit card orders fill out order form and fax to: 1.773.622.2269 or call 1.773.889.3087 (Press 1 from the main menu) 8:00 am - 8:00 pm, MT-F, CST

Please print clearly

Name _____
 Address (No P.O. Box) _____
 City _____ State _____
 ZIP _____
 Telephone (____) _____
 Credit Card No. _____ Exp. Date _____
 Customer Signature _____
 Circle One: Visa MasterCard Discover

Allow 4 to 6 weeks for delivery. Offer valid in Continental U.S. only.

APPENDIX 6
TRANSMITTER ALIGNMENT

ONE (1) PAGE ALIGNMENT PROCEDURE FOLLOWS THIS SHEET

TRANSMITTER TUNE-UP PROCEDURE
FCC ID: BBOFRS100

APPENDIX 6

7. Alignment instructions

WARNING

Any repairs or adjustments should be made under the supervision of a qualified radio-telephone technician.

TRANSMITTER

1. Power Supply Voltage

The Power supply voltage should be set for 6.0 VDC measured at the radio during transmit. Periodically check the power supply voltage during the alignment procedure.

2. Frequency Setting

- A. Connect a frequency counter or Communications Service Monitor to the antenna connector through an RF power attenuator (5 watt minimum rating, 20 dB minimum attenuation).
- B. Depress the PTT switch.
- C. Adjust the TCXO-1 trimmer capacitor such that the output frequency is equal to the channel frequency with a maximum error of ± 200 Hz.
- D. Release the PTT switch.

3. Output Power Alignment.

- A. Set the power supply voltage for 6.0 VDC.
- B. Connect a Communications Service Monitor or a watt meter and dummy load to the antenna connector.
- C. Depress the PTT switch.
- D. To be convinced for 0.5 Watt(50 ohm load) output power with a maximum error of ± 0.15 Watts.
- E. Release the PTT switch.

4. Deviation Adjustment.

- A. Connect an audio generator .
The audio frequency should be set at 1 KHz.
- B. Connect an FM deviation meter or Communications Service Monitor to the antenna connector through an RF power attenuator (5 watt minimum rating, 20 dB minimum attenuation). Set the monitor to read peak deviation.
- C. Depress the PTT switch.
- D. Adjust RV3 for ± 2.5 KHz maximum deviation.
- E. Release the PTT switch.

APPENDIX 7

CIRCUITS AND DEVICES TO STABILIZE FREQUENCY

SYNTHESIZER

A phase locked loop (PLL) circuit establishes and stabilizes operating frequency.

The data for producing necessary frequencies is established by the CPU on the digital board.

The frequency stability of the Tx/Rx is maintained by the TCXO, which generates a stable frequency of 12.8 MHz.

APPENDIX 8

CIRCUITS TO SUPPRESS SPURIOUS RADIATION
AND LIMIT MODULATIONCircuitry to Suppress Spurious Emissions

Output from the final RF power amplifier, Q501, and presented to a low-pass filter configured in a "pi" network consisting of L25, C311, L26, C12, C313, L27, C315, C316 and R306.

Circuitry to Limit Modulation and Audio Low Pass Filter

Microphone signal is amplified limited to prevent deviation over 2.5 kHz, and applied to a 3 kHz low-pass filter configured around IC6.

CIRCUITS TO SUPPRESS SPURIOUS
RADIATION AND LIMIT MODULATIONFCC ID: BBOFRS100
APPENDIX 8