

How to Use Your Cobra *microTALK*™ 2-Way Radio

Contents

Features1
Family Radio ServiceA1
 FCC Warnings
 Included Accessories
Controls & Indicators.....A2
Our Thanks to You.....A3
 Customer SupportA3
Operating your microTALK
 Battery Installation.....2
 Turning On.....3
 Illuminating the Display3
 Auto Squelch.....4
 Maximum Range Extender/Auto Monitor.....4
 Select Channel.....5
 Select CTCSS Subcode.....5
 Calling Another Party6
 Talking To Another Party6
 Roger Beep Confirmation Tone.....7
 Listening For Another Party7
 Lock Function.....8
 microTALK Range.....9
 Making Life Easier And Safer.....10
 microTALKSNAP Removable Front.....11
 External Microphone/Speaker Jack.....12
Caring for Your microTALK14
Frequency Ranges16
microTALK Specifications.....16
Limited Two Year Warranty.....18
Optional Accessories.....19
Order Form20
If You Think You Need Service.....Back Cover

Features of This Product

- Two-way radio with up to a 2 mile range
- 14 channels
- 38 Subcodes
- Backlit LCD
- Roger beep confirmation tone
- Call feature
- SuperFlex™ antenna
- Water Resistant
- Speaker/Microphone jacks
- Belt clip
- Wrist strap
- Lock Function

Operation


Battery Installation

Note

Batteries are not included with microTALK 2-way radio. Always use 3 high quality AA alkaline batteries or optional battery pack (sold separately).

Only the Cobra NiMH battery (Part #FA-AA) pack can be recharged.

 
Note

When batteries are low the  indicator will blink.

Note

Visit Cobra Electronics (www.cobraelectronics.com) for information about optional battery pack and desktop charger accessories.

Install Batteries

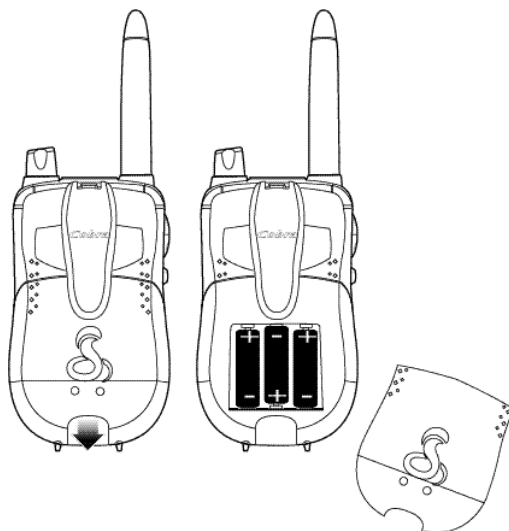


1 Pull lock tab down to remove battery cover.

2 Insert three "AA" batteries. Position batteries according to polarity markings.

Operation

 Turning On Your microTALK

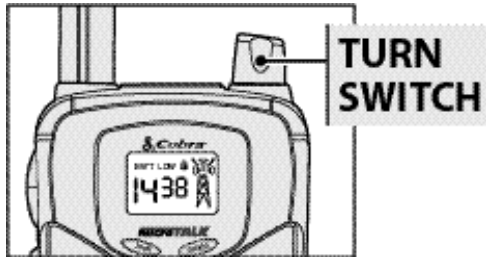


- 1 Turn the On/Off/Volume switch. An audible "tone" will indicate the unit is on.

Turning On Your microTALK

Note
Whenever the unit is on you can receive communications.

 Illuminating the Display

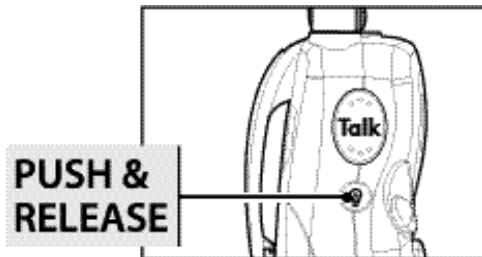

- 1 Push and release  LIGHT/MAX RANGE button to illuminate display for ten seconds.

Operation

Auto Squelch

Auto Squelch

Your microTALK is equipped with Auto Squelch, which automatically shuts off weak transmissions and unwanted noise due to terrain conditions or if you have reached your range limit.

Maximum Range Extender

 
Maximum Range Extender

Auto Squelch can be temporarily removed to allow all signals to enter (Maximum Range Extender).

Note

To learn more about the range of your microTALK, see page 9.

Range is dependent on battery condition and geographic terrain.

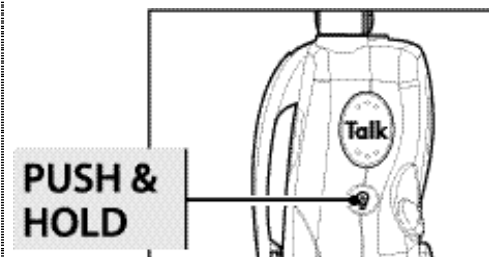

① Push and hold  LIGHT/MAX RANGE button to allow all signals to enter.

Auto Monitor

Auto Monitor

When the signal you want to hear is consistently weak, you may place the radio in Maximum Range mode without having to constantly hold the button: Press and hold the Maximum Range Extender button for five seconds. Two beeps confirm Auto Monitor is on. To return to normal operation, momentarily press the Maximum Range Extender button again or change channels.

Operation

Select Main Channel (1-14)

- 1 Turn on the microTALK 2-Way Radio.



- 2 Select any of the 14 channels by pushing the channel up or down buttons.

Select CTCSS Subcode (00-38)

- 1 Press the mode button. After a short delay, small numbers will flash next to the channel display LCD indicating the subchannel.



- 2 Select subcode number by moving the channel button up or down.
- 3 When the desired code is displayed push the mode button and release. An audible tone will confirm your selection.

Select Channel

Note

Units must be on same channel and subcode to communicate.

Note

Channels 8-12 generally are less used and give better results for communications in most areas.

Note

Push and hold the channel button for fast channel advance.

Select CTCSS Subcode

Note

Selecting a CTCSS subcode will allow you to only hear conversations on that selection. For example, you may be with a group of friends. If all of you select channel 7 and subcode 1, you will hear your friends but will not hear anybody else on channel 7, subcodes 2 through 38.

Operation

Calling Another Party

 
Note

Both units must be ON and tuned to the same channel.

Your incoming "Call" signal volume is dependent on the unit volume setting.

Calling Another Party

To alert another party that you wish to communicate:

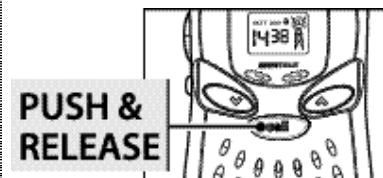


- 1 Push and release CALL button. The unit you are calling will hear a two second ringing tone.

Talking To Another Party

Note



While the TALK button is depressed you cannot receive incoming calls.

 Talking To Another Party

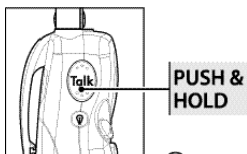

- 1 Push and hold TALK button.

  - 2 The TX/RX indicator will be displayed.

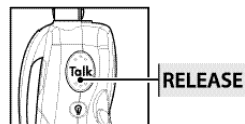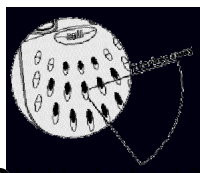

- 3 Hold mic about 2 inches from mouth. Speak in a normal voice.

- 4 Release TALK button and listen for response.

Operation

Roger Beep Confirmation Tone



 
Your listener will hear an audible tone when you release the  TALK button.

This alerts the other party that you are finished talking and it's OK for them to begin talking.


Roger Beep Confirmation Tone

Listening For Another Party

When finished talking:

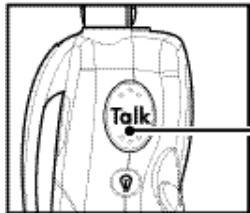

RELEASE


- 1 Release  TALK button to receive incoming transmissions.

Listening For Another Party

Note

While the  TALK button is depressed you cannot receive incoming calls.

EASE

Your microTALK is always in listening mode when the  TALK button is not pressed.

<
:n for

- 2 Adjust volume by turning the On/Off Volume Switch

Operation

Lock Function

 
Note





Call button, Range Extender button and Talk button do not lock and are fully operational while the unit is locked.

The unit cannot lock while in function mode.

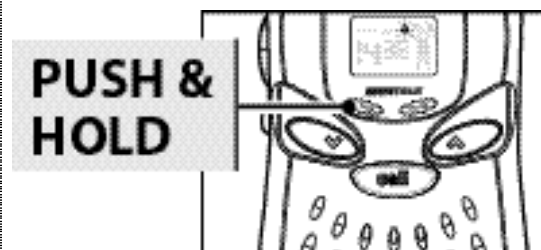Lock Function

The purpose of the LOCK function is to lock most buttons to avoid accidental operation. To engage the LOCK function:

 


- 1 Push and hold Lock  button until  flashes. Channel up/down and Mode buttons are now locked. An audible tone will also confirm lock function.
- 2 To "unlock" push and hold Lock  button until  disappears.

Operation

microTALK Range

Your microTALK Radio has a range of up to 2 miles. This effective range can be shortened under some conditions.

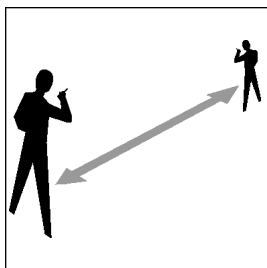

1. Under flat, open conditions you will experience the microTALK's maximum range.



2. Range can be reduced by buildings and foliage in the path of the signal.



3. Range will be further reduced by dense foliage and hilly terrain.

microTALK Range

Note

To achieve maximum range the auto squelch can be overridden. Refer to Maximum Range Extender section on page 4.


Making Life Easier and Safer

microTALK 2-Way Radios Can Make Life Easier and Safer


microTALK 2-Way Radios Can Make Life Easier and Safer

As you become familiar with your microTALK Radio you will find many of your own uses for the unit.

 
Some suggestions include:

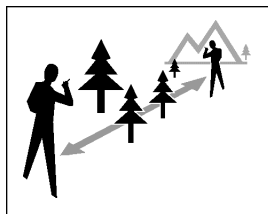

 
1. Talking with fellow hikers.

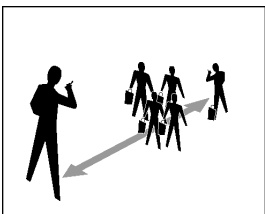

 
2. Keeping track of the kids in a shopping mall.

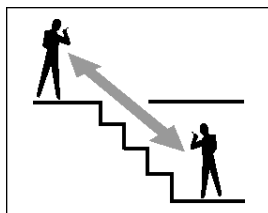

 
3. Communicating between basement and first, second or third floor.

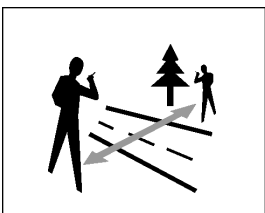

 4. Talking to a neighbor or a friend.

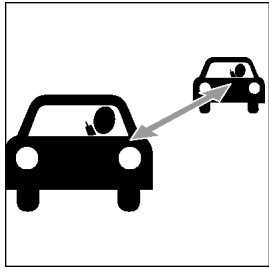

 
5. Checking on traveling companions in another car.

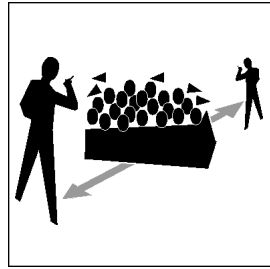


6. Agree on a meeting spot after an event.

microTALK SNAP Removable Front

 Your microTALK Radio comes with the new microTALK SNAP removable front.

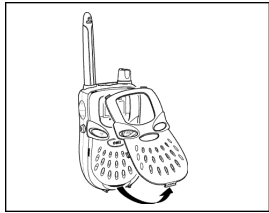

 TO REMOVE: Use the slight indentation between the SNAP front and bottom front of the unit to lift it off.

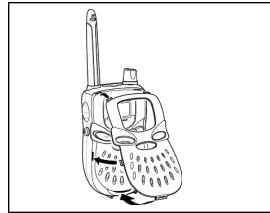

TO ATTACH: First engage the tabs into the top of the unit. Next snap in the middle tabs. Finally snap in the bottom tab.

microTALK SNAP Removable Front

Also included is a convenient Belt Clip-Desk Stand, that can be either attached to your belt or placed on a desk using the built-in feet in the base.

External Microphone/ Speaker Jack

External Microphone/ Speaker Jack

 
Note

*External microphone/
speaker is not included with
the unit. See page 19 for
optional accessories.*

External Microphone/Speaker Jack


Your microTALK 2-Way Radio can be fitted with an external microphone/speaker, (not included) freeing your hands for other tasks.

To attach the external microphone/speaker:

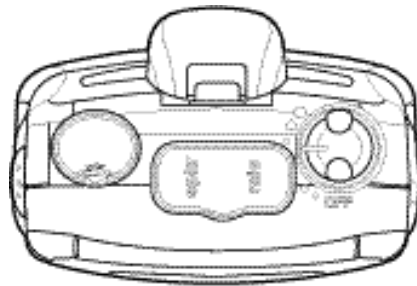

- 1 Open Spkr/Mic tab on top of unit.

 External Microphone/ Speaker Jack

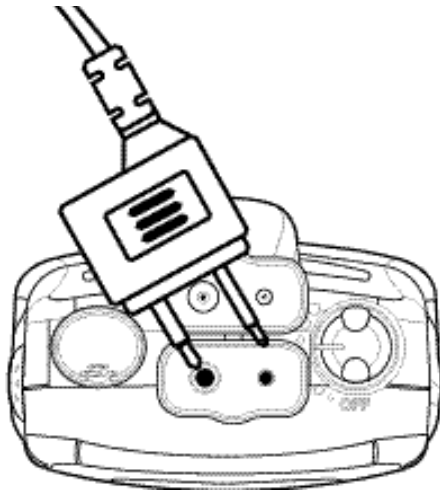

- 2 Insert plug into the Spkr/Mic jack.

Caring for Your *microTALK*™ Radio

Caring for Your *microTALK* Radio

 
Note

Modifying or tampering with the radio's internal components can cause malfunction and will invalidate the warranty. If your radio is not performing as it should, please call Cobra at 773.889.3087. Do not return the unit to the retailer.


Caring for Your *microTALK* Radio

The *microTALK* 2-Way Radio will give you years of service if cared for properly.



Here are some suggestions:

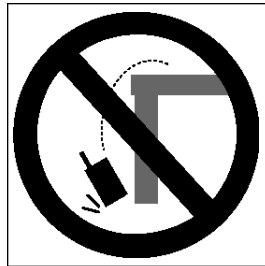

 
1. Handle unit gently.

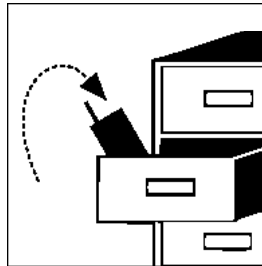

  
2. Keep away from dust.

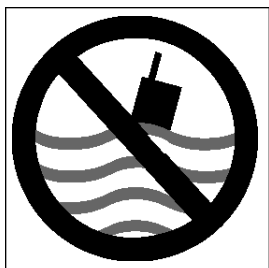

 3. Never place the unit in water or in a moist place.

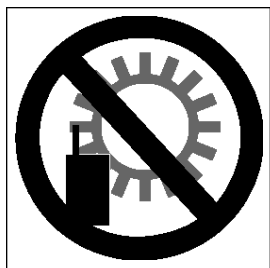

 4. Avoid exposure to extreme temperatures.



microTALK™ Specifications

I. GENERAL SPECIFICATIONS

A. FREQUENCIES

CHANNEL ASSIGNMENT

CH 1: 462.5625MHz	CH 8: 467.5625MHz
CH2: 462.5875MHz	CH 9: 467.5875MHz
CH 3: 462.6125MHz	CH 10: 467.6125MHz
CH 4: 462.6375MHz	CH 11: 467.6375MHz
CH 5: 462.6625MHz	CH 12: 467.6625MHz
CH 6: 462.6875MHz	CH 13: 467.6875MHz
CH 7: 462.7125MHz	CH 14: 467.7125MHz

B. RECEIVER

	UNIT	NOMINAL
1. SENSITIVITY		
FOR 12 DB SINAD	dBm	-119
FOR CALL SIG.DETECTION	dBm	-121
2. MAX. AUDIO OUTPUT @10% THD	mW	150
3. MAX.S/N RATIO @ 1mV RF INPUT	dB	45
4. SQUELCH		
a) SENSITIVITY	dB m	-121
b) ATTACK TIME	mS	150
c) CLOSING TIME	mS	200
5. AUDIO FREQUENCY RESP.		
@ 300 HZ	dB	-3
@ 2500 HZ	dB	-10
6. SIGNAL DISPLACEMENT BW	+/-KHZ	5
7. ADJACENT CH.REJECTION	dB	55
8. INTERMODULATION REJECTION	dB	55
9. SPURIOUS RESPONSE REJECTION	dB	65

microtALK™ Specifications

C. TRANSMITTER

	UNIT	NOMINAL
1. EFFECTIVE RADIATED POWER	mW	500
2. CARRIER FREQ.STABILITY	±Hz	500
3. MODULATION LIMITING	KHz	2.5
4. CARRIER ATTACK TIME	mS	30
5. AUDIO FREQUENCY RESPONSE		
@ 300 HZ	dB	-10
@ 2500 HZ	dB	4
6. AUDIO DISTORTION	%	3
7. HUM NOISE	dB	38
8. TRANSIENT FREQ.BEHAVIOR		
a) TX ON	mS	30
b) TX OFF	mS	5

D. POWER SUPPLY

1. BATTERY LIFE (1:1:18 RATIO)	HR	24
2. BATTERY OPERATING RANGE	V	3.2 - 4.5

Limited Two Year Warranty



Cobra Electronics Corporation
6500 West Cortland Street
Chicago, Illinois 60707

COBRA ELECTRONICS CORPORATION warrants that its COBRA FRS Radios, and the component parts thereof, will be free of defects in workmanship and materials for period of two (2) years from the date of first consumer purchase. This warranty may be enforced by the first consumer purchaser, provided that the product is utilized within the U.S.A.

COBRA will, without charge, repair or replace, at its option, defective FRS radios, products or component parts upon delivery to the COBRA Factory Service Department, accompanied by proof of the date of first consumer purchase, such as a duplicated copy of a sales receipt.

You must pay any initial shipping charges required to ship the product for warranty service, but the return charges will be at Cobra's expense, if the product is repaired or replaced under warranty.

 
This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Exclusions: This limited warranty does not apply; 1) to any product damaged by accident; 2) in the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs; 3) if the serial number has been altered, defaced or removed; 4) if the owner of the product resides outside the U.S.A.

All implied warranties, including warranties of merchantability and fitness for a particular purpose are limited in duration to the length of this warranty. COBRA shall not be liable for any incidental, consequential or other damages; including, without limitation, damages resulting from loss of use or cost of installation.

Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

Optional Accessories

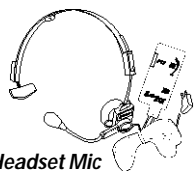

Vox Headset Mic

VOX (Voice Operated Transmitter) headset and microphone allows hands-free operation.

 
MA-VOX \$49.95



Ear Bud Mic with PTT

Compact earbud and microphone with Push-to-Talk switch.

MA-EBM \$29.95

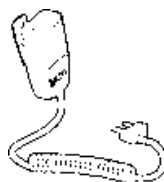

Lapel Speaker/Microphone

Remote microphone/speaker with Push-to-Talk switch.

 
MA-SM \$24.95



NiMH Rechargeable Battery Pack

High performance Nickel Metal Hydride battery pack for multiple charging.

FA-AA \$19.95

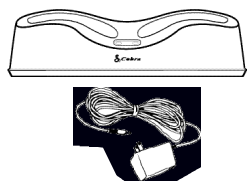

2 Port Desktop Charger

Charges two NiMH battery packs (FA-AA) or two FRS 225 radios. (Note: appearance may vary)

FA-CS \$19.95



Replacement Belt Clip

FA-BC2 \$4.95

You Can Find These Fine Accessories At Your Local Cobra Dealer

If you wish, you can order directly from Cobra.

Order by phone

Call 1.773.889.3087 (Press 1 from the main menu) 8 a.m.-6 p.m. M-F CST.)

Order by mail or fax

Please fill out order form on next page, and mail/fax directly to Cobra.

Order over the Web

www.cobraelectronics.com

Accessory Order Form

Item #	Description	Cost Ea.	Qty.	Amount
MA-VOX	Vox Headset Mic	\$49.95		
MA-EBM	Ear Bud Mic with PTT	\$29.95		
MA-SM	Lapel Speaker/ Microphone	\$24.95		
FA-AA	NIMH Rechargeable Battery Pack	\$19.95		
FA-CS	2 Port Desktop Charger	\$19.95		
FA-BC2	Replacement Belt Clip	\$4.95		

Shipping & Handling

Amount of Order	Shipping/ Handling
\$25.00 and under	\$4.75
\$25.01 - \$40.00	\$6.95
\$40.01 - \$80.00	\$9.25
\$80.01 - \$120.00	\$10.25
\$120.01 - \$160.00	\$11.75
\$160.01 and up	\$14.50

Prices subject to change without notice.

Tax Table
 Illinois residents add 7%
 Cook Co. residents add .75% (7.75% total)
 Chicago residents add 1% (8.75% total)
 Indiana residents add 5%
 Michigan residents add 4%
 Ohio residents add 6%
 Wisconsin residents add 5%

Subtotal _____
 (Tax if applicable) _____
 Shipping/handling _____
Total _____

For AK, HI and PR please add an additional \$15.00 for UPS shipments.

For credit card orders fill out order form and fax to: 1.773.622.2269 or call 1.773.889.3087 (Press 1 from the main menu) 8:00 am - 6:00 pm, M-F, CST.

Make check or money order (no stamps) payable to: Cobra Electronics Attn: Accessories Dept. 6500 West Cortland St. Chicago, IL 60707

Please print clearly

Name _____

Address (No P.O. Box) _____

City _____ State _____

Zip _____ Telephone (____) _____

Credit Card No. _____

Exp. Date _____

Customer Signature _____

Circle One: Visa MasterCard Discover

Allow 2-3 weeks for delivery. Offer valid in Continental U.S. only.



Cobra Electronics Corporation
6500 West Cortland Street
Chicago, IL 60707

If You Think You Need Service

For technical assistance, please call our Automated Help Desk which can assist you by answering the most frequently asked questions about Cobra products.

(773) 889-3087

24 hours a day, 7 days a week.

A Consumer Service Representative can be reached through this same number 8:00 am - 6:00 pm, Monday through Friday, CST.

Technical assistance is also available on-line in the Frequently Asked Questions (FAQ) section at www.cobraelectronics.com or by e-mail to productinfo@cobraelectronics.com

If you think you need service call 1.773.889.3087

"If your product should require factory service please call Cobra first before sending your unit in. This will ensure the fastest turn-around time on your repair."

You may be asked to send your unit to the Cobra factory. It will be necessary to furnish the following in order to have the product serviced and returned.

1. For Warranty Repair include some form of proof-of-purchase, such as a mechanical reproduction or carbon of a sales receipt. If you send the original receipt it cannot be returned.
2. Send the entire product.
3. Enclose a description of what is happening with the unit. Include a typed or clearly printed name and address of where the unit is to be returned.
4. Pack unit securely to prevent damage in transit. If possible, use the original packing material.
5. Ship prepaid and insured by way of a traceable carrier such as United Parcel Service (UPS) or First Class Mail to avoid loss in transit to: Cobra Factory Service, Cobra Electronics Corporation, 6500 W. Cortland St., Chicago, IL 60707.
6. If the unit is in warranty, upon receipt of your unit it will either be repaired or exchanged depending on the model. Please allow approximately 3 to 4 weeks before contacting us for status. If the unit is out of warranty a letter will automatically be sent informing you of the repair charge or replacement charge. If you have any questions, please call 1.773.889.3087 for assistance.

Cobra Electronics Corp. © 2000
Printed in China.

Part No. 480-004-P

Cobra® microTALK™

Operating Instructions for your Cobra® microTALK™ 2-Way Radio

FRS 225



Nothing comes close to a Cobra™

Family Radio Service

TM

Family Radio Service

Ever wish you could talk to someone who wasn't within earshot? Like contacting ski partners back at the lodge? Or letting a friend know how to find you in a busy mall? Cobra's microTALK FRS 225 is a great way for friends or family to have fun and be safe by staying in touch while on the go.

The FCC (Federal Communications Commission) has created 14 license free frequency bands, or channels, called Family Radio Service (FRS) frequencies. These channels are in the UHF (Ultra High Frequency) band which means great penetration through buildings, thick forests, hills, and other dense structures. They are also FM (Frequency Modulation) signals which means crystal clear reception even in crowded, noisy environments.

FCC Warnings

 
Replacement or substitution of transistors, regular diodes or other parts of a unique nature, with parts other than those recommended by Cobra, may cause a violation of the technical regulations of part 95 of the FCC Rules, or violation of Type Acceptance requirements of Part 2 of the Rules.

Included with your microTALK

1. Belt Clip
2. Wrist Strap
3. Two microTALK SNAP™ removable fronts

Controls and Indicators

- 1. Antenna
- 2. Microphone/Speaker Jack
- 3. On/Off Volume Switch
- 4. LCD Display Panel
- 5. Light/Max Range Button
- 6. Channel Select Button
- 7. Speaker
- 8. Battery Compartment
- 9. Talk Button
- 10. Call Button
- 11. microTALK SNAP Removeable Front
- 12. Lock Button
- 13. Mode Button
- 14. Charge Pads

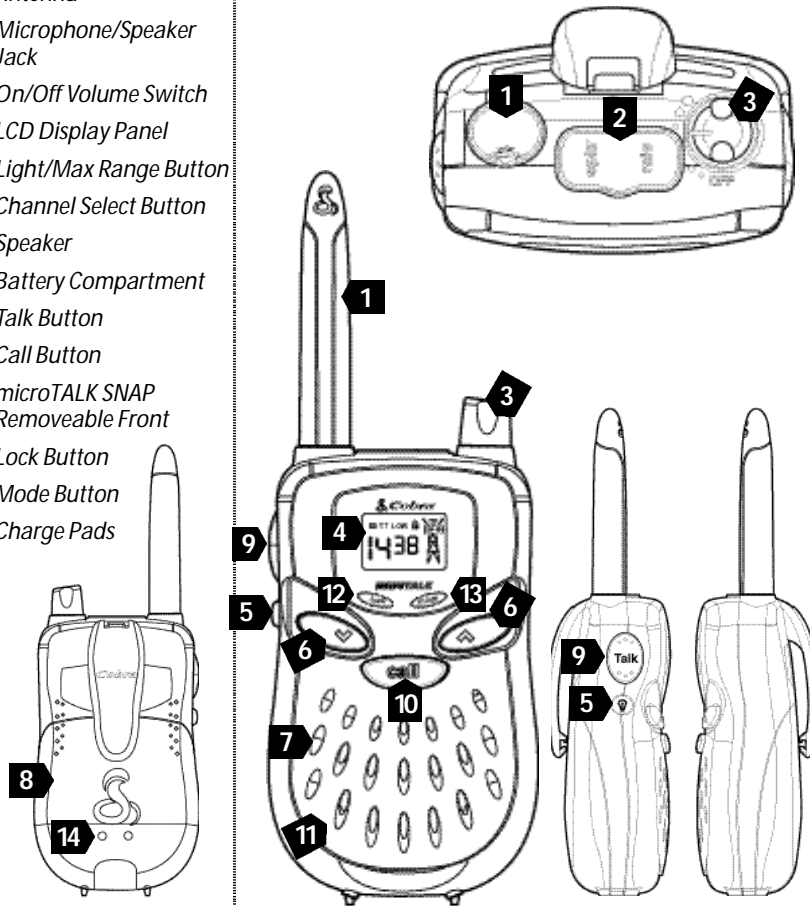



Thank you for purchasing the Cobra FRS 225 2-Way Radio. Your microTALK radio comes with the new microTALK SNAP removable front, which allows you to customize the appearance of your radio! Several color choices are included with your purchase. For instructions on removing the microTALKSNAP front, see page 11. For additional color choices available as accessories (sold separately), please see the brochure and order form included.

Customer Support

Properly used, this Cobra product will give you years of reliable service. Should you encounter any problems with the product or not understand its many features, please refer to this owner's manual. If, after referring to the manual, you still need help, call Cobra Customer Service at 773.889.3087.

Warning

Your wireless handheld portable transceiver contains a low power transmitter. When the PTT button is pushed it sends out radio frequency (RF) signals. The device is authorized to operate at a duty factor not to exceed 50%. In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless devices.

Important: To maintain compliance with the FCC's RF exposure guidelines hold the transmitter at least 2 inches (5 cm) from your face and speak in a normal voice, with the antenna pointed up and away. If you wear the handset on your body while using the headset accessory, use only the supplied belt clip for this product and ensure that the antenna is at least 2 inches (5 cm) from your body when transmitting. If the distance between that antenna and the body is LESS THAN 2.0" (5 cm). DO NOT USE THIS DEVICE IN THE BODY WORN CONFIGURATION. Use only the supplied antenna. Unauthorized antennas, modifications, or attachments could damage the transmitter and may violate FCC regulations.

Cobra Customer Service

*Live operators are available
M-F 8:00 am - 6:00 pm CST
at: 773.889.3087*

*Automated Technical
Assistance available 24
hours a day, seven days a
week. E-mail questions to:
productinfo@
cobraelectronics.com*

*Cobra on the World Wide
Web: Frequently Asked
Questions (FAQ) can be
found on-line at:
www.cobraelectronics.com*





The Cobra line of quality products
also includes:

- CB Radios
- MicroTalk™ Radios
- Radar Detectors
- Accessories
- SafetyAlert™
Traffic Warning Systems

Nothing comes close to a Cobra™