


Safety Information For FRS UNIT

Your wireless handheld portable transceiver contains a low power transmitter. When the PTT button is pushed it sends out radio frequency (RF) signals. The device is authorized to operate at a duty factor not to exceed 50%. In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless devices.

Important: To maintain compliance with the FCC s RF exposure guidelines hold the transmitter at least 2 inches (5 centimeters) from your face and speak in a normal voice, with the antenna pointed up and away. If you wear the handset on your body while using the headset accessory, use only the Cobra supplied belt clip for this product and ensure that the antenna is at least 1 inch (2.5 centimeters) from your body when transmitting. If the distance between the antenna and the body is LESS THAN 1.0”(2.5cm) *DO NOT USE THIS DEVICE IN THE BODY WORN CONFIGURATION*. Use only the supplied antenna. Unauthorized antennas, modifications, or attachments could damage the transmitter and may violate FCC regulations.

Normal Position: Hold the transmitter approximately 2” from your face and speak in a normal voice, with the antenna pointed up and away.

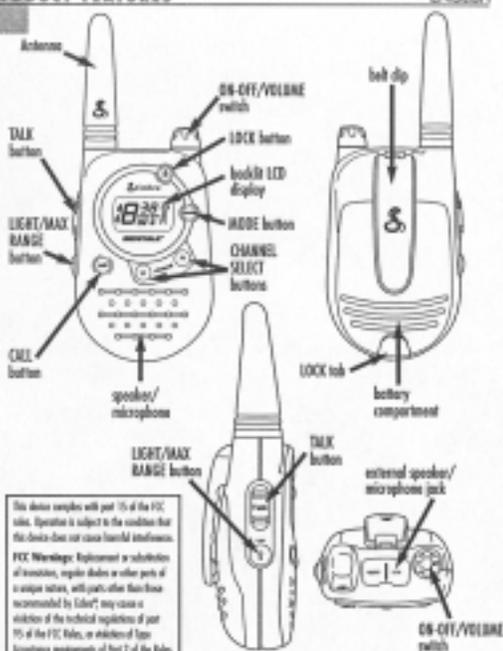

This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

FCC Warning: Replacement or substitution of antennas, speaker drivers or other parts of a unique radio, with parts other than those recommended by Uniden, may cause a violation of the technical regulations of part 15 of the FCC rules, or violation of Title Spectrum requirements of Part 7 of the Rules.

Product Features

- TWO-WAY RADIO with up to a 2 mile (3 km) range
- 14 CHANNELS
- 38 CTCSS PRIVACY CODES
- BATTERY SAVER circuitry
- WATER RESISTANT
- CALL ALERT
- "ROGER BEEP" confirmation tone
- AUTO SQUELCH
- MAXIMUM RANGE extender
- LOCK button
- BACKLIT LCD display
- EXTERNAL SPEAKER/MICROPHONE jack
- BELT CLIP
- NYST STRAP

Making Life Easier and Safer

- People have found lots of convenient and helpful ways to use their microTALK® radios. Over time, you're bound to discover uses of your own. For example, you can...
- stay in touch with others while hiking, bicycling, etc.
 - keep track of family and friends in a shopping mall
 - communicate between different floors of a building
 - talk with neighbors
 - duck with traveling companions in another car
 - arrange a meeting spot at crowded public events

Caring for Your microTALK® Radio

Your microTALK® radio will give you years of trouble-free service if cared for properly. Here are a few suggestions: 1) Handle the radio gently. 2) Keep it away from dust. 3) Never put the radio in water or in a damp place and 4) Avoid exposure to extreme temperatures.

Installing or Replacing Batteries

1. Pull down the LOCK tab to remove the battery compartment cover.
 2. Insert four AAA batteries. (Always use high quality alkaline batteries.) Position batteries according to polarity markings.
- (NOTE: See page 9 for information about optional battery pack and desktop charger accessories.)

Turning On Your microTALK® Radio

1. Rotate the ON-OFF/VOLUME switch clockwise to turn on the unit (and to adjust the volume). An audible tone will indicate the radio is on.

Battery Low

When battery power is low, the BATT LOW indicator will blink.

Auto Battery Save

Your microTALK® radio has a unique circuit designed to extend battery life. If there are no transmissions within 10 seconds, the unit will automatically switch to Battery Save mode and POWER SAVER will appear in the display. This will not affect the unit's ability to receive incoming transmissions.

Selecting a Channel

1. With the radio on, select any of the 14 channels by pushing the CHANNEL UP or CHANNEL DOWN buttons. (NOTE: Both radios must be tuned to the same channel to communicate.)

Selecting a CTCSS Privacy Code

CTCSS (Coded Tone Controlled Squelch System) is an advanced subaudible system that allows segmentation of any channel. CTCSS privacy codes allow you to select a less used code range (9-38) within a channel.

(NOTE: If you are using a privacy code, both radios must be tuned to the same channel and privacy code to communicate. Each channel will remember the last privacy code you selected.)

To select a privacy code:

1. After selecting a channel, press and release the MODE button. Small numbers will flash next to the channel in the LCD.
2. Push the CHANNEL SELECT button up or down to select a privacy code. You can hold the button up or down for fast advances.
3. When your desired privacy code is displayed, press and release the MODE button, or do not push any buttons for 15 seconds.

Calling Another Person

- To alert another person that you are calling:
1. Press and release the CALL button. The other person will hear a 2-second ringing tone. You cannot send or receive transmissions during the 2-second call tone.

Talking to Another Person

1. Press and hold the TALK button.
2. With the microphone about 2 inches (5 cm) from your mouth, speak in a normal voice.
3. Release the button when you're finished talking and listen for a response. You cannot receive incoming calls while pressing the TALK button.

"Roger Beep" Confirmation Tone

Your listener will hear an audible tone when you release the TALK button. This alerts the other party that you are finished talking and it is a.k.a. for them to speak.

Listening for a Response

- When you are finished talking:
1. Release the TALK button to receive incoming transmissions. Your microTALK® is always in listening mode while the TALK button is not pressed.
 2. Adjust the volume by rotating the ON-OFF/VOLUME switch.

Illuminating the Display

1. Press and release the LIGHT/MAX RANGE button to illuminate the display for 10 seconds.

Using the Lock Function

The Lock function locks the CHANNEL and MODE buttons to prevent accidental operation. To use the Lock function:

1. While in Standby mode, press and hold the LOCK button for one second. The Lock icon will blink when the unit is locked. Buttons that are NOT locked are the CALL, LIGHT/MAX RANGE, and TALK buttons, which are all fully functional while the unit is locked.

2. To "unlock" buttons, press and release the LOCK button again. The Lock icon disappears and all buttons will be unlocked.

Auto Squelch

Your microTALK® radio is equipped with Auto Squelch, which automatically shuts off weak transmissions and unwanted noise due to terrible conditions or if you've reached your maximum range limit.

Maximum Range Extender

You can temporarily turn off Auto Squelch, allowing all signals to be received and extending the maximum range of your radio:

1. Press and hold the LIGHT/MAX RANGE button for 5 seconds. You will hear 2 beeps indicating that Maximum Range Extender is on.
2. To turn Maximum Range Extender off, press and hold the LIGHT/MAX RANGE button for 1 second, or change channels.



microTALK® Range


Your microTALK® radio has a range of up to 2 miles (3 km). Your range will vary depending on terrain and conditions. In flat, open country your radio will operate at maximum range. Buildings and foliage in the path of the signal can reduce the range. Dense foliage and hills terrain will further reduce the signal.

Remember, you can enhance maximum range by using Maximum Range Extender. See above for details.

External Speaker/ Microphone Jack

Your microTALK® radio can be fitted with an external speaker/microphone (not included), boosting your hearing for other tasks. See page 9 for optional accessories. To attach an external speaker/microphone:

1. Open the SPEAK/MIC tab on top of the unit.
2. Insert the plug into the SPEAK/MIC jack.

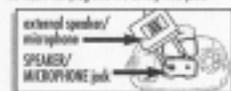

FOR PRODUCTS PURCHASED IN U.S.A.

Cobra Electronics Corporation warrants that its Cobra® VHS radios, and the component parts thereof, will be free of defects in workmanship and materials for a period of two (2) years from the date of first consumer purchase. This warranty may be extended by the first consumer purchase, provided that the product is utilized within the U.S.A. Cobra® will, without charge, repair or replace, at its option, defective VHS radios, products or component parts upon delivery to the Cobra® Factory Service Department, accompanied by proof of the date of first consumer purchase, such as a duplicated copy of a sales receipt.

Normal use and initial shipping charges required to ship the product to warranty service, but the return charges will be at Cobra's expense, if the product is repaired or replaced under warranty.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Exclusions: This limited warranty does not apply (1) to any product damaged by accident, (2) in the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs, (3) if the serial number has been altered, defaced or removed, (4) if the owner of the product resides outside the U.S.A.

All implied warranties, including warranties of merchantability and fitness for a particular purpose are limited in duration to the length of this warranty. Cobra® shall not be liable for any incidental, consequential or other damages, including, without limitation, damage resulting from loss of use or cost of installation.

Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

Customer Assistance

After reading this owner's manual, if you have any questions about installing or operating your microTALK® radio, or if you are missing any parts, please contact Cobra® first. Do not return the product to the store. Cobra® Electronics offers the following customer support services:

- **Automated Help Desk is available 24 hours a day, 7 days a week at 773-889-3887.**
- **Customer Service Operators are available at the same number 8:00 a.m. to 6:00 p.m. CST Monday through Friday (except holidays).**
- **Questions can be faxed to 773-822-2336.**
- **Technical assistance is available on-line in the Frequently Asked Questions (FAQ) section at www.cobra.com or by e-mail to productinfo@cobra.com.**

If your product should require factory service please call Cobra® first before sending your unit in. This will ensure the fastest non-warranty time on your request. You may be asked to send your unit to the Cobra® factory if it will be necessary to furnish the following in order to have the product serviced and returned.

1. For Warranty Repair include some form of proof of purchase, such as a mechanical reproduction or photos of a sales receipt. If you used the original receipt it cannot be returned.
2. Send the entire product.
3. Enclose a description of what is happening with the unit. Include a report or clearly printed name and address of where the unit is to be returned.
4. Pack unit securely to prevent damage in transit. If possible, use the original packing material.
5. Ship prepaid and insured by way of a traceable carrier such as United Parcel Service (UPS) or First Class Mail to avoid loss in transit to Cobra Factory Service, Cobra Electronics Corporation, 4500 W. Cortland St., Chicago, IL 60670.
6. If the unit is in warranty upon receipt of your unit it will either be repaired or exchanged depending on the model. Please allow approximately 3-4 weeks before contacting us for status. If the unit is not of warranty a letter will automatically be sent advising you of the repair charge or replacement charge. If you have any questions, please call 773-889-3887 for assistance.

WARRANTY • CUSTOMER ASSISTANCE • SPECIFICATIONS

FOR PRODUCTS PURCHASED IN CANADA

Because Cobra® VHS is covered by a two (2) year replacement warranty, if any manufacturing defect becomes apparent on this product within two years from the original date of purchase, it will be replaced. Please return the VHS radio to your dealer with original or copy of dated proof of purchase.

Customer Assistance
After reading this owner's manual, if you have any questions about installing or operating your microTALK® radio, or if you are missing any parts, please contact Cobra® first. Do not return this product to the store. Cobra® Electronics offers the following customer support services:

- **Technical assistance is available on-line in the Frequently Asked Questions (FAQ) section at www.cobra.com or by e-mail to productinfo@cobra.com.**

This warranty does not cover damage due to misuse, handling, negligence, accident, abuse or failure to follow operating instructions. Attention: if this product is a defecting of the serial number records of eligibility of the warranty. This warranty gives you specified legal rights. Additional warranty rights may be provided by law in some areas.

In case of warranty service, ship prepaid this product to: VHS Technologies Inc., 7100 Keele/Creeds Hwy S., Whetstone, Ontario, M9P 2M9. We reserve the right to repair or replace the unit with an equivalent product. Please include the following information:

- Date of purchase
- Model No.:
- Dealer (whom you bought from):
- Dealer address:
- Dealer phone No.:

General Specifications

A. REGULATORS		C. BATTERIES	
CHARGE INDICATOR		1. PRIMARY BATTERY POWER	500
CH 1: 402.5025MHz	CH 8: 467.5025MHz	2. BATTERY FULL CHARGE	7.50
CH 2: 402.5075MHz	CH 9: 467.5075MHz	3. BATTERY LOW WARNING	6.75
CH 3: 402.5125MHz	CH 10: 467.5125MHz	4. BATTERY EXHAUST TIME	40
CH 4: 402.5175MHz	CH 11: 467.5175MHz	5. MEMORY/RECALL RESPONSE	
CH 5: 402.5225MHz	CH 12: 467.5225MHz	40 200 Hz	40
CH 6: 402.5275MHz	CH 13: 467.5275MHz	40 2500 Hz	40
CH 7: 402.5325MHz	CH 14: 467.5325MHz	4. MEMORY DURATION	5
		1. BORN NOISE	40
		2. TRANSPARENT FULL RECHARGE	40
		40 100 Hz	40
		40 2500 Hz	40
		40 5000 Hz	40
		40 10000 Hz	40
		40 20000 Hz	40
		40 40000 Hz	40
		40 80000 Hz	40
		40 160000 Hz	40
		40 320000 Hz	40
		40 640000 Hz	40
		40 1280000 Hz	40
		40 2560000 Hz	40
		40 5120000 Hz	40
		40 10240000 Hz	40
		40 20480000 Hz	40
		40 40960000 Hz	40
		40 81920000 Hz	40
		40 163840000 Hz	40
		40 327680000 Hz	40
		40 655360000 Hz	40
		40 1310720000 Hz	40
		40 2621440000 Hz	40
		40 5242880000 Hz	40
		40 10485760000 Hz	40
		40 20971520000 Hz	40
		40 41943040000 Hz	40
		40 83886080000 Hz	40
		40 167772160000 Hz	40
		40 335544320000 Hz	40
		40 671088640000 Hz	40
		40 1342177280000 Hz	40
		40 2684354560000 Hz	40
		40 5368709120000 Hz	40
		40 10737418240000 Hz	40
		40 21474836480000 Hz	40
		40 42949672960000 Hz	40
		40 85899345920000 Hz	40
		40 171798691840000 Hz	40
		40 343597383680000 Hz	40
		40 687194767360000 Hz	40
		40 1374389534720000 Hz	40
		40 2748779069440000 Hz	40
		40 5497558138880000 Hz	40
		40 10995116277760000 Hz	40
		40 21990232555520000 Hz	40
		40 43980465111040000 Hz	40
		40 87960930222080000 Hz	40
		40 175921860444160000 Hz	40
		40 351843720888320000 Hz	40
		40 703687441776640000 Hz	40
		40 1407374883553280000 Hz	40
		40 2814749767106560000 Hz	40
		40 5629499534213120000 Hz	40
		40 11258999068426240000 Hz	40
		40 22517998136852480000 Hz	40
		40 45035996273704960000 Hz	40
		40 90071992547409920000 Hz	40
		40 180143985094819840000 Hz	40
		40 360287970189639680000 Hz	40
		40 720575940379279360000 Hz	40
		40 1441151880758558720000 Hz	40
		40 2882303761517117440000 Hz	40
		40 5764607523034234880000 Hz	40
		40 11529215046068469760000 Hz	40
		40 23058430092136939520000 Hz	40
		40 46116860184273879040000 Hz	40
		40 92233720368547758080000 Hz	40
		40 184467440737095516160000 Hz	40
		40 368934881474191032320000 Hz	40
		40 737869762948382064640000 Hz	40
		40 1475739525976764129280000 Hz	40
		40 2951479051953528258560000 Hz	40
		40 5902958103907056517120000 Hz	40
		40 11805916207814113034240000 Hz	40
		40 23611832415628226068480000 Hz	40
		40 47223664831256452136960000 Hz	40
		40 944473296625129042739840000 Hz	40
		40 1888946593250258085479680000 Hz	40
		40 3777893186500516170959360000 Hz	40
		40 7555786373001032341918720000 Hz	40
		40 15111572746002064683837440000 Hz	40
		40 30223145492004129367674880000 Hz	40
		40 60446290984008258735349760000 Hz	40
		40 120892581968165174470699520000 Hz	40
		40 241785163936330348941399040000 Hz	40
		40 483570327872660697882798080000 Hz	40
		40 967140655745321395765596160000 Hz	40
		40 1934281311490642711531192320000 Hz	40
		40 3868562622981285423062384640000 Hz	40
		40 7737125245962570846124769280000 Hz	40
		40 1547425049192514169224953760000 Hz	40
		40 3094850098385028338449807520000 Hz	40
		40 6189700196770056676899615040000 Hz	40
		40 12379400393540113537799230080000 Hz	40
		40 24758800787080227075598460160000 Hz	40
		40 49517601574160454151196920320000 Hz	40
		40 99035203148320908302393840640000 Hz	40
		40 19807040629664181660477681280000 Hz	40
		40 39614081259328363320955362560000 Hz	40
		40 79228162518656726641910713120000 Hz	40
		40 15845632503731345328382426240000 Hz	40
		40 31691265007462690656764852480000 Hz	40
		40 63382530014925381313529704960000 Hz	40
		40 126765060029850762627059409920000 Hz	40
		40 253530120059701525254118819840000 Hz	40
		40 507060240119403050508237639680000 Hz	40
		40 1014120480238806101016475279360000 Hz	40
		40 2028240960477612202032950548720000 Hz	40
		40 4056481920955224404065901097440000 Hz	40
		40 8112963841910448808131802194880000 Hz	40
		40 16225927683820897616266263897760000 Hz	40
		40 32451855367641795232532537795520000 Hz	40
		40 64903710735283590465065075591040000 Hz	40
		40 129807421470571980930130151182080000 Hz	40
		40 259614842941143961860260302364160000 Hz	40
		40 519229685882287923720052064728320000 Hz	40
		40 1038459371764575847440104129456640000 Hz	40
		40 2076918743529151694880208258913280000 Hz	40
		40 4153837487058303389760416517826560000 Hz	40
		40 8307674974116606779520832035653120000 Hz	40
		40 16615349948233213479041664071306240000 Hz	40
		40 3323069989646642695808332814212480000 Hz	40
		40 6646139979293285391616665628424960000 Hz	40
		40 13292279958586570783233331256849920000 Hz	40
		40 26584559917173141566466625137399680000 Hz	40
		40 53169119834346283132933325274799360000 Hz	40
		40 10633823966869256626586654554958720000 Hz	40
		40 21267647933738513253173309109177440000 Hz	40
		40 42535295867477026506346618218354880000 Hz	40
		40 85070591734954053012693236436709760000 Hz	40
		40 170141183469908106025386472873419520000 Hz	40
		40 340282366939816212050772945746839040000 Hz	40
		40 680564733879632424101545891493680000 Hz	40
		40 1361129467759264848203091782987360000 Hz	40
		40 2722258935518529696406183565974720000 Hz	40
		40 5444517871037059392812367131949440000 Hz	40
		40 10889035742074118796624734263898880000 Hz	40
		40 21778071484148237593249468527797760000 Hz	40
		40 43556142968296475186498937055595520000 Hz	40
		40 87112285936592950372999874111191040000 Hz	40
		40 17422457187318590074599948222382080000 Hz	40
		40 34844914374637180149199896444764160000 Hz	40
		40 69689828749274360298399792889528320000 Hz	40
		40 139379657498548720596699585779556480000 Hz	40
		40 278759314997197441193399171559112960000 Hz	40
		40 55751862999439488238	