 


CS-P95

2.4GHz WIRELESS SPEAKER SYSTEM INSTRUCTION

COBY®

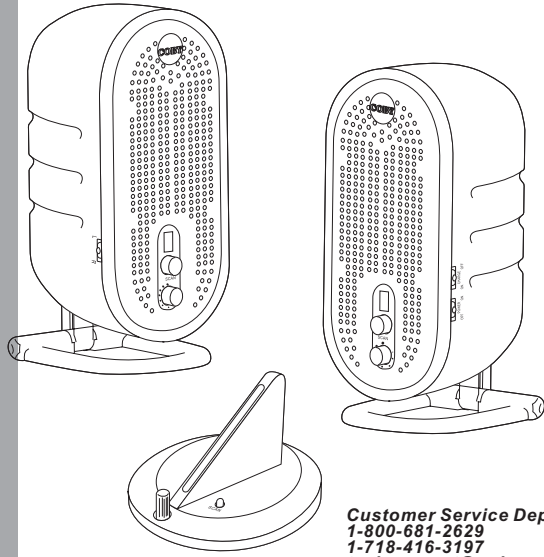

Customer Service Dept.
1-800-681-2629
1-718-416-3197
techsupport@cobysusa.com



FEATURES SUMMARY

- 2.4GHz ANALOG TECHNOLOGY
- HIGH FIDELITY SOUND THAT PENETRATES THROUGH WALLS AND CEILINGS
- TRANSMISSION OF MUSIC OVER 200 FEET
- OUTPUT POWER 10 WATT RMS PER CHANNEL
- PLL SYSTEM PREVENTS RECEPTION FREQUENCY FROM SHIFTING/DRIFTING
- TRULY 100% WIRELESS
- AC/DC OPERATIONAL
- WITH BUILT-IN RECHARGEABLE BATTERIES (OPTIONAL)
- OPTIONAL REMOTE CONTROL
- FREQUENCY RESPONSE: 20 Hz ----20 KHz

MAIN PARAMETER GUIDE LINE

Distortion	< 1%
Frequency Response	20Hz~20kHz
SNR	>55dB
Output Power	6W
Sound track Splitter	≥80dB
Input Impedance	600 Ω
Voltage Gain	14
Input Signal level Rating	500mV
Damping Friction	40
Power	15V/800mA AC/DC
Frequency Loss	±3%
Size	4.25"x9.63"x4.5" (WHD)

  LOCATION OF CONTROLS

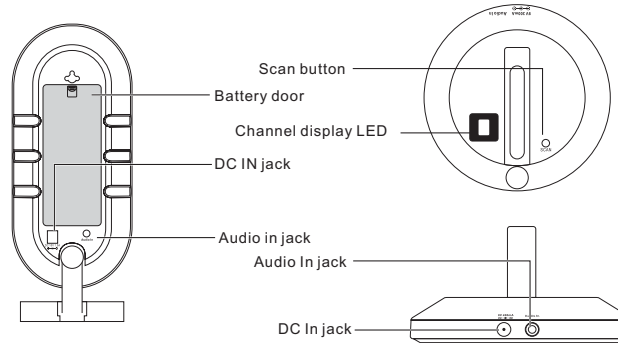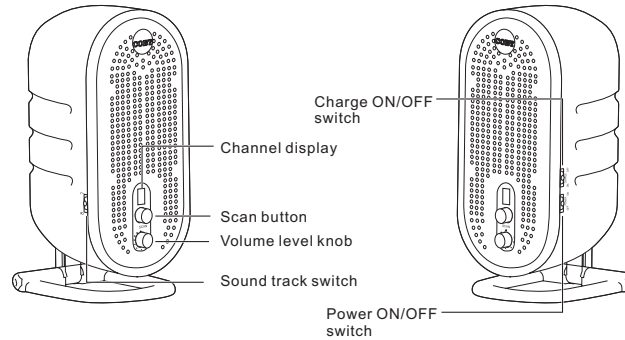

IMPORTANT SAFETY INSTRUCTIONS

! This symbol is to alert you to important operating or servicing instructions that may appear in the user's manual. Always follow basic safety precautions when using this product to reduce the risk of injury, fire, or electrical shock. When using this product, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
 2. Follow all warnings and instructions marked on the product.
 3. Use only with class 2 power source DC 9V 300mA.
 4. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
 5. Do not use this product near water; for example, near a bathtub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
 6. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
 7. Slots and openings in the cabinet back or bottom are provided for ventilation. To protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surfaces. This product should never be placed near or over a radiator or heat register. This product should not be placed in an enclosed environment unless proper ventilation is provided.
 8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be pinched or walked on.
 9. Do not overload wall outlets and extension cords as this can result in risk of fire or electrical shock.
 10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock. Never spill liquid of any kind on the product.
 11. To reduce the risk of electrical shock, do not disassemble this product. Instead take it to a qualified service person when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect re-assembly can cause electrical shock when the appliance is subsequently used.
 12. Unplug all cords and refer servicing to qualified service personnel under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls covered in the operating instructions. Improper adjustment of other controls may result in damage and require work by a qualified technician to restore the product to normal operation.
 13. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
 14. Do not use a telephone to report a gas leak in the vicinity of the leak.
- IF YOUR PRODUCT UTILIZES BATTERIES, THE FOLLOWING ADDITIONAL PRECAUTIONS SHOULD BE OBSERVED:**
1. Use only the type and size of batteries specified in the users manual.
 2. Do not dispose of the batteries in a fire. The cells may explode. Check with local codes for possible special disposal instructions.
 3. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
 4. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets and keys. The battery or conductor may overheat and cause burns.
 5. Do not attempt to recharge the batteries with or identified for use with this product. The batteries may leak corrosive electrolyte or explode.
 6. Do not attempt to rejuvenate the batteries provided with or identified for use with this product by heating them. Sudden release of the battery electrolyte may occur causing burns or irritation to eyes or skin.
 7. When replacing batteries, all batteries should be replaced at the same time. Mixing fresh and discharged batteries could increase internal cell pressure and rupture the discharged batteries.
 8. When inserting the batteries into this product, the proper polarity or direction must be observed. Reverse insertion of batteries can cause charging, which may result in leakage or explosion.
 9. Remove the batteries from this product if the product will not be used for a long period of time (several months or more) since during this time the batteries could leak, damaging the product.
 10. Discard "dead" batteries as soon as possible since they are more likely to leak in a product.
 11. Do not store this product, or the batteries provided with or identified use with this product, in high temperature areas.
 12. If your product uses a rechargeable battery, charge the battery(ies) only in accordance with the instructions and limitation specified in the User Manual.

SAVE THESE INSTRUCTIONS

FCC RULES

This equipment has been tested and found to comply with the limits for a digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.

 
CAUTION:

Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment. Any change to the equipment will void FCC grant.


OPERATING THE SYSTEM

Connect the transmitter

The transmitter is equipped with two jacks, which allows for connection to the specified output jacks: DC IN to the AC power, and AUDIO IN to the LINE OUT jacks of your connected equipment.

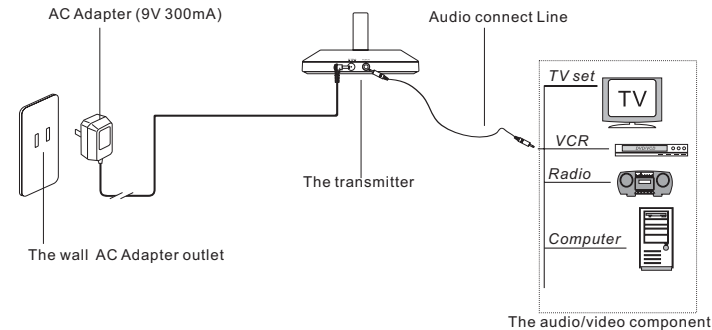

 
NOTE: If your audio/video component have right&left sound track stereo plug system, you can use the audio connect line and the audio conversion line to connect it.

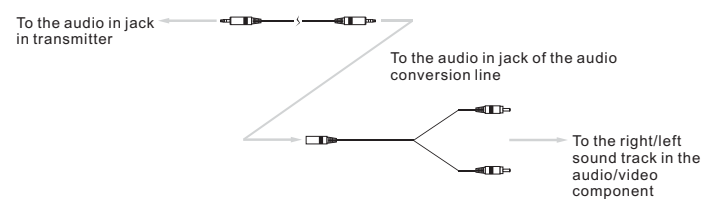

OPERATING THE SYSTEM


Setting up the Speaker

 A. Use the supplied AC Adapter

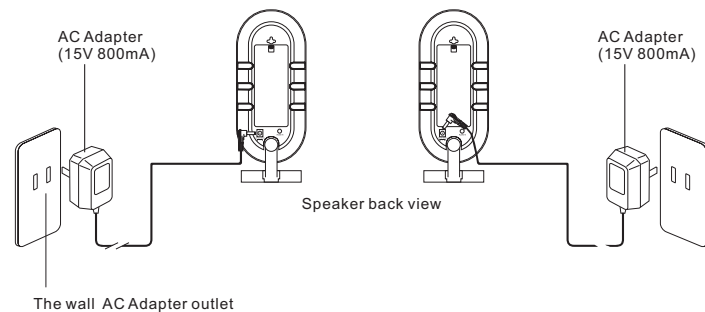

B. Use Batteries


 
You could use 8 type C rechargeable or alkaline batteries for the speaker as power supply too. (not included in the packaging), to install the batteries into the battery compartment matching the correct polarity between battery and the compartment. , see below:

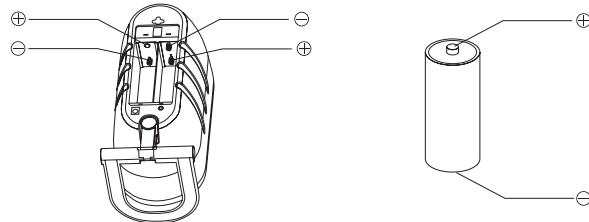


OPERATING THE SYSTEM

B. Turn on the speaker.

 Slide the power ON/OFF switch to the ON position. And the channel display LED on the speaker will display the channel that the transmitter already set.

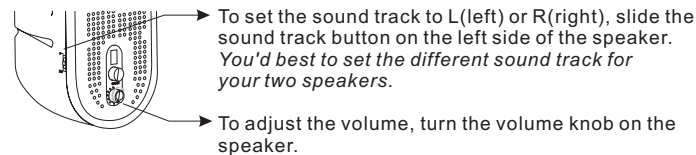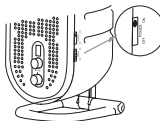


NOTE: When there is more than 1 transmitter in your room and the transmitters were be set to different channels, you can listen the different sound by press the SCAN button on the speaker to match channels to the transmitter. DON'T SET THE TRANSMITTERS TO THE SAME CHANNEL WHEN THEY ARE IN ONE AREA THAT LESS THAN 100 CENTARE. THE SOUND WILL BE DISTURBED BY EACH OTHER.

If no audio signal is input for more than 1 minute, the transmitter will turn to power-save mode automatically, and the LED on speaker will display . The transmitter will transmit signal to the speaker after 10 seconds when the audio signal is input again.



 OPERATING THE SYSTEM

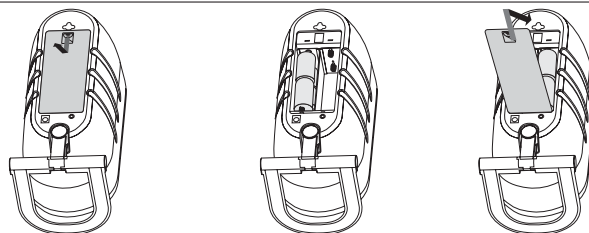

1. Open the battery door.
2. Install the batteries.
3. Close the battery door.

NOTES ON BATTERIES

To reduce the risk of fire or injury to persons, read and follow these instructions:

- Do not charge a alkaline battery. If you use the alkaline battery, please cut the AC power or slide the CHARGE switch to the OFF position.
- Do not dispose of the batteries in a fire. The cells may explode. Check with local codes for possible special disposal instructions.
- Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.
- Do not attempt to rejuvenate the batteries identified for use with this product by heating them. Sudden release of the battery electrolyte may occur causing burns or irritation to eyes or skin.
- When inserting batteries into this product, the proper polarity or direction must be observed. Reverse insertion of batteries can cause charging, and that may result in leakage or explosion.
- Remove the batteries from this product if the product will not be used for a long period of time (several months or more) since during this time the battery could leak in the product.
- Do not store this product, or the batteries identified for use with this product, in high temperature areas. Batteries that are stored in a freezer or refrigerator for the purpose of extending shelf life should be protected from condensation during storage and defrosting.

When the battery becomes weak, the sound becomes distorted or noisy. Replace the battery or recharge the battery.

PRECAUTIONS

- When the transmitter is not to be used for a long period of time, disconnect the AC power adaptor from the AC outlet holding the plug and remove the batteries to avoid damage caused by battery leakage and subsequent corrosion.
- Do not leave the cordless stereo speakerphone system in a location subject to direct sunlight, heat or moisture (It is recommended to use the speakerphone at a temperature of between 5°C and 35°C).
- Do not drop, hit or otherwise subject the transmitter or headphones to strong shocks of any kind. This could damage the product.

PROP. 65 WARNING:

Handling the coated electrical wires of this product exposes you to lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after use.

TROUBLESHOOTING

No sound/Muffled sound

 
- Turn on the transmitter first, and then put on the speakerphone.
- Check the connection of the audio/video equipment or the AC power adaptor.
- Check that the audio/video equipment connected to the transmitter is turned on.
- If the transmitter is connected to the speakerphone jack, raise the volume of the audio/video equipment connected to the transmitter.
- If you use batteries as power supply, check the power of batteries. Reinstall the batteries or charge the batteries.

Loud background noise

- Move closer to the transmitter. (As you move away from the transmitter, more noise is likely to be heard.)
- Check that there is no object between the transmitter and the speakerphone.
- Check that the transmitter is not covered with your hands or other object.
- If you use the speakerphone by a window where the sunlight is too strong, draw the curtains/blinds to shut out the direct sunlight, or use the speakerphone away from the sunlight.
- Change the position or angle of the transmitter.
- If you have another transmitter, check if more than one transmitters are used at the same channel.
- Check if there is another wiring cause interference, try to another channel.

OPERATING THE SYSTEM


 
To prevent your ears or most noise from being damaged, first lower the volume.

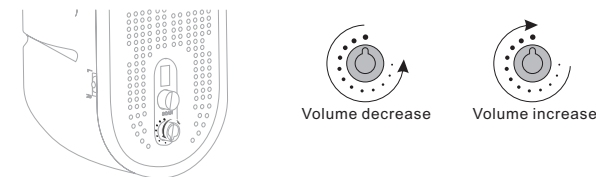


After you finished the installation of the transmitter and speaker, you can ready to use the Cordless Stereo Speaker phone system.

Turn on the transmitter and the speaker.

A. Turn on the transmitter.

 Push down the power ON/OFF ( / ) knob on the transmitter. And push down it again will turn off the transmitter.



When you turn on the transmitter, the channel display LED will display the current channel, you can press the **SCAN** button on the transmitter to change the channel, channel count will increase one press the **SCAN** button one time, there are 9 channels to select.



WARRANTY

FULL 90 DAYS LIMITED WARRANTY

COBY ELECTRONICS CORP. (COBY) warrants this product to the original purchaser to be free from defects in material or workmanship under normal use for 90 DAYS from the date of original purchase. COBY agrees at our option under this warranty, to repair or replace it with a new or reconditioned product at no additional charge. Our warranty, of course, does not cover any product which has been subject to neglect, unreasonable use, accident, violation of operating instructions, or any product that has been repaired or modified by an unauthorized service agent.

To obtain factory service, return this unit freight-prepaid to the address shown below within the duration of this warranty. Enclose \$6.00 for each item in the form of money order made payable to COBY ELECTRONICS CORP. to cover the cost of postage and handling. Also, include a copy of the sales receipt to show the proof of purchase and a detailed description of the problem. The unit(s) must be packaged in such a way as to reasonably protect it from possible shipping damage. For further information, email techsupport@cobyusa.com or call 1-800-681-2629, 1-718-416-3197 or write to:

COBY ELECTRONICS CORP.
Customer Service Dept.
56-65 Rust Street
Maspeth, N.Y. 11378

Coby's liability under any legal theory for any loss or damage in any way related to this product shall in no event exceed the sales price of this product. In no event shall COBY be liable for any incidental or consequential damages resulting from the use of, or inability to use this product. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer.

Except to the extent prohibited by law, no express or implied warranty of merchantability or fitness for a particular purpose on this product shall not extend beyond the period of this warranty. Some states prohibit the exclusion or limitation of incidental or consequential damages, so that the above limitations or exclusion may not apply to you. This warranty gives you specific rights, and you may also have other rights which may vary from state to state.