

COBY®

For series /
Para la serie /
Pour la série

MID7055



EN

Coby® Internet Tablet

Quick Start Guide Page 2

Please read carefully before use • Léa el manual antes de usar • Veuillez lire ce livret avant utilisation

➔ Table of Contents

THANK YOU	3
Package Contents.....	3
Features.....	4
GETTING TO KNOW THE INTERNET TABLET	5
About the Touchscreen.....	8
Protective Film.....	8
Touchscreen Actions.....	8
About the Orientation Sensor.....	9
Changing the Tablet.....	10
Inserting a Memory Card or USB Flash Drive.....	10
GETTING STARTED	13
Turning the Tablet on and off.....	13
Turning the Screen On and Off (Standby).....	14
About Applications.....	16
Preinstalled Applications.....	17
Installing Applications.....	19
About Widgets.....	19
Adding Widgets to a Home Screen.....	19
Removing Widgets.....	19
About Notifications.....	20
CONNECTING TO THE INTERNET	21
Requirements.....	21
Connect to a Wi-Fi network.....	22
BROWSING THE WEB	24
Browser menu.....	26
MANAGING APPLICATIONS	28
OPTIONAL CONNECTIONS	31
Connecting to a Computer.....	31
Connecting to a TV.....	32
Connecting Headphones.....	33
Connecting Bluetooth.....	33
SETTING THE SYSTEM OPTIONS	34
SPECIFICATIONS	35
SUPPORT	36
SAFETY NOTICES	37

➔ Thank You

Congratulations on your purchase of a Coby® Internet Tablet. This guide is provided to help you get started quickly with your player; please read it carefully and save it for future reference.

For detailed instructions, up-to-date information, and helpful tips, please visit the Coby website at www.cobyusa.com.



This manual is available for download from the Coby website as a PDF file.

To view PDF documents, download and install the free Adobe Acrobat reader from the Adobe website at www.adobe.com.

English

Package Contents

Please make sure that the items shown below are included in the package. Should an item be missing, please contact the local retailer from which you purchased this product.

- ✦ Coby® Internet Tablet
- ✦ Protective pouch
- ✦ USB cable
- ✦ Power adapter



This package may contain plastic bags or other materials that pose a hazard to children. Be sure to safely dispose of all packing materials after opening.

Features

- ✦ Browse the Web.
Visit your favorite websites
- ✦ Check your e-mail
Keep in touch with friends and family
- ✦ Watch YouTube™ videos
Browse the world's most popular video-sharing community
- ✦ Read your favorite books
Download thousands of books with the included E-book reader *
- ✦ Discover thousands of apps for Android™
Games, applications, and more with the installed marketplace
- ✦ Connect to the Internet wirelessly
High-speed Wi-Fi 802.11 b/g/n networking
- ✦ Enjoy your media library anywhere
Portable powerhouse plays popular music, video, and photo formats
- ✦ microSDHC memory card reader
Increase your storage capacity (up to 32 GB supported)
- ✦ Built-in cameras
Convenient front-facing cameras
- ✦ Automatic orientation detection
Read any way you want; the display adjusts automatically!
- * Reading books in the ePub format requires the included E-book reader application.

 
➔ Getting to Know the Internet Tablet

Unit at a Glance


Name	Description
1	Camera Front Facing Cameras

English


1

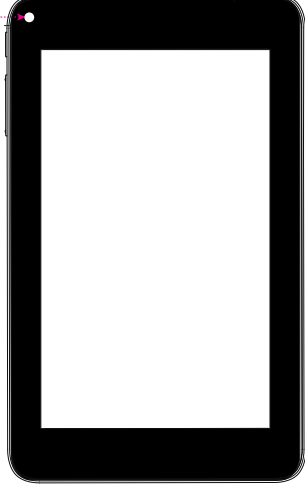

Name	Description
2	Press to turn the unit on, or to turn the screen on and off. Press and hold to access the Power Off menu.
3	Volume + key
4	Volume - key
5	microSDHC card slot
6	Speaker Speaker output is automatically muted when using headphone Jack.

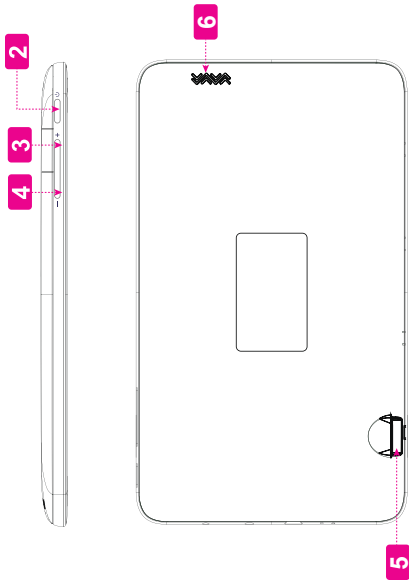 

Name	Description
7 Power jack (DC input)	Charge and power the tablet with the included power adapter.
8 Headphone jack	Audio output connection for headphones. <i>Note: Speaker output is automatically disabled when headphones are connected to the player.</i>
9 USB 2.0 Hi- speed port	Connect to a computer to transfer data (e.g., music, videos, photos, files).
10 Reset key	Press to reset the tablet if it freezes or otherwise behaves abnormally. (Use a paperclip or other small object to gently press this key.)
11 MIC	Record voice

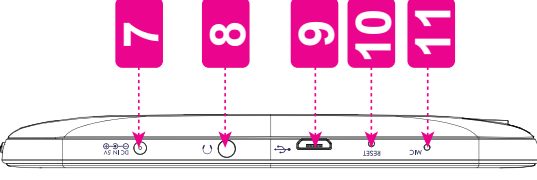 

English

About the Touchscreen

Your tablet comes equipped with an easy-to-use touchscreen.

Our capacitive multi-touchscreen requires gentle fingertip touch on the glass screen to activate tablet's functions. Multiple fingers may be used to perform gestures (e.g. 2-finger picture zoom).

Please note: Your finger tips must not be covered. A stylus may be used. Make sure it is for capacitive touchscreens.



To avoid damaging the screen, do not touch it with excessive force or with any object other than your finger. For best response, make sure your hands are clean before using the touchscreen controls.

Protective Film

A thin film has been applied to the touchscreen to protect it during shipping. The protective film should be removed before use. To remove it, simply take a corner of the film and peel it away from the screen.

Touchscreen Actions

You can control the functions of the tablet by using the touchscreen in combination with the three touch keys located on the bezel. To control the tablet with the touchscreen, use your fingertip to manipulate icons, buttons, menu items, the on-screen keyboard, and other items displayed on the screen.

You can perform the following actions on the touchscreen using your fingertip or appropriate stylus.

Touch:	To activate an on-screen item (e.g., application icons, buttons, menu items, and the letter/symbols of the on-screen keyboard), simply touch them with your fingertip.
Touch and Hold:	Some on-screen items have an alternate action if you touch and hold it (e.g., opening an alternate menu, or to activate the drag function). To touch and hold an item, touch the item and do not lift your fingertip until the action occurs.

Drag:	<p>Drag an on-screen item to change its position (e.g., an application icon on the home screen).</p> <p>To drag an item, touch and hold it for a moment, then without lifting your fingertip, move your fingertip on the screen until the item reaches its target destination.</p>
Swipe:	<p>Swipe up/down on the screen to scroll through a list. On some screens, you may be able to swipe left/right to change the view.</p> <p>To swipe, touch the screen and then quickly move your fingertip across the screen without lifting your fingertip. Do not pause on the screen with your fingertip at the initial point of contact or you may accidentally drag an item instead.</p>
Double-tap:	<p>Quickly tap the screen twice on a webpage or other application screen to zoom (the application must support the double-tap/zoom function). Within the browser, double-tapping a webpage section will cause the browser to zoom and fit that section to the width of the screen.</p>

About the Orientation Sensor

The tablet contains a sensor that will automatically change the orientation of most screens as you rotate the tablet. The sensor works best when the tablet is rotated perpendicular to the ground (i.e., when the tablet is held upright and not flat on its back).

English



The orientation sensor can be turned on and off in the **Display** settings menu.

Charging the Tablet

The tablet comes with a built-in rechargeable lithium-polymer battery.

Before using the tablet, the battery should be charged fully. Press lower right corner settings, next to battery icon is charging percentage.

To charge the battery:

1. Plug one end of the included power adapter into an AC 100-240V outlet.
2. Plug the other end of the included power adapter into the Power jack on the tablet.
3. Disconnect the power adapter when the tablet is fully charged.



The battery used in this device may present a fire or chemical burn if mistreated. Do not disassemble, incinerate, or heat the device. Do not leave the device in a place subject to direct sunlight, or in a car with its windows closed. Do not connect the device to a power source other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.

Inserting a Memory Card or USB Flash Drive

The tablet accepts microSDHC memory cards and USB flash drive. A USB On-the-Go (OTG) cable (sold separately) is required to connect USB Flash Drives:

- ✦ Increase the memory capacity of your tablet
- ✦ Play media files stored on the memory card (e.g., music, video, or photo files).

To insert a memory card :

1. Align the memory card with the card slot. The metal contacts of the memory card should face down away from the LCD screen.
2. Slide the card into the spring-loaded slot. Push the card in until it clicks into place.

To connect a USB Flash drive:

1. Check the tablet specifications to determine the type of USB port (micro-USB or mini-USB).
2. To connect an USB flash drive purchase a USB On-the-Go (OTG) cable adapter that corresponds to your USB port.
3. The USB OTG cable will adapt the Tablet's USB port to the full size connector on your flash drive.

 


Do not attempt to insert objects other than a microSDHC memory card into the card slot. A compatible memory card should fit easily into the card slot; if you encounter resistance, check the alignment of the card. Do not attempt to force the card in.

Avoid touching the gold contacts of the memory card or USB flash drive.

To release and remove a memory card or USB flash drive:

1. **UNMOUNT** the memory card or USB flash drive.
 - a. From the home screen, tap the **Launcher Tab**, and then touch **Settings** to show the settings menu.
 - b. Touch **Storage** to show the storage settings.
 - c. Touch **Unmount SD card or Unmount USB flash drive** to prepare the memory card or USB flash drive for safe removal.

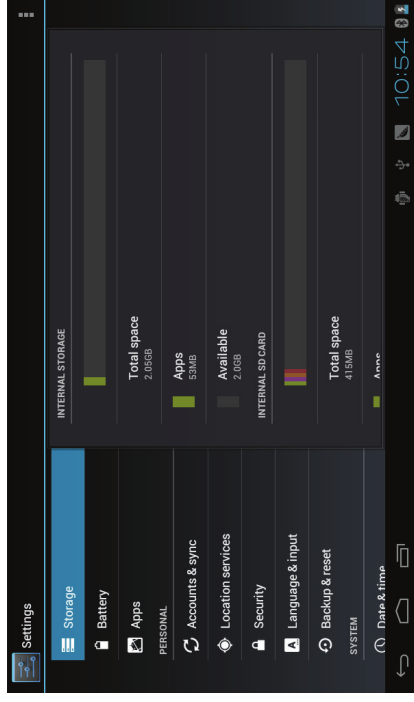

English

2. Push the card further into the slot until you hear a click. The card will spring out of the slot.
3. Grasp the card by its edge to remove it.
4. Remove the USB flash drive.



To avoid damage and data corruption, do not remove a memory card or USB flash drive while data is being written to or read from the card or USB. For example, do not remove a card or USB while playing a music file stored on the card.

The available menu items are dependent on the unit. All illustration is for reference only.

Resetting the Tablet

Reset the tablet if it should freeze and not respond or otherwise malfunction.

1. Disconnect your tablet if it is connected to a computer.
2. Press and hold the POWER key for about 8 seconds to turn off the tablet, and then press and hold the POWER key until you see Coby logo.

➔ Getting Started

 
Turning the Tablet on and off

To turn the tablet on:

- ✦ Press and hold the **Power** key until the LCD screen turns on and you see Coby Logo, then wait until you see the Unlock screen.

To turn the tablet off:

1. Press and hold the **Power** key until the confirmation message appears.

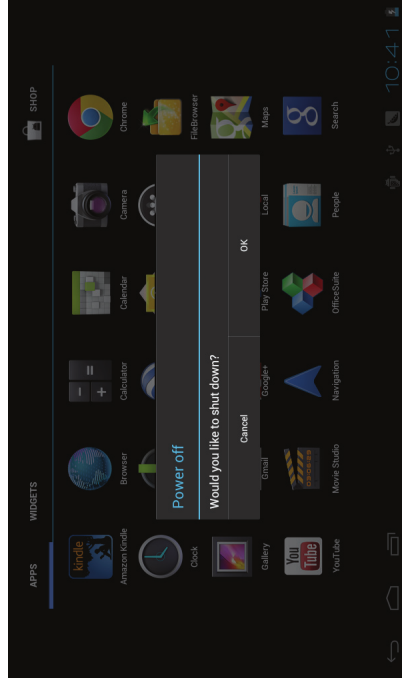

English

2. Touch **OK** to turn off the tablet.

Turning the Screen On and Off (Standby)

When the tablet is on, you can turn off the screen to conserve battery power. Simply press the **Power** key once to turn the screen off. Press the **Power** key again to turn the screen back on.

 


*To conserve battery power, the screen can be set to turn off automatically when the tablet is not in use (between 15 seconds and 30 minutes). This **Sleep** option can be found in the **Display menu**.*


Unlocking the Screen

When the screen turns off, you will have to unlock the screen when you turn it back on.

To unlock the screen, touch and drag the **lock** icon to the edge of the circle that appears.

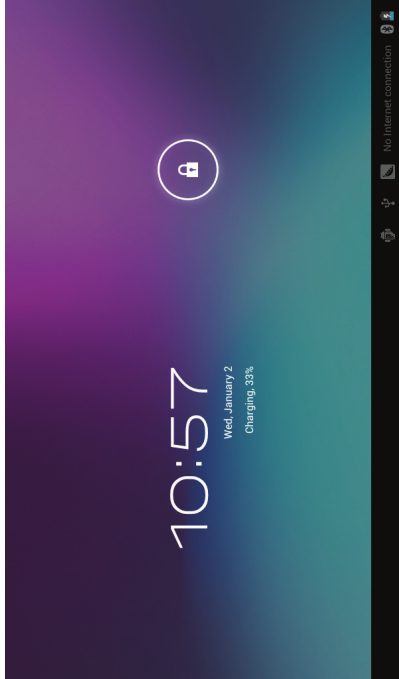

 If a password has been set, enter the password to finish unlocking the screen. The Screen Unlock password can be set in the **Security** settings menu.

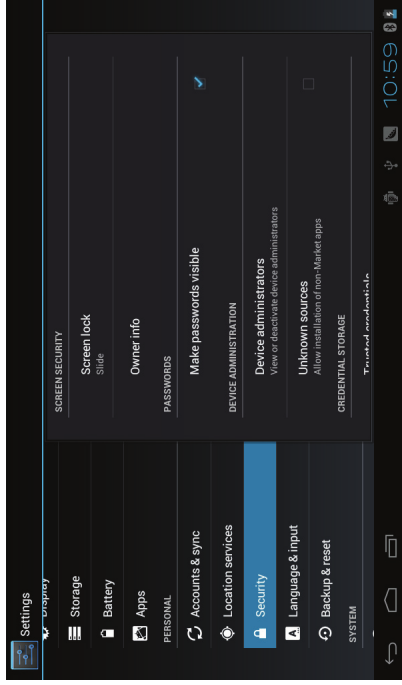

WARNING: Please write down your password lock pattern/PIN/Password. Misplacing or forgetting this method will lock the user out. Recovering the unit will reset the device back to factory defaults. **ALL YOUR DATA & PROGRAMS WILL BE LOST.**

Home Screen at a Glance

The home screen is the starting point for all of the features of your tablet.




Name	Description
1 Google Search	Touch to search with Google browser.
2 VOICE Search	Search by voice.
3 Home icon	Touch to back to the central Home Screen.

Name	Description
4 Back icon	Touch to back to the previous screen.
5 Recent Apps	Touch to display the list of thumbnail images of apps you have worked recently. Touch an App to open it.
6 Launcher Tab	Open the Launcher to view the list of all Applications and Widgets installed on the tablet. Touch the Launcher tab to open the Launcher.
7 Icons	Touch an icon to open an application or folder.
8 Notification bar	Shows notification icons such as time, battery level, and the network signal strength; touch the bar to open the full Notifications panel. Touch a Notification icon to display more detail.

About Applications

 To open an application, touch the application icon on the home screen or in the Launcher.



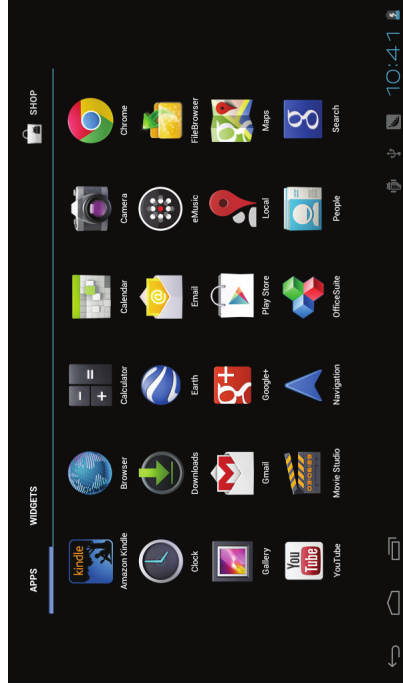


Launcher screen:










The screen shown above is for illustrative purposes only. Coby reserves the right to modify and improve the final list of applications available on the tablet.








Preinstalled Applications

Some applications have been installed on your tablet for your convenience. These applications include:

	Download and read thousands of e-books.
	Get \$10 of music from eMusic.
	Check your Gmail.
	Google Play is all of your Android apps and games, available on the web and anywhere you go.
	Launch the mobile YouTube™ App to watch internet videos.

English

	Browse the web with Google Chrome™
	Real-life sharing rethought for the web, wherever you are.
	Search for local information.
	Never carry a paper map again with Google Maps™
	Navigate to destination.
	Stay in contact with all your friends with Google Talk
	Choose from thousands of movies and TV shows on Google Play and stream them instantly on your Android phone, tablet or the web.

	Create and edit videos with Google Movie Studio
	Explore the world from the palm of your hand with Google Earth.
	The fastest, easiest way to find what you need on the web and on your device.
	Browse the web.
	Perform simple mathematical operations.
	Display the calendar or record events and appointments to manage your schedule.
	Take pictures or videos with the front-facing camera.

	View the current time, or set an alarm.
	View photos and videos, plus edit photos.
	Access the Settings menu to adjust the tablet's options.
	Check your e-mail.
	View and manage files stored on the tablet.

Installing Applications

You can also download an install additional applications from the device's applications marketplace, the web browser, or other sources.

The tablet must be set to allow installation of applications from non-Market sources. The Unknown sources option can be set in the **Application settings** menu.



Your Coby Mobile Internet Device may include access to, or information on, content, products, applications and services from third parties. Your use of such third party content, products, applications and services is at the discretion of such third party and expressly governed by such third party's terms of use, including any such third party's privacy policies, for such content, products, applications and services. Coby Electronics Corporation is not responsible for and expressly disclaims all warranties of any kind with respect to all such third party content, products, applications and services. Coby Electronics Corporation will not be responsible for any loss, costs, or damages incurred due to your access to or use of third party content, products, applications or services.

About Widgets

Widgets are self-contained applications that you can place on the Home screens to access your favorite features.

English

Adding Widgets to a Home Screen

1. Navigate to the Home screen which you want to place the Widget on.
2. Touch the **Launcher Tab**.
3. Touch **WIDGETS** to show all widgets, and then hold on a widget icon to add it to the Home screen.

Removing Widgets

Touch and hold the Widget until Remove icon appears at the top side of the screen, then drag the Widget to the Remove icon to remove it.



X Remove

About Notifications

The icons that appear in the Notification bar at the bottom right corner of the screen alerts you when new messages arrive or alarms or other application events occur.

View and respond to the notifications by opening the full Notifications panel.

 
- ✦ Touch the **Notification** bar to open the Notifications panel.

To respond to a notification:

Touch a notification in the list; the Notifications panel will close and the application associated with the notification will launch.

To close the Notifications panel:

- ✦ Touch any other area of screen except the Notifications panel , or;
- ✦ Touch the **Back** icon.

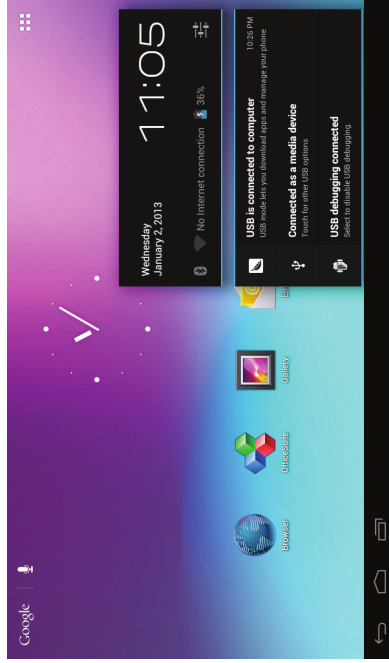

➔ Connecting to the Internet

This tablet can utilize Wi-Fi data networks to connect to the Internet.

- ✧ Wireless Wi-Fi technology can provide Internet access at distances of over 300 feet; however, this distance can be affected by your surrounding environment and Wi-Fi router. In general, being closer to Wi-Fi router improve performance.

Requirements

In order to connect to the Internet, you will need either of the following:

A wireless router or access point with a broadband Internet connection

The tablet has 802.11 b/g/n Wi-Fi radio. The tablet will also work on wireless routers that only support 802.11 b/g.



A minimum connection speed of 64 Kbps is recommended. Faster speeds will enable a better Internet experience.

You will need to know the name of your network (SSID), as well as the password or other credentials if your network is secured. These settings can usually be found on the administration webpage of your wireless router.

English



You may encounter open Wi-Fi networks, or “hot spots.” These networks are usually configured so that you can simply connect to them without needing to know its settings; the tablet will obtain all the information it needs from the router automatically.