



GALILEO™ 14'x10'

Instructions apply to Part Number 9276A141

When You Are Ready To Set Up Your Tent

- Select a level campsite clear of rocks, branches and other hard or sharp objects.
- Do not set up your tent under trees.
- For best results in windy conditions, position the end of tent into the wind.
- See owners manual for more tips.

Main Tent Poles

Part No. 9276-202

Side Poles

Part No. 9276-203

U Shaped Rainfly Poles


Part No. 9276A204

Rainfly Part No. 9276A205





1 Layout & Positioning of Tent, Pole Assembly

- Layout and position tent with doors facing desired directions. (illus. 1)
- Unzip doors.
- Stake down tent, using the rings on the stake loops. Keep the floor taut. (illus. 2)
- Assemble frame poles by interlocking shock-corded poles. (three poles)
- Insert the longer black poles into pole sleeves as shown below. They will curve and come out on the same side that they started. The shorter grey side pole inserts into sleeves running side to side. (illus. 1)

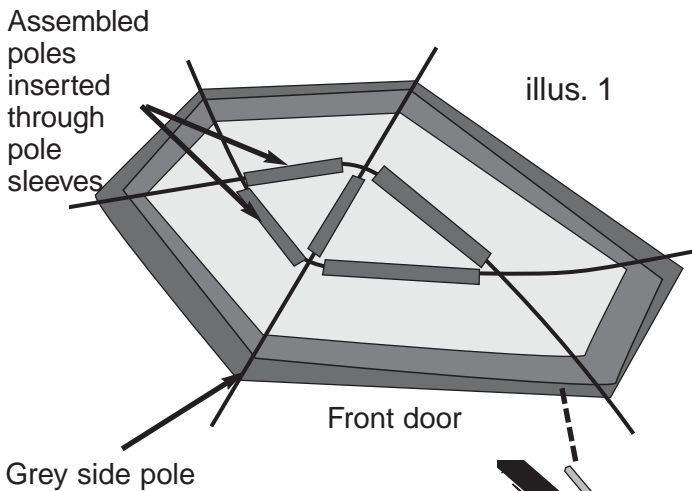



2 Connect Frame to Tent

- Insert one pin into the end of main tent pole at tent corner. (illus. 3, illus. 4)
- Go to opposite end of pole and gradually apply pressure to the pole forming an arch until you are able to insert the pin into the pole end. (works best with two people)
- Repeat for second pole.
- Insert pin into the end of side pole, go to opposite end of pole and apply pressure until you arch the pole and can insert the pin into the pole. (illus. 3, illus. 4)

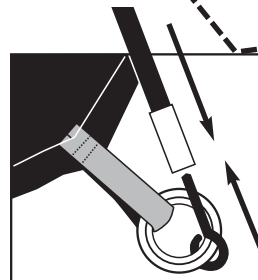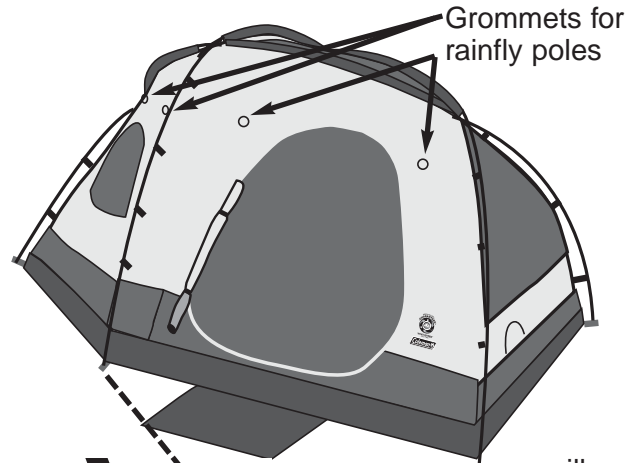

3 Attach Rainfly

- Assemble rainfly poles by interlocking shock-corded poles.
- Insert rainfly poles through the pole sleeves (4) located at the edges of the underside of rainfly. (illus. 5)
- Drape rainfly over tent frame, pole side down. Rainfly poles should go over doors and windows.
- Connect the six elastic loops with "S" hooks, (found at the rainfly corners) to the six rings located at the end of the stake loops at the corners and sides of the tent. (illus. 6)
- Insert rainfly pole into grommets on tent body. (illus. 4 & 6)
- Secure rainfly with attachments located on underside of fly. (illus. 5 & 6)
- Attach and stake out guylines (2). (illus. 6)
- Stake out door mat.

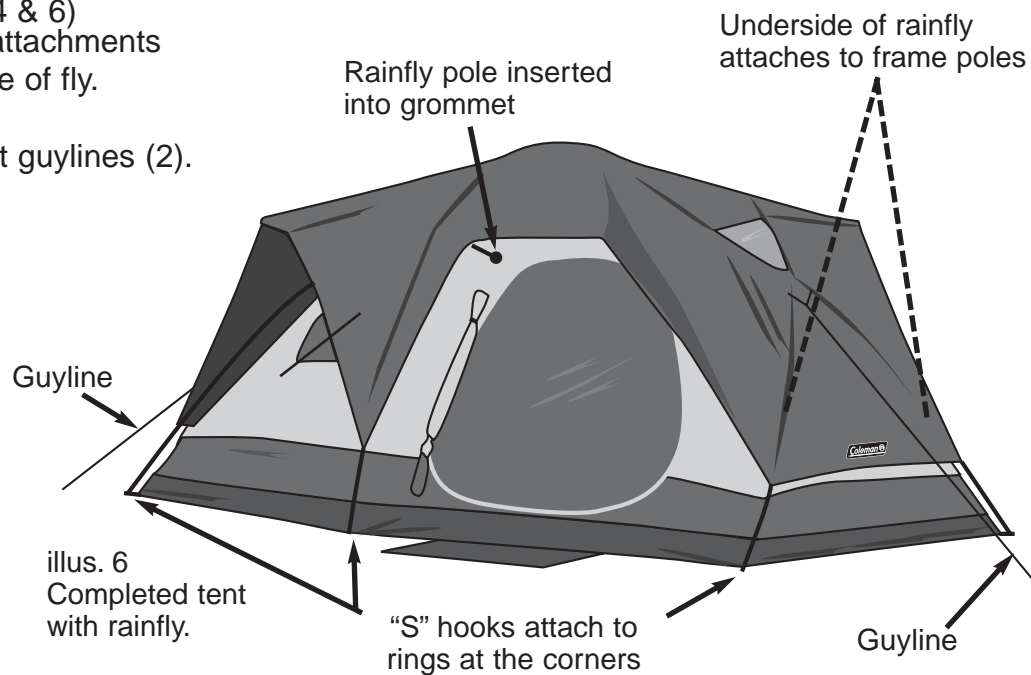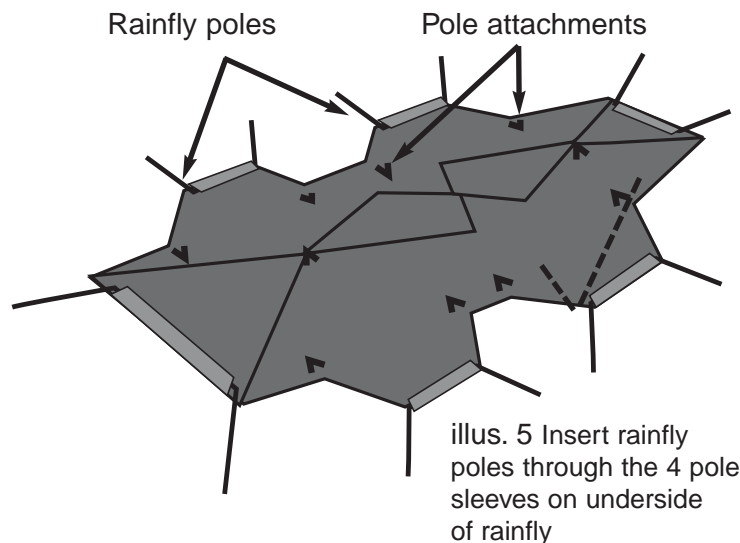

Things You Should Know

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside surfaces of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside your tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT FABRIC OR TENT STAKE LOOP TO REMOVE STAKE.
- TENT POLES SHOULD NOT BE LEFT TELESCOPED TOGETHER DURING STORAGE.
- Seam sealer has not been provided with your tent. We recommend seam sealing your tent prior to camping. Seam sealer may be purchased through your local retailer or at your local sporting goods store.

- Do not leave your tent set-up for weeks at a time, be aware that exposure to the ultraviolet rays of the sun can seriously damage material and/or cause it to become discolored.
- See owners manual for more tips.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



THE COLEMAN CO., INC.
 3600 N. Hydraulic • Wichita, Kansas 67219
 1-800-835-3278 • www.coleman.com

MADE IN CHINA