



CRESTLINE™ 9'10" x 7'

Instructions apply to Part Number 9277H107

When You Are Ready To Set Up Your Tent

- Select a level campsite clear of rocks, branches and other hard or sharp objects.
- Do not set up your tent under trees.
- For best results in windy conditions, position the end of tent into the wind.

- (2) Main Tent Poles
(Black)
- (2) Side Poles
(Grey)
- (2) Rainfly Poles

POLE ASSEMBLY PARTS

Part No. 9277H1021


Part No. 9277H1031

Part No. 9277H1041

Rainfly Part No.
9277H1051


1 Layout & Positioning of Tent, Pole Assembly

- Layout and position tent with door facing desired direction. (illus. 1)
- Unzip door.
- Stake down tent corners only, using the stake loops. Keep the floor taut. (Intermediate loops will be staked later.)
- Assemble frame poles by interlocking shock-corded poles. (four poles)
- Insert the poles into pole sleeves. The longer black poles should cross forming an "X" in the middle of tent. The shorter side grey poles insert into sleeves running front to back. (illus. 1)

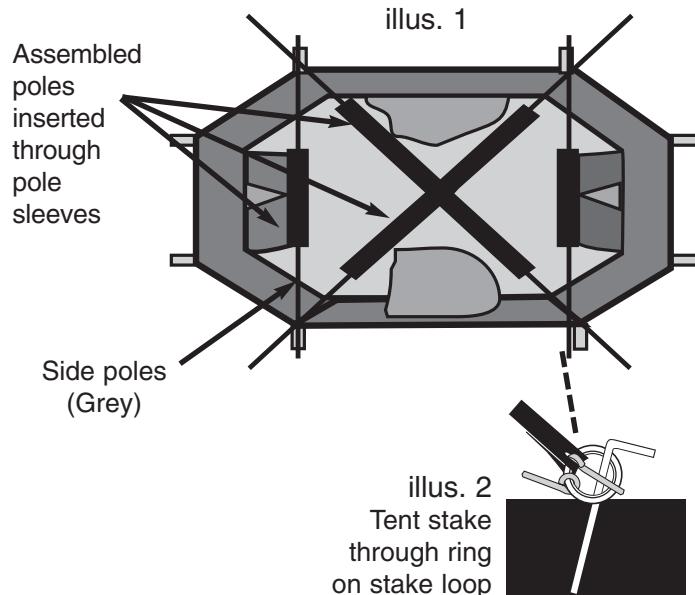


2 Connect Frame to Tent

- Insert one pin into the end of main tent pole at tent corner. (illus. 3, illus. 4)
- Go to opposite end of pole and gradually apply pressure to the pole forming an arch until you are able to insert the pin into the pole end.
- Repeat for second pole.
- Insert pin into the end of side pole, go to opposite end of pole and apply pressure until you arch the pole and can insert the pin into the pole. (illus. 3, illus. 4)
- Repeat for other side pole.

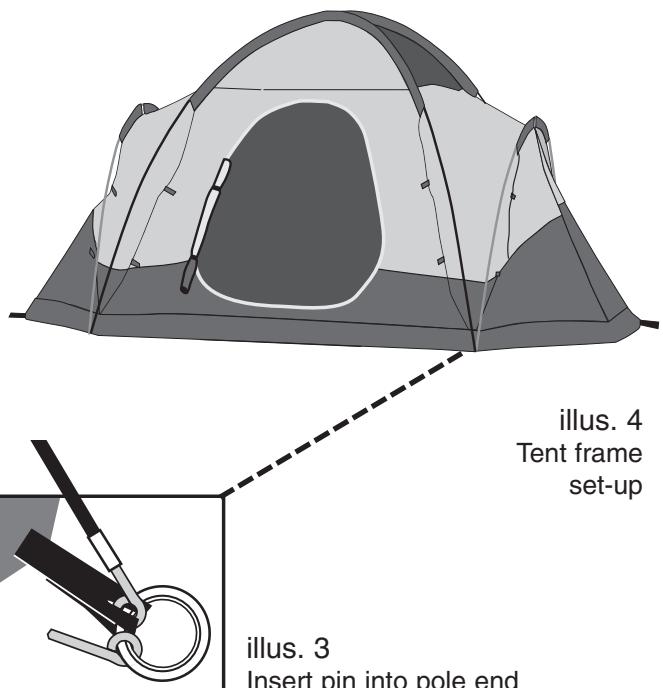

3 Attach Tent to Frame Using Frame Clips


- Attach frame clips along the edges of tent to frame poles. (illus. 5), (illus. 6)
- Make any adjustments to the tent corner stakes, if needed.
- Stake out remainder of intermediate loops.

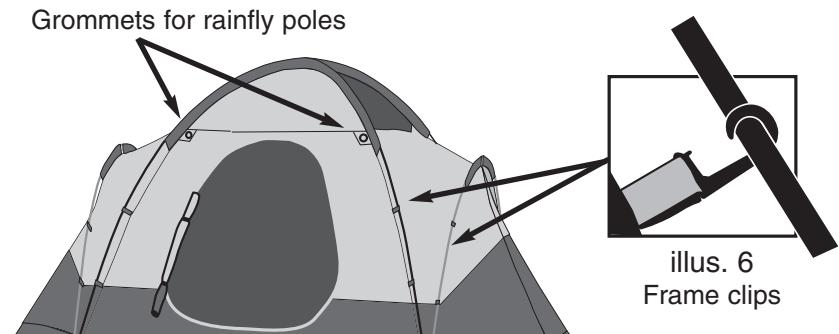

illus. 5 Assembled tent without rainfly.
Note the frame clips located on edge of tent.

4 Attach Rainfly

- Assemble rainfly poles by interlocking shock-corded poles.
- Insert rainfly poles into pole sleeves located at the center edges of the underside of rainfly. (illus. 7)
- Drape rainfly over tent frame, pole side down. Rainfly poles should cover door and rear window.
- Connect the four elastic loops with “S” hooks, (found at the rainfly corners) to the rings found at the end of the poles.
- Insert the tips of the rainfly poles into the grommets on the front and rear of tent. (See above illus. 5)
- Secure rainfly with attachments located on underside of fly. (illus. 8)
- Attach and stake out guylines.

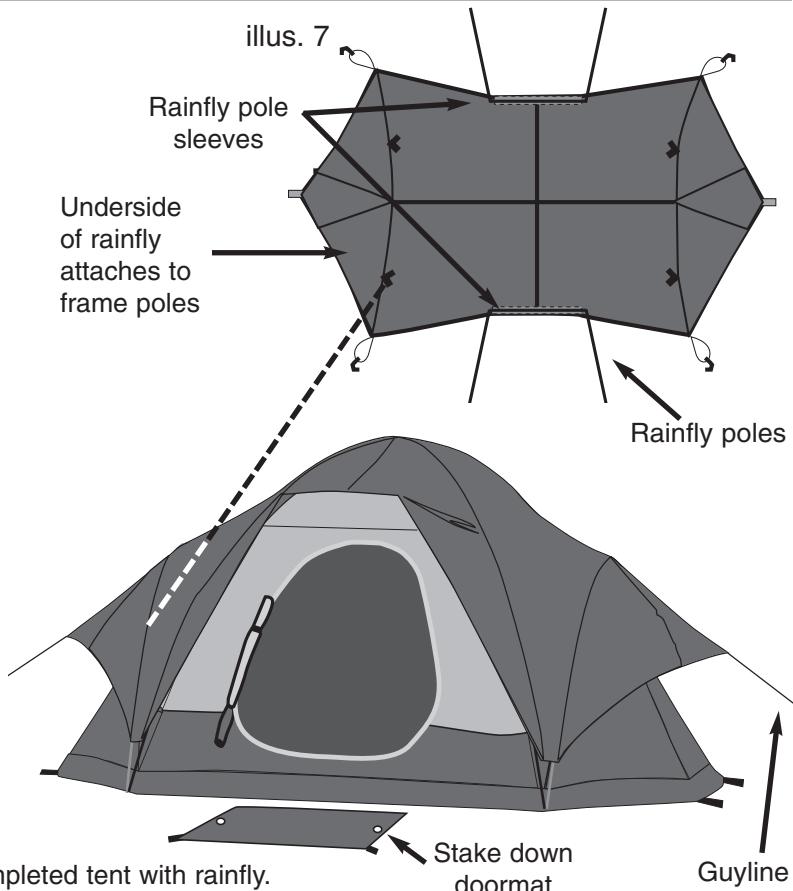

illus. 8 Completed tent with rainfly.

Things You Should Know

• Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside surfaces of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside your tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.

• Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.

• STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT FABRIC OR TENT STAKE LOOP TO REMOVE STAKE.

• TENT POLES SHOULD NOT BE LEFT TELESCOPED TOGETHER DURING STORAGE.

• Do not leave your tent set-up for weeks at a time, be aware that exposure to the ultraviolet rays of the sun can seriously damage material and/or cause it to become discolored.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



THE COLEMAN CO., INC.

3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com

MADE IN CHINA