
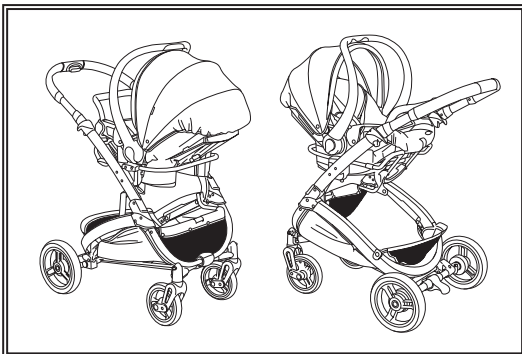


Combi®

Catalyst

Instruction Manual

CombiUSA.com

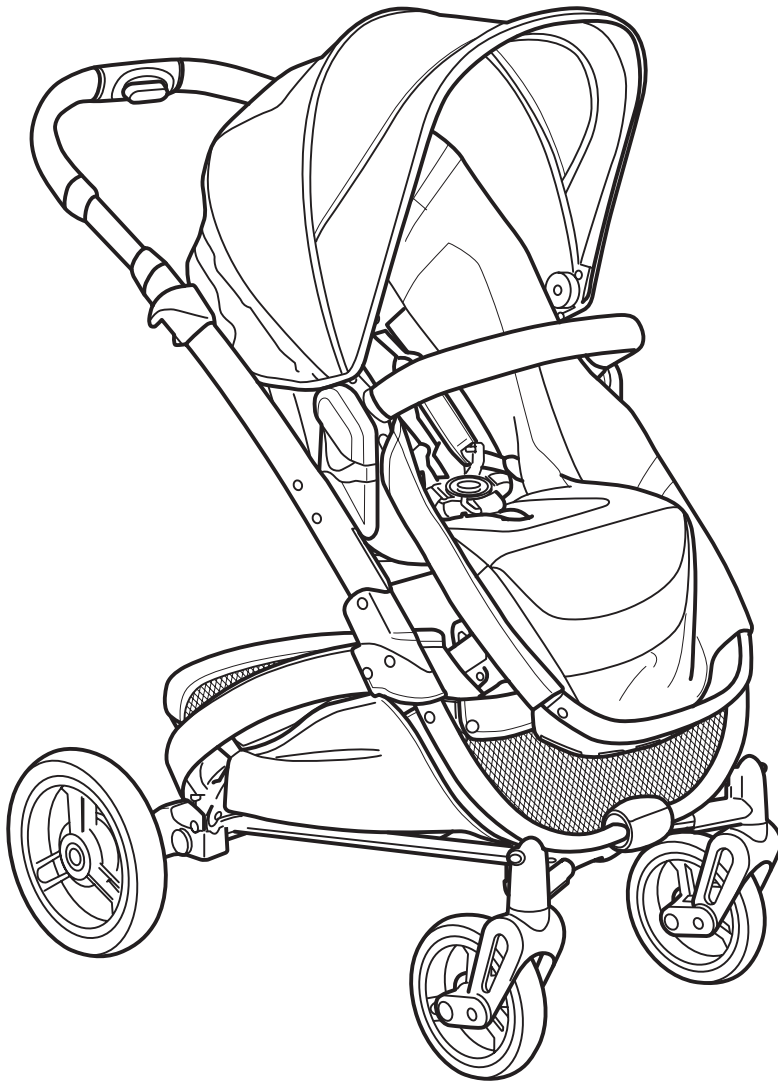

Read all instructions BEFORE assembly and USE of product.
KEEP INSTRUCTION FOR FUTURE USE. Record the following information for quick reference.

Note: Illustrations and photographs are only representative and not actual.
Attach copy of sales receipt for future reference.

Date of Purchased: _____

Model Number: _____ - _____ (Located near rear of basket)

Color: _____

Combi USA, Inc.

3520 Westinghouse Blvd., Suite B • Charlotte, NC 28273

Customer Service 1.800.992.6624

WARNINGS & GENERAL SAFETY INFORMATION



WARNING

AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT – ALWAYS USE RESTRAINT SYSTEM. **NEVER LEAVE CHILD UNATTENDED!** PLEASE READ THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE.

In the event of damage or problems, discontinue use and contact Combi Customer Service for instructions: 1-800-992-6624


All operating and assembly procedures should be performed by an adult:

- Avoid serious injury from falling or sliding out. Always use restraint system.
- Never lift and carry the stroller while occupied. The stroller may fold.
- Never allow your child to stand in or on the stroller..
- Never carry more than one child in stroller. Do not allow a child to ride or sit on areas of the stroller other than seat.
- Never leave child unattended.
- Never use the stroller on steep slopes, stairs, escalators, beaches, rough roads, mud, etc.
- Never hang items on the handle or place items on canopy. This could cause the stroller to become unbalanced or tip over.
- Always engage the brake when parking the stroller.
- Never allow children to lean over sides of stroller. It may become unbalanced and tip over.
- Excessive weight in basket (or items placed in basket which overflow the top or side of basket) may cause a hazardous condition. Do not load more than 10 lbs (4.5kg) in the basket.
- To avoid finger entrapment or pinching, use care when folding and unfolding the stroller. Be certain the stroller is fully erected or folded, and locked in position before allowing your child near the stroller.
- Completely remove all plastic bags and packing material before using this product to prevent a possible choking hazard.
- ALWAYS secure your child with the infant carrier restraint system before using it with the stroller.
- This stroller is intended for walking speed only. NEVER use while jogging, skating, etc.
- Child may slip into leg opening and strangle. Never use in reclined carriage position unless the restraint system is fully secured.
- Completely remove all plastic bags and packing material before using this product to prevent a possible choking hazard.
- Never carry stroller by using the approved infant car seat handle.
- If unable to securely attach the approved Infant Seat to your stroller, discontinue use and contact Combi Customer Service.
- TIPPING HAZARD: Never place weight on rear of infant seat while attached to the stroller. This could cause the stroller to become unbalanced and tip over.
- Use only approved infant carriers with this stroller.
- To ensure your child's safety, please refer to an approved Infant Seat instruction manual before using it with the stroller.
- WARNING: Do not use the seat in bassinet mode as a stand-alone unit. Serious injury may occur.


Total Maximum weight of the child MUST NOT exceed 50 lb (22.7 kg).

Note: All products specifications are subject to change without notice. Sizes and weights are intended as guides and are approximations. Combi® reserves the right to modify the products in its line during the course of the year. Non contractual media. Colors are as accurate as the media in which they appear allows.

PARTS LIST

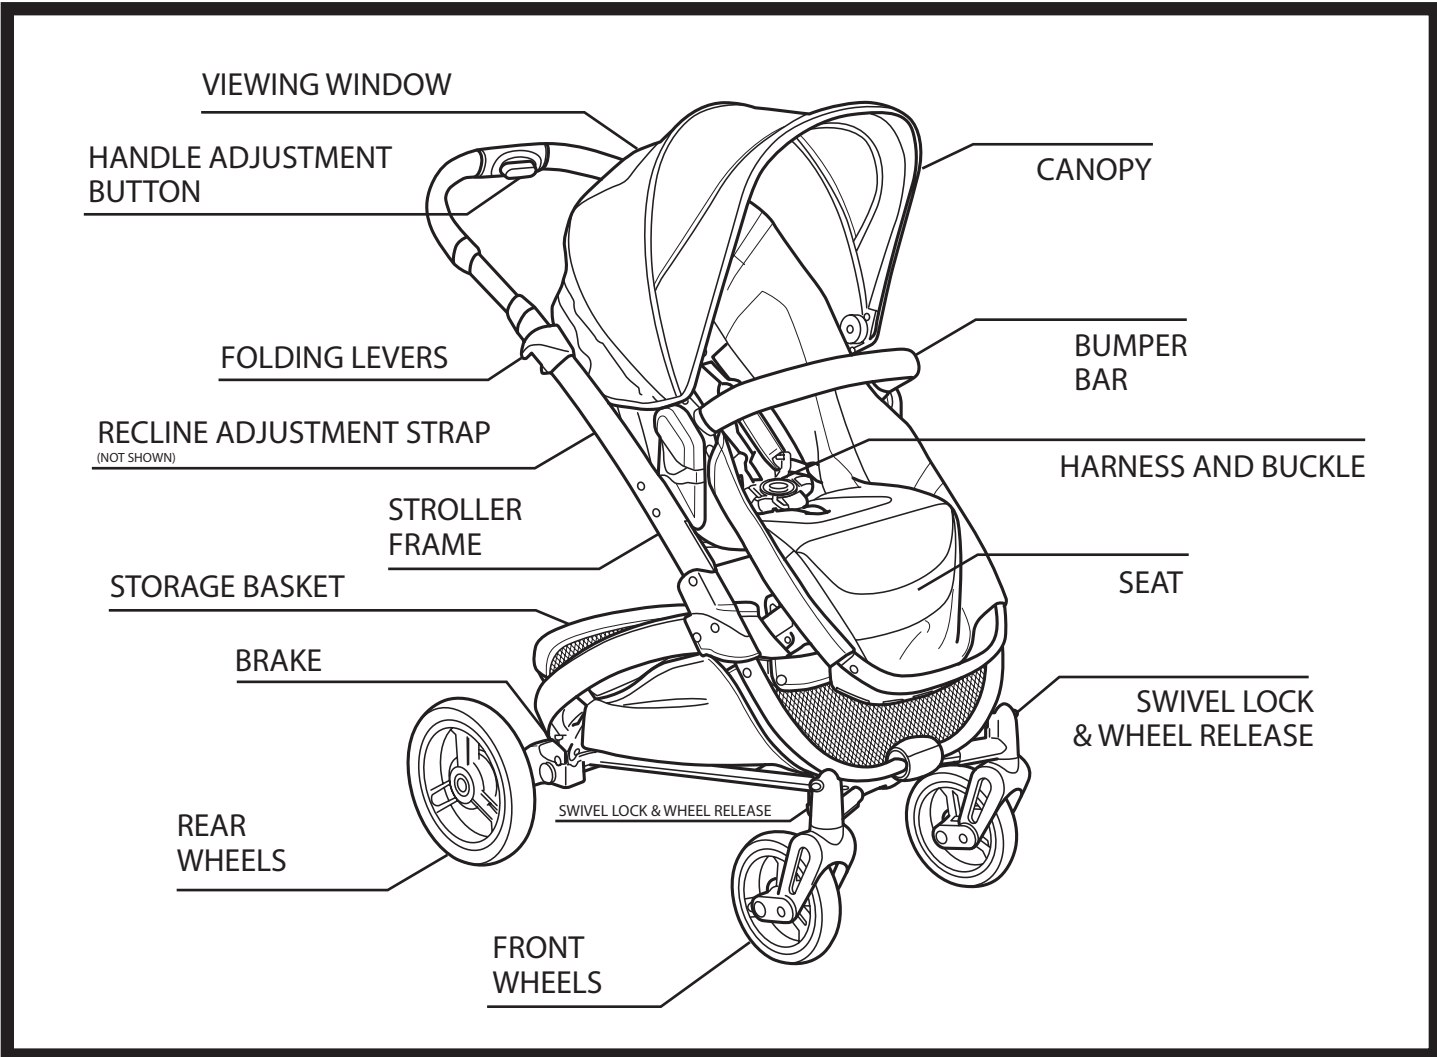


CAR SEAT ADAPTER*

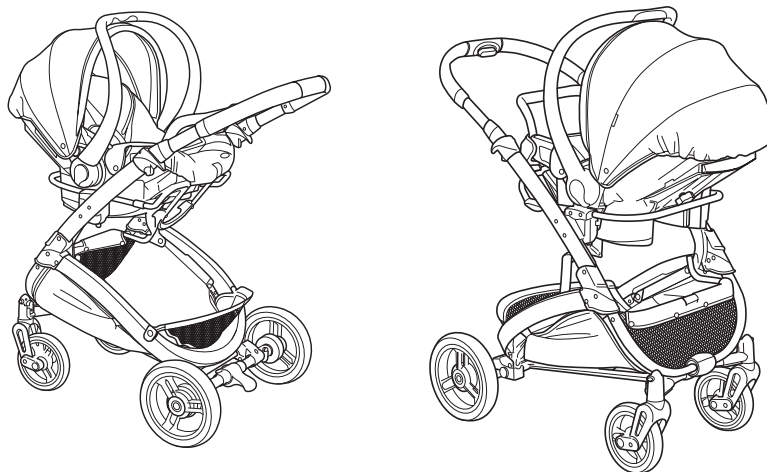

*CAR SEAT NOT INCLUDED

STROLLER ASSEMBLY

INSTALL/REMOVE WHEELS

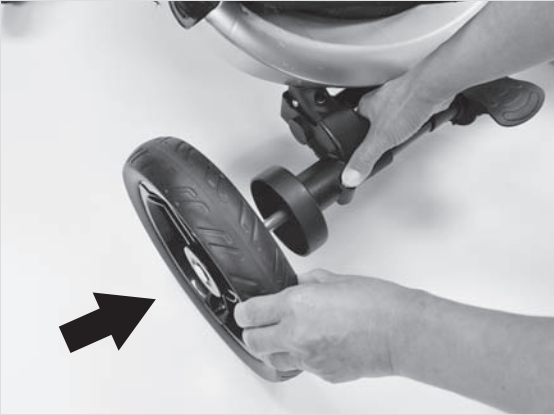

TO INSTALL THE BACK WHEELS:

Slide the wheel into the axle until it locks into place.


TO REMOVE THE BACK WHEELS:

Press the gray button on axle and pull the wheel out.



TO INSTALL THE FRONT WHEELS:

Slide each front wheel into the housing until it locks into place.

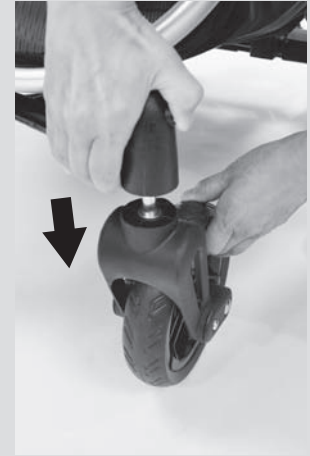

TO REMOVE THE FRONT WHEELS:

Press the gray button and pull wheel out from housing.

UNFOLD STROLLER



NOTE: Apply the brake before unfolding.

STEP 1: Pull latch outward with your thumb to release locking mechanism.




STEP 2: Pull up on the handle until frame locks open.

STEP 3: Check that the frame is locked properly by gently pushing down on the handle.

STROLLER ASSEMBLY

ATTACH/REMOVE SEAT

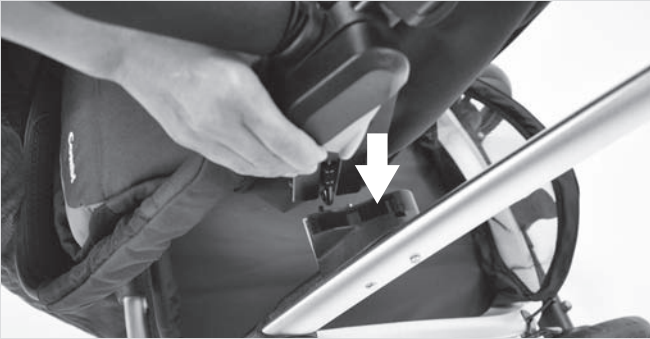

STEP 1: Insert the posts on the sides of the seat into the slots of the frame. Push until you hear it “click” on both sides.

STEP 2: Gently pull up on seat to be sure it is properly attached to the frame.



STEP 3: To remove, push both release buttons (gray) and lift seat from the frame.

NOTE: Seat can attach in either forward or rear-facing direction.

ATTACH/REMOVE THE BUMPER BAR



STEP 1: Insert metal post into bumper bar attachment slots found on both sides of seat.

NOTE: The metal post can only be installed one way. Match oval guides beside the metal post to the oval guides on seat adapter.



STEP 2: To remove, locate release lever on the inside of bumper bar latch. Use one finger to release button, and the other hand to release locking mechanism. Repeat on the other side.

NOTE: White dot indicates location of release lever

CANOPY INSTALLATION



STEP 1: Snap each side of canopy attachment to seat frame, just above bumper bar.



STEP 2: Pull canopy fabric over seat back. Attach snaps at the rear of the seat (x2).

NOTE: Canopy coverage is adjustable.

STROLLER OPERATION

USING THE SWIVEL/LOCKING SYSTEM




TO LOCK WHEEL SWIVEL: Align swivel wheel for forward travel, then push lever down to lock.

TO UNLOCK: Slide button up

NOTE: Lock wheel swivel if traveling through rough terrain or sand for improved stroller performance.

SET THE BRAKE

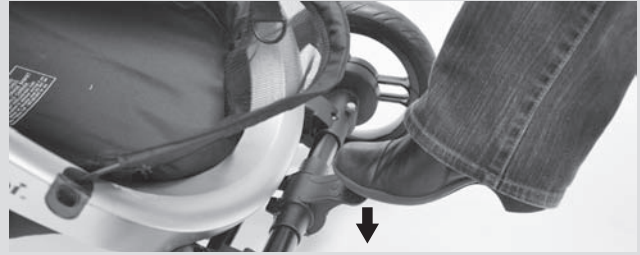

TO LOCK THE BRAKE:

STEP 1: Brake is located on the rear axel at the bottom center of the stroller frame.


STEP 2: Push down on pedal to lock stroller.

TO RELEASE BRAKE: Push the pedal up.

HARNESS ADJUSTMENT



STEP 1: Detach adjustment clip from the 5-point harness.

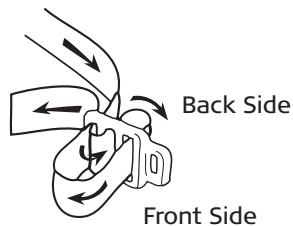

STEP 2: While holding clip on strap, move the loop of the strap up or down to adjust. (Remove harness pad, if needed)

STEP 3: Once adjust is complete, place harness pad back on to the strap and clip back into 5-point harness.

ADJUST CANOPY



TO ADJUST CANOPY: Pull sunshade out until you hear a “click”. Repeat until desired coverage is reached.

VIEWING WINDOW



TO USE VIEWING WINDOW:

To open window, lift window cover and fold forward, over canopy. To close window, fold window cover rearward and attach with magnet.

STROLLER OPERATION

SEAT POSITIONS



POSITION #1
INFANT MODE

POSITION #2
TODDLER
RECLINE MODE

POSITION #3
TODDLER
UPRIGHT MODE

WARNING: TO AVOID SERIOUS INJURY OR DEATH, never use Position #2 or #3 with an infant. ALWAYS use the restraint system.

ADJUST SEAT POSITION



Pull the lever near the top of the seat and tilt to desired position. Release the lever to lock in one of three preset positions.

ADJUST THE HANDLE POSITION



TO ADJUST THE HANDLE POSITION: Push the grey button, the slide handle to the desired position.

RECLINE THE SEAT BACK



TO ADJUST THE SEAT BACK RECLINE: Locate the recline mechanism on the rear of the seat back. Position fingers on the front and back of the red recline release lever, then pull down to desired position.



RETURN TO UPRIGHT POSITION: While holding the recline strap, push recline mechanism to the desired position.

USING THE HARNESS



TO LOCK: Slide both belt ends together until it locks.

TO OPEN: Depress button at center and pull apart

WARNING: Use the 5-point harness to restrain the child while in the stroller at all times. Adjust harness to fit child securely.

INFANT MODE

SETUP



STEP 1: Lift rear lever firmly and completely.



STEP 2: Shift seat to a horizontal position.



STEP 3: Unlatch secure buckle strap located under the foot rest.



STEP 4: Gently press down on the leg rest to complete the conversion to Infant Position.


WARNING

Remove child before removing or adjusting seat.

 DO NOT carry seat by Bumper Bar

STROLLER OPERATION

FOLD STROLLER

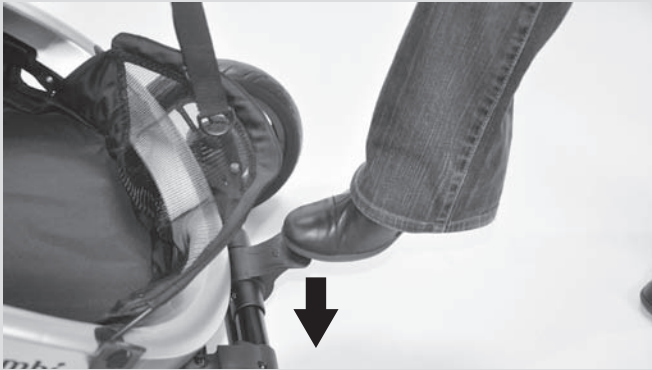

STEP 1: Activate the brake (Press downward on brake pedal) to prevent stroller from rolling forward while folding.



STEP 2: Place handle in lowest position.



STEP 3: Slide Folding Levers to release stroller frame.



STEP 4: Lower stroller frame until locking mechanism engages on the left side of stroller.



STEP 5: Gently lift stroller by handle to ensure locking mechanism is engaged.

NOTE: When folding frame with seat attached, seat must be in forward facing and upright position.

WARNING: To avoid finger entrapment or pinching, use care when folding and unfolding the stroller. Be certain the stroller is fully erected or folded, and locked in position before allowing your child near the stroller.

CAR SEAT ADAPTER INSTRUCTIONS

Combi Car Seat Adapters are Compatible with the following infant car seats: Combi® Shuttle, Combi® Shuttle 33, Combi® Navette 22, Chicco® Key Fit® 30, Graco® SnugRide® 35 and Graco® SnugRide® 30. Instructions are slightly different for each manufacturer.



To attach car seat adaptor:

Insert the posts on the sides of the car seat adapter into the slots of the frame. Push until you hear a “click” on both sides.




To remove car seat adaptor:

Pull inward on both red levers, then pull adapter upward.

*To attach an infant car seat:

1. Lock stroller wheels to prevent stroller movement.
2. Hold car seat above the mounting points on stroller.
3. Push car seat downward onto the mounting points on stroller. Listen for the “click” to indicate the car seat is secured to the stroller.
4. Route car seat attachment straps through the car seat’s vehicle belt path. (Refer to Car Seat Instruction Manual for additional information)
5. Pull upward on car seat to be sure car seat is secured to stroller.

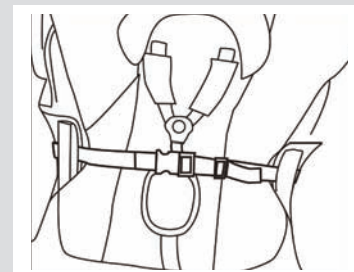

*Special Instruction for Combi® Shuttle Car Seat:

Insert the rear portion of Shuttle car seat into the car seat adaptor as shown on the right. Align the orange tabs on each side of the Shuttle car seat with the red arrow on the car seat adaptor. Push down on the front portion of the Shuttle car seat. Listen for the audible “click” to indicate proper insertion of the car seat. Pull upward on car seat to be sure car seat is secured to stroller. Route the car seat attachment straps through the car seat vehicle belt path.



NOTE: You must ALWAYS use the safety belt to secure the car seat.

Always pull upward on the car seat to ensure that it is secure before routing the car seat attachment straps.

If the seat is not secured to the car seat adaptor, then remove the car seat and re-start.

CAR SEAT ADAPTER INSTRUCTIONS

*Special Instruction for Chicco® KeyFit Car Seat:

Insert the rear portion of car seat into the car seat adaptor as shown on the right. Push down on the front portion of the car seat. Pull upward on car seat to be sure car seat is secured to stroller. The car seat attachment straps connected to the car seat adaptor must be placed over the seat. Routing the car seat attachment straps through the car seat vehicle belt path is not required.



*Special Instruction for Graco® Snugg Ride Seat:

Hook the rear portion of the seat onto the car seat adaptor as shown on the right. Push down on the front portion of the car seat to ensure that the two metal U-shaped brackets at the bottom of the seat are secured onto the plastic hooks on the car seat adaptor. Pull upward on car seat to be sure car seat is secured to stroller. Route the car seat attachment straps through the car seat vehicle belt path.



ROUTINE MAINTENANCE

Store in a cool and dry area, especially in the summer. To avoid damaging stroller, NEVER place items on top of stroller during storage.

Canopy, Restraint System, and Basket:

Hand wash with a soft bristle brush. Wipe out excess water with a dry cloth and allow to dry in a shaded area. For stubborn dirt, dilute a mild detergent with warm water and apply directly to the dirty area. Wipe away the detergent with a warm, damp cloth.

Stroller Frame

Briskly wipe off any mud and dirt. To clean the frame, wipe with a damp cloth then wipe out any traces of moisture on the frame with a dry cloth.

Excessive exposure to the sun could cause premature color fading of stroller plastic and fabric.

Wheel Assemblies:

After prolonged normal use, the wheels of your stroller may not swivel or turn as easily as when the stroller was new. This is usually due to a buildup of dirt in the swivel mechanism. Before adding lubrication, remove the swivel wheels by pressing in the release button, then wipe off mud and dirt. Do not use soap and water to

wash wheels. Periodically check that all screws, bolts and nuts are tight.

Avoid lubricating the swivel wheels whenever possible. Excessive lubrication or adding lubricant to swivel wheels when new may cause them to develop a shimmy or wobble that may quicken their deterioration.

Add silicone* to the wheel assemblies in small amounts. Do not use oil-based lubricants because oil attracts dust and would hinder the movement rather than improve it.

*Silicone spray is available at most hardware stores.

CLEANING THE SEAT

-  Hand Wash
-  Do Not Use Bleach
-  Dry Flat
-  Do Not Iron
-  Do Not Dry Clean

ROUTINE MAINTENANCE

REMOVING SEAT

- STEP 1:** Remove the canopy (Refer to Canopy Installation)
- STEP 2:** Unfasten the snaps (x12) around the edge of seat frame. Unfasten the snaps (x3) under the seat.
- STEP 3:** Unfasten Velcro® straps located near the footrest on the seat frame.
- STEP 4:** Remove the lap portion of the harness straps.

SEAT BELT REMOVAL

- STEP 1:** Route shoulder belt retainer at the rear of the seat through the slot.
- STEP 2:** Detach adjustment clip from the 5-point harness.
- Follow the above direction in reverse to assemble

LIMITED WARRANTY

1. Combi USA Products, when purchased from an authorized retailer; are warranted to the original purchaser to be free from defect in materials and workmanship for a period of one (1) year from date of purchase. Combi products purchased from unauthorized retailers are not covered under warranty. Warranty is valid for products purchased and used in the U.S. only and used in compliance with the warrantor's use and maintenance instructions. Save your carton and receipt. These items may be required in case of return for warranty assistance.
2. During the warranty period your Combi product will either be repaired or replaced, at the warrantor's discretion, without charge for replacement parts if it is purchased from an authorized Combi dealer and is found to be defective in workmanship or materials. For service, call 1-800-99-Combi (1-800-992-6624). For warranty service, please contact your Combi retailer. The warrantor shall not be responsible for any costs incurred by the consumer in returning a defective product for repair. The consumer will be responsible for all shipping and handling for replacement parts.

This limited warranty shall not apply to normal wear to the product, or if the product has been:

- a. Damaged due to accidents, misuse, abuse or neglect as determined by Combi.
- b. Tampered with or repaired by any one other than an authorized Combi representative or with parts other than Combi approved parts.
- c. Leased or rented for commercial use.

THE WARRANTY PROVIDED HEREIN IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY EXCLUDED. WARRANTOR'S OBLIGATIONS AND THE CONSUMER'S OR OTHER BUYER'S REMEDIES UNDER THE LIMITED WARRANTY ABOVE ARE EXCLUSIVE AND ARE STRICTLY LIMITED TO REPAIR OR REPLACEMENT AS STATED. ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ON THE PART OF THE WARRANTOR AND ANY SUPPLIER OR DEALER ARE HEREBY ALSO EXPRESSLY EXCLUDED.

Some states limit or do not allow exclusions or limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Combi USA, Inc.

3520 Westinghouse Blvd., Suite B • Charlotte, NC 28273
Customer Service 1.800.992.6624