


Read all instructions BEFORE assembly and USE of product. **KEEP INSTRUCTIONS FOR FUTURE USE.** Record the following information for quick reference. Note: Illustrations are only representative and not actual. Attach copy of sales receipt.


Date Purchased: _____ Model Number: 9400-_____ Color: _____

Parts List

Make sure you have all the parts listed below before using your Play Yard. If any parts are missing, call Consumer Affairs at 1-800-99-COMBI.

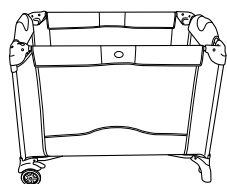


Main Body

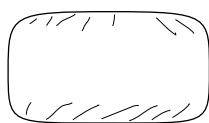

Bassinet
Mattress




Canopy
with Soft Toys

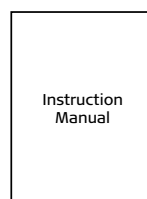


Instruction
Manual




Pedestal Stay Bars
(x2)

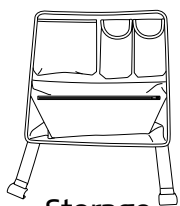


Storage
Attachment

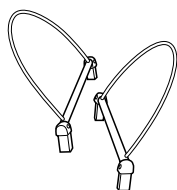


Bassinet
Stabilizers (x2)

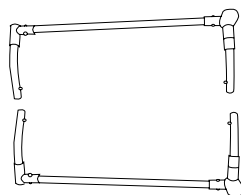


Pedestal
Arms (x2)

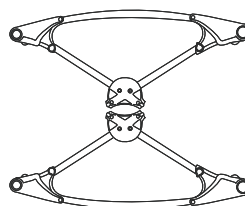


Pedestal
Legs (x2)

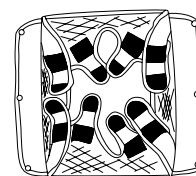

Pedestal Basket

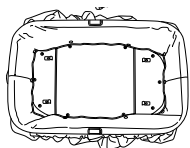

Bassinet Frame

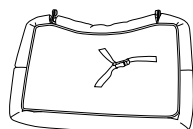

Changing Table
with pockets





Play Yard
Mattress

Travel
Bag



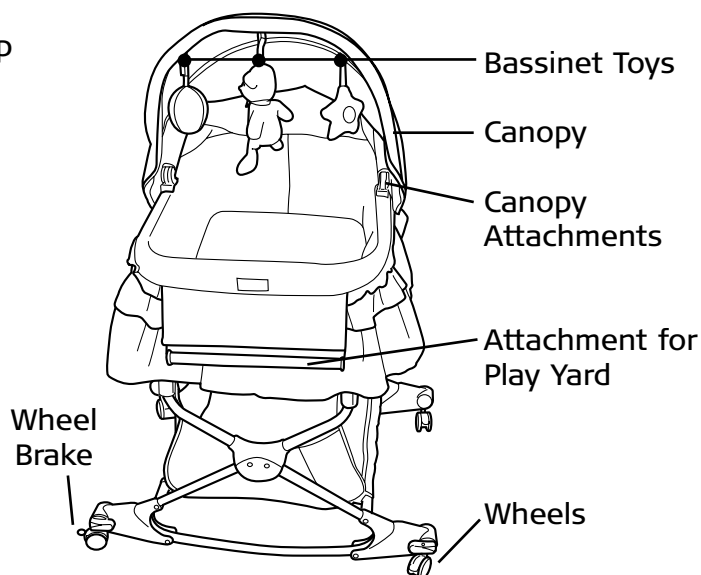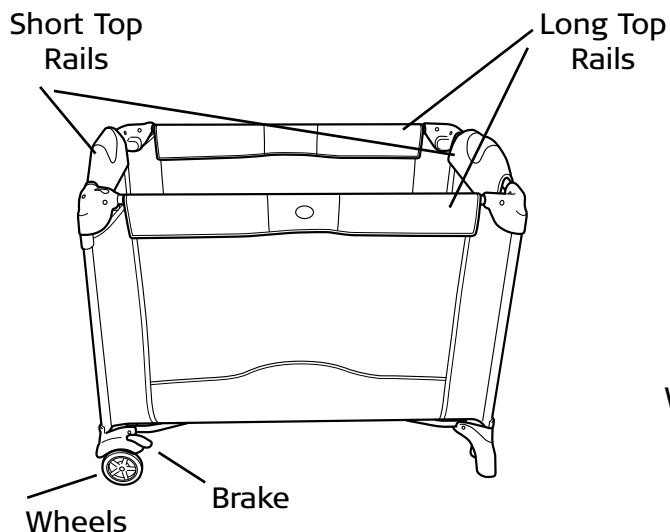

Accessories Bag





WARNINGS For your child's safety:


Failure to follow these warnings and the instructions could result in serious injury or death.


 Completely remove all plastic bags and packing materials before using this product to prevent a possible choking hazard.


 DO NOT leave child in product with sides lowered. Be sure side is in raised and locked position whenever child is in product. Infant may roll into space between pad and loose mesh side causing suffocation.

 Before each usage or assembly, inspect product for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use product if any parts are missing or broken. Ask your dealer or contact Combi for replacement parts and instructional literature if needed. DO NOT substitute parts.

 If refinishing, use a nontoxic finish specified for children's products.

 Never use plastic shipping bags or other plastic film as mattress covers not sold and intended for that purpose. They can cause suffocation.


 DO NOT use a water mattress with this product.


 Play Yard, including side rails must be fully erected prior to use. Make sure all latches are secure.


WARNING Infants can suffocate


- In gaps between an extra mattress and side of product
- On soft bedding


NEVER add a mattress, pillow, comforter or padding. Use ONLY mattress/pad provided by Combi.

 Strings can cause strangulation! DO NOT place items with a string around a child's neck such as hood strings or pacifier cords. DO NOT suspend strings over product or attach strings to toys.

 Discontinue use of the Play Yard when child is able to climb out or reaches the height of 35 in.

 When child is able to pull to standing position, remove bumper pads, large toys, and other objects that could serve as steps for climbing out. DO NOT place Play Yard near a window where cords from blinds or drapes can strangle a child.

 FALL HAZARD – To help prevent falls, do not use this product when the infant begins to push up on hands and knees or has reached manufacturer's recommended maximum weight, whichever comes first.

 If a sheet is used with the pad, use only the one provided by the bassinet manufacturer or one specifically designed to fit the dimension of the bassinet mattress

WARNING

FALL HAZARD

To prevent death or serious injury, always keep child within arm's reach. Use waistbelt provided with changing table.

IMPORTANT:

Play Yard maximum weight: 30 lbs.

Play Yard maximum height: 35 inches.




Bassinet maximum weight: 15 lbs. or less than 3 months old.

Changing Table maximum weight: less than 25 lbs.

Setting Up Your Play Yard

Note: Illustrations are only representative and not actual.

1. Remove Play Yard from Travel Bag.
2. Remove mattress from around the Play Yard.
3. While holding the plastic handle to keep the center of Play Yard floor upright (3a), use your other hand to, lift short top rails (3b) until locked into position.

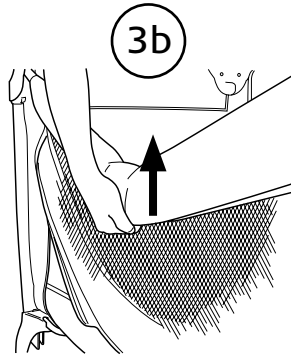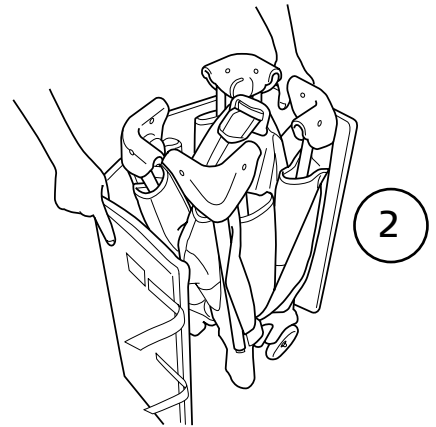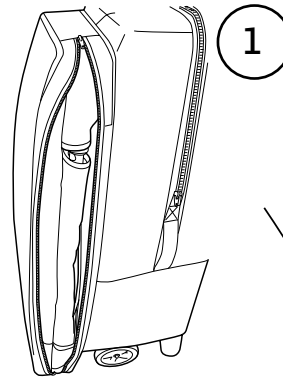


IMPORTANT
DO NOT push center of Play Yard floor down until all top rails are locked.


4. Repeat step 3 for both long top rails. Center of Play Yard floor must remain upright until all rails are locked.

IMPORTANT: If rails do not lock, lift center of Play Yard floor higher.

5. Once all sides are locked into position, extend all corners and press center of floor down (a) followed by outside edges (b). Once Play Yard is flat rotate center handle 90°, towards Play Yard floor, to locked position.

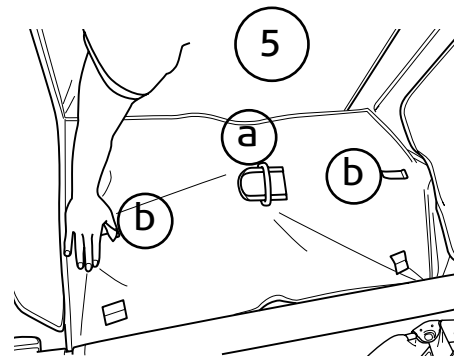


6. Add mattress to Play Yard with soft side up. DO NOT use Play yard without mattress.

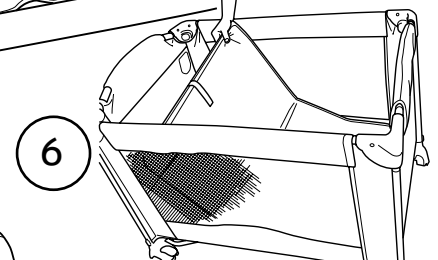

CAUTION

Always keep the wheels locked other than when moving the Play Yard. Failure to do so may cause the Play Yard to move unexpectedly.



7. Lift lever up to unlock. Press lever down to lock.

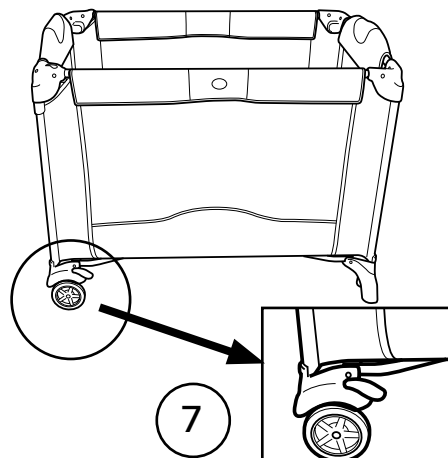


Folding Play Yard

1. Remove mattress from Play Yard.


2. Rotate center grip 90°, to upright position. Pull center of floor upwards (a), followed by both sides of floor (b).

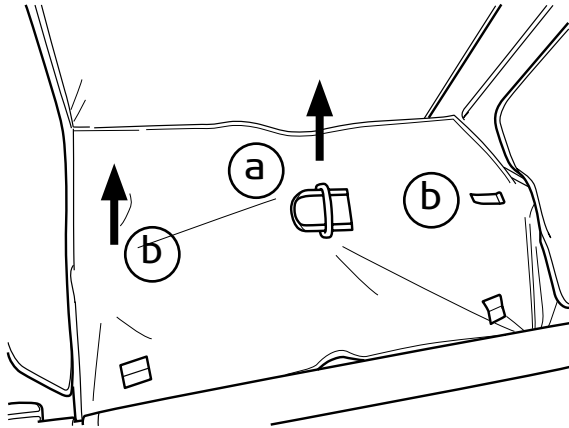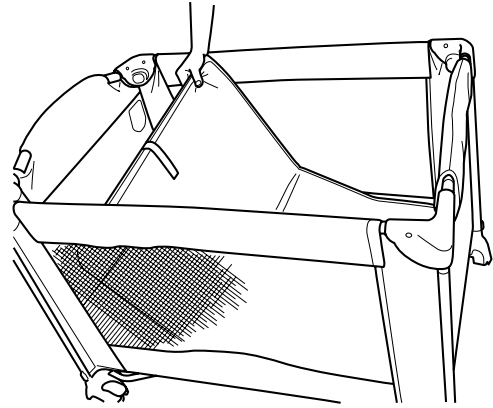

3. Slightly lift top rail while pressing center button to release. Once rails release, push down. Center of floor must be pulled up for top rails to release. If rails do not release, lift center of Play Yard floor higher.

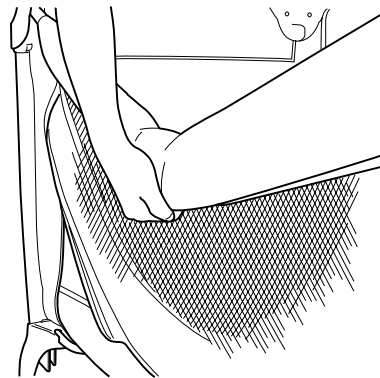


4. Once all top rails are released, fold Play Yard to standing position.

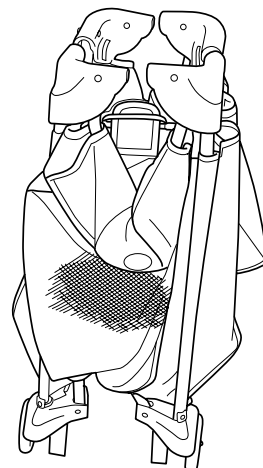

Storing Play Yard


1. With Play Yard in upright position, locate plastic loop attached to outside of Play Yard leg. Route top white Velcro strap through loop on Play Yard and through plastic loop on opposite side of mattress.

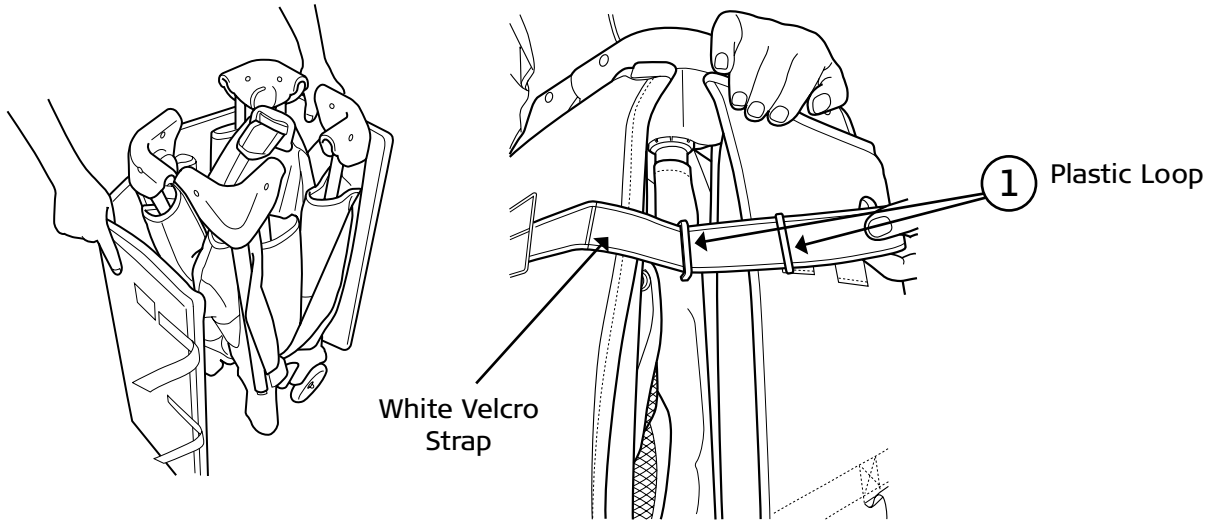

2. With soft side of mattress facing the Play Yard.

3. Route the two lower Velcro straps through remaining plastic loops on mattress.


4. Insert Play yard into travel bag, with wheels and handle exposed for easy travel.

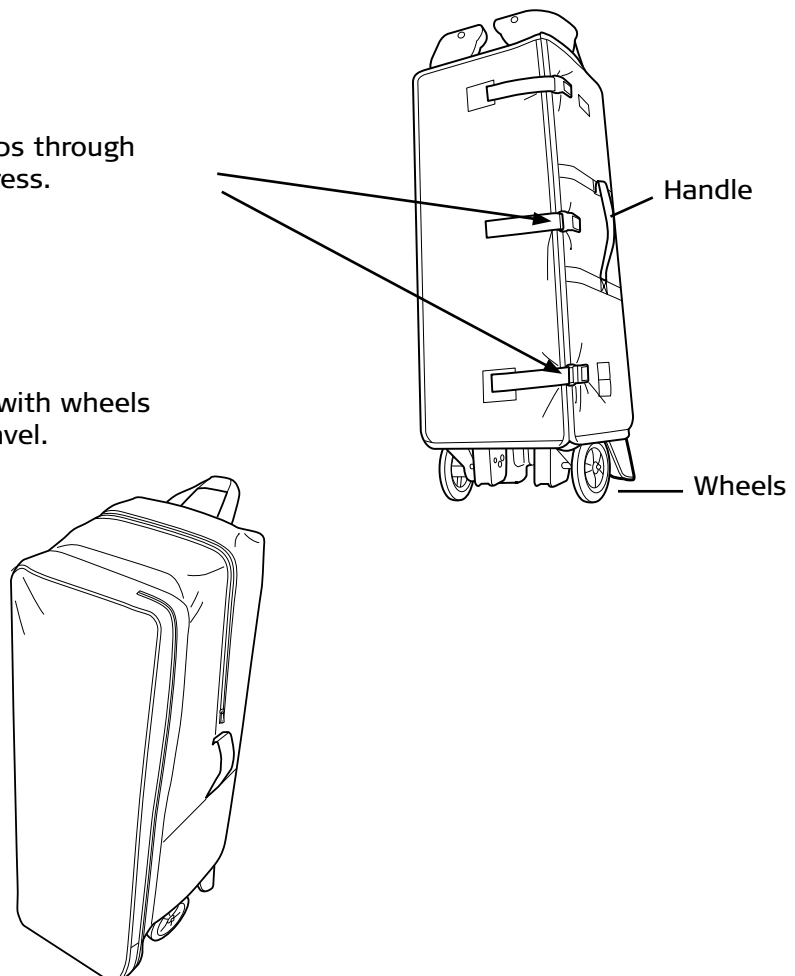

Using Accessories with Play Yard



BASSINET

1. Attach both plastic hooks to both long top rails of Play Yard as shown.
2. Press down on center of bassinet to ensure both ends are secure.

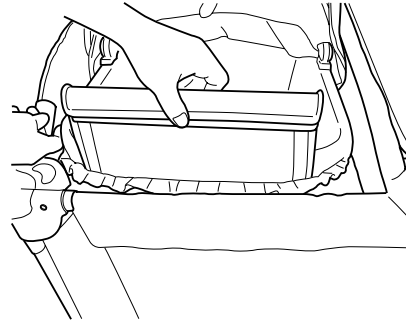


CHANGING TABLE

1. Attach both plastic hooks to Play Yard (end without wheels) with changing table facing down and storage pockets facing up, as shown.
2. Flip changing table over onto top rails of Play Yard so that changing table is exposed.
3. Attach snaps on fabric panel to snaps located at the end of Play yard.
4. When changing table is not in use, fold table over side of Play Yard to be used as a storage area.

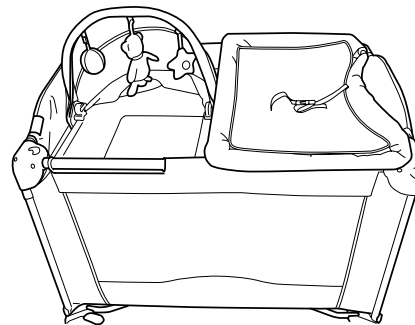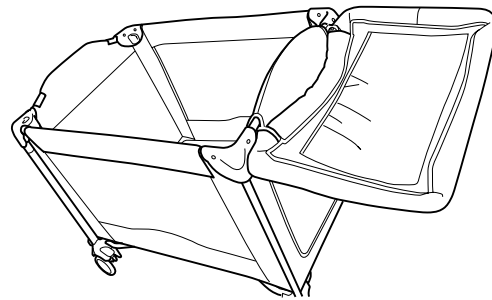

STORAGE ATTACHMENT

1. Attach zipper on storage attachment to the zipper located at the end of the Play Yard. (with wheels)
2. Attach plastic hooks to the metal bars on the lower portion of Play Yard.

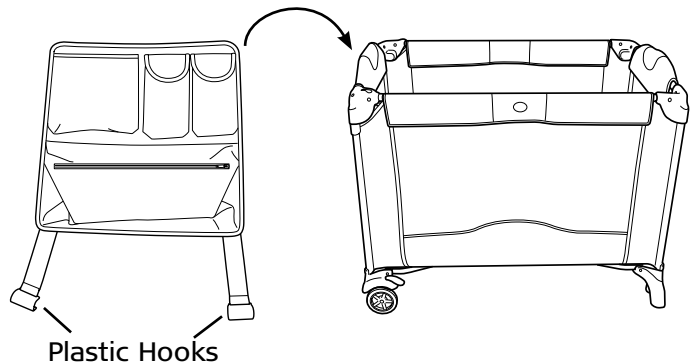

Note:

- Remove the battery during long periods of non-use. Never leave a worn out battery in the Play Yard. Battery leakage and corrosion can damage this product.
- Do not attempt to recharge a non-rechargeable battery.
- Remove a rechargeable battery from the Play Yard before recharging.
- Avoid Short-circuiting the terminals of the battery.
- Remove a non-working battery from the Play Yard.

Light, Sound and Vibration

Locate unit in Play Yard corner.

1. To operate select desired feature(s).

BATTERY REPLACEMENT Battery not included.

1. Use a Phillips head screwdriver to remove screw from battery compartment door.
2. Lift the battery compartment door open.
3. Insert two size "C" alkaline batteries, as indicated inside the battery compartment.
4. Replace the battery compartment door.

USING BASSINET WITH PEDESTAL

PEDESTAL ASSEMBLY

1. Insert one end of both stay bars into the round openings of the first Pedestal leg. (See Diagram A) Be sure silver pin locks into small hole within opening. This locks the stay bars into the pedestal legs.
2. Insert the other end of both stay bars into the round openings of the second pedestal leg. (See Diagram B) Be sure silver pin locks into small hole within opening. This locks the stay bars into the pedestal legs.
3. Insert pedestal arms into top joints of pedestal legs making sure the square openings are facing up. (See Diagram C) Be sure silver pins lock into small holes within openings. This locks the stay bars into the pedestal legs.

Diagram A

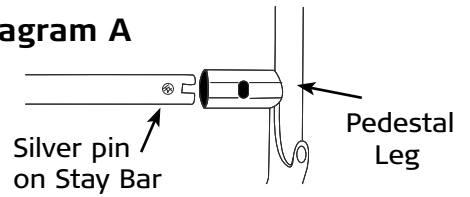


Diagram B




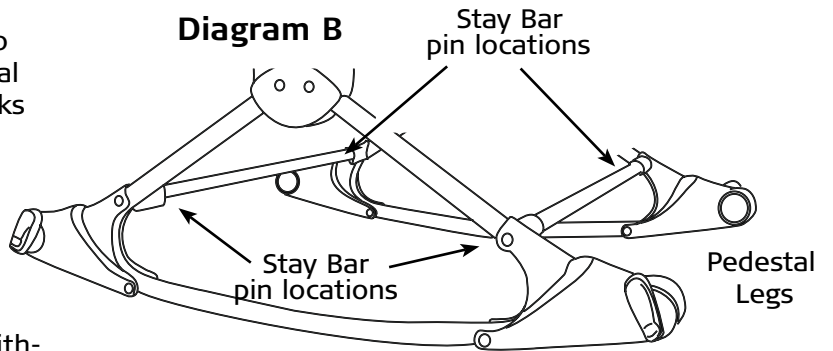


Diagram C

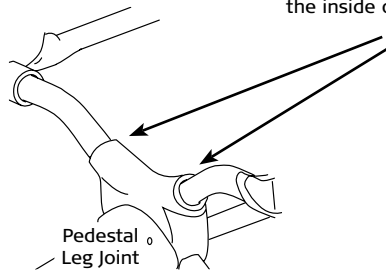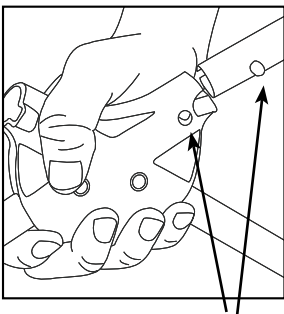

Pedestal Arm pin locations

Note: Holes located on the inside of the arms.

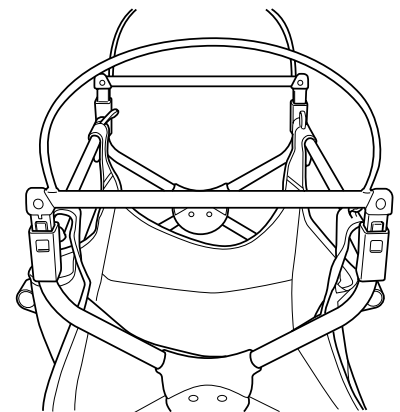

Assembled Pedestal

Silver pin locks into small hole

Using the Basket

1. Place mesh basket inside the pedestal.
2. Wrap elastic bands around corners of pedestal arms. (See Diagram D)
3. Fasten snaps around stay bars on both sides. (See Diagram E)

Diagram D




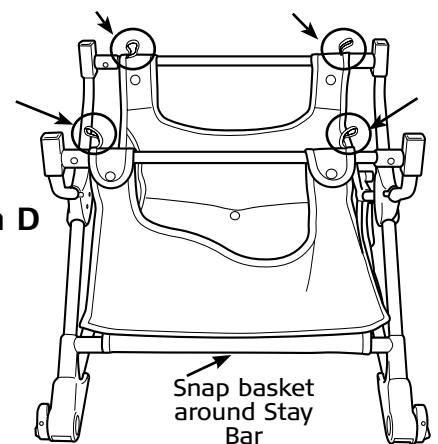


Diagram E

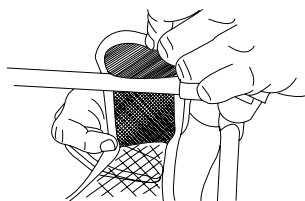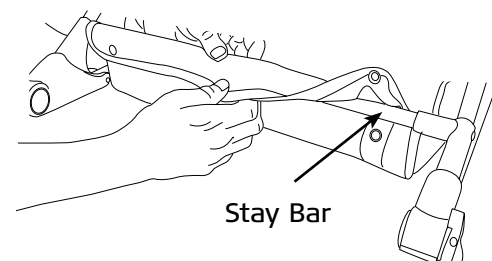

Attaching Bassinet Stabilizers


1. Insert both sides of stabilizer bar into each end of pedestal.
2. Pull up on each stabilizer to be sure they are secure.

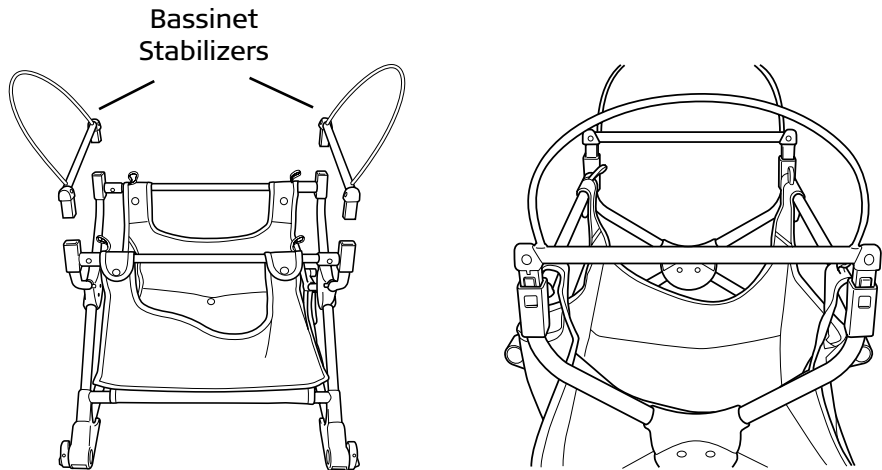

Using the Swivel Wheels

1. While pressing the tab in with finger, rotate tab until wheel drops down and "clicks" into swivel position. (See Diagram F)


Diagram F

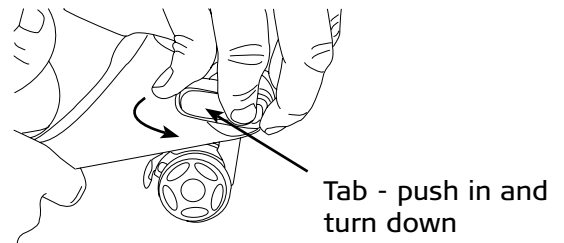

Using the Brakes

1. Push brake levers down to lock.
2. Push brake levers up to unlock.

Brake Lever
Shown in the locked position.
Lift lever up to unlock

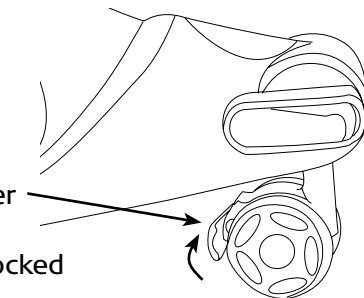


Retracting the Wheels

1. Push brake lever down to lock wheel.
2. Rotate wheel inward with brake lever facing center of Pedestal leg.
3. Push tab in and retract wheel into pedestal leg. (See Diagram G)

(Note: Make sure brake lever is in the locked position.)

Brake levers must face the center of pedestal and be inserted into each opening first. This allows the wheels to be totally retracted.)


Diagram G

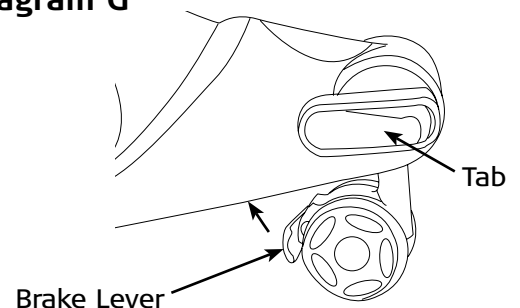

Attaching Bassinet to Pedestal

1. Push metal bars toward ends of bassinet until they are hooked underneath plastic hooks on bassinet base.


Plastic Hooks
(x4)

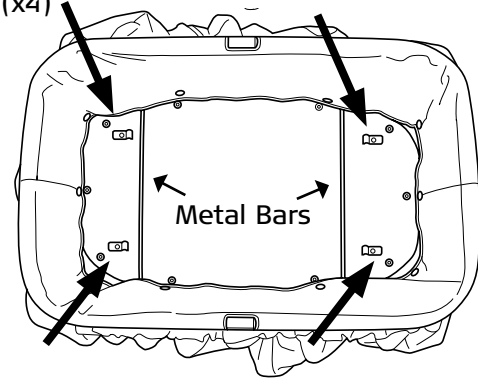

2. Attach snaps on bassinet cover to snaps on bassinet base.

3. Add bassinet mattress. DO NOT use bassinet without mattress.


4. Place bassinet onto pedestal between both bassinet stabilizers.

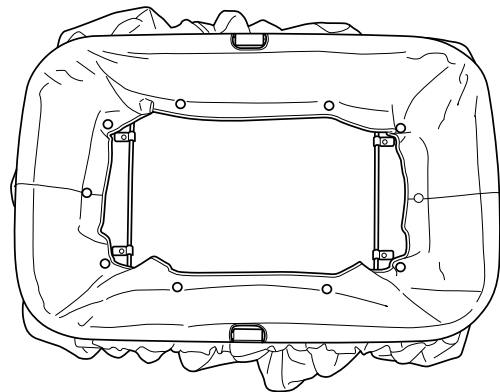


5. Snap bassinet straps around both ends of pedestal arms on both sides of bassinet.

WARNING:

NEVER use bassinet on pedestal before attaching all straps to pedestal arms.

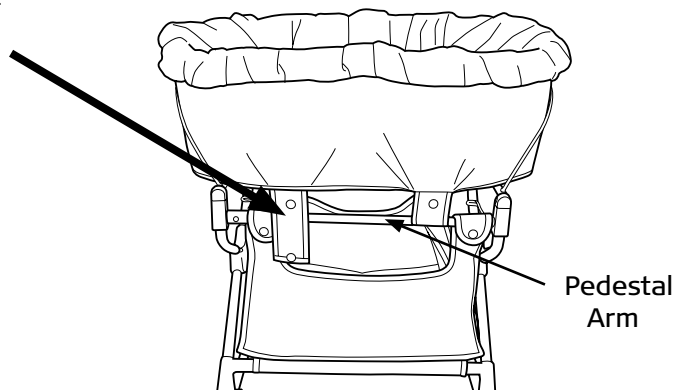

6. Check underneath bassinet to ensure round plastic knobs are resting flush against bassinet stabilizers on both ends.

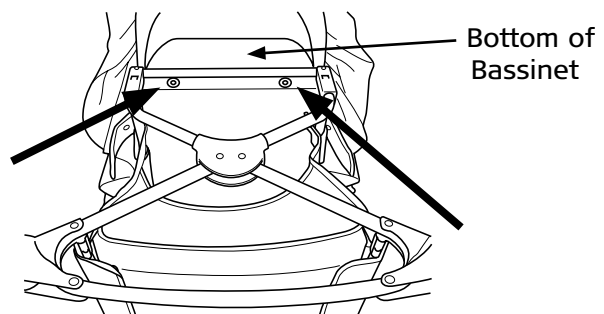


7. Lift bassinet up to ensure bassinet is secure.

(Illustration shows bassinet tilted from one end.)



Attaching Canopy to Bassinet

1. Confirm the canopy is facing the proper direction
2. Attach plastic hooks on canopy to canopy holders on bassinet.
3. Attach Velcro on canopy to the Velcro on bassinet cover.

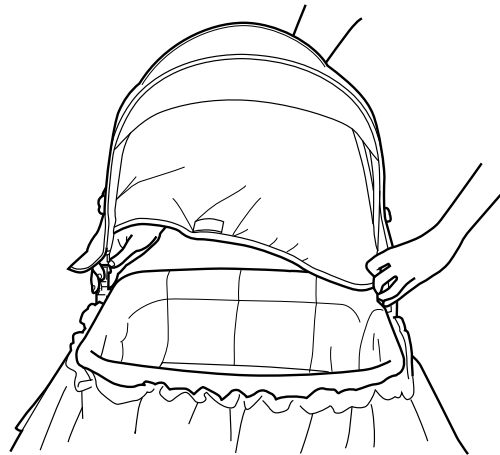

Changing Table Assembly

1. Remove changing table from storage bag. Pull back fabric cover on each side to locate metal bars.
2. Insert both sides of changing table frame into opposite side of frame while pressing silver pins.
3. Be sure silver pin locks into small hole within opening.

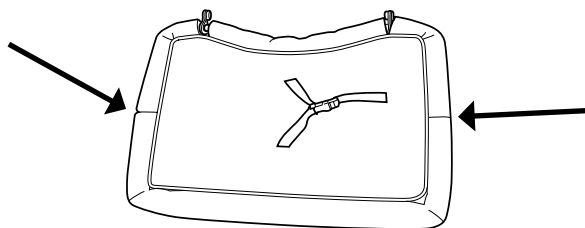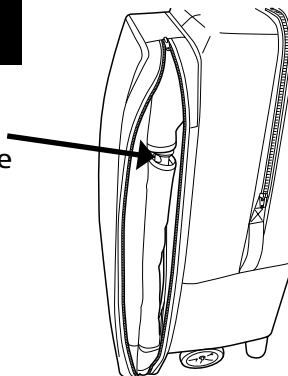

Routine Maintenance

STORE IN A COOL AND DRY AREA, especially in the summer. Do not store the Play Yard in the trunk of a vehicle.

MAIN BODY AND BASSINET

Briskly wipe off any mud and dirt. To clean the body, wipe with a damp cloth then wipe out any traces of moisture on the body with a dry cloth. The main body might become moldy and musty if not wiped dry.

Excessive exposure to the sun could cause premature color fading of fabric.

MATTRESS AND BAG

DO NOT machine wash. Clean with mild soap and a damp cloth.

LIMITED WARRANTY

1. Combi Juvenile Products, when purchased from an authorized retailer; are warranted to the original purchaser to be free of defect in materials and workmanship for a period of one (1) year from date of purchase. Warranty is valid for products purchased and used in the U.S. only, and used in compliance with the warrantor's use and maintenance instructions. Save your carton and receipt in case of return for warranty service is necessary.
2. During the warranty period your Combi product will either be repaired or replaced, at the warrantor's discretion, without charge if it is purchased from an authorized Combi dealer and is found to be defective in workmanship or materials. For service call 1-803-548-6633. The warrantor shall not be responsible for any costs incurred by the consumer in returning a defective product for repair.

This limited warranty shall not apply to normal wear to the product, or if the product has been:

- a. Damaged due to accidents, misuse, abuse or neglect as determined by Combi.
- b. Tampered with or repaired by other than an authorized Combi repair center or with parts other than Combi approved parts.
- c. Leased or rented for commercial use.

THE WARRANTY PROVIDED HEREIN IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED. WARRANTOR'S OBLIGATIONS AND THE CONSUMER'S OR OTHER BUYER'S REMEDIES UNDER THE LIMITED WARRANTY ABOVE ARE EXCLUSIVE AND ARE STRICTLY LIMITED TO REPAIR OR REPLACEMENT AS STATED. ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ON THE PART OF THE WARRANTOR AND ANY SUPPLIER OR DEALER ARE HEREBY ALSO EXPRESSLY EXCLUDED.

Some states limit or do not allow exclusions or limitations on how long an implied warranty lasts so the above limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



**Travel 9400 Series
Solutions Play Yard**

For technical questions, please call 1-800-992-6624.

Instruction Manual

If you would like to place an order for the following parts, please fill out the form below and return to the following address:

Combi USA, Inc.
Attn: Consumer Affairs
1962 Highway 160 W, Suite 100
Fort Mill, SC 29708-8027

or **Fax this completed form to
803-548-3663**

IMPORTANT: We must have this information to process your order:

Model Number: 9400 - _____ Color & Pattern of Fabric: _____
Located on the Play Yard Floor.

Parts List for the Play Yard (9400 Series) only.

	Price	Quantity	Total
1. Changing Table Mat	\$ 15.00		
2. Storage Attachment	25.00		
3. Play Yard Carrying Bag	20.00		
4. Bassinet Mattress	15.00		
5. Bassinet Mattress Cover	10.00		
6. Canopy	25.00		
7. Soft Toys (Ball, Bear, Star)	10.00		
8. Accessory Bag	15.00		
9. Pedestal Basket	10.00		
10.			
11.			

If you need to order other parts for your Play Yard, please call us toll-free at 1-800-992-6624.

Shipping and Handling Fees: Add \$8.00 for orders \$34.99 and under. Add \$13.00 for orders \$35.00 and over. Note: Additional shipping charges will apply outside of the Continental U.S. Combi USA reserves the right to change pricing at any time.

Amount of Order		
ADD Shipping & Handling		
Sales Tax (6%) (SC residents only)		
Total		

Ship To:

Consumer Name

Street Address

Street Address

City, State, Zip

Telephone Number

Charge to my credit card:

VISA MASTERCARD
 AMERICAN EXPRESS DISCOVER

Card Number

Expiration Date _____ - _____ - _____

Cardholder's Signature

Check enclosed

11/15/04