



Instruction Manual

Read all instructions BEFORE assembly and USE of product. **KEEP INSTRUCTIONS FOR FUTURE USE.** Record the following information for quick reference. Note: Illustrations are only representative and not actual.

Attach copy of sales receipt.

Date Purchased: _____ Model Number: _____ Color _____


Attach copy of sales receipt.

Located on the rear right leg.

Parts List

Make sure you have all the parts listed below before using your stroller. If any parts are missing, please contact the Combi CARE Line at 1-800-992-6624.


Optional Accessories available for purchase separately.

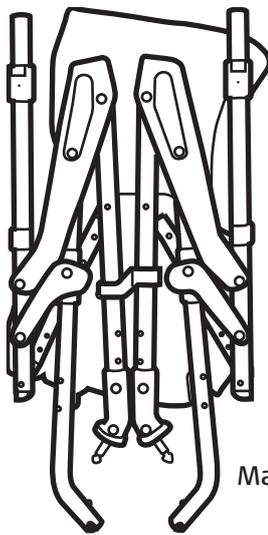

Main Body




Canopy

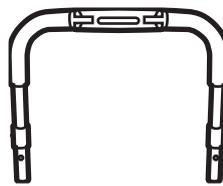


Handle




Front Wheels (x2)

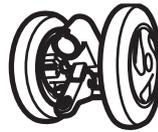

Rear Wheels (x2)

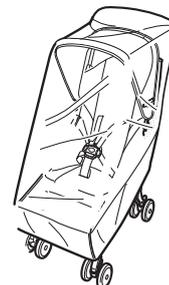


* Rain Cover

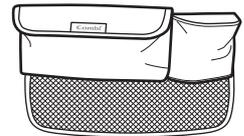

* Stroller Pack

*see order form on back page

Name of Parts

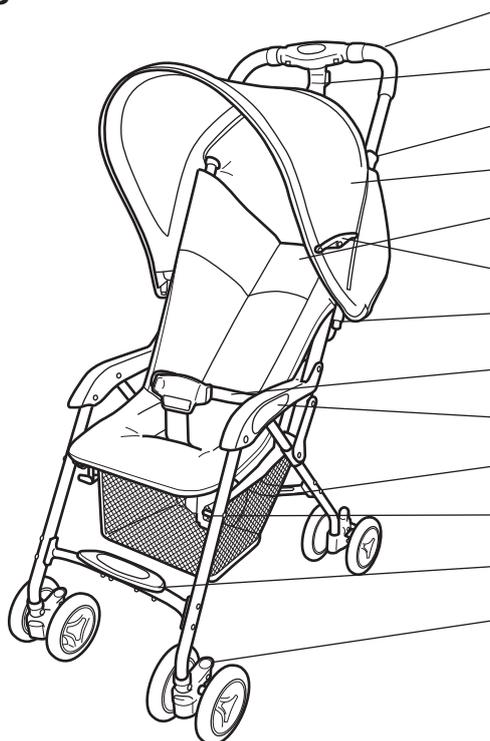

- 1 Handle Grip
- 2 Carry Strap
- 3 Folding Levers
- 4 Canopy
- 5 Seat Cushion
- 6 Canopy Lever
- 7 Canopy Holder
- 8 Waist Belt
- 9 Armrest
- 10 Basket
- 11 Folding Latch
- 12 Foot Rest
- 13 Swivel Lock Lever

WARNINGS: FAILURE TO FOLLOW THESE INSTRUCTIONS AND WARNINGS COULD RESULT IN SERIOUS INJURY OR DEATH.

ALL OPERATING AND ASSEMBLY PROCEDURES SHOULD BE PERFORMED BY AN ADULT.

In the event of damage or problems, discontinue use and contact the Combi CARE Line for instructions: 1-800-992-6624.

 **AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT. ALWAYS USE RESTRAINT SYSTEM.**

 **DO NOT LIFT AND CARRY** the stroller while occupied. The stroller may fold.

 Do not allow your child to stand in or on the stroller.

 Never carry more than one child in stroller. Do not allow a child to ride or sit on areas of the stroller other than seat.

 **NEVER LEAVE CHILD UNATTENDED.**

 Do not use the stroller on steep slopes, stairs, escalators, beaches, rough roads, mud, etc.

 Excessive weight in basket (or items placed in basket which overflow the top or side of basket) may cause a hazardous condition. Do not load more than 10 lbs. (4.5kg) in the basket.

 Completely remove all plastic bags and packing materials before using this product to prevent a possible choking hazard.

 Do not allow children to lean over sides of stroller. It may become unbalanced and tip over.

 Stroller is intended for walking speed only. NEVER use while jogging, skating, etc.

 To avoid finger entrapment or pinching, use care when folding and unfolding the stroller. Be certain the stroller is fully erected and locked in position before allowing your child near the stroller.

 Do not hang items on the handle or place items on canopy. This could cause the stroller to become unbalanced or tip over.

 Always engage both brakes when parking the stroller.



Maximum weight of child must not exceed 55 lbs. (25 kg).

Child must be 6 months old to use this stroller. This stroller does not have a full recline feature. Do not use this stroller with an infant.


Total Maximum Weight of Canopy pocket MUST not exceed 1.0 lbs.(0.45 kg).

Assembling the Stroller


1. Remove stroller and rear wheel assemblies from the plastic bag.
2. Remove canopy by detaching rubber bands.
3. Remove front wheel assemblies, guard-rail and stroller handle from inside the stroller.
4. Lift locking lever from stroller frame and open stroller.

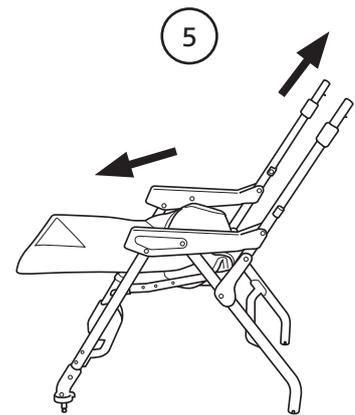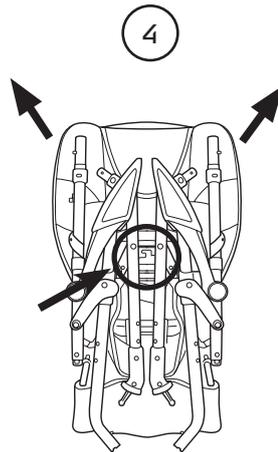

5. Grasp right and left steel tubes and snap the stroller away from you to open.
6. Insert stroller handle into frame by pressing chrome buttons into the back of the stroller frame. Push handle down until the chrome buttons lock into both sides of the handle.

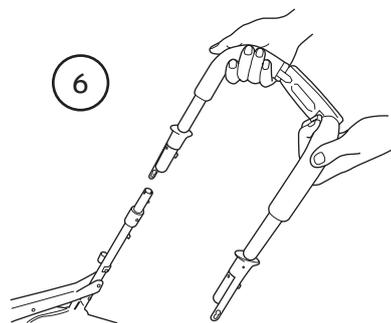


7. While lifting up on gray tube (figure A), attach long gray tabs from handle to the round gray tabs on each side of stroller.
8. Secure the handle by lifting the folding levers on each side of stroller until the gray tabs lock into position.

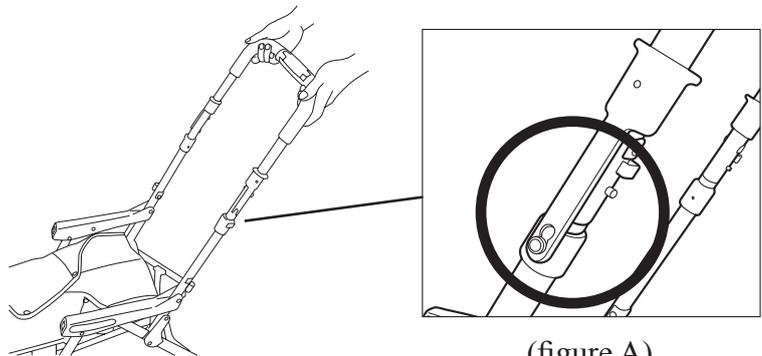

(figure A)

Attaching & Removing the Front Swivel Wheels


1. Turn stroller over and remove packaging material from stroller frame.
2. Insert the front wheels onto the stroller leg. Make sure the swivel wheel lever is behind the stroller leg and released. You will hear a click when the wheel is properly attached.

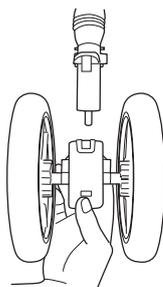

Removing the Swivel Wheels


Press in the square button located at the bottom of the wheel holder while pulling the assembly off of the swivel shaft.

Release Button

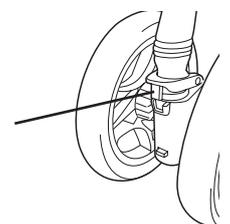


Attaching the Rear Wheels

1. Stand behind the stroller.
2. Locate the small opening on each rear wheel assembly.

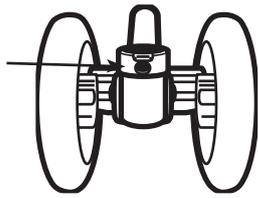

3. Locate the small chrome pin on each rear stroller leg.

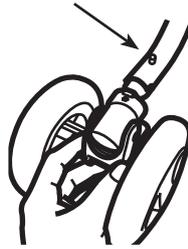

4. Insert the leg into the wheel assembly until the small chrome pin locks into the opening.


Attaching the Seat Cushion

1. Stand behind the stroller and wrap the top of the seat cushion around the stroller frame.
2. Attach both top right and left seat cushion clips to the tabs on the stroller frame.
3. Attach bottom right and left seat cushion snaps to the hooks on the stroller frame.


CAUTION

If seat cushion is ripped or torn, do not use.

Do not use the stroller without the seat cushion.

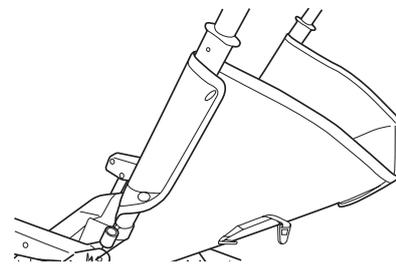

Attaching the Canopy

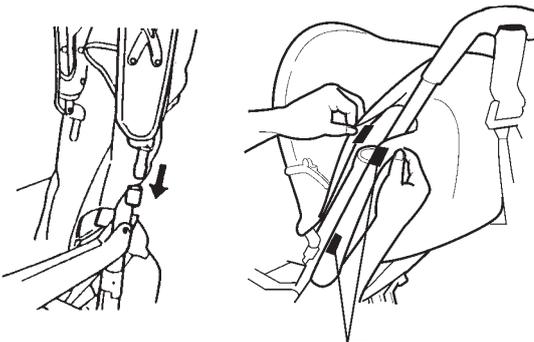

CAUTION

Failure to fully secure the canopy holders can cause the holders to bend. When storing the stroller by laying it down, be sure the canopy is off the ground to prevent it from bending.


Attaching the Canopy

1. Confirm the canopy is facing in the proper direction.
2. Fully insert the canopy holder (male) into the canopy holder (female) until a click is heard.
3. Fasten the canopy velcro together around the handle (2 places).

Removing the Canopy

Pull the velcro apart, squeeze the bottom of the canopy holders (male) and pull the canopy up from above the canopy holder (female). This must be done on both sides of the canopy to completely remove it.

Using the Swivel Wheels

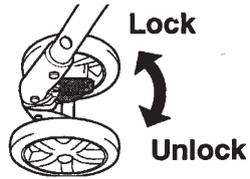

To lock swivels, lift both swivel lock levers up.

To unlock swivels, push both swivel lock levers down.

Using the Brakes





To lock brakes, push both brake levers down.

To unlock brakes, lift both brake levers up.

CAUTION
Push the stroller forward to ensure that the brakes are properly engaged.

Using the Reclining Backrest

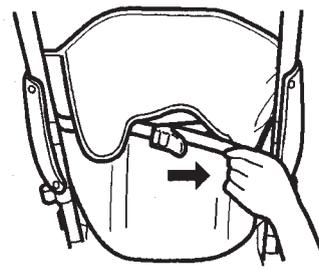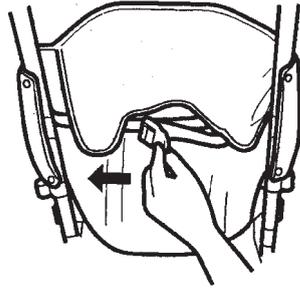

1. Lift the end of the reclining buckle and move it to the left to recline the seat.

2. Pull the reclining strap toward the right to bring the seat upright.

3. Do not attempt to pass the double stitching on the end of the belt.

CAUTION

Strollers which offer a partial recline are suitable for children that have fully developed neck muscles (typically 5-6 months of age) or when the baby can fully support his/her head. We do not recommend placing a newborn in a partially reclining stroller.

Be careful when reclining the backrest while baby is in the stroller to prevent abrupt changes in seating position.

Using the Waist Belt



WARNING


Avoid serious injury from falling or sliding out. Always use the waist belt. Waist belt must be threaded through harness loops at all times.



1. Place the crotch belt between baby's legs and fasten the waist belt buckles together.




2. To adjust waist belt, pull up the slack on each side of buckle.

3. After adjusting the waist belt, make sure it is fastened securely.

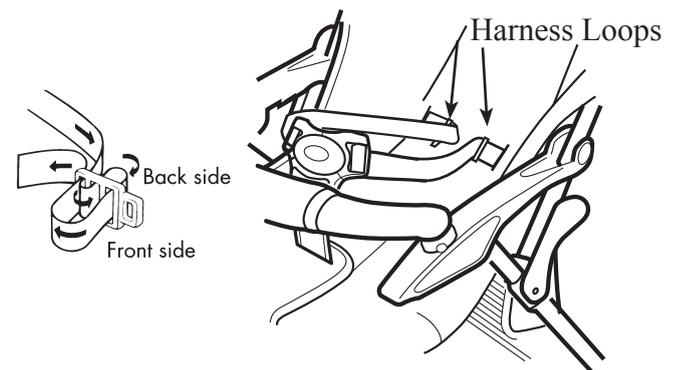

Folding the Stroller



1. Lock both front swivel wheels.
2. Empty the basket.
3. Fold the canopy by lifting the canopy levers.
4. Lift the folding levers on both sides of the handle.
5. Tilt handle back and fold.
6. Fold handle inward and lock with the folding latch.

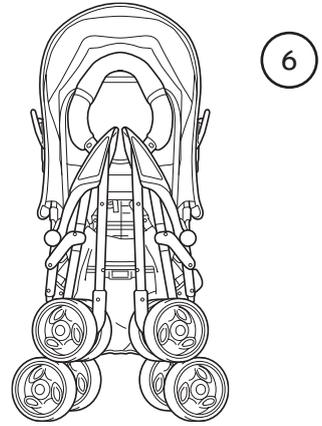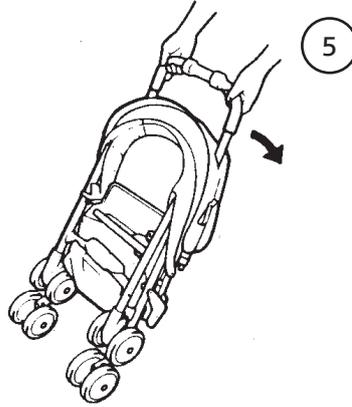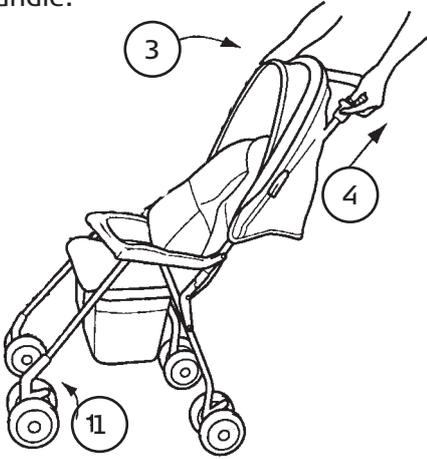

Removing the Basket

CAUTION

Do not place more than 10 lbs. in the basket.
Remove all items from the basket before folding the stroller.

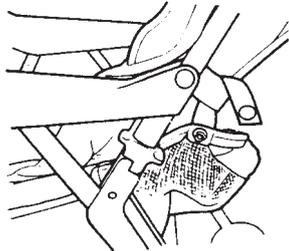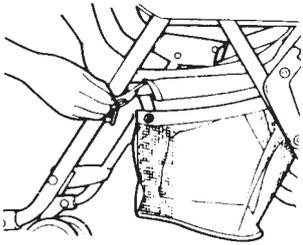

1. Loop the front strap of the basket over the seat frame and snap together.
2. Loop the rear straps of the basket through the waist belt and snap together.

Routine Maintenance

Store in a cool and dry area, especially in the summer. To avoid damaging the stroller, NEVER place items on top of stroller during storage.

Canopy, Restraint System, Permanently attached Seat Base, Cover and Basket:

Hand wash with brush. Wipe out excess water with a dry cloth and dry in a shaded area. For stubborn dirt, dilute a mild detergent and apply directly to the dirty area. Wipe out the detergent.

Stroller Frame (Main Body)

Briskly wipe off any mud and dirt. Wipe with a damp cloth then wipe out any traces of moisture on the frame with a dry cloth. If fabric is not dried completely, mold or mildew could occur.


Excessive exposure to the sun could cause premature color fading of stroller plastic and fabric.

Wheel Assemblies:

After prolonged normal use, the wheels of your stroller may not swivel or turn as easily as when the stroller was new. This is usually due to a buildup of dirt in the swivel mechanism. Before adding lubrication, remove the swivel wheels by pressing in the release button and wiping off mud and dirt. Do not use soap and water to wash wheels. Periodically check that all screws, bolts and nuts are tight.

Avoid lubricating the swivel wheels whenever possible. Excessive lubrication or adding lubricant to swivel wheels when new may cause them to develop a shimmy or wobble that may quicken their deterioration. Add silicone* to the wheel assemblies in small amounts. NEVER use lubricants because oil attracts dust and would hinder the movement rather than improve it.

*Silicone spray is available in varying size cans at most hardware stores.

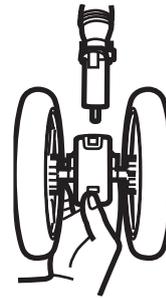

Front Swivel Wheel



Rear Wheel

Trouble Shooting

Stroller will not fold:

- Ensure waist belt is not caught in the side.
- Make sure front swivels are locked.
- Remove all items from the basket.

Difficult to steer or Stroller pulls to one side:

- NEVER hang items from the handle.
- Make sure weight in basket is distributed evenly.
- Check that the brakes are not in the locked position.
- Clean and add silicone to wheels, if necessary.

Difficult to get up curbs:

- Pulling stroller backward makes going up a curb difficult, and could pose a safety hazard. Pull the handle up to lift the rear wheels onto the curb, then pull the stroller backward until the front wheels clear.



LIMITED WARRANTY

1. Combi USA Products, when purchased from an authorized retailer; are warranted to the original purchaser to be free from defect in materials and workmanship for a period of one (1) year from date of purchase. Combi products purchased from unauthorized retailers are not covered under warranty. Warranty is valid for products purchased and used in the U.S. only and used in compliance with the warrantor's use and maintenance instructions. Save your carton and receipt. These items may be required in case of return for warranty assistance.
2. During the warranty period your Combi product will either be repaired or replaced, at the warrantor's discretion, without charge for replacement parts if it is purchased from an authorized Combi dealer and is found to be defective in workmanship or materials. For service, call 1-800-99-Combi (1-800-992-6624). For warranty service, please contact your Combi retailer. The warrantor shall not be responsible for any costs incurred by the consumer in returning a defective product for repair. The consumer will be responsible for all shipping and handling for replacement parts.

This limited warranty shall not apply to normal wear to the product, or if the product has been:

- a. Damaged due to accidents, misuse, abuse or neglect as determined by Combi.
- b. Tampered with or repaired by any one other than an authorized Combi representative or with parts other than Combi approved parts.
- c. Leased or rented for commercial use.

THE WARRANTY PROVIDED HEREIN IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY EXCLUDED. WARRANTOR'S OBLIGATIONS AND THE CONSUMER'S OR OTHER BUYER'S REMEDIES UNDER THE LIMITED WARRANTY ABOVE ARE EXCLUSIVE AND ARE STRICTLY LIMITED TO REPAIR OR REPLACEMENT AS STATED. ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ON THE PART OF THE WARRANTOR AND ANY SUPPLIER OR DEALER ARE HEREBY ALSO EXPRESSLY EXCLUDED.

Some states limit or do not allow exclusions or limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

