

 
We have moved - Effective 2/7/04

Combi

Combi USA, Inc.
1962 Hwy 160 W, Ste. 100
Fort Mill, SC 29708

New SC
Sales Tax
is 5%

1-800-99-COMBI M-F 8:30am-5pm EST
803-548-3663 FAX

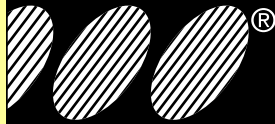

Travel Savvy™ 2120 Series

Acoustic Canopy

Patent Pending



Manual

 
Be sure to carefully read this instruction manual **before** using the product to ensure proper use of the stroller, and keep it for future reference. Record the following information for quick reference.

Date Purchased: _____ Model Number: 2120 - _____ Color _____


Parts List

Fabric Pattern _____

Make sure you have all the parts listed below before using your stroller. If any parts are missing, call Customer Service at 1-800-992-6624.

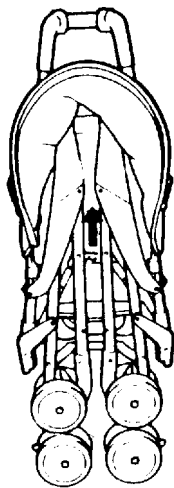

Main Body

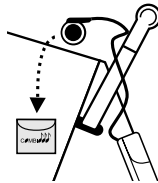 


Speakers
in a Box


Warranty Card

Instruction
Manual

 
Name of Parts

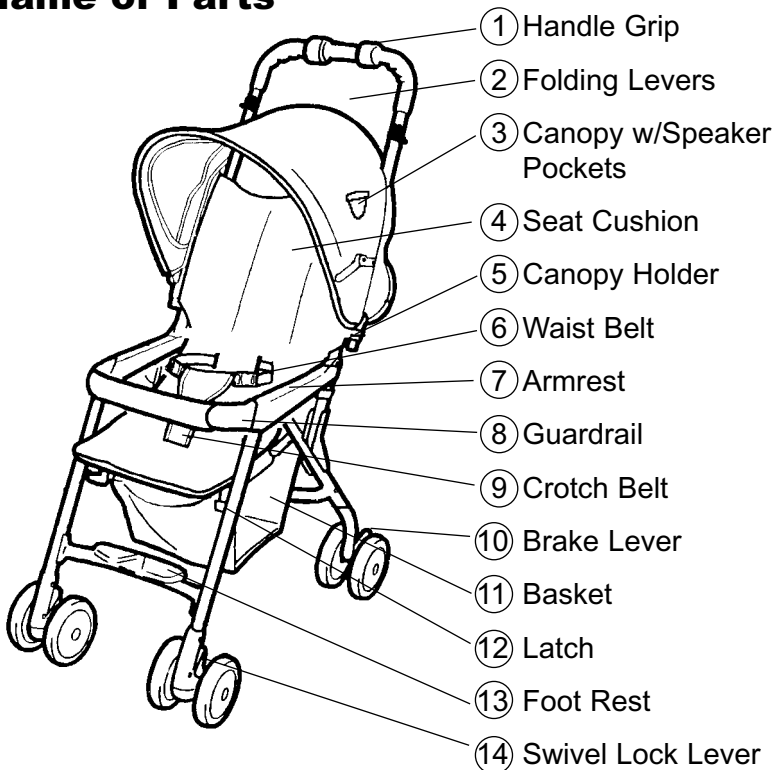

 - ① Handle Grip
- ② Folding Levers
- ③ Canopy w/Speaker Pockets
- ④ Seat Cushion
- ⑤ Canopy Holder
- ⑥ Waist Belt
- ⑦ Armrest
- ⑧ Guardrail
- ⑨ Crotch Belt
- ⑩ Brake Lever
- ⑪ Basket
- ⑫ Latch
- ⑬ Foot Rest
- ⑭ Swivel Lock Lever

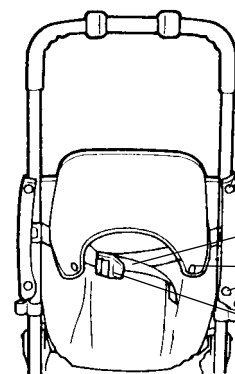

 - ⑮ Clasp
- ⑯ Reclining Belt
- ⑰ Seat Cushion Snaps
- ⑱ Reclining Buckle

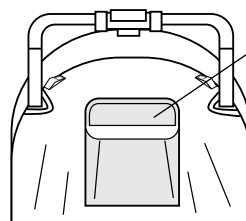

- ⑳ Player Storage Pocket

⚠ WARNINGS For your child's safety:

If your stroller is not used in compliance with these instructions, serious injury may result.

*In the event of damage or problems,
discontinue use and contact
COMBI Customer Service
for instructions: 1-800-992-6624.*



⚠ WARNING

AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT. ALWAYS USE SEAT BELT



⚠ WARNING

NEVER LEAVE CHILD UNATTENDED.

 
⚠ WARNING

DO NOT ALLOW CHILD TO LEAN OVER SIDES OF STROLLER. IT MAY BECOME UNBALANCED AND TIP OVER.



⚠ WARNING

DO NOT LIFT AND CARRY the stroller while open with a child in it. The stroller may slip.

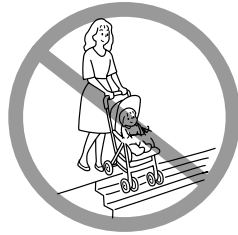

⚠ WARNING

Do not use the stroller on steep slopes, stairs, escalators, beaches, rough roads, mud, etc.

⚠ WARNING

Excessive weight in basket (or items placed in basket which overflow the top or side of basket) may cause a hazardous condition to exist.



⚠ WARNING

Do not allow your child to stand in or on the stroller.



⚠ WARNING

Do not put or hang things on the canopy or handle because it could cause the stroller to become unbalanced or tip over.

⚠ WARNING

Do not load more than 10 lbs. (4.5kg) in the basket.



⚠ WARNING

Never carry more than one child in the stroller. Do not allow a child to ride or sit on areas of stroller other than seat. **Maximum weight of child: 45 lbs. (20 kg)**



⚠ WARNING

Always engage both brakes when parking the stroller.

CAUTIONS:

 
1. Improper usage or lack of knowledge regarding the instructions can result in dangerous situations or personal injury or damage to the stroller.
2. Completely remove all plastic bags and packing materials before using this product to prevent a possible choking hazard.
3. Push the stroller at a normal walking speed only.

*Questions or Concerns
check our website:*


www.combi-intl.com

COMBI


Opening the Stroller

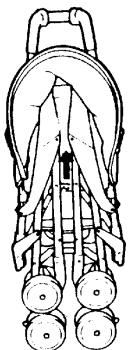

 
1. Open latch by pulling it up.

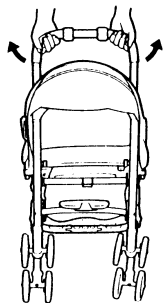

 
2. Grip the handle hard on each side and turn outward to open fully. (Holding from underneath will make the process easier.)

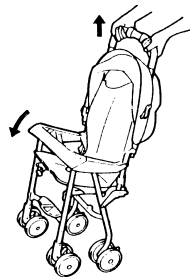

 3. Lift up the handle bar and snap the stroller away from you. It will open and lock automatically into position.

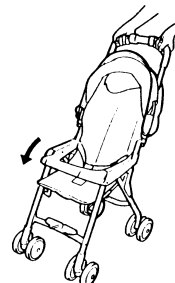

Attaching the Canopy

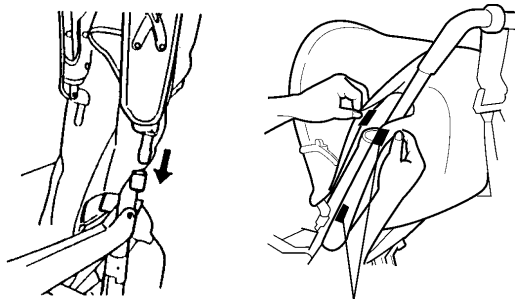 

CAUTION

Failure to fully secure the canopy holders can cause the holders to bend. When storing the stroller by laying it down, be sure the canopy is off the ground to prevent it from bending.

Attaching the Canopy

 
1. Confirm the canopy is facing in the proper direction.
2. Fully insert the canopy holder (male) to the canopy holder (female) until a click is heard.
3. Fasten the canopy velcro to the seat back velcro (2 places.)

Removing the Canopy

Pull the velcro apart, squeeze the bottom of the canopy holders and lift the canopy off.


COMBI 

Installing the Speakers

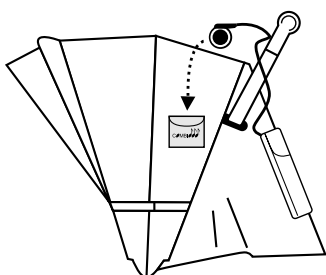


1. The canopy comes with a small pocket on each side. Insert a speaker in each pocket.

 2. The canopy has a storage pocket in the back. Place your portable CD, cassette, mini-disc or MP3 player inside the back pocket.

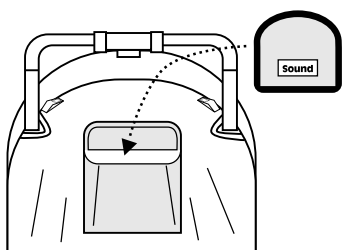

 3. Insert the (2.8mm) mini plug into the player. Turn on your player.

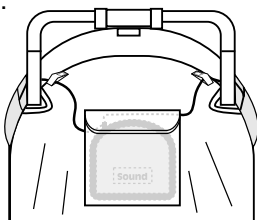

CAUTION

Be sure to test the volume on your player. Set it at a comfortable level so that it does not startle your baby when turning it on. Loud volume can hurt your baby's ears. If you notice that the sound has become weak or distorted or if tracks do not change, this is an indication that your batteries are low. Replace the batteries and set the volume at a comfortable level.

CAUTION

Before folding your stroller, be sure to remove your player from the back pocket of the canopy.

This will make it easier to fold the stroller.

When you fold the stroller, you may leave the speakers in the Acoustic Canopy, but only for short periods of time.

 
In the summer, the temperature may get as high as 212°F/100°C or more. Do not leave your stroller, with the speakers in the Acoustic Canopy pockets, in your car trunk where the temperature may reach high levels. Store speakers in a cool and dry area.



WARNING:

To avoid serious injury keep stereo speakers and cords out of reach of children.


Using the Swivel Wheels

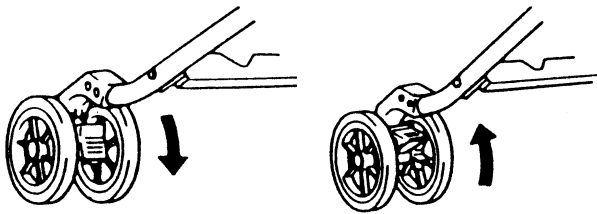

To lock swivels, lift both swivel lock levers up.

To unlock swivels, push both swivel lock levers down.

 Using the Brakes

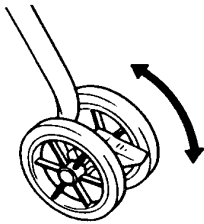


CAUTION

Push the stroller forward to ensure that the brakes are properly engaged.


To lock brakes, push both brake levers down.

To unlock brakes, lift both brake levers up.

 Using the Reclining Backrest

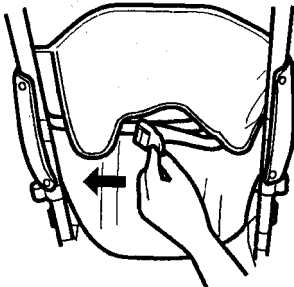

 Lift up on the end of the reclining buckle and move it to the left to recline the seat.

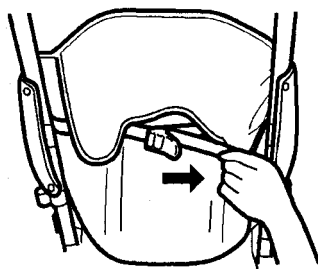


Pull the reclining strap toward the right to bring the seat back upright.

CAUTION

Be careful when reclining the backrest while baby is in the stroller to prevent abrupt changes in seating position.

Do not attempt to pass the double stitching on the end of the belt.

 Using the Guardrail

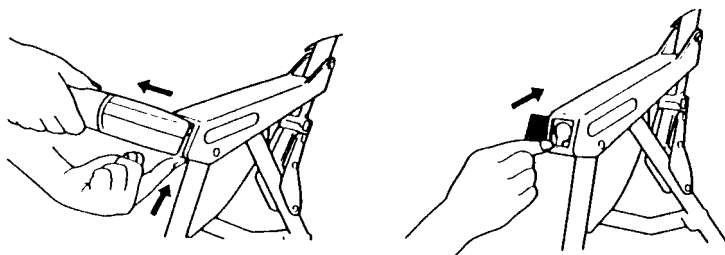

Installing the Guardrail

Push the guardrail into the opening in the armrest. Make sure that the projections are facing down as you lock the guardrail into place.

Removing the Guardrail

Remove the guardrail one side at a time while pressing the guardrail release button under each armrest.

CAUTION

Pull on each side of the guardrail to make sure it is completely attached.

 
When not using the guardrail, always use the guardrail caps.

When using the guardrail, remove the guardrail caps by inserting a thin coin to pop the cap out.

Using the Seat Belt

! WARNING


*Avoid serious injury from falling or sliding out.
Always use seat belt.*

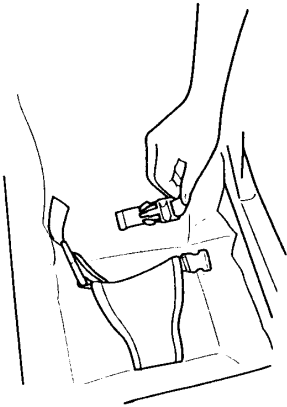

Place the crotch belt between baby's legs and fasten the waist belt buckles together.

After adjusting the waist belt, make sure it is fastened securely.

 To adjust the waist belt, loosen the slack on both sides of each buckle.

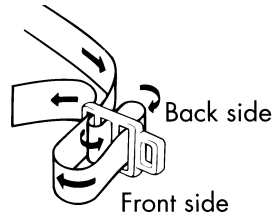

CAUTION

 
Even when the seat belt is fastened, be careful not to let the child slip out or stand.

Folding the Stroller


1. Lock both front swivel wheels.
2. Empty the basket.
3. Fold the canopy by lifting up on the canopy levers.
4. Remove your player from the canopy.

CAUTION

For the sake of safety, the fold release should be operated only when folding the stroller.

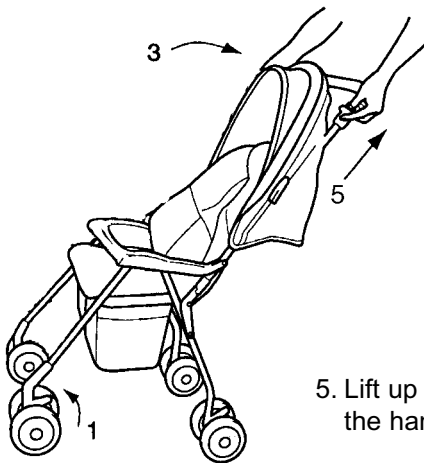


 5. Lift up the folding levers on both sides of the handle.

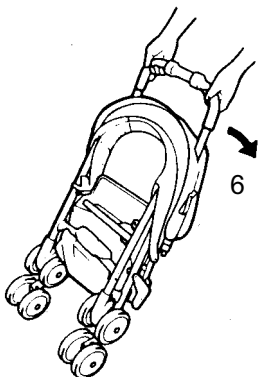

6. Tilt handle back and fold.

 7. Fold handle inward to lock and latch.

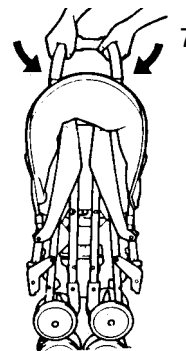


Removing/Attaching the Seat Cushion

CAUTION


If seat cushion is ripped or torn, do not use.

 Do not use the stroller without the seat cushion.

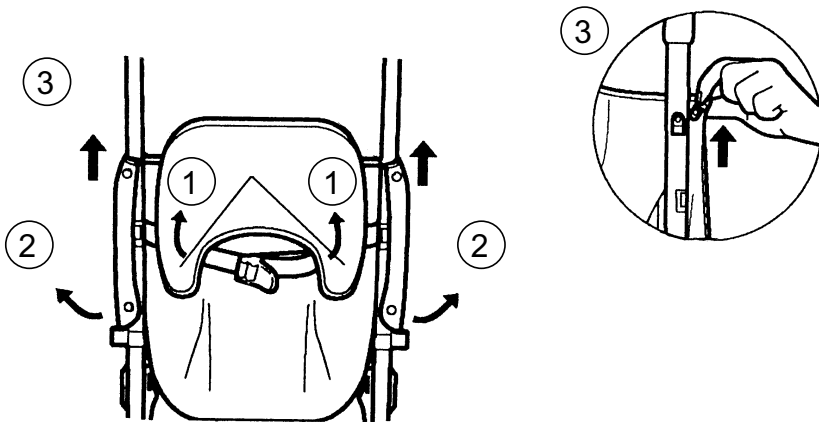

Removing the Seat Cushion

 1. Unbuckle the waist belt from the crotch belt and pull out from the seat cushion.
3. Unfasten the zipper underneath the seat cushion.
4. Detach the two snaps 1, 2 on each side. Unhook the clasp 3 on each side.

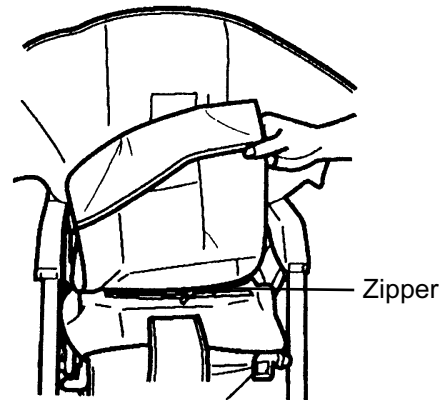


Attaching the Seat Cushion

Reverse the procedures for **Removing**. After attaching, make sure all snaps and clasps are fastened correctly.


Using the Basket

CAUTION

 Do not place more than 12 lbs. in the basket. Remove all items from the basket before folding the stroller.

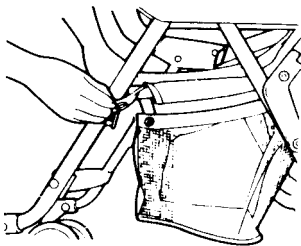

 Loop the front straps of the basket over the seat frame and snap together.

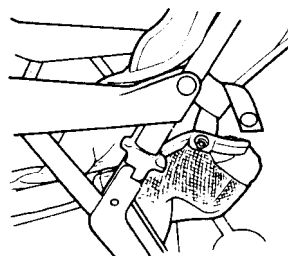

Loop the rear straps of the basket through the waist belt and snap together.

Routine Maintenance

STORE IN A COOL AND DRY AREA, especially in the summer. Do not store the stroller in the trunk of a vehicle.

SEAT CUSHION

The seat cushion is machine washable. Remove wooden backrest before washing. Set to gentle cycle using cold water and a mild detergent. Do not use bleach. Lay seat cushion flat to dry in shaded area. Do not machine dry. To prevent color fading, do not leave soaking for a long period. If the seat cushion is frayed or unraveling, discontinue use and call customer service for further instruction.

CANOPY, SEAT BELT, FIXED SEAT BASE AND BASKET

Hand wash with brush. Wipe out excess water with a dry cloth and dry in a shaded area. For stubborn dirt, dilute a mild detergent then apply directly to the dirty area. Wipe out the detergent.

MAIN BODY

Briskly wipe off any mud and dirt. To clean the body, wipe with a damp cloth then wipe out any traces of moisture on the body with a dry cloth. The main body might become moldy and musty if not wiped dry.

Excessive exposure to the sun could cause premature color fading of stroller plastic and fabric.

SWIVEL WHEELS

 
 
After prolonged normal use, the wheels of your stroller may not swivel as easily as when the stroller was new. This is usually due to a buildup of dirt in the swivel mechanism. Before adding lubrication, test the swivel action to determine whether lubrication is necessary. Using compressed air* aimed at point (a) and (b), blow dirt from the swivel mechanisms. **Do not use soap and water to wash the wheels.** Periodically check that all screws, bolts and nuts are tight.

ADDING LUBRICANT

Avoid lubricating the swivel wheels whenever possible. Excessive lubrication or adding lubricant to swivel wheels when new may cause them to develop a shimmy or wobble that may quicken their deterioration. Add lubricant (silicone*) to the swivel shaft in small amounts.

Do not use cooking oil or WD-40 because oil attracts dust and would hinder the movement rather than improve it.

*Compressed air and silicone spray are available in varying size cans at most hardware stores.

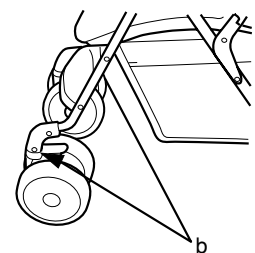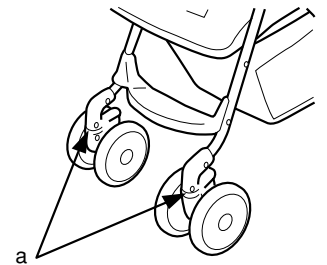

Trouble Shooting

STROLLER WON'T FOLD

 
- Check to see that the seat belt is not caught in the side.
- Make sure front swivels are locked.
- Remove all items from the basket.
- Remove your player from the back pocket of the canopy.

DIFFICULT TO STEER/STROLLER PULLS TO ONE SIDE

- Remove any items hanging from the handle.
- Make sure weight in basket is distributed evenly.
- Check that the brakes are not in the locked position.
- Clean and lubricate wheels, if necessary.

DIFFICULT TO GET UP CURBS

- Pulling stroller backward makes going up a curb difficult, and could pose a safety hazard. Pull the handle up to lift the rear wheels onto the curb, then pull the stroller backward until the front wheels clear.

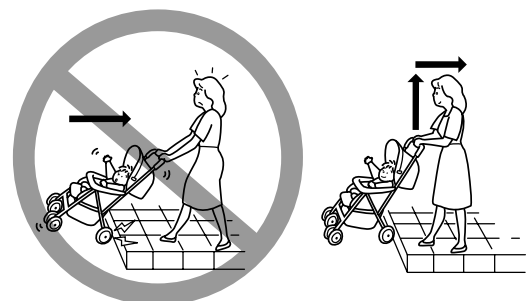

We have moved - Effective 2/7/04

Combi

Combi USA, Inc.
1962 Hwy 160 W, Ste. 100
Fort Mill, SC 29708

1-800-99-COMBI M-F 8:30am-5pm EST
803-548-3663 FAX

New SC
Sales Tax
is 5%



Parents
Form

Travel Savvy™ 2120 Series

A Acoustic Canopy

Patent Pending



If you would like to place an order for the following parts, please fill out the form below and return it to the following address:

~~COMBI International Corporation
Attn: Customer Service Department
199 Easy Street
Carol Stream, IL 60188~~

or ~~Fax this completed form to us at
630-871-0606~~

IMPORTANT: *We must have this information to process your order:*

Model Number: 2120 - _____ Color & Pattern of Fabric: _____

Parts List for the Travel Savvy™ (2120 Series) only.

	Price	Quantity	Total
1. Canopy	\$ 20.00		
2. Basket	10.00		
3. Seat Cushion	15.00		
4. Standard Guardrail	15.00		
5. Guardrail Cover	5.00		
6. Acoustic Canopy Speaker Set	10.00		
7.			
8.			
9.			
Amount of Order			
Sales Tax (7.25%) (IL residents only)			
Total			

If you need to order other parts for your stroller, please call us toll-free at 1-800-992-6624.

Shipping and Handling Fees: Add \$8.00 for orders \$34.99 and under. Add \$13.00 for orders \$35.00 and over. Note: Additional shipping charges will apply outside of the Continental U.S. Combi USA reserves the right to change pricing at any time.

Ship To:

Customer Name

Street Address

Street Address

City, State, Zip

Telephone Number

Charge to my credit card:

- VISA MASTERCARD
 AMERICAN EXPRESS DISCOVER

Card Number

Expiration Date -

Cardholder's Signature

Check enclosed