

Combi® Twin Sport Instruction Manual

 
Read all instructions BEFORE assembly and USE of product. KEEP INSTRUCTIONS FOR FUTURE USE.
Record the following information for quick reference. **Note:** Illustrations and photographs are only representative and not actual.

Attach copy of sales receipt for future reference.


Date Purchased: _____ Model Number: _____ - _____ Color: _____
Located on the rear right leg.

Parts List


Make sure you have all the parts listed below before using your stroller. If any parts are missing, call Customer Service at 1-800-99-Combi.

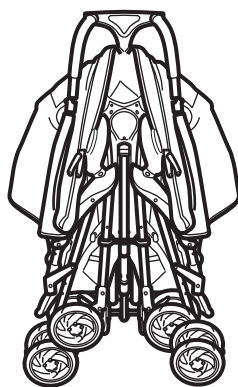


Main Body

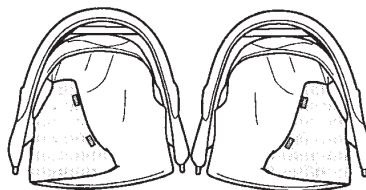 

Canopies

 

Car Seat Connectors

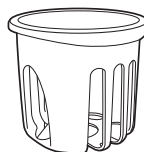 


Parent Cupholder



Guardrail

 Name of Parts

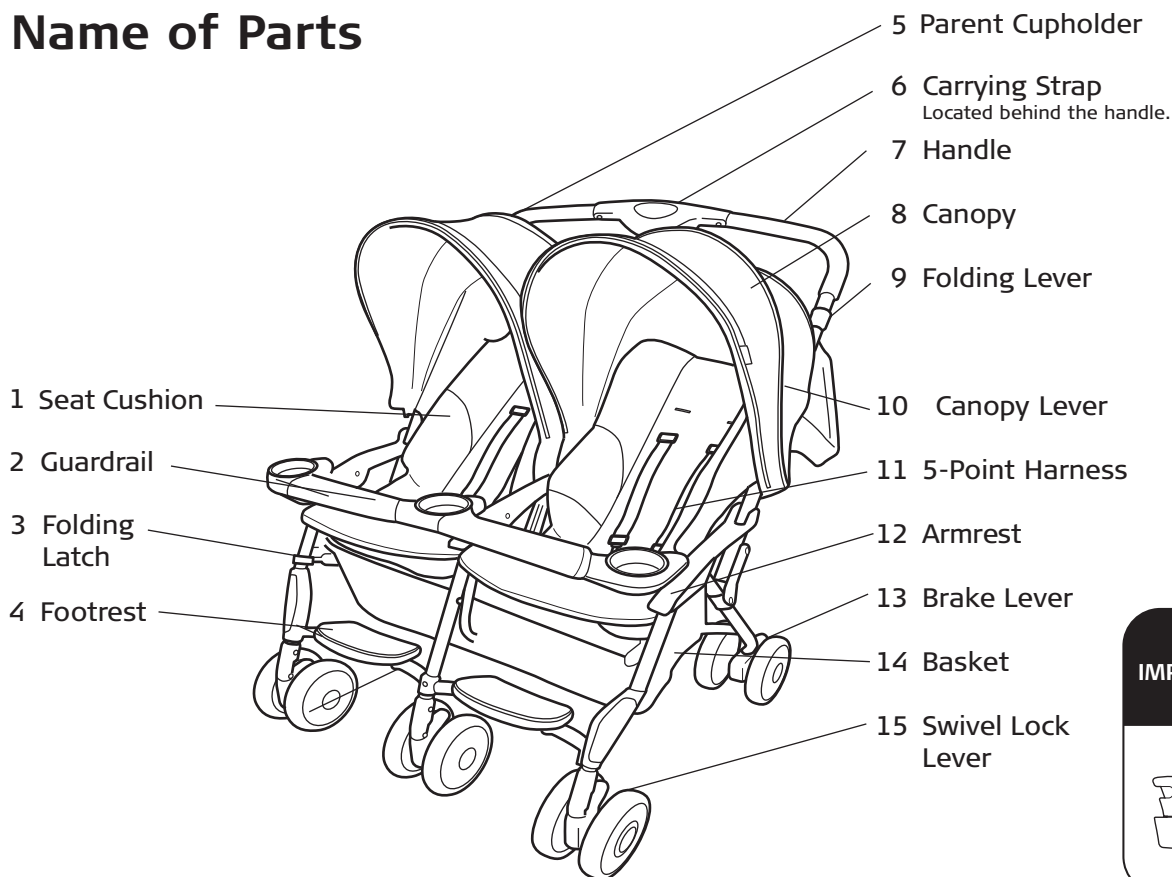

DO NOT DISCARD.
IMPORTANT PARTS NECESSARY
FOR CAR SEAT CONNECTION



Car Seat Connectors

WARNINGS: FAILURE TO FOLLOW THESE INSTRUCTIONS AND WARNINGS COULD RESULT IN SERIOUS INJURY OR DEATH.

ALL OPERATING AND ASSEMBLY PROCEDURES SHOULD BE PERFORMED BY AN ADULT.

In the event of damage or problems, discontinue use and contact Customer Service for instructions: 1-800-992-6624.

WARNING

Avoid serious injury from falling or sliding out. **ALWAYS** use restraint system.

WARNING

Child may slip into leg openings and strangle. Never use in reclined carriage position unless the permanently attached safety cover is used.

WARNING

NEVER lift and carry stroller while occupied. The stroller may fold.

WARNING

NEVER allow your child to stand in or on the stroller.

WARNING

NEVER allow a child to ride or sit on areas of stroller other than seat.

WARNING

NEVER leave child unattended.

WARNING

To avoid finger entrapment or pinching, use care when folding and unfolding the stroller. Be certain the stroller is fully erected and locked in position before allowing your child near the stroller.

WARNING

Always engage both brakes when parking the stroller.

WARNING

NEVER hang items on handle or place items on canopy. This could cause the stroller to become unbalanced or tip over.

WARNING

To prevent tipping: do not place more than 1.0 lbs (.045 kg) in the parent cupholder.

WARNING

Excessive weight in baskets (or items placed in baskets which overflow the top or side of baskets) may cause a hazardous condition. Do not load more than 10 lbs. (4.5kg) in the basket.

WARNING

Completely remove all plastic bags and packing materials before using this product to prevent a possible choking hazard.

WARNING

NEVER allow children to lean over sides of stroller. It may become unbalanced and tip over.

WARNING

Pulling stroller backward makes going up a curb difficult, and could pose a safety hazard.

WARNING

Stroller is intended for walking speed only. **DO NOT** use while jogging, skating, etc.

WARNING

When Combi Shuttle infant seat is attached, **ALWAYS** ensure it is secure by pulling up on the handle.

WARNING

The guardrail **MUST** be attached to the stroller before attaching the infant carrier.

WARNING

Do not use the stroller on steep slopes, stairs, escalators, beaches, rough roads, mud, etc.

WARNING

To ensure your child's safety, please refer to the Combi Shuttle instruction manual before using it with stroller

WARNING

If unable to securely attach the Combi Shuttle to your stroller, discontinue use and contact Customer Service.

WARNING

ALWAYS secure your child with the infant carriers harness before using it with the stroller.

WARNING

NEVER carry stroller by using the Combi Shuttle infant car seat handle.

WARNING

TIPPING HAZARD: **NEVER** place weight on rear of infant seat while attached to the stroller. This could cause the stroller to become unbalanced and tip over.

WARNING

Not locking the swivel wheels before folding the stroller can damage the wheels.

Use ONLY the Combi Shuttle infant carrier with this stroller.

Observe the following weight capacities:

 
Basket - 10 lbs each. (4.5 kg)

Kids Tray - 3 lbs per side. (1.36 kg)

Canopy Pocket - 1 lb each. (0.45 kg)


Total Maximum weight of the children MUST NOT exceed 90 lbs. (40 kg), 45 lbs per seat.

Opening the Stroller

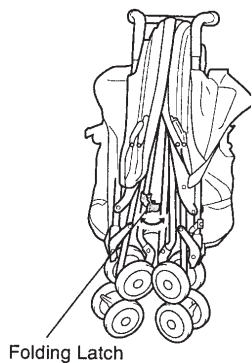

Folding Latch

 1. Release folding latch by pulling it forward.

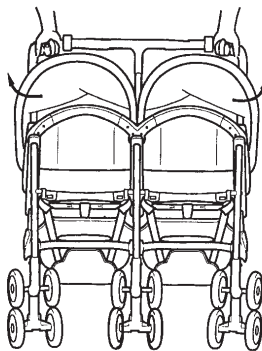


2. Grip the handle on each side and turn outward to open fully. (Holding from underneath will make this process easier.)



3. Lift handle and snap the stroller away from you. It will open and lock automatically into position.

 Attaching the Canopy

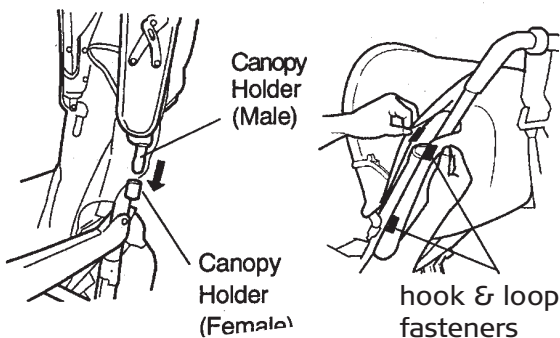

Canopy Holder (Male)

Canopy Holder (Female)

 
hook & loop fasteners

CAUTION

Failure to fully secure the canopy holders can cause the holders to bend. When storing the stroller (by laying it down), be sure the canopy is off the ground and nothing is placed on canopy to prevent it from bending. ALWAYS close canopy before folding stroller.

Attaching the Canopy

1. Confirm canopies are facing the proper direction.
2. Fully insert the canopy holder (male) into the canopy holder (female) until a click is heard.
3. Connect the hook & loop fasteners located on both sides around the handle and to the back of the seats.

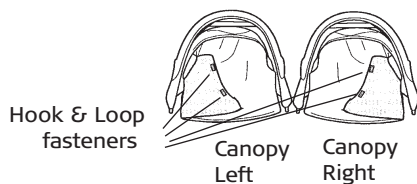

Hook & Loop fasteners

 
Canopy Left

Canopy Right

Removing the Canopy

Pull the hook & loop fasteners apart, squeeze the bottom of the canopy holder (male) and pull the canopy off.

Using the Parent Cupholder

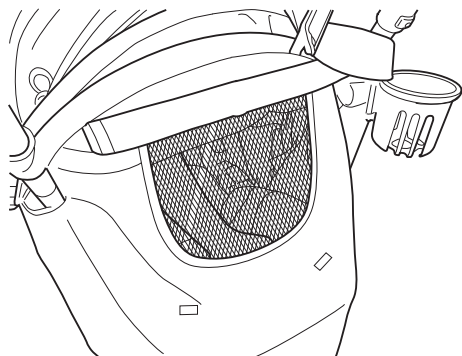

1. Attach the cup holder to the stroller handle.

2. To Remove: Press the button shown in figure 1 and pull away from stroller.


 
 
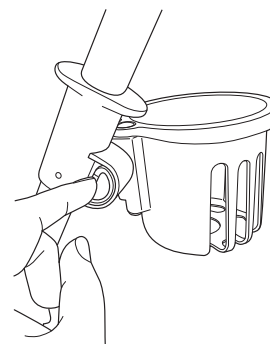 


figure 1

Attaching the Combi Shuttle Infant Seat

 1. Recline stroller seat to the full recline position.
2. While facing the stroller, attach car seat connectors to left (outside) and middle armrest. Pull up on attachments to ensure both connectors are secure.
3. Insert Combi Shuttle infant carrier into left side of stroller seat (while facing the stroller). Ensure bottom of Infant Seat rests on stroller seat.
4. Press top and bottom of infant seat down into stroller until it locks in place. Lift up gently on handle to ensure seat is secure.

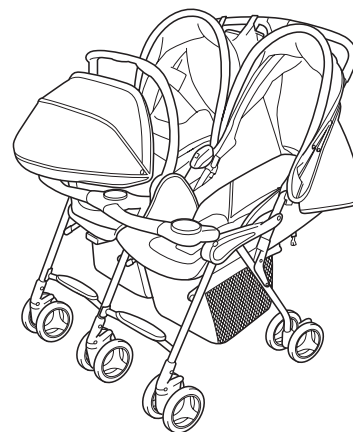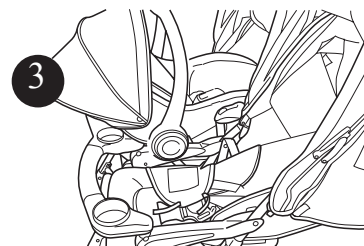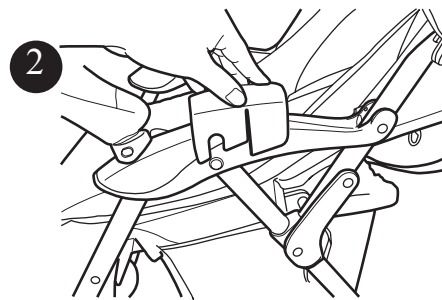

WARNING

After installation, lift car seat to verify it is securely locked onto the stroller.

Infant car seat **MUST** be attached to the stroller in the rear facing position only.

Removing Infant Seat

1. Pull red release lever on Combi Shuttle, while lifting up to release from stroller.
2. Remove car seat connectors from stroller and store for future use.

 


WARNING - Pinch Hazard

Car seat connectors must **NEVER** be used when seating position is being occupied without the Shuttle infant seat.

When not in use, always remove and store car seat connectors.

Using the Swivel Wheels

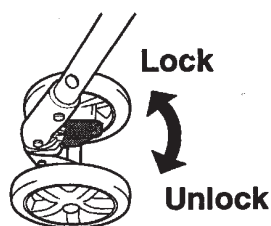


To lock swivels, make sure the lock lever is behind the stroller frame; then lift all lock levers up.

To unlock swivels, push all swivel lock levers down.

Swivel lever **MUST** be locked before folding and storing to avoid damage.

 Using the Brakes

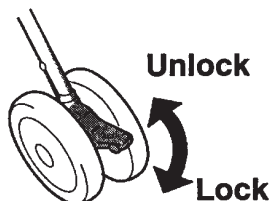

CAUTION

Push the stroller forward to ensure that the brakes are properly engaged.

To lock brakes, push all brake levers down. Brake levers are located on the back wheels only.

 
To unlock brakes, lift all brake levers up.

Adjusting the Reclining Backrest

1. To place the backrest in the upright position, press and hold down the button on the recline mechanism and pull the strap tight while pushing the recline mechanism toward the seat back.
2. To achieve a full recline, press and hold down the button on the recline mechanism and pull downward.

CAUTION

Use caution when reclining the backrest while baby is in the stroller to prevent abrupt changes in seating position.

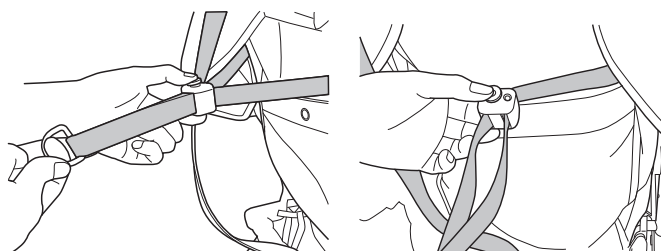

Using the Guardrail

To remove individual sides of the guardrail:



1. Press release button on the underside of the center section of the guardrail and pull out.

Note:
To rotate either side of the guardrail to permit easy access, release center button and swing the guardrail out.

 
2. Squeeze the buttons on the outside of the stroller and lift up to remove one side of the guardrail.

To remove the complete guardrail:



1. Squeeze both buttons on the underside of the middle section and lift up.
2. Squeeze the buttons on the both outside sections of the stroller and lift up to completely remove the guardrail.

Using the Harness

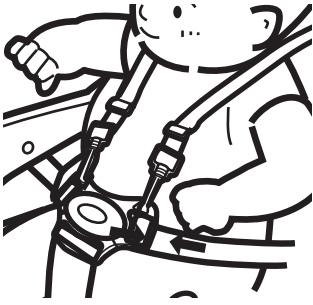


Buckling the Harness

1. Place the crotch belt between the baby's legs.
2. Insert buckle tongues into buckle.
3. Lift buckle with tongues inserted and attach right and left hook to holes in buckle tongue
4. To adjust the harness or waist belt, loosen the slack on both sides of each buckle.



WARNING

 Avoid serious injury from falling or sliding out. Always use the 5-point harness.

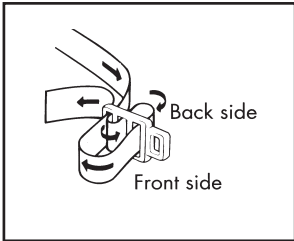

Unbuckling the Harness

1. Press levers down on right and left harness hooks to detach from buckle tongues.
2. Press buckle button down (with Combi logo) and detach buckle tongues from buckle.

Harness Height Adjustment

1. Unhook the shoulder straps from the center buckle as shown in figure a.
2. Pull the back seat cushion forward and pull the shoulder straps through the seat cushion as shown in figure b.
3. To raise the height, thread both shoulder straps through the upper two loops as shown in figure c. To lower the height, thread the shoulder straps through the lower two loops.
4. Thread the shoulder straps through the appropriate slot of the seat cushion depending on which height the straps are set at as shown in figure d.

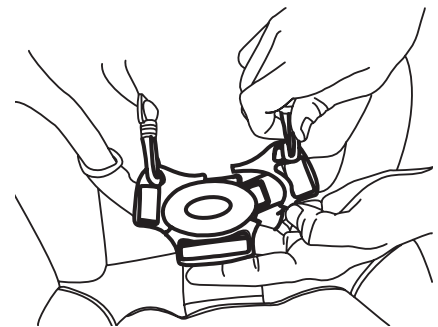 


figure a

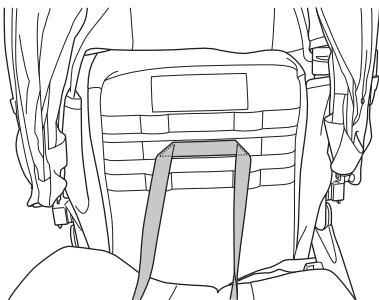 


figure b

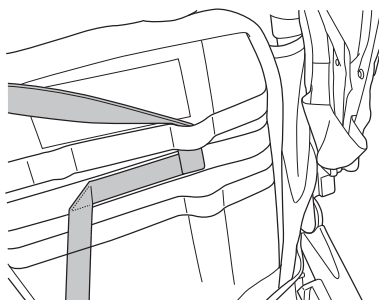 


figure c


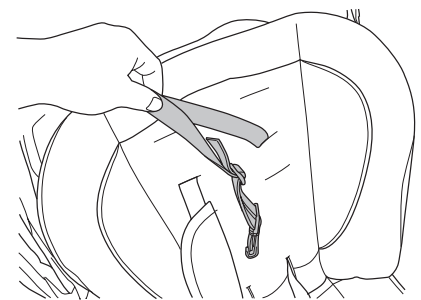 



figure d

Folding the Stroller

 1. ALWAYS lock both front swivel wheels. Not locking the swivel wheels before folding the stroller can damage the wheels.
2. Remove all items from the basket.
3. Lock all front swivel wheels.
4. Make sure seat backs are in the upright position.
5. Fold both canopies by lifting up on the canopy levers.
6. Remove your player from the back pocket of the canopy.
7. While lifting up the folding levers on both sides of the handle, tilt the stroller back until it folds together.


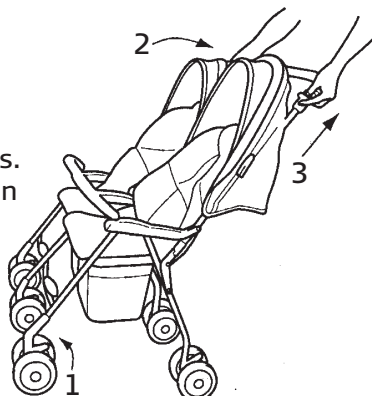


 8. Fold together by bringing the sides of the handle together until the canopies face each other in the middle.

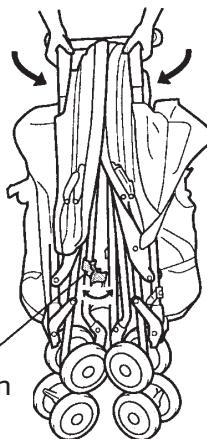


Folding Latch

  9. Lock the folding latch to hold the stroller together.

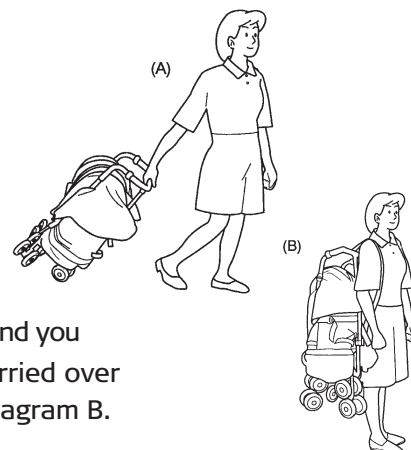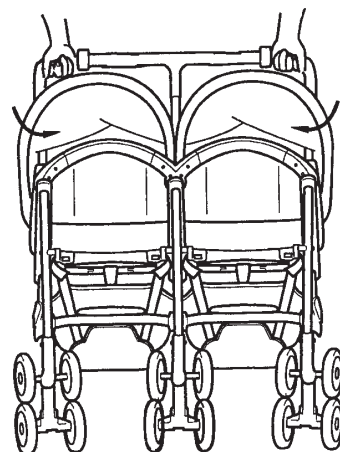

The stroller can be pulled behind you as shown in diagram A or carried over your shoulder as shown in diagram B.

 Using the Safety Cover (Boot)

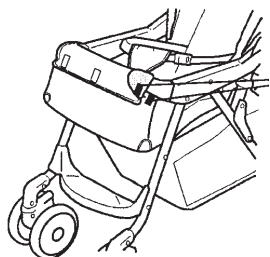

Hook & Loop fasteners

Installing the Safety Cover (Boot)

1. Lift the seat cushion and pull safety cover (boot) out.
2. Place the safety cover (boot) over the guardrail and secure it with the hook & loop fasteners.

CAUTION

Before folding the stroller, unfasten and store the safety cover (boot) under the seat. The stroller will not fold with it attached to the guardrail.



 
WARNING: Child may slip into leg openings and strangle. Never use in reclined carriage position(s) unless safety cover (boot) is securely fastened.

Removing/Attaching the Seat Cushion

CAUTION

If seat cushion is ripped or torn, do not use.

Do not use the stroller without the seat cushion.

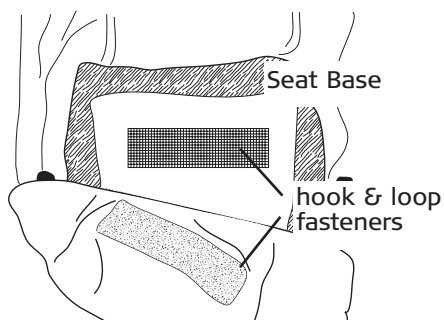

Removing


1. Press levers down on right and left harness hooks to detach hooks from buckle tongues.
2. Press buckle button down and detach buckle tongues from buckle.
3. Pull top of seat pad forward to detach hook & loop fastener.
4. Pull all the harness straps through the top and side slots in cover.
5. Unzip zipper at the base of the seat cover.
6. Pull bottom of seat pad upward to detach hook & loop fastener.

Attaching

1. Attach hook & loop fastener at the bottom of the seat pad to hook & loop fastener on the stroller base.
2. Pull top of seat pad forward; the seat pad can rest on the front guard rail.
3. Insert buckle strap into slot at the bottom back of the seat pad.
4. Locate zipper on the back of the seat pad and locate the zipper in the seat bite of the stroller. Zip seat pad to stroller.
5. Insert harness straps with hooks and harness straps with buckle tongues through slots on back of seat pad.
6. Attach hook & loop fastener on top of seat pad to stroller.

Removing & Attaching the Front Swivel Wheels

 
Place front swivel wheel assembly on the swivel shaft. The assembly is secure when it locks onto the shaft.

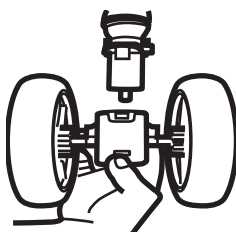

To remove the Swivel Wheels

Press in the square release button located at the bottom of the wheel holder while pulling the assembly off of the swivel shaft.

 Release Button


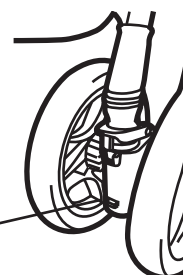


Swivel lock MUST be locked before folding and storing stroller to avoid damage.

Removing the Basket

CAUTION

  Do not place more than 10 lbs. in either basket. Remove all items from the basket before folding the stroller.

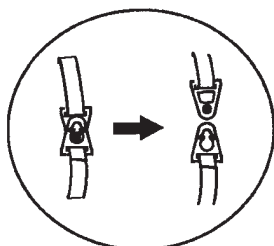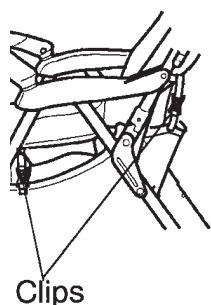

1. Unhook and unloop the fasteners from the front and back of the stroller basket.
2. Slide the basket off the basket frame.

Routine Maintenance

Store in a cool and dry area, especially in summer. To avoid damaging stroller, NEVER place items on top of stroller during storage.

Seat Cushion:

The seat cushion is machine washable. Set to gentle cycle using cold water and a mild detergent. Do not use bleach. Lay seat cushion flat to dry in shaded area. Do not machine dry. To prevent color fading, do not leave soaking for a long period. If the seat cushion is frayed or unraveling, discontinue use and call Consumer Affairs for further instruction.

Canopy, Waist Belt, Fixed Seat Base and Basket:

Hand wash with brush. Wipe out excess water with a dry cloth and dry in a shaded area. For stubborn dirt, dilute a mild detergent and apply directly to the dirty area. Wipe out the detergent.

Stroller Frame (Main Body)

Briskly wipe off any mud and dirt. Wipe with a damp cloth then wipe out any traces of moisture on the body with a dry cloth. If fabric is not dried completely, mold or mildew could occur.

Excessive exposure to the sun could cause premature color fading of stroller plastic and fabric.

Wheel Assemblies:

After prolonged normal use, the wheels of your stroller may not swivel as easily as when the stroller was new. This is usually due to buildup of dirt in the swivel mechanism. Before adding lubrication, remove the swivel wheels by pressing in the release button and wiping off mud and dirt. Do not use soap and water to wash wheels. Periodically check that all screws, bolts and nuts are tight.

Avoid lubricating the swivel wheels whenever possible. Excessive lubrication or adding lubricant to swivel wheels when new may cause them to develop a shimmy or wobble that may quicken their deterioration. Add a silicone* to the wheel assemblies in small amounts.

NEVER use lubricants because oil attracts dust and would hinder the movement rather than improve it.

*Silicone spray is available at most hardware stores.

Trouble Shooting

Stroller will not fold:

- Ensure waist belt is not caught in the side.
- Make sure front swivels are locked.
- Remove all items from the basket.
- Make sure the seat back is in the upright position.

Difficult to steer or Stroller pulls to one side:

- NEVER hang items from the handle.
- Make sure weight in basket is distributed evenly.
- Check that the brakes are not in the locked position.
- Clean wheels and silicone to wheels, if necessary.

Difficult to get up curbs:

- Pulling stroller backward makes going up a curb difficult, and could pose a safety hazard. Pull the handle up to lift the rear wheels onto the curb, then pull the stroller backward until the front wheels clear.

LIMITED WARRANTY

1. Combi USA Products, when purchased from an authorized retailer; are warranted to the original purchaser to be free from defect in materials and workmanship for a period of one (1) year from date of purchase. Combi products purchased from unauthorized retailers are not covered under warranty. Warranty is valid for products purchased and used in the U.S. only and used in compliance with the warrantor's use and maintenance instructions. Save your carton and receipt. These items may be required in case of return for warranty assistance.
2. During the warranty period your Combi product will either be repaired or replaced, at the warrantor's discretion, without charge for replacement parts if it is purchased from an authorized Combi dealer and is found to be defective in workmanship or materials. For service, call 1-800-99-Combi (1-800-992-6624). For warranty service, please contact your Combi retailer. The warrantor shall not be responsible for any costs incurred by the consumer in returning a defective product for repair. The consumer will be responsible for all shipping and handling for replacement parts.

This limited warranty shall not apply to normal wear to the product, or if the product has been:

- a. Damaged due to accidents, misuse, abuse or neglect as determined by Combi.
- b. Tampered with or repaired by any one other than an authorized Combi representative or with parts other than Combi approved parts.
- c. Leased or rented for commercial use.

THE WARRANTY PROVIDED HEREIN IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY EXCLUDED. WARRANTOR'S OBLIGATIONS AND THE CONSUMER'S OR OTHER BUYER'S REMEDIES UNDER THE LIMITED WARRANTY ABOVE ARE EXCLUSIVE AND ARE STRICTLY LIMITED TO REPAIR OR REPLACEMENT AS STATED. ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ON THE PART OF THE WARRANTOR AND ANY SUPPLIER OR DEALER ARE HEREBY ALSO EXPRESSLY EXCLUDED.

Some states limit or do not allow exclusions or limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



Twin Sport Instruction Manual

If you would like to place an order, please fill out the form below and return to the following address:

Combi

Attn: Customer Service
3520 Westinghouse Blvd., Ste. B
Charlotte, NC 28273

or

Fax this completed form to
704-697-1695

IMPORTANT: We must have this information to process your order:

Model Number: _____ - _____ Color / Pattern of Fabric: _____

Located on the rear right leg.

Parts List for the Twin Sport only.

	Price	Quantity	Total
1. Wheel Assemblies (front only)	\$10/per or \$25/set		
	Amount of Order		
	ADD Shipping & Handling		
	Sales Tax (8.5%) (NC residents only)		
	Total		

If you need to order other parts for your stroller, please call us toll-free at 1-800-992-6624.

Shipping and Handling Fees: Add \$8.00 for orders \$34.99 and under. Add \$13.00 for orders \$35.00 and over. Note: Additional shipping charges will apply outside of the Continental U.S.

Combi USA reserves the right to change pricing at any time.

Ship To:

Customer Name

Street Address

Street Address

City, State, Zip

Telephone Number

Charge to my credit card:

☐ VISA

☐ MASTERCARD

☐ DISCOVER

Card Number

Expiration Date _____ - _____ - _____

Cardholder's Signature

05052011

