

We have moved - Effective 2/7/04

Combi

Combi USA, Inc.

1962 Hwy 160 W, Ste. 100
Fort Mill, SC 29708

1-800-99-COMBI M-F 8:30am-5pm EST
803-548-3663 FAX

New SC
Sales Tax
is 5%



Manual

Ultra Savvy™ PM
2900 Series

Acoustic Canopy

Patent Pending

Perfect Match™ Stroller



Be sure to carefully read this instruction manual **before** using the product to ensure proper use of the stroller, and keep it for future reference. Record the following information for quick reference.

Note: Illustrations are only representative and not actual.

Date Purchased: _____ Model Number: 2900 - _____ Color _____

 
Attach copy of sales receipt.

Located near the rear right leg.


Fabric Pattern _____

Parts List


Make sure you have all the parts listed below before using your stroller. If any parts are missing, call Customer Service at 1-800-992-6624.

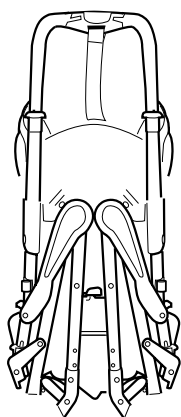

Main Body

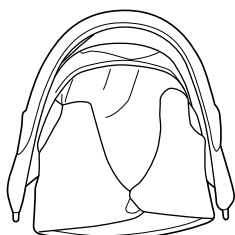 

Canopy

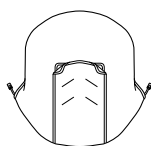 


Infant car
seat cover




Infant car seat
canopy cover



 
Stroller Pack




Rear Wheel
x2

 

Front Wheel
x2

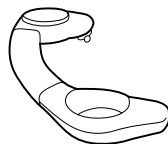 

Standard Guardrail

 


Perfect Match™ Guardrail

Speakers
in a Box

Warranty Card

Instruction
Manual

 
Name of Parts

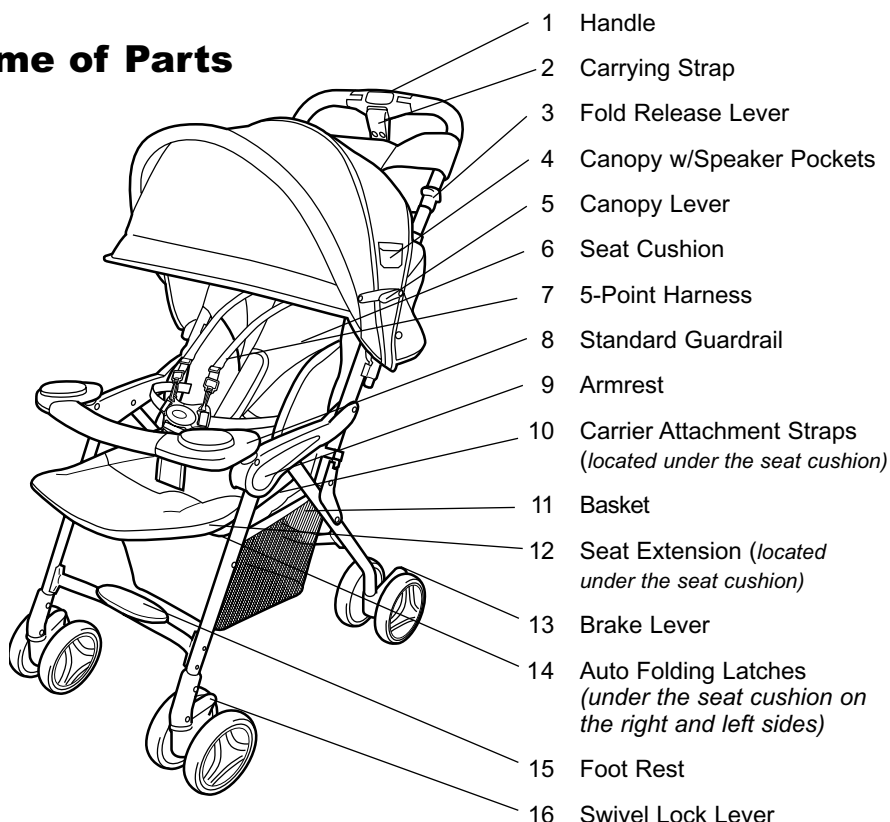

- 1 Handle
- 2 Carrying Strap
- 3 Fold Release Lever
- 4 Canopy w/Speaker Pockets
- 5 Canopy Lever
- 6 Seat Cushion
- 7 5-Point Harness
- 8 Standard Guardrail
- 9 Armrest
- 10 Carrier Attachment Straps
(located under the seat cushion)
- 11 Basket
- 12 Seat Extension (located
under the seat cushion)
- 13 Brake Lever
- 14 Auto Folding Latches
(under the seat cushion on
the right and left sides)
- 15 Foot Rest
- 16 Swivel Lock Lever

17 Player Storage
Pocket (located on
the back of the canopy)

 18 Reclining Lever

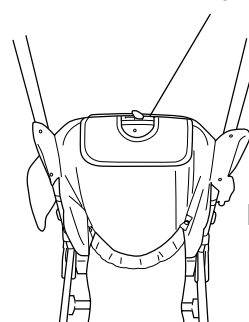

Back of Seat

WARNINGS For your child's safety:

If your stroller is not used in compliance with these instructions, serious injury may result.



WARNING

AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT. ALWAYS USE 5-POINT HARNESS.



WARNING

NEVER LEAVE CHILD UNATTENDED.

In the event of damage or problems, discontinue use and contact COMBI Customer Service for instructions: 1-800-992-6624.

WARNING

DO NOT ALLOW CHILD TO LEAN OVER SIDES OF STROLLER. IT MAY BECOME UNBALANCED AND TIP OVER.



WARNING

DO NOT LIFT AND CARRY the stroller while open with a child in it. The stroller may slip.



WARNING

Do not use the stroller on steep slopes, stairs, escalators, beaches, rough roads, mud, etc.

WARNING

Excessive weight in basket (or items placed in basket which overflow the top or side of basket) may cause a hazardous condition to exist.



WARNING

Do not allow your child to stand in or on the stroller.



WARNING

Do not put or hang things on the canopy or handle because it could cause the stroller to become unbalanced or tip over.

WARNING

TO AVOID BURNS, do not place bottles/cups with hot liquids in the Stroller Pack. Do not place more than 2 lbs. in the Stroller Pack.

WARNING

Do not load more than 11 lbs. (5kg) in the basket. Do not load more than 2 lbs. (0.9kg) combined weight in the bottle holder (including bottles and contents).



WARNING

Never carry more than one child in the stroller. Do not allow a child to ride or sit on areas of stroller other than seat. **Maximum weight of child: 45 lbs. (20 kg)**



WARNING

 
Always engage both brakes when parking the stroller.

CAUTIONS:


1. Improper usage or lack of knowledge regarding the instructions can result in dangerous situations, personal injury or damage to the stroller.
2. Completely remove all plastic bags and packing materials before using this product to prevent a possible choking hazard.
3. Push the stroller at a normal walking speed only.

**Questions or Concerns
check our website:**

Opening the Stroller

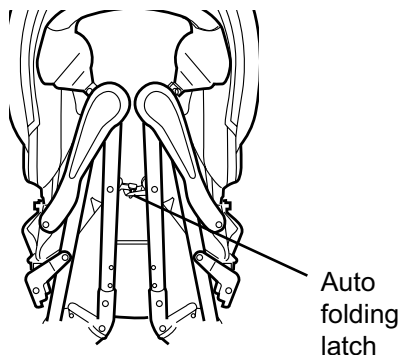

 
Holding the handle from underneath will make it easier.

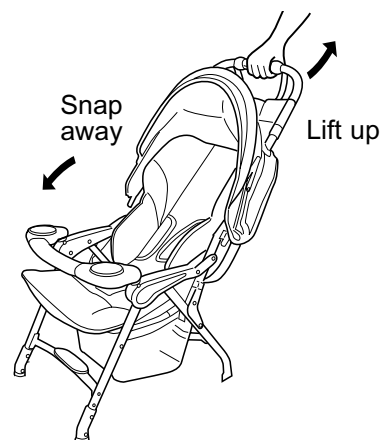


2. Grip the handle on each side and turn outward to open fully.

3. Lift up the handle and snap the stroller away from you.

 Attaching the Rear Wheels

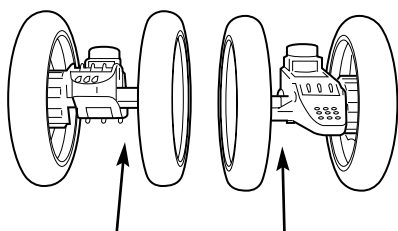

 Note:
Attach the rear wheel assemblies to each stroller leg with the wheel spacer facing inward.

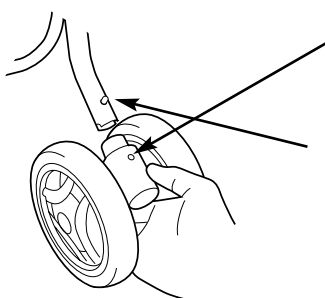

1. Stand behind the stroller.

 
2. Locate the small opening on each rear wheel assembly.

3. Locate the small silver pin on each rear stroller leg.

4. Insert the leg into the wheel assembly until the small silver pin locks into the opening.

Attaching & Removing the Front Swivel Wheels


Place front swivel wheel assembly on the swivel shaft. The assembly is secure when it locks onto the shaft.

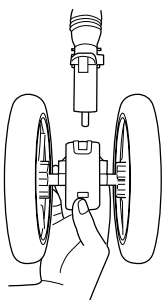


Removing the Swivel Wheels

Press in the square button located at the bottom of the wheel holder while pulling the assembly off of the swivel shaft.

 Release Button

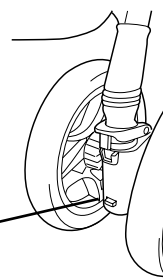

Attaching the Canopy

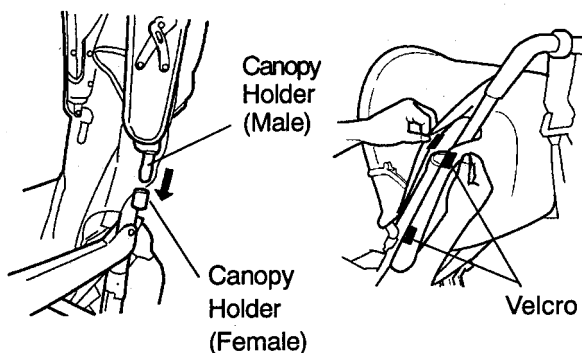 

CAUTION

Failure to fully secure the canopy holders can cause the holders to bend. When storing the stroller by laying it down, be sure the canopy is off the ground to prevent it from bending.

 
Attaching the Canopy

1. Confirm the canopy is facing in the proper direction.
2. Fully insert the canopy holder (male) to the canopy holder (female) until a click is heard.
3. Fasten the canopy velcro on both sides around the handles to the seat back velcro (2 places.)


Removing the Canopy

Pull the velcro apart and squeeze the bottom of the canopy holder (male). Lift the canopy until it releases from the female holder.

Installing the Speakers

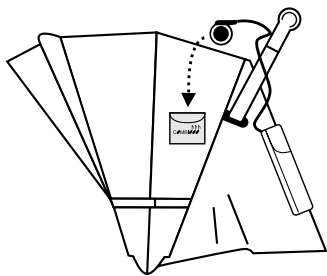


 1. Insert a speaker into the small pockets located on both sides of the canopy.
2. Place your portable CD, cassette or MP3 player inside the large storage pocket on the back of the canopy.

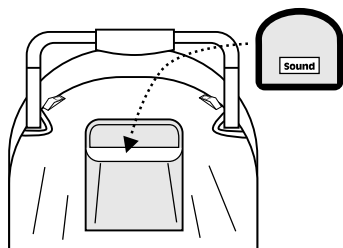

3. Attach the speaker cords through the Velcro holders on both sides of the storage pocket.

 4. Insert the (2.8mm) plug into player.

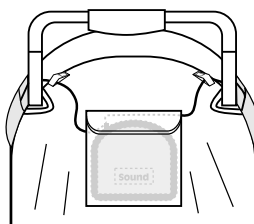

CAUTION

Be sure to test the volume on your player. Set it at a comfortable level so that it does not startle your baby when turning it on. Loud volume can hurt your baby's ears. If you notice that the sound has become weak or distorted or if tracks do not change, this is an indication that your batteries are low. Replace the batteries and set the volume at a comfortable level.

CAUTION

Before folding your stroller, be sure to remove your player from the back pocket of the canopy. This will make it easier to fold the stroller.

When you fold the stroller, you may leave the speakers in the Acoustic Canopy, but only for short periods of time.

 
In the summer, the temperature may get as high as 212°F/100°C or more. Do not leave your stroller, with the speakers in the Acoustic Canopy pockets, in your car trunk where the temperature may reach high levels. Store speakers in a cool and dry area.



WARNING:

To avoid serious injury keep stereo speakers and cords out of reach of children.


Using the Swivel Wheels

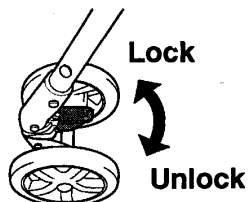

To lock swivels, lift both swivel lock levers **up**.

To unlock swivels, push both swivel lock levers **down**.

 Using the Brakes

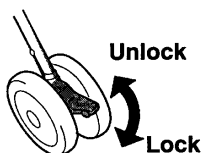


To lock brakes, push both brake levers **down**.

To unlock brakes, lift both brake levers **up**.

CAUTION

Push the stroller forward to ensure that the brakes are properly engaged.

 Using the Safety Cover

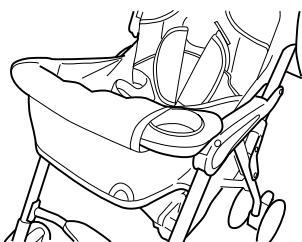


Installing the Safety Cover

1. Lift the seat cushion and pull safety cover out.
2. Place the safety cover over the guardrail and secure it with the velcro.

CAUTION

Before folding the stroller, unfasten and store the safety cover under the seat. The stroller will not fold with it attached.

 Using the Reclining Backrest

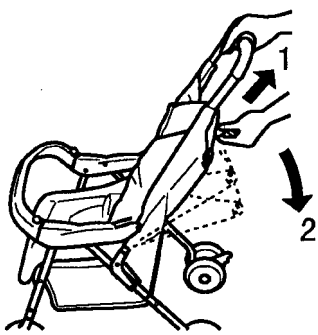

1. Press the lever at the top of the seat to the left.
2. Adjust the backrest gently to any of three positions.

To return the backrest to the upright position, simply lift the backrest gently into place.



 
WARNING:

Never use seat in reclined position unless the permanently attached safety cover is used.


CAUTION

Be careful when reclining the backrest while your baby is in the stroller to prevent abrupt changes in seating position.

Using the Guardrail

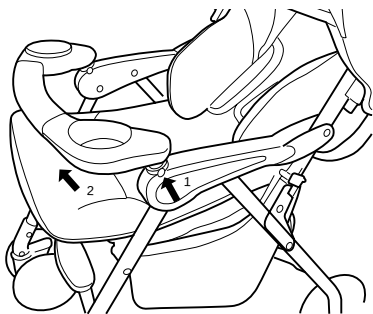

 
1. Squeeze the guardrail release buttons on both sides to release the guardrail.
2. When one side is released, the guardrail will pivot to allow easy access to the seating area.

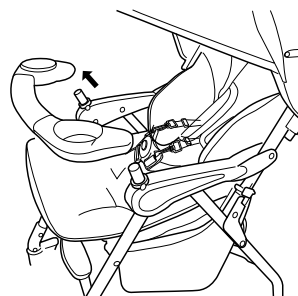

3. When both sides are released the guardrail can be removed.

4. To attach the guardrail slip it over the armrest pins until you hear the pins click into position.

 Using the Seat Extension

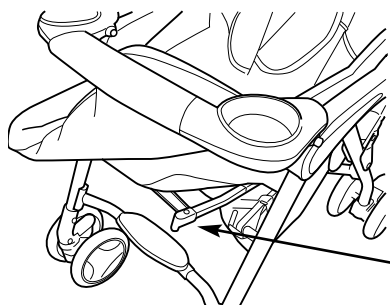


1. Lift the seat cushion and locate the seat extension.
2. Pull out the seat extension.


When not in use, push the seat extension back to the original position.

Seat extension

 Using and Adjusting the 5-Point Harness

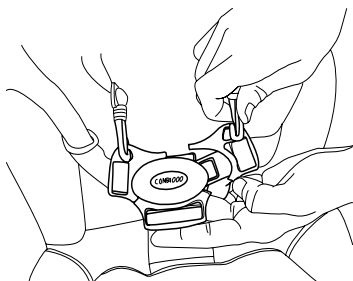

 1. Place the crotch belt between the baby's legs.
2. Insert both waist belt buckles into the middle plastic piece.
3. Attach each shoulder strap's hook to the top of the waist belt clips.
4. To adjust the harness or waist belt, loosen the slack on both sides of each buckle.

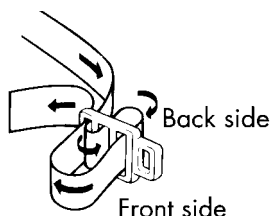

WARNING:

 
Avoid serious injury from falling or sliding out. Always use the 5-point harness.

CAUTION


Even when the seat belt is fastened, be careful not to let the child slip out or stand.

Folding the Stroller


1. Fold the canopy by lifting the canopy levers.
2. Remove your player from the back pocket of the canopy.
3. Place seat in the upright position.
4. Hold the folding levers up on both sides of the handle while completing step 5.
5. Tilt the stroller onto its back wheels and roll forward. Then pull the handle back quickly to fold front guardrail to backrest.
6. Turn handle inward with an underhand hold to latch and lock.

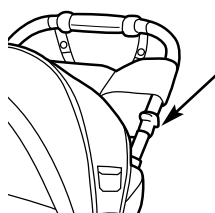

Fold Release Lever

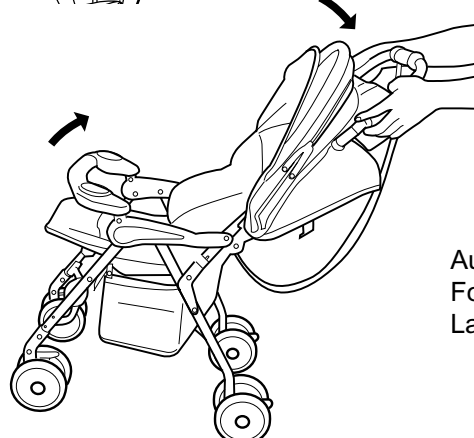 

Turn inward to fold.

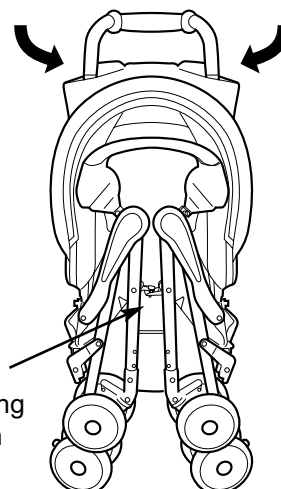 


Auto Folding Latch

Removing/Attaching the Seat Cushion

CAUTION

If seat cushion is ripped or torn, do not use.

 Do not use the stroller without the seat cushion.

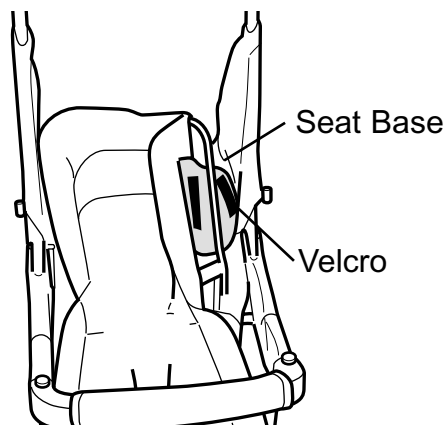

Removing

1. Unbuckle the 5-point harness and pull all the straps through the seat cushion.
2. Grasp the seat cushion at the top and unfasten from the velcro.

Attaching

 
1. Pass the 5-point harness waist belt straps through the appropriate locations of the seat cushion.
2. Fasten the velcro.



Using the Basket

CAUTION

Do not place more than 11 lbs. in the basket. Remove all items from the basket before folding the stroller.

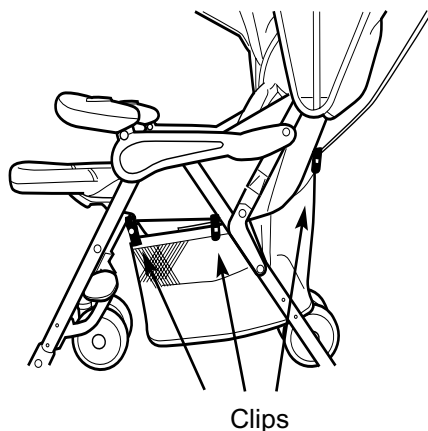

Removing

Unfasten clips on front and side of basket.

 
Attaching

Reverse the procedures for **Removing**.

Using the Stroller Pack

⚠ WARNING:

To avoid burns, do not place bottles/cups with hot liquids in the stroller pack. Do not place more than 2 lbs. in the stroller pack. Remove all items from the stroller pack before folding.

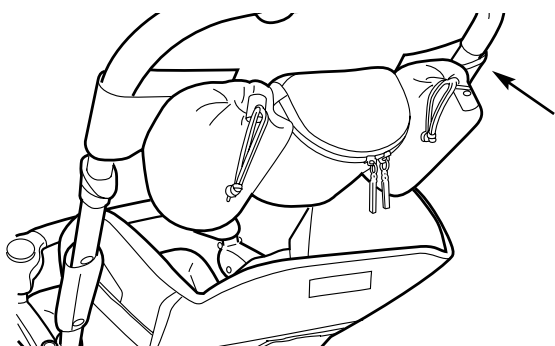

Attaching

Hook the clips into the slots on the handle and wrap the velcro straps around the handle.

Removing

Unfasten the velcro straps and unhook the clips.

The Perfect Match™ Guardrail & Carrier Attachment Strap

2003 Perfect Match™ Compatible Infant Car Seats

Graco® Snug Ride®, Snug Ride DX5®, Snug Ride LX5®

Baby Trend® Latch-Loc

Century® Smart fit- Supreme®, Assura, Smart Fit Plus 22, Smart Fit Plus 22V, Smart Fit Elite, Avanta SE, Avanta DX.

Evenflo® On My Way, On My Way Position Right, On My Way Position Right V Plus new Cozy Carry, Portabout

Cosco® Eddie Bauer

Trade name and trademarks of Graco®, Century®, Evenflo® and Cosco® and Baby Trend are the property of their respective owners and no endorsement of or approval by them is intended or implied. All COMBI® Perfect Match™ strollers are compatible with specified models of the Graco®, Century®, and Evenflo® and Baby Trends infant car seat/carrier models and the Cosco® Eddie Bauer as of the date this printing was prepared.

Copyright December 2002 COMBI International Corp.

WARNINGS



When infant car seat/carrier is in the stroller, always fasten the Carrier Attachment Straps.



Do not lift stroller by using infant car seat/carrier handle.



The Perfect Match™ Guardrail is only to be used when attaching infant car seat/carriers. Do not use for any other purpose.



Discontinue use if fraying or damage is noted to Carrier Attachment Strap.



To assure safety for the baby, please refer to the manufacturer's instructions for use of your infant car seat/carrier.



If unable to firmly attach Perfect Match™ Guardrail (as per instructions), discontinue use and contact COMBI Customer Service.



If unable to securely attach infant car seat/carrier using the Perfect Match™ Guardrail, discontinue use and contact COMBI Customer Service.

 


Do not lean on or hang things from the Perfect Match™ Guardrail.

Using the Perfect Match™ Guardrail

CAUTION



Pull on each side of Perfect Match™ Guardrail to make sure that it is completely attached.

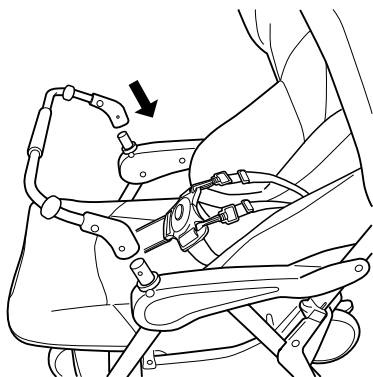

ATTACHING THE PERFECT MATCH™ GUARDRAIL


1. Remove standard guardrail and attach Perfect Match™ Guardrail by slipping it over the armrest pins until you hear the pins click into position.

  Keep Positioning Rings toward the ends of the guardrail.

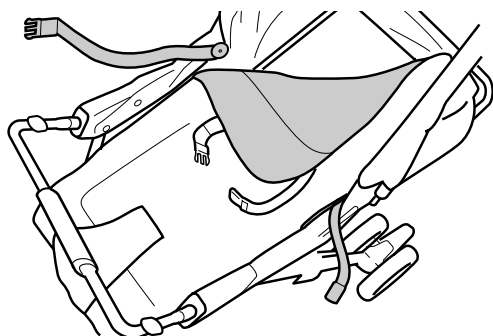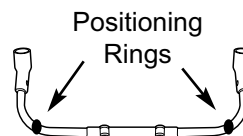

2. Recline the backrest to the middle position. Pull the Carrier Attachment Straps from behind the seat cushion and lay them over the armrests.

 Note: When using the Evenflo® infant car seat/carrier it may be necessary to leave the backrest in the upright position to provide the proper recline angle on the infant seat/carrier

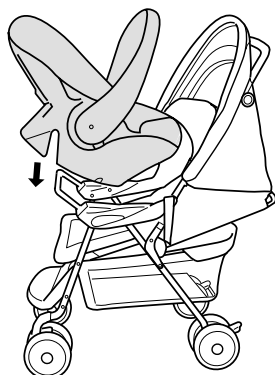


3. Hook carrier over the Perfect Match™ Guardrail and rotate until the foot end of infant car seat/carrier is solidly against the backrest of stroller.

Push the positioning rings snugly against each side of the car seat/carrier.



 4. Bring the Carrier Attachment Straps through the slots in the infant car seat/carrier and fasten the buckle. (If the strap is the incorrect length, adjust as needed. To adjust, thread fabric through each side of the buckle.)

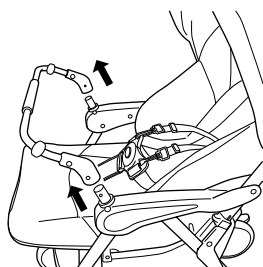

REMOVING THE PERFECT MATCH™ GUARDRAIL

1. Remove the infant car seat/carrier by reversing the above steps.
2. Squeeze the guardrail release buttons on both sides and lift up to release the guardrail.

Trade name and trademarks of Graco®, Century®, Evenflo® and Cosco® and Baby Trends are the property of their respective owners and no endorsement of or approval by them is intended or implied. All COMBI® Perfect Match™ strollers are compatible with specified models of the Graco®, Century®, and Evenflo® infant car seat/carrier models and the Cosco® Eddie Bauer as of the date this printing was prepared.



 
Copyright December 2002 COMBI International Corp.

Using the Infant Car Seat Cover and Canopy Cover



WARNING

Before using the infant car seat cover, please read and follow instructions from the infant car seat maker for safe use of your infant car seat.

ATTACHING THE INFANT CAR SEAT COVER

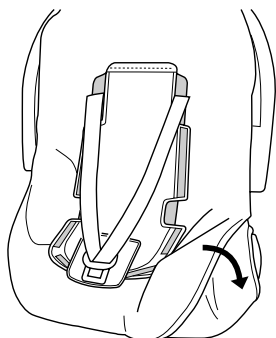

  1. Unbuckle the safety straps on the infant car seat and place the seat cover on it with the sewn portion of the fabric flap to the top.
2. Lift up the flap, pull the belts out. Feed the flap through the belts and fasten the flaps using the velcro strips.
3. Place the elastic fastening strap at the bottom of the cover, underneath the handle and around back of infant car seat/carrier to hold the seat cover in place.

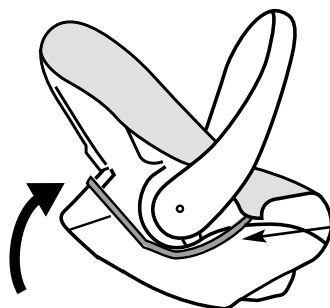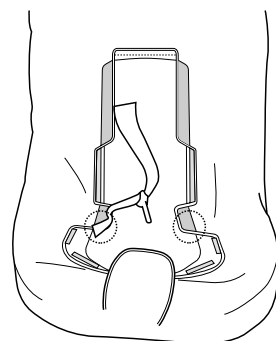

Note: Place the provided seat cover over the seat cover in your infant car seat. Do not remove the original seat cover.

 
Elastic fastening strap

REMOVING THE INFANT CAR SEAT COVER


Release the elastic fastening strap from the carrier and remove the seat cover.

ATTACHING THE INFANT CAR SEAT CANOPY

Note: The infant car/seat carrier canopy can be used with or without the original infant car/seat carrier canopy.

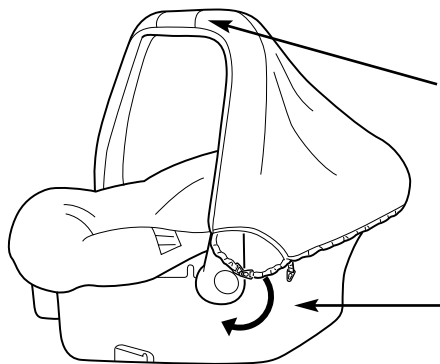

 1. Place the canopy cover over the handle of the infant car seat/carrier. The top of the handle should show through the small cut out in the cover.
2. Pull the elastic straps around and underneath the bottom of the handle.

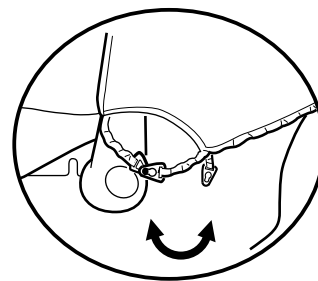

3. Clip the front and back elastic straps together to secure the canopy.

REMOVING THE INFANT CAR SEAT CANOPY

Unclip the elastic straps and pull the canopy off the infant car/seat carrier.

Routine Maintenance

STORE IN A COOL AND DRY AREA, especially in the summer. Do not store the stroller in the trunk of a vehicle.

SEAT CUSHION, INFANT CAR SEAT COVER/CANOPY

The seat cushion is machine washable. Set to gentle cycle using warm water and a mild detergent. Do not use bleach. Lay seat cushion and canopy and car seat covers flat to dry in shaded area. Do not machine dry. To prevent color fading, do not leave soaking for a long period. If the seat cushion is frayed or unraveling, discontinue use and call customer service for further instruction.

CANOPY, SEAT BELT, FIXED BASE SEAT, TRAVEL BAG, STROLLER PACK AND BASKET

Hand wash with a soft brush. Wipe out excess water with a dry cloth and dry in a shaded area. For stubborn dirt, dilute a mild detergent then apply directly to the dirty area. Wipe out the detergent.

MAIN BODY

Briskly wipe off any mud and dirt. To clean the body, wipe with a damp cloth then wipe out any traces of moisture on the body with a dry cloth. The main body might become moldy and musty if not wiped dry.

Excessive exposure to the sun could cause premature color fading of stroller plastic and fabric.

 
WHEEL ASSEMBLIES

After prolonged normal use, the wheels of your stroller may not swivel or turn as easily as when the stroller was new. This is usually due to a buildup of dirt in the swivel mechanism. Before adding lubrication, remove the swivel wheels by pressing the release button and wiping off mud and dirt. **Do not use soap and water to wash wheels.** Periodically check that all screws, bolts and nuts are tight.


Avoid lubricating the swivel wheels whenever possible. Excessive lubrication or adding lubricant to swivel wheels when new may cause them to develop a shimmy or wobble that may quicken their deterioration. Add silicone* to **the wheel assemblies** in small amounts.

Do not use cooking oil or WD-40 because oil attracts dust and would hinder the movement rather than improve it.

*Silicone spray is available in varying size cans at most hardware stores.

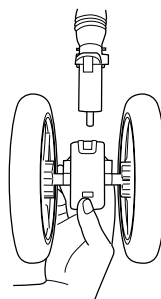

Front Swivel Wheel

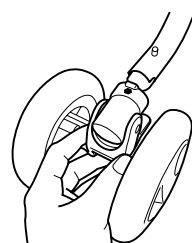 

Rear Wheel

Trouble Shooting

STROLLER WON'T FOLD

 
- Check to see that the seat belt is not caught in the side.
- Make sure front swivels are locked.
- Make sure the backrest is in the upright position.
- Remove all items from the basket.
- Remove your player from back pocket of the canopy.

DIFFICULT TO STEER/STROLLER PULLS TO ONE SIDE

- Remove any items hanging from the handle.
- Make sure weight in basket is distributed evenly.
- Check that the brakes are not in the locked position.
- Clean and add silicone to wheels, if necessary.

DIFFICULT TO GET UP CURBS

- Pulling stroller backward makes going up a curb difficult, and could pose a safety hazard. Pull the handle up to lift the rear wheels onto the curb, then pull the stroller backward until the front wheels clear.

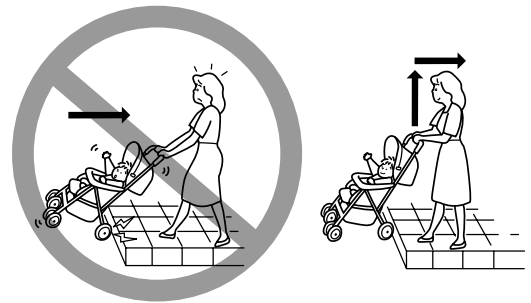

We have moved - Effective 2/7/04

Combi

Combi USA, Inc.

1962 Hwy 160 W, Ste. 100
Fort Mill, SC 29708

1-800-99-COMBI M-F 8:30am-5pm EST

803-548-3663 FAX

New SC
Sales Tax
is 5%



nts

Form

Ultra Savvy™ PM
2900 Series

Acoustic Canopy

Patent Pending

Perfect Match™ Stroller



If you would like to place an order for the following parts, please fill out the form below and return it to the following address:

~~COMBI International Corporation~~
~~Attn: Customer Service Department~~
~~189-199 Easy Street~~
~~Carol Stream, IL 60188~~

or ~~Fax this completed form to us at~~

~~630-871-0606~~

IMPORTANT: *We must have this information to process your order:*

Model Number: 2900 - _____ Color & Pattern of Fabric: _____

Located near the rear right leg.

Parts List for the Ultra Savvy™ PM (2900 Series) only.

	Price	Quantity	Total
1. Acoustic Canopy	\$ 40.00		
2. Should Pad Set	5.00		
2. Basket	20.00		
3. Seat Cushion	35.00		
4. Standard Guardrail	15.00		
5. Perfect Match™ Guardrail	10.00		
6. Stroller Pack	15.00		
7. Perfect Match™ Car Seat Cover	12.00		
8. Perfect Match™ Car Seat Canopy Cover	8.00		
9. Carrying Strap	12.00		
10. Acoustic Canopy Speaker Set	10.00		
11. Rear Wheel Assemblies (left and right sides)	20.00/set		
12. Front Swivel Wheel Assemblies (left and right sides)	20.00/set		
If you need to order other parts for your stroller, please call us toll-free at 1-800-992-6624. Shipping and Handling Fees: Add \$8.00 for orders \$34.99 and under. Add \$13.00 for orders \$35.00 and over. Note: Additional shipping charges will apply outside of the Continental U.S. Combi USA reserves the right to change pricing at any time.	Amount of Order		
	ADD Shipping & Handling		
	Sales Tax (7.25%) (IL residents only)		
	Total		

Ship To:

Customer Name

Street Address

Street Address

City, State, Zip

Telephone Number

☐ **Charge to my credit card:**

☐ VISA

☐ MASTERCARD

☐ AMERICAN EXPRESS

☐ DISCOVER

Card Number

Expiration Date

-

Cardholder's Signature

☐ **Check enclosed**

9/5/2003

COMBI International Corporation • 189-199 Easy St. • Carol Stream, IL 60188 • www.combi-intl.com
Customer Service 1-800-992-6624 • 10:00 a.m. - 5:00 p.m. Central Standard Time • Monday - Friday