
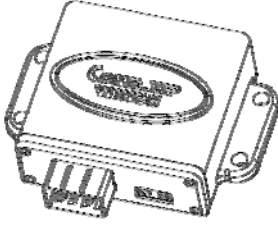


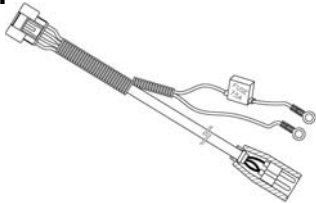


INSTALLATION GUIDE

FC CE0678

Part No.881262

<p>RF-24 Wireless Remote Control For Automotive Winches</p>	<p>1.</p> 	<p>2.</p> 	
<p>Wireless Control Kit includes:</p> <ol style="list-style-type: none"> 1. Wireless Receiver.881103 2. Switch Cord W/6P plugs Ø8 X 1500 mm 3. Wireless Transmitter.881102 4. Lithium Battery: 3V CR2032 5. Handsaver Strap 	<p>3.</p> 	<p>4.</p> 	<p>5.</p> 


I. Specifications

1. Transmission range: 15 ~ 27 m (50 ~ 90 ft)
2. Receiver operation voltage: 8 ~ 24 V
3. Receiver fuse current rating: 7.5 A
4. Protection: IP-66
5. Operating Temperature Range: -20°C ~ +70°C

II. Installation Guide


Step 1: Connect the wiring

- a. Connect the Switch cord W/6P plugs to the socket on the control pack.
- b. Slice the Red wire to the receiver fuse then connect to the positive (+) terminal of the battery.
- c. Connect the Black wire to the negative (-) terminal of the battery.

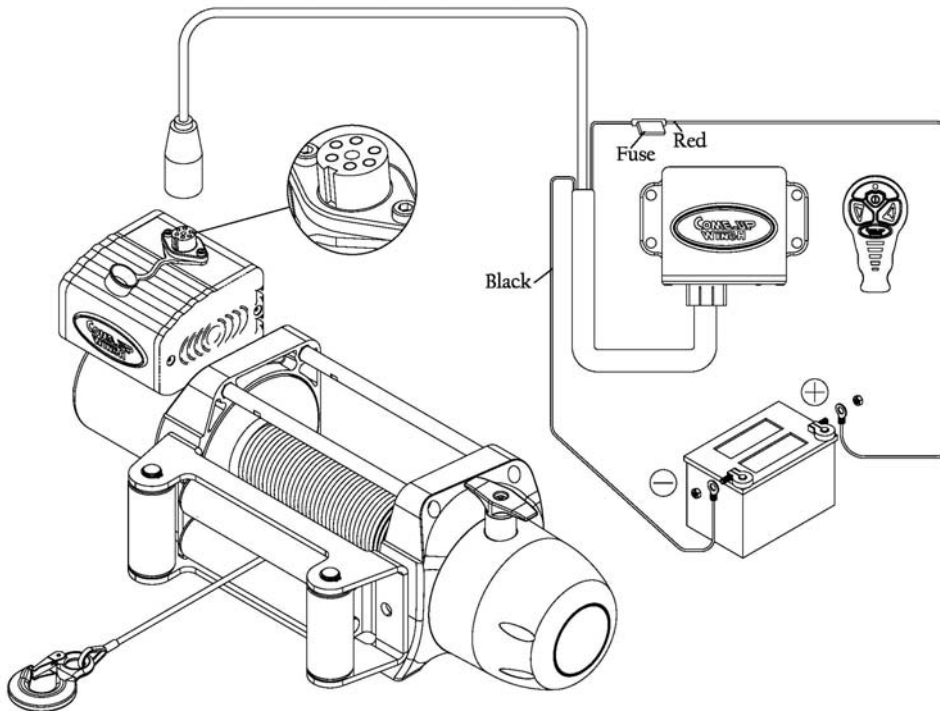

Step 2: Mount the Receiver

- a. The receiver should be mounted in a clear and dry location.
- b. Mount on a flat surface with 2 pieces of Ø7 mm mounting holes on each side of the receiver.

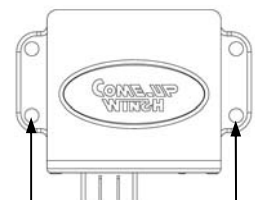


Minimum of one mounting hole each side

III Operation


1. Install and replace battery.

- Remove the three screws from the wireless transmitter.
- Separate the top section and remove the old battery and dispose it.
- Insert new battery and join the top section with the bottom section.
- Make sure to fasten the three screws.

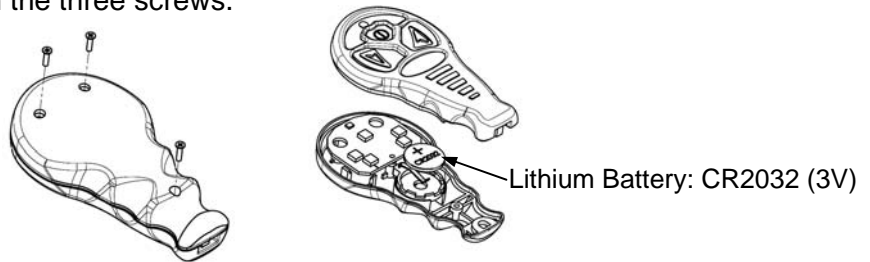

2. Start

- Turn on the Vehicle.
- Press the Power Buttons for 5 seconds until Green light comes on.
- Press the Cable In or Cable Out button after the Red light comes on.

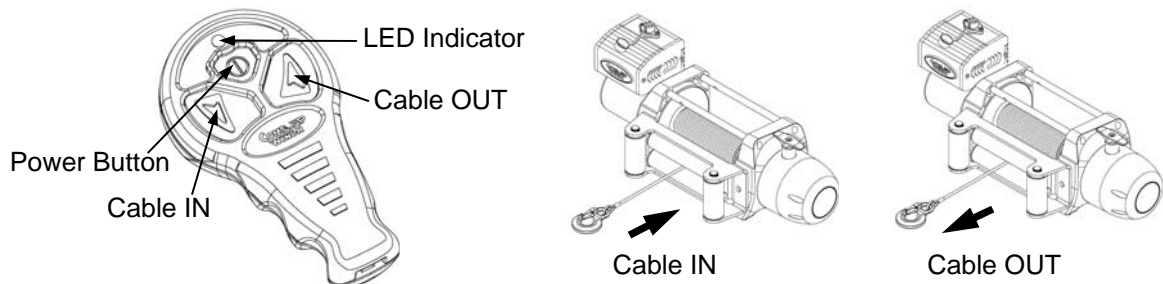

3. Stop

- The system will be automatically shutting down the operation after a silence of operation for 5 minutes.
- Press and hold the Power Button for 5 seconds for shutting down the operation.



4. Reset

- Press and hold the Programming Button for 5 seconds until the Red lights up.
- Press the Power Buttons for 5 seconds until the Red flashing.
- Press the Cable In or Out button until the Red lights on the receiver turns off.
- Reset is now completed. Please note only one remote can be reset for each receiver.

5. Notes

- The wireless remote control and handlebar trigger switch can be exchanged for activating the winch, but it takes about 10 seconds for exchanging.
- The flashing Red light shows batter low, the battery should be replaced immediately.
- Please note only one remote can be reset for each receiver

FCC and Industry Canada (IC) Warning:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF exposure warning

The equipment complies with FCC RF exposure limits set forth for an uncontrolled environment.

The equipment must not be co-located or operating in conjunction with any other antenna or transmitter.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.