

# Comfort Digisystem User manual

 SecureStream  
Technology

Comfort Digisystem  
**Conference  
Microphone  
DC10**



US / English

 **Comfort Audio**  
HEAR THE FUTURE

# User manual

<b>Table of Contents</b>	<b>Page</b>
1) Introduction to the Comfort Digisystem	3
2) Regulatory information	3
3) Functions of the Conference Microphone DC10	4
4) Functions - Charger unit	4
5) Included accessories	4
6) Getting started	5
7) Listening modes	5
8) Menu	6
9) More functions	8
10) Radio range and channels	10
11) Trouble shooting	10
12) Battery maintenance	10
13) Service and warranty	11
14) Technical data	11
15) Important safety instructions	12

## 1) Introduction to the Comfort Digisystem

Thank you for choosing Comfort Digisystem. The products are easy to use, whether you use a hearing aid or not.

Before using the product, please read this User manual carefully.

Using the Conference Microphone DC10 transmitter, the signal is transferred digitally, resulting in an excellent clear sound. The Comfort Digisystem products feature SecureStream Technology – a unique, patented digital technology allowing eavesdrop-secure radio transfer in real time.

### PSE (Perceptual Speech Enhancement)

The Conference Microphone DC10 is equipped with high-power sound processing that is used in the two omni modes (omnidirectional). The method is based on emphasising meaningful parts of speech. Please visit our website for more information on how this technology works.

## 2) Regulatory information

**Comfort Digisystem products are not to be used as a substitute to the hearing aids and should be used in accordance with the specifications and recommendations provided by your physician.**

**It is recommended that customers keep the volume control in the lowest position, when turning on the device. If not, the sound could potentially cause harm to the customers' hearing.**

**Comfort Audio is not liable for damages arising from usage of the equipment not in accordance with the instructions provided by Comfort Audio. Comfort Audio shall not be liable for performance problems and/or damages caused in any way by customer's modification of any part of the equipment.**

**Federal Communications Commission Statement,** This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: UOJ-DG03T

Contains FCC ID: R47F2M03MLA

**Industry Canada,** This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

IC ID: 6769A-DG03T

### ETL

Conforms to UL Standard for Safety for Audio, Video and Similar electronic apparatus – Safety Requirements UL 60065, Issue:2003/06/30 Ed:7 Rev:2007/12/11

Certified to CSA Standard for Safety for Audio, Video and Similar electronic apparatus – Safety Requirements CAN/CSA-C22.2 No. 60065:03, Issued 2003/04/01 Ed:1 Amendment 1:2006

Intertek ETL Control number: 4002355

### WARNING!

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.




### DANGER!

**DO NOT USE** the **COMFORT DIGISYSTEM** products if you have a **PACEMAKER** or other implanted device. The Comfort Digisystem products could cause the pacemaker or other implanted device to malfunction and cause serious injury or death.

### 3) Functions of the Conference Microphone DC10

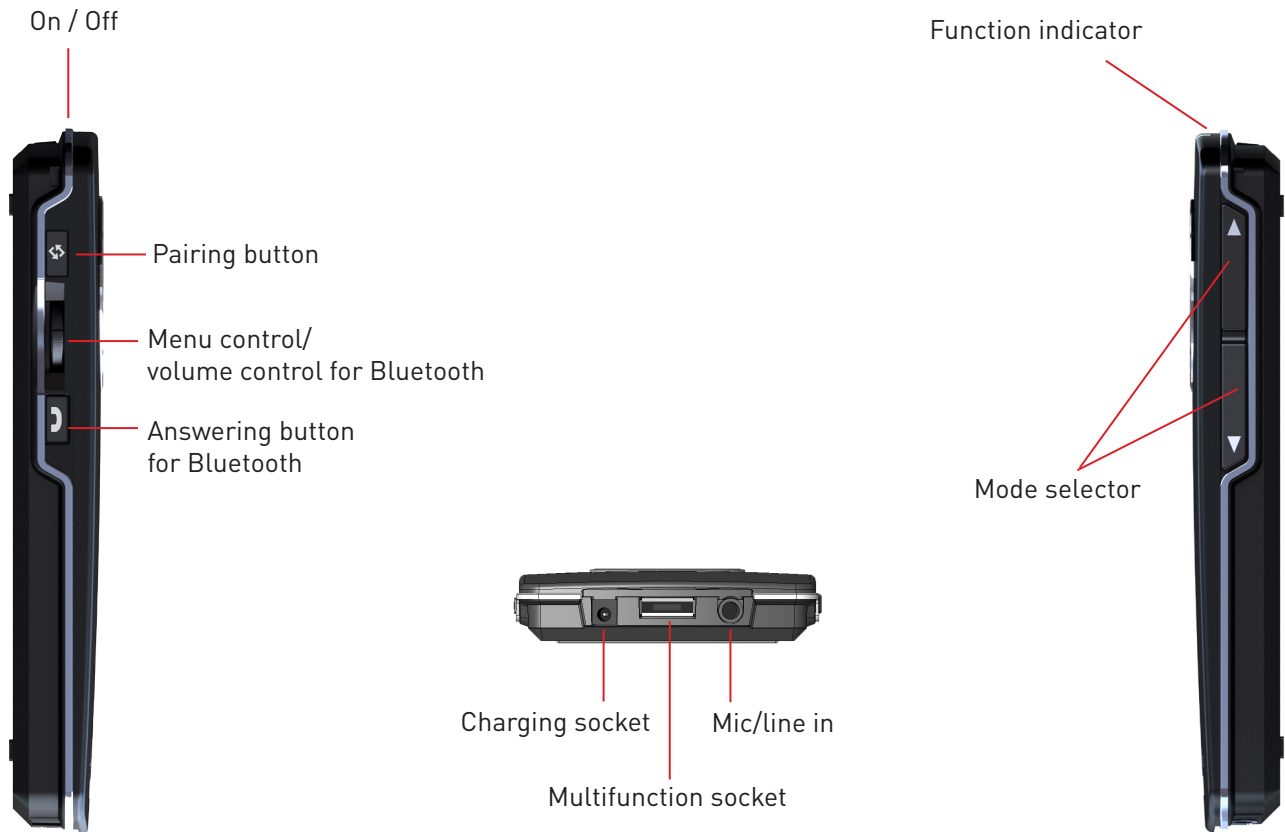

### 4) Functions - Charger unit

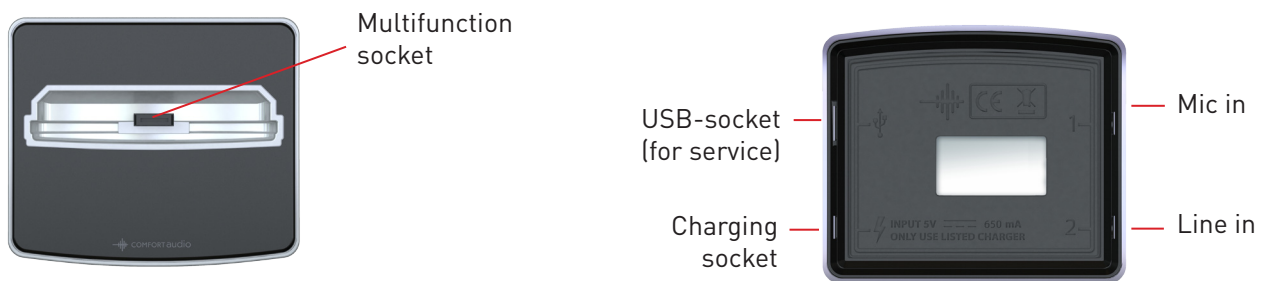

### 5) Included accessories

- Charger A11
- Charger unit
- Cable
- Split cable
- Necklace x 2
- Clip on microphone


For other accessories, please visit our website  
[www.comfortaudio.us](http://www.comfortaudio.us)

## 6) Getting started

### Charging

The Conference Microphone DC10 is chargeable. Charge the DC10 at least five hours before you use it for the first time. An empty battery is fully charged within five hours.

During charging, the function indicator shows red and a lightning bolt appears through the battery symbol in the display. Once the battery symbol is filled with green columns, the unit is fully charged and switches to automatic float charging.

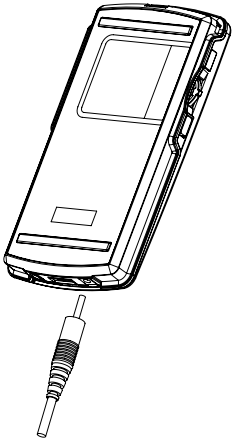

Connecting a charger to the Conference Microphone DC10

### Please note:

Only use the charger supplied by Comfort Audio. Changing the battery without the assistance of an authorized dealer will void the Limited Warranty.

### First time use

Switch on the transmitter by pressing the On/Off button for around two seconds.

Other functions are explained later in this manual.

## 7) Listening modes

The Conference Microphone DC10 always starts in Omni Mode Wide as default. The position is easily changed using the mode selector on the long side of the unit.

The various microphone positions are located in the following order:




- Zoom



- Omni – Narrow



- Omni – Wide  
(default position)

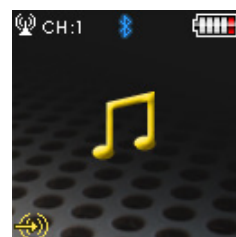


- Music

## 8) Menu

### Menu control

Three different selections can be made:

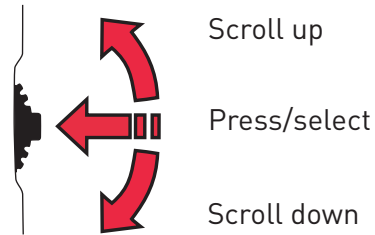

To access the menu, press the menu control:

#### Back

#### Communication

- ↳ *Channel*
- ↳ *Pair*
- ↳ *Bluetooth*

#### Sound

- ↳ *Treble and Bass*
- ↳ *Equalizer*
- ↳ *Advanced settings*

#### Inputs

- ↳ *Mic/Line in*
- ↳ *Charger unit*

#### Settings

- ↳ *Charge*
- ↳ *Language*
- ↳ *Key lock*
- ↳ *Name*
- ↳ *Factory reset*

#### Activate key lock

#### About

### Back (relates to both the main menu and submenus)

Here you can choose to return to the menu and to the main display.

### Communication

#### *Channel*

To use the receiver and the transmitter together, they must be set to the same channel. The transmitter and receiver are set to the default channel by the manufacturer.

This does not apply to units with both sender and receiver. In this case the transmitter/receiver are adjusted as described in chapter *Radio range and Channels*.

Change channel:

1. Choose **Channel** in the menu.
2. Choose transmitter or receiver (this applies only to units with both transmitter and receiver).
3. Select a new channel using the menu control.

Channel information is also given when the units are paired.

FFC (Free Frequency Check) indicates in green the suitable frequencies for the specific environment.

**Please note!** Switch off your other Digisystem transmitters for correct result.

FFC dB indicates the noise level in dB for each channel. The higher the (-)value, the lower the risk of interference.

#### *Pair*

To use a receiver and transmitter together, they must be paired. All transmitters and receivers are default paired at the factory and will work together.

**NB!** To prevent eavesdropping, a new code key must be generated and transmitted between the units by pairing.

Transmitting/receiving of pairing information along with a new code can be performed from any Comfort Digisystem unit with a display.

To pair units without a display, see section *Pairing (via pairing button)* for more information. Pairing information or a new code key can be received by several activated units.

### Pairing (via menu)

1. Choose **Communication - Pair**
2. Select **Receive info** on one unit. **Ready to receive pairing info** is shown in the display.
3. Select **New code** on the other unit; select **Yes**.
4. **Generate new code and send info?** is shown in the display. Select **Yes** (Now both the channel and the coding information have been sent, and sound transfer is eavesdrop-secure).
5. To pair another unit into your coded system, select **Send info** instead on one of your paired units.

### Pairing (via pairing button)



(The only way of pairing units without a display, with the pairing button)

You can activate the Pairing function via the pairing button.

1. One brief press of the button opens the *Pairing* menu.
2. Two brief presses activate the **Send info** function.
3. One long press activates the **Receive info** function.

### Units with both transmitters and receivers built in

Comfort Digisystem units with both transmitters and receivers built-in can be paired separately.

When opening the pairing menu, choose the concerning unit (transmitter/receiver). In units with both transmitters and receivers, the pairing button controls the transmitter.

The transmitter and receiver are paired separately in these units. The code key is always the same for the transmitter and the receiver when these are built-in in the same unit.

The easiest way to get the same code key in the whole Digisystem is to generate a new code key from the combined unit; in that way the built-in receiver gets the same code as the rest of the system.

### Bluetooth™

Here you can activate Bluetooth to be able to pair the Conference Microphone DC10 with a telephone or mobile. For detailed user information, see chapter *More Functions - Bluetooth*.

## Sound

### Treble and Bass

Treble and Bass control that allows simple adjustment of the unit's equalizer. Press the answering button to return to the menu.

### Equalizer

You can obtain fine tuning of the sound characteristics by changing the level at various frequencies, from low to high frequencies. The level can be increased or reduced at the mid-range frequencies 63 Hz, 125 Hz, 250 Hz, 500 Hz, 1 kHz, 2 kHz, 4 kHz and 8 kHz. Press the answering button to return to the menu.

### Advanced settings

Here you can adjust PSE compensation in the modes Omni – Wide and Omni – Narrow. Settings are saved separately for each mode.

The effect of increasing this value is that the volume will increase when the overall sound level in the environment raises. If the surrounding sound is too high, you can increase PSE compensation and the overall sound level is raised.

For someone who feels that the volume gets too loud in noisy environments, PSE compensation can be reduced.

On delivery, Omni – Wide is set to +2 and Omni – Narrow to +6.

## Inputs

### Mic/Line in

This is where the function for the mic/line in socket is selected:

- Line in (for TV or computer etc.)
- Microphone in (for an external microphone, e.g. a clip-on microphone)
- Headphones out (for testing the unit with headphones)

Here you can also adjust the level for Line in, Microphone in and headphones:

- Line gain
- Mic gain
- Headphones

When connecting a signal source to Line in (e.g. a TV), Line in mix is selected to also receive surrounding sound through the Conference Microphone DC10.

### Charger unit

Here you can adjust the level for Line in and Microphone in. Line in mix can also be selected for use with charger unit.

It is not possible to use both sockets at the same time. In this case an error-message is shown: **Disconnect from Mic/Line**.

## Settings

### *Charge*

Here you can activate the **Auto Power Off** function to shut down the unit automatically during charging. If **Auto restart** is activated, the unit will start automatically when the charger is disconnected or loses power.

### *Language*

For selection of menu language.

### *Key lock*

When this function is activated, all buttons are locked automatically as soon as the display fades out. It can be quickly activated; see the section *Activate key lock*.

### *Name*

Here the text to be displayed is selected. Choose symbols with the menu control. Select ✓ to save and ✕ to close without saving. To move the cursor during editing, use the symbols > and <.

### *Factory reset*

Resets the unit to the factory settings. Also deletes all pairing information (SST and Bluetooth). To prevent eavesdropping a new code key must be generated.

## Activate key lock

Here you can activate the key lock directly when the menu control has been pressed. Or you can press the menu control, followed by arrow up (mode selector) on the long side of the unit.

## About

Software information.

## 9) More functions

### Function indicator (LED)

The function indicator shows the unit's mode settings.

#### *Music position*

Flashes green once every three seconds.

#### *Omni position – Wide*

Flashes green twice every three seconds.

#### *Omni position – Narrow*

Flashes green three times every 3 seconds.

#### *Zoom position*

Flashes green four times every 3 seconds.

During charging the indicator shows red. When the charging is completed, the indicator shows green. The indicator stays red even when the battery is fully charged, if the unit is On during charge.

When the battery level gets low, the indicator flashes red. (Check the battery status on the display)

Once the unit has been set to receive pairing information, the indicator flashes green quickly.

When receiving pairing information, the indicator shows green for three seconds.

When sending pairing information, the indicator flashes red five times.

When the pairing mode for Bluetooth has been activated, the indicator shows blue.

When a Bluetooth telephone has been successfully connected, the indicator flashes blue five times.


During an ongoing telephone call, the indicator flashes blue every second second.

When **Clear settings** is selected, the indicator flashes blue ten times.

### Bluetooth

The Conference Microphone DC10 can be connected to two Bluetooth telephones at the same time. The person you are talking to can hear you through the microphones on DC10. His/Her voice is sent to a paired Digisystem receiver.



When Bluetooth is activated in the menu, the Bluetooth symbol is shown in the display . If only one telephone has been paired (and connected) with the unit, the figure 1 appears at the Bluetooth symbol in the display. If two telephones have been paired (and connected) the figure 2 appears instead.

Some DECT telephones are only connected during incoming or outgoing calls. In such cases, the unit can also display a 1, even if a mobile and a DECT telephone have been paired with the unit.

The DC10 supports both headset and handsfree profiles for Bluetooth. The profile is chosen automatically during pairing.

### Application

#### *Pairing with telephones:*

To pair the unit with telephones, see the section *Communication*.

#### *Activate Bluetooth:*

Enter the menu **Communication - Bluetooth - Enable**

#### *Bluetooth menu:*

When **BT only** is selected, the transmitter is active only when the telephone call is connected via Bluetooth or a headset cable is connected and activated.

*Pair Mobile* (**Communication - Bluetooth - Pair BT- Pair Mobile**) (code 1234) is used to pair a mobile with the DC10.

*Pair Phone* (**Communication - Bluetooth - Pair BT- Pair Phone**) (code 0000) is used to pair a landline-based, wireless (DECT) or mobile phone with the DC10.

Select **Clear settings** (**Communication - Bluetooth - Pair BT- Clear settings**) to clear all information about paired units.

**Please note:** After this the Bluetooth units have to be paired again (so that Bluetooth can work).

You can use **Mix level** to select how loud your own voice is during a phone call.

#### *Answer an incoming call:*

Press the answering button briefly (around 1/2 second), or answer with the telephone.

#### *End a call:*

Press the answering button briefly (around 1/2 second), or end the call with the telephone.

#### *Make a call:*

When you make a call, the sound is automatically transferred via the relevant Bluetooth connection (depending on the telephone's settings) to the DC10.

One of the Bluetooth connections (telephone, code 0000) has priority. This means that the voice dialling and re-dialling functions only work in this telephone if two telephones are connected.

- Voice dialling is activated by briefly pressing (approx. 1/2 second) the answering button.
- Re-dialling is activated by pressing the answering button approx. 2 seconds.

#### *Microphone position:*

During a telephone call, it is possible to select between the modes Omni – Wide, Omni – Narrow and Zoom, using the mode selectors on the long side of the unit.

#### *Volume control:*

During a telephone call, the volume can be adjusted by using the menu control on the long side of the unit (this adjusts the telephone's volume control). The display shows the current volume.

#### *When using land line/cordless and mobile phones at the same time*

On some land line/cordless telephones the Bluetooth connection is not active if no call is being made. This can cause a time delay before Bluetooth is connected for an incoming call. In certain cases the time delay can be avoided by pairing a cordless telephone in the "Pair Mobile" profile, but this can cause problems with initiating outgoing calls from the land line/cordless telephone. For more information, see "More Functions".

*Some mobiles require further adjustments to obtain sufficiently loud sound. For example increase the level manually in the media player's equalizer (SonyEricsson).*

### Charger unit

The Conference Microphone DC10 is delivered with a charger unit. Apart from charging the microphone, the unit can be connected to external sound sources. There are 2 sockets at the right hand short side of the charger unit, marked 1 and 2 (look underneath).

At socket 1, an external microphone can be connected. At socket 2, a stronger signal source, such as TV, MP3, radio etc. can be connected. It is not possible to use both sockets at the same time. In that case, an error-message is shown: **Disconnect from Mic/Line**. The level of these signal sources can then be adjusted under **Inputs – Charger unit**.

## 10) Radio range and channels

The transmitter and receiver have built-in antennas. The radio range between the units is around 100 feet (30 metres). This may however vary depending on the particular environment you are in.

Like all radio systems, Comfort Digisystem communicates on specific channels. If you use two transmitters on the same channel or a neighbouring one, there may be interference. Other electronic equipment can also interfere with radio transmissions.

The channel that you use in your country is perhaps not permitted abroad. Always get in touch with your hearing aid provider in your country in order to find out which channels are permitted in different countries.

Comfort Audio is not liable for unauthorized use of radio waves, such as, but not limited to: interferences with police communication, or strategic communication, military installations etc.

## 11) Trouble shooting

### **The transmitter and receiver do not start**

Charge the transmitter and receiver. Remember to press the On/Off button down for 2 seconds to switch the unit on. Check that the charger is connected to the plug socket.

### **Poor speech intelligibility**

The distance between the transmitter and the receiver may be too long. The range is around 30 metres. The distance between the microphone and the person who is talking may also be too long; move the microphone nearer to the person talking.  
Try to change channel/environment.

### **Poor range and interference**

In some environments involving, e.g., concrete, iron or sheet metal structures, the range may be reduced. There may also be equipment nearby causing interference. Change channel.

### **No sound**

Check that the transmitter and receiver are set to the same channel.

### **Loud hissing noise (no sound transfer)**

Check that the units are paired.

### **The unit will not start during charging**

Disconnect the charger. Check the selection **Auto power off** under **Settings** in the menu.

## 12) Battery maintenance

The rechargeable products in the Digisystem series are equipped with Li-Pol batteries, ie. the same type of batteries used for most mobile phones and laptop computers on the market today. These types of batteries are able to store large amount of energy in relation to their weight and volume.

The capacity of Li-Pol batteries diminishes during its life cycle. The battery type has no "memory effect", which would mean that you need fully discharge the battery before charging to minimize capacity loss. This means that you can just as well charge the battery often and little, as opposed to seldom and much. Special charging circuits in the Digisystem products protect batteries from overcharging.

The capacity of the Li-Pol batteries deteriorates faster when they subjected to deep discharge. Therefore, all products of the Digisystem are fitted with a function that automatically turns off the product well before deep discharge occurs. Deep discharge may still happen as the battery has a certain self-discharge. A product that is fully or partly charged will with enough time reach a state when the battery deep discharges, unless the charger is connected. To avoid this we recommend that the battery is charged at least every 6 months.

## 13) Service and warranty

### Warranty extension

Comfort Audio Inc. warrants this product sold to the first end user (buyer) against defects in materials or workmanship for the time period and as set forth below. Pursuant to this Limited Warranty, Comfort Audio will, at its own option, either (a) repair the product or the parts determined to be defective, using new or refurbished parts, or (b) provide you with a new, or at our option, a refurbished unit. The repaired or exchanged unit is under warranty for the remainder of the original product's warranty period. The warranty does not include any other direct, indirect or consequential damage or loss, or any third party damages or losses.

This Limited Warranty is for a period of two years from the date of purchase as indicated by an original receipt from a Comfort Audio authorized retailer, dispenser or medical facility. Headphones and earphones have a warranty of 30 days from purchase.

### How to make a warranty claim

For warranty service, you must contact the Comfort Audio Customer Service listed below to obtain an RMA (Return Merchandise Authorization) number. A description of the defect, your name, address and telephone number is required.

Ship the product freight prepaid via UPS or its equivalent, including a copy of the original purchase receipt, any cables, earphones and base/charger unit, in its original packaging or one that offers equal protection. Insure your shipment for loss or damage. Comfort Audio accepts no liability in case of damage or loss en route to our offices.

### This Limited Warranty does not cover

Damage from misuse, neglect or normal wear and tear. Products that have been modified. Products purchased or serviced outside the territory. If you purchased your product outside the territory, see your retailer for warranty information.

### Product Registration

Please complete, sign and mail the Product Registration Card packed with your unit. It will make it easier to contact you if it ever would be necessary.

Comfort Audio Inc.  
350 South Northwest Hwy, Ste 300  
Park Ridge, IL 60068 USA

To contact the Comfort Audio Customer Service,  
call (847) 656 5450  
or by e-mail [usa@comfortaudio.com](mailto:usa@comfortaudio.com)

## 14) Technical data

Type of transmitter:	SST – SecureStream Technology
Range:	Approx. 100 feet (30 m)
Dimensions:	4,53 x 2,44 x 0,55 inches (115 x 62 x 14 mm)
Weight:	3,17 oz (90 g)
Frequency range:	904 - 927 MHz
Antenna:	Built-in
Operating time:	Up to ten hours
Battery:	Chargeable Li-Polymer
Charging time:	Approx. five hours
Microphones:	Combination of four built-in microphones, directional and omnidirectional
Connections:	Mic/Line in, socket for testing with headphones



Conforms to ANSI/UL Std.60065

Certified to CAN/CSA Std.C22.2 No.60065:03

The weights, dimensions, capacities, performance ratings and other data in Comfort Audio's brochures, prospectus, circulars, advertisements, price lists and instructions sheets are mentioned only as general information. They are only approximate and shall not bind Comfort Audio.

## 15) Important safety instructions - Read these before using your product

Not following the Important Safety Instructions, or trying to repair and/or tampering the Equipment without the assistance of an authorized technician will void the Limited Warranty. Comfort Audio is not liable for any damages arising out of such unauthorized uses, repairs, and/or tampering.

**Please, heed all warnings. Read, keep and follow all the safety instructions below.**

### **WARNING!**

- Too high a volume can seriously damage your hearing.
- The necklace should not be used if there is a risk of getting stuck, e.g. in a machine or other objects.
- Keep small parts out of reach of children and animals. Choking hazard if swallowed.
- There is a danger of explosion if the battery is incorrectly replaced.

### **Follow these instructions:**

- 1) Do not use this product near water or in moist environments of any kind.
- 2) The product shall not be exposed to excessive heat such as sunshine, fire or the like.
- 3) Do not use the product near any heat sources such as radiators, heat registers or other apparatus that produce heat (e.g. amplifiers) and do not leave products, e.g. in a warm car.
- 4) Do not disassemble the product.
- 5) You must not change the battery yourself; please contact your point of purchase.
- 6) Do not defeat the safety features of the polarized or grounded plug. A polarized plug has two blades with different widths and will only fit into the socket one way. A grounded plug has a third grounded prong. The asymmetrical blades and the grounded prong are there for your safety. If the provided plug does not fit into your outlet, please consult a qualified professional/electrician for replacement of your outlet.
- 7) Never use a transmitter or receiver set to a non-permitted frequency. Check with the frequency authority in the country where the equipment is to be used.
- 8) The products include radio transmitters. Do not use products where it is not allowed to use electronic equipment, e.g. on airplanes.
- 9) Never charge product in closed, unaired spaces such as handbags, cases or other closed storage bags.
- 10) Ensure that the power cord is not pinched or damaged in any other way.
- 11) Unplug the product during lightning storms or if it is not used for a long period of time.
- 12) Always start listening at a low volume and then adjust it to a comfortable level.
- 13) Clean only with a dry cloth.
- 14) Only use the batteries and power supply or other accessories specified by Comfort Audio.
- 15) The product contains sensitive electronic equipment and must be handled carefully.
- 16) If the product does not operate normally, or if it has been damaged in any way, service is required. E.g. if the power-supply cord or plug is damaged, if the product has been in contact with water or if the product has been exposed to external impact, for instance been dropped. Refer all servicing to authorized service personnel.
- 17) Should the product break open because of damage, service should only be done by qualified service personnel.

*Subject to change*



**Manufactured by:**

**Comfort Audio AB**

Comfort Audio AB, Box154, SE-301 05 Halmstad, Sweden  
Tel. +46 (0)35 260 16 00 Fax +46 (0)35 260 16 50

**Local US office:**

Comfort Audio Inc, 350 South Northwest Hwy, Ste 300  
Park Ridge, IL 60068 USA  
T (847) 656 5450  
[usa@comfortaudio.com](mailto:usa@comfortaudio.com) [www.comfortaudio.us](http://www.comfortaudio.us)