




























































# Contents





<b>MENU MAP </b> .....	<b>11</b>
<b>SAFETY </b> .....	<b>17</b>
 <i>Traffic Safety</i> .....	17
 <i>Do Not Use in Hospitals</i> .....	17
 <i>Do Not Use in Airplanes</i> .....	17
 <i>Do Not Use in Gasoline Stations</i> .....	17
 <i>Do Not Use in Explosive Sites</i> .....	18
 <i>Operating Environment</i> .....	18
 <i>Standard Usage</i> .....	18
 <i>Accessories</i> .....	18
 <i>Appropriate Maintenance</i> .....	18
 <i>Emergency Calls (SOS)</i> .....	18
 <i>Use with proper care to reduce electromagnetic interference (EMI)</i> .....	19
<b>GETTING STARTED </b> .....	<b>20</b>





	PHONE OVERVIEW.....	20
	INSTALLATION & REMOVING .....	21
	<i>Installing the battery</i> .....	21
	<i>Removing the battery</i> .....	21
	<i>Installing the SIM Card</i> .....	22
	<i>Removing the SIM Card</i> .....	22
	<i>Connecting the Charger</i> .....	23
	<i>Removing the Charger</i> .....	24
	KEYPAD DESCRIPTION .....	24
	ALPHANUMERIC MAPPING .....	26
	DISPLAY INDICATORS .....	28
	<b>BASIC OPERATION</b>  .....	<b>29</b>
	<i>Making a Call</i> .....	29
	<i>The SIM Card</i> .....	29
	<i>Battery and Charger</i> .....	29
	<i>Turning on the Phone</i> .....	30
	<i>PIN and PIN2 (4 to 8 digits)</i> .....	30
	<i>PUK1 and PUK2 (8 digits)</i> .....	31
	<i>Calling</i> .....	31
	<i>Dialing Emergency Numbers</i> .....	31









	<i>Changing an Entry</i> .....	31
	<i>Answering a Call</i> .....	31
	<i>Recent Calls</i> .....	32
	<i>Speed Dial</i> .....	32
	<i>Holding a Call</i> .....	32
	<i>Multi-party Calls</i> .....	33
	<i>Voice-activated Dialing</i> .....	33
	<i>Method of Input</i> .....	34
	1. T9 English .....	35
	<b>MENU FUNCTION</b>  .....	<b>37</b>
	<b>PHONE BOOK</b> .....	<b>37</b>
	<i>Search</i> .....	38
	<i>Add Entry</i> .....	38
	<i>Edit</i> .....	39
	<i>Delete</i> .....	39
	<i>Copy</i> .....	40
	<i>P.Book Setting</i> .....	40
	1. Caller Group.....	40
	2. Sorting.....	40
	3. Display SIM Records .....	41
	<i>Memory</i> .....	41

 MESSAGES.....	錯誤! 尚未定義書籤。
 SMS.....	錯誤! 尚未定義書籤。
1. Write.....	錯誤! 尚未定義書籤。
2. Inbox.....	錯誤! 尚未定義書籤。
3. Outbox.....	錯誤! 尚未定義書籤。
4. Delete.....	錯誤! 尚未定義書籤。
5. Free Count.....	錯誤! 尚未定義書籤。
6. Setting.....	錯誤! 尚未定義書籤。
◎ Pre-Message.....	錯誤! 尚未定義書籤。
◎ SMS Center.....	錯誤! 尚未定義書籤。
◎ Valid Time.....	錯誤! 尚未定義書籤。
◎ Auto Display.....	錯誤! 尚未定義書籤。
◎ Status Report.....	錯誤! 尚未定義書籤。
 Broadcast.....	錯誤! 尚未定義書籤。
1. Read.....	錯誤! 尚未定義書籤。
2. Filter.....	錯誤! 尚未定義書籤。
3. Auto Display.....	錯誤! 尚未定義書籤。
 VOICE MAIL.....	錯誤! 尚未定義書籤。
1. Call V-mail.....	錯誤! 尚未定義書籤。
2. Voice Mail#.....	錯誤! 尚未定義書籤。
 AUDIO PROFILES.....	57
 Adjust.....	57
1. Activate.....	57
2. Ringtone and Volume.....	57
3. Key Sound.....	57
4. Crescendo.....	57
5. SMS Rec Tone.....	57







6. Vibrator .....	58
7. Service Tone.....	58
8. Auto Answer.....	58
9. Rename .....	58
 CALL LISTS.....	58
 <i>Missed Call</i> .....	58
 <i>Incoming</i> .....	59
 <i>Outgoing</i> .....	59
 <i>Call Info</i> .....	59
1. Last Call.....	59
2. Total Calls.....	59
3. 1-minute Beep.....	59
4. Charge Info.....	59
⊙ Total Charge.....	60
⊙ Max Charge.....	60
⊙ Unit Price.....	60
 SETTINGS .....	61
 <i>Personal</i> .....	61
1. Language.....	61
2. Greetings.....	61
3. Power On/Off Melody.....	61
4. Folder On/Off Melody.....	61
5. Hot Key Setting.....	61
6. Own Number.....	62
 <i>Clock</i> .....	62
1. Set Date.....	62
2. Set Alarm.....	63
3. Power Off.....	63





 <i>Screen</i> .....	63
1. Standby mode.....	63
2. Color Theme.....	63
3. Network Name.....	63
4. Show Clock.....	63
5. Standby LED.....	63
6. Sub LCD Sleep Time.....	錯誤! 尚未定義書籤。
 <i>Call Setting</i> .....	64
1. Call Waiting.....	64
<input type="radio"/> Activate.....	64
<input type="radio"/> Cancel.....	64
<input type="radio"/> Status.....	64
2. Divert.....	64
<input type="radio"/> Forward to.....	64
<input type="radio"/> Unreachable.....	64
<input type="radio"/> If No Reply.....	64
<input type="radio"/> All Calls.....	64
<input type="radio"/> If Busy.....	65
<input type="radio"/> Status.....	65
<input type="radio"/> Cancel All.....	65
3. Answer Mode.....	65
4. Present Number.....	65
 <i>Network</i> .....	65
1. Select Method.....	65
2. New Search.....	65
3. Select Sequence.....	66
 <i>Security</i> .....	66
1. Bar Calls.....	66
<input type="radio"/> All Out.....	66
<input type="radio"/> Out Intl.....	66
<input type="radio"/> Out X Home.....	66

⊙ All In.....	66
⊙ In If Abr.....	66
⊙ Status.....	66
⊙ Cancel All.....	66
2. PIN Check.....	67
3. PIN Change.....	67
4. PIN2 Change.....	67
5. Fixed Numbers.....	67
6. SIM Lock.....	67
⊙ Set Lock.....	67
⊙ Change PCK.....	67
 <i>Reset Setting</i> .....	67
 MMEDIA.....	68
 <i>File Manager</i> .....	68
⊙ Open File.....	68
⊙ Send MMS.....	68
⊙ Save as Wallpaper.....	68
⊙ Save to P.Book.....	68
⊙ Rename.....	68
⊙ Delete.....	68
⊙ Delete all file.....	68
⊙ File Sort.....	68
By Name.....	68
By Date.....	69
By Type.....	69
⊙ View.....	69
List.....	69
Icon.....	69
⊙ Detail Info.....	69
 <i>Image</i> .....	69

 <i>Audio</i> .....	69
 <i>Free Space</i> .....	69
 <i>Game</i> .....	69
1. Game .....	69
⊙ Puzzle .....	70
⊙ Hostage Salvation .....	70
⊙ Reversi.....	70
⊙ Coin Elf .....	71
 <i>Tone Edit</i> .....	71
1. Play .....	71
2. Edit.....	71
⊙ Keypad functions.....	71
⊙ Edit .....	72
3. Reset.....	72
4. Tempo.....	72
5. Instrument .....	73
6. Rename .....	73
 CALCULATOR .....	73
 <i>Calendar</i> .....	74
1. <i>View Day Note</i> .....	74
2. <i>Make Note</i> .....	74
3. <i>Erase Note</i> .....	75
4. <i>View All Notes</i> .....	75
5. <i>Go To Date</i> .....	75
 <i>Exchange Rate</i> .....	75
 <i>Voice Memos</i> .....	76
1. Record.....	76
2. Playback .....	76



⊙ Playback .....	76
⊙ Delete One .....	76
⊙ Label .....	76
3. Options .....	76
⊙ Self Only .....	76
⊙ Other Party Only .....	76
⊙ Both .....	77
 <i>World clock</i> .....	77
⊙ Set Location .....	77
Automatic .....	77
Manual .....	77
 <b>WAP</b> .....	<b>77</b>
 <i>Access WAP</i> .....	77
 <i>Favorites</i> .....	78
1. New Bookmark .....	79
2. New Folder .....	79
3. Delete all .....	80
4. Hotkeys .....	80
 <i>Go To URL</i> .....	80
 <i>WAP Settings</i> .....	80
1. Connection .....	81
⊙ Add New .....	81
Name .....	81
Homepage .....	81
IP Address .....	81
Bearer .....	81
User name .....	81

Password .....	81
DNS IP address .....	81
Linger Time .....	82
APN .....	82
Security .....	82
Store .....	82
⊙ Add from List .....	82
中華 WAP .....	82
台哥大 WAP .....	82
遠傳 WAP .....	82
泛亞 WAP .....	82
東信 WAP .....	82
2. Color Scheme .....	82
3. Clear Cache .....	82
4. Reset all .....	82
 GPRS Setting.....	83
1. Permanent.....	83
2. Needed .....	83
 STK( SIM TOOLKIT ). .....	83
<b>BATTERY</b>  .....	<b>84</b>
<b>CARE AND MAINTENANCE</b>  .....	<b>85</b>
<b>FCC Regulation .....</b>	<b>72</b>
<b>FCC RF Exposure Information .....</b>	<b>73</b>

# Menu Map

## **P. Book**

- Search
- Add Entry
- Edit
- Delete
- Copy
- P. Book Setting
  1. Caller Groups
  2. Sorting
  3. Display SIM Records
- Memory Status

## **Messages**

- SMS
  1. Write
  2. Inbox
  3. Outbox
  4. Delete
  5. Free Count
  6. Setting
- ⊙ Pre-Message
- ⊙ SMS Center
- ⊙ Valid Time
- ⊙ Auto Display
- ⊙ Status Report
- Broadcast
  1. Read
  2. Filter
  3. Auto Display
- Voice Mail
  1. Call V-mail

2. Voice Mail#

## Profile

- Typical
  - Silent
  - Outdoor
  - Handsfree
  - Meeting
  - Customer
1. Activate
  2. Ringtone and Volume
  3. Key Sound
  4. Crescendo
  5. SMS Rec Tone
  6. Vibrator
  7. Service Tone
  8. Auto Answer (Only in Handsfree mode)
  9. Rename (Only in Customer mode)

## Call Lists

- Missed Call
  - Incoming
  - Outgoing
  - Call Info
1. Last Call
  2. Total Calls
  3. 1-minute Beep
  5. Charge Info
- ⊙ Total Charge
  - ⊙ Max Charge
  - ⊙ Unit Price

## Settings

- Personal
1. Language

- 2. Greetings
- 3. Power On/Off Melody
- 4. Folder On/Off Melody
- 5. Hot Key Setting
- 6. Own Number
- Clock
  - 1. Set Date/Time
  - 2. Set Alarm
  - 3. Power Off
- Screen
  - 1. Standby mode
    - ⊙ Pic & Text
    - ⊙ Digital Clock
  - ⊙ Calendar
  - 2. Color Theme
  - 3. Network Name
  - 4. Show Clock
  - 5. Standby LED
- Call Setting
  - 1. Call Waiting
    - ⊙ Activate
    - ⊙ Cancel
    - ⊙ Status
  - 2. Divert
    - ⊙ Forward to
    - ⊙ Unreachable
    - ⊙ If No Reply
    - ⊙ All Calls
    - ⊙ IF Busy
    - ⊙ Status
    - ⊙ Cancel All
  - 3. Answer Mode
    - ⊙ Normal answer

- ⊙ Any key answer
- ⊙ Folder answer
- 4. Present Number
- Network
- 1. Select Method
- 2. New Search
- 3. Select Sequence
- Security
- 1. Bar Calls
- ⊙ All Out
- ⊙ Out Intl
- ⊙ Out x Home
- ⊙ All In
- ⊙ In If Abr
- ⊙ Status
- ⊙ Cancel All
- 2. PIN Check
- 3. PIN Change
- 4. PIN2 Change
- 5. Fixed Numbers
- 6. SIM Lock
- ⊙ Set Lock
- ⊙ Change PCK
- Reset Setting

## **MMedia**

- File Manager
- 1. Image
  - ⊙ Open file
  - ⊙ Save as Wallpaper
  - ⊙ Rename
  - ⊙ Delete file
  - ⊙ Delete all files
  - ⊙ File Sort

- ⊙ View
- ⊙ Detail Info
- 2. Audio
  - ⊙ Open file
  - ⊙ Rename
  - ⊙ Delete file
  - ⊙ Delete all files
  - ⊙ File Sort
  - ⊙ Detail Info
- 3. Free Space
  - Tone Edit
    1. Play
    2. Edit
      - ⊙ Keypad function
      - ⊙ Edit
      - ⊙ Save
    3. Reset
    4. Tempo
    5. Instrument
    6. Rename
  - Game
    1. Hostage Salvation
    2. Reversi

## PIM

- Calculator
- Calendar
  1. View DayNote
  2. Make Note
  3. Erase Note
  4. View All Notes
  5. Go To Date
- Exchange Rate
- Voice Memos

- 1. Record
- 2. Playback
  - Playback
  - Delete One
  - Rename
- 3. Options
  - Self Only
  - Other Party Only
  - Both
- World Clock
- Auto
- Manual

## WAP

- Access WAP
- Favorites
  - 1. New Bookmark
  - 2. New Folder
  - 3. Delete all
  - 4. Hotkeys
- Go To URL
- WAP Setting
  - 1. Connection
- Add New
- Add from List
  - 2. Color Scheme
  - 3. Clear Cache
  - 4. Reset all
- GPRS Setting
  - 1. Permanent
  - 2. Needed

## STK



## Safety

Read carefully the following important safety and regulations before you use the phone. Failure of obeying these instructions may lead to suspension of mobile telephone services, or broke the law. Most of all, it will cause your personal in danger. Always adhere to the following:



### **Traffic Safety**

Avoid using a hand-held phone while driving. For your safety, you should park the vehicle before making or answering a call. Using a hand-free car kit or earpiece is recommended.



### **Do Not Use in Hospitals**

The use of mobile telephones may interfere with the functionality of some medical devices in the hospital. Check the law and regulations or posted notices. To avoid electromagnetic interference (EMI) with medical devices, please power off your phone when it is necessary.



### **Do Not Use in Airplanes**

The use of mobile phones in an aircraft may disrupt radio transmissions and signals. This, therefore, can be dangerous to the operation of the aircraft. Be sure to turn off your mobile phone when on board an aircraft. It is recommended to detach the battery pack from the handset to prevent accidentally turning on the phone by miss-touching the power key.



### **Do Not Use in Gasoline Stations**

It is advisable that users switch off their mobile phones when refueling is in process. It is dangerous that any spark may cause an explosion or fire.



### **Do Not Use in Explosive Sites**

The use of mobile phones should be restricted in potential explosive atmosphere sites such as chemical plants, fuel storage, or the area where blasting operations are in process.



### **Operating Environment**

Mobile radio transmitting equipment, including mobile phones, may be subject to interference and may cause danger. Therefore, it is recommended that you follow any special regulations in any area. Switch off your mobile phone whenever the use is forbidden.



### **Standard Usage**

For the satisfactory operation of the mobile phone, it should be used in a normal operating position. Do not touch the antenna while making a call.



### **Accessories**

This phone can only be connected to approved accessories and batteries. Do not connect the phone to incompatible products.



### **Appropriate Maintenance**

Only qualified and authorized personnel should service the mobile phone. Faulty installation or repair may be hazardous.



### **Emergency Calls (SOS)**

An emergency call "112" can be made from the mobile phone under any circumstances, and even the phone is locked. When making an emergency call, you must be sure to give all the necessary information, such as your name, your mobile phone number, the location and the crisis situation, as accurately as

possible. In order to deliver the sufficient information to a rescue institute, do not disconnect your phone immediately.

 


**Use with proper care to reduce electromagnetic interference (EMI)**

This product has passed the inspection of the Directorate-General of Telecommunications, Ministry of Transportation and Communication. The highest reported SAR values which are: Head 1.15 W/kg; Body-worn 0.211 W/kg are lower than the standard value at 1.6 W/kg, maximum.

# Getting Started

## Phone Overview

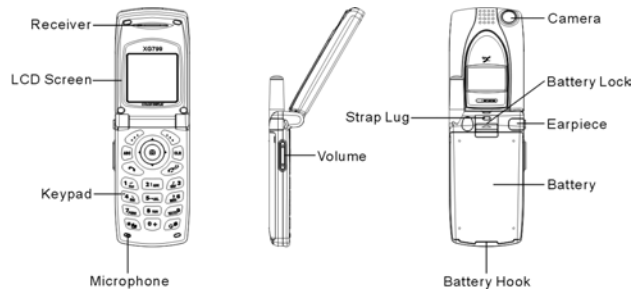

 
**Warning:** Please do not detach any parts and only use manufacturer original component to keep the quality call phone.

## Installation & Removing



 
### Installing the battery

1. Press the lock on the bottom and then slide the battery cover backward and lift up battery cover.
2. Hold the battery and wedge it under two up corners and press the battery pack into place. Make sure that golden connector are facing the connector on the phone.
3. Place the cover into the track and slide it forward and lock with cover latch.

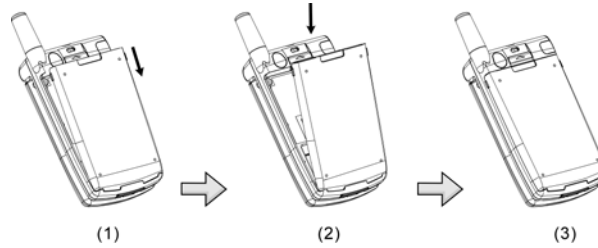

### Removing the battery

1. Turn phone off and repeat the above item 1 to open the battery cover.
2. Lift up the bottom of the battery pack and pull battery by sliding backward to detach the battery from phone.
3. Repeat above item 3 to recover the battery cover.

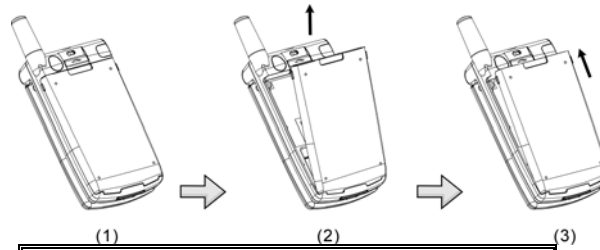 


**Important! : Risk of explosion if battery is replaced by an incorrect type.**



 
### Installing the SIM Card

1. Power off the phone and remove the battery. Make the SIM card golden contact points face downward and the oblique-angle edge align to up left.
2. Hold the SIM around 30° into SIM card slot and slight push the SIM card bottom into the SIM card holder. Place the card inside the SIM holder completely and make sure the SIM latch fixes SIM card.

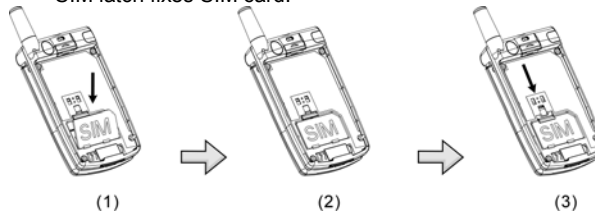


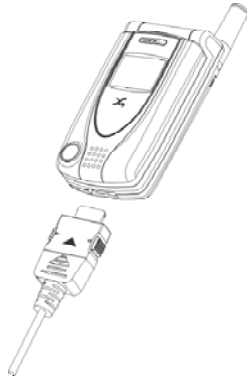 
### Removing the SIM Card

Power off the phone and remove the battery. Press down the SIM latch and slide SIM upward to remove SIM from holder and slot as shown in the figure.

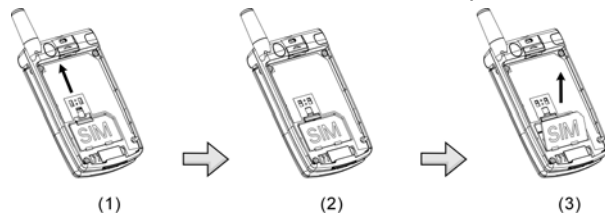

### Connecting the Charger

To connect the travel charger to the mobile phone, you should install the battery first. Follow the travel charger instruction, and plug the connector with the  sign upside into mobile phone. See below figure.



**Note:**







1. Do not remove your battery or SIM card while charging.
2. Use a compatible or appropriate charger for the phone.
3. Manipulate the charger carefully, the connector might be damage easy.




 
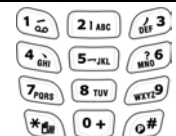 

 


## Removing the Charger



 
When removing the charger from battery, disconnect the plug from the electrical outlet. Press the release buttons on two sides of the connector simultaneously and pull out the connector from mobile phone.

## Keypad Description

Button	Description
	Accept call and call hold. Affirmative inputs: OK, Select, Call, save and Reply.
	Negative inputs: End, No, Cancel, Abort, Quit. As call is in progress, press this key to mute the microphone so the other party would not listen to your voice. Press again to activate Microphone. In standby mode, press the key to fast access Inbox, Profile, hot key setting and Softkey switch.
	Affirmative inputs OK. In standby mode, press the key to connect to the internet to view and access Web and WAP pages. (WAP connection should be preset in advance.) Press the key to activate the voice recording as call in progress.
	Press this key to dial out a call. In standby mode, press this key to view the list of the last 30 phone numbers of incoming, outgoing and missed calls.
	End a call. Press and hold this key to turn on/off your phone.
	Press this key to swap input methods.



Button	Description
	<p>Press this key to delete single character, number, or symbol from the right to left. Long press this key will enable to delete all texts and phone numbers.</p>
	<p>Push keys to scroll up, down, left and right for entering function menus, submenus and setup selections.</p> <p>Short Cut functions:</p> <p>Up –swap standby mode pictures.  Down – Phone book list  Left – stay in the 1<sup>st</sup> layer of SMS list menu.  Right – Melody list in Profile.</p>
	<p>The symbol of numerals and letters. Keypads 2~9 are set as hotkeys; refer to hotkey setup instructions for details.</p>
	<p>Push and hold this key for 2 seconds to launch voice mail box function. Enter the voice box number (general 3 digits) of your service provider before using for the first time.</p>
	<p>Push and hold it for 2 seconds and the “+” will be automatically turn to an international dial-up code. If you are in Taiwan, “+” represents the international dial-up code “002”.</p>
	<p>Press this key, and “#” sign will be shown on the screen; then enter phonebook address number (SIM: 1 to 3 digits, depend on SIM capacity, Phone Memory: 2001~2250) and press the  key to dial out this call as the other quick way to making a call. Press and hold it for 2 seconds and then “P” sign will be shown on the screen; then to launch Voice Dial function as a hotkey.</p>

Button	Description
	Fast access to make a call with extension number – Input phone number and long press this key to pop-up character “P” then key-in extension number and then press dialing key. In editing mode, press the key to switch input methods.
	Press this button to activate and disable vibration function. In English Mode, press this key to switch English letter between upper and lower case. In T9 input Method, press this key to switch input methods and symbols.
	Adjust volume during a call. In folder close mode, press Up key to activate the backlight of Sub_LCM.



## Alphanumeric Mapping

The alphabetical and numerical keypad mapping relations are listed on the following table:














	Upper Case Mode	Lower Case Mode
1	Space : ^   1[]{}0	Space : ^   1[]{}0
2	A B C 2 Ä Å Æ ç	a b c 2 ä å æ ç
3	D E F 3 É	d e f 3 é è
4	G H I 4	g h i 4 i
5	J K L 5	J k l 5

	Upper Case Mode	Lower Case Mode
6	MNO6ÑÖ	m n o 6 ñ ö ò
7	P Q R S 7 ß	p q r s 7 ß
8	T U V 8 Ü	t u v 8 ü ù
9	W X Y Z 9	w x y z 9
0	Space + - * / ( ) 0	Space + - * / ( ) 0
*	: * . , “ _ @ < ! ;	: * . , “ _ @ < ! ;
#	# / =? %	# / =? %

**Note:**

1. Press  button to switch between upper and lower case letters and symbols.
2. By pressing and holding , you can exchange the input mode among Chinese input, English input, and numeric key input.
3. Pressing a number key in the editing mode will result in the character appeared on the display.
4. Press again the button immediately after releasing, and it goes to the next character in sequence as above table. Switching characters will depend upon the duration of the key press.
5. After releasing the button and wait for a second, the cursor will move to next spot for new input.
6. If there are any differences between the character sets listed in the table and on the phone, please refer to the displayed characters on the phone.




## Display Indicators.

Indicator	Description
	The battery level indicator. The more the battery cell is, the stronger the battery is charged. The battery cell flashes right and left when charging, until it is full.
	The earpiece has been inserted and used.
	Indicates that the phone is using a roaming network.
	The vibration function is on.
	The mute function is activated. (with blue color)
	Both mute and vibration functions are activated.
	Alarm is activated.
	New message is in mailbox.
	Messages are full of inbox.
	Shows the signal strength of network connection at your current location. The more the bar is, the stronger the signal is received. (The total is four cell.)
	Shows that the data transmission cord has been inserted.
	CSD Connection is on.
	WAP browsing is in connection.

## Basic Operation



### Making a Call

1. Power off the phone and install your SIM card.
2. If the battery is out of power, you can still connect to your travel charger and use the phone normally.
3. Press  to turn on. If the display indicates "Enter PIN", key in the PIN number of your SIM card, (please refer to the Manual provided by the telecommunication company for details) and press .
4. Key in the area code and telephone number, and press  to dial the number.



### The SIM Card

Your telecommunication company provides the SIM card. Please use a small SIM card to fit the design of this phone. For the SIM installation, please refer to [page 22](#). This phone can be used only with legally issued SIM cards and can receive or send the calls only within the SIM network service range.





### Battery and Charger

The Li-ion battery that comes with this phone is rechargeable. Please use the charger and the battery provided by the original manufacturer to ensure a long lifetime for the cellular phone.


1. Plug the charger into an appropriate outlet that meets the requirements of this phone. The other end is connected to the phone. While the phone is recharging, the screen will automatically display the current power recharge status of the battery via a flashing signal. The phone can still function normally if it is turned on while being recharged. Once the recharging process is finished, the flashing signal will stop.
2. Once the recharging process is completed, the charger can

- be disconnected from the phone and electrical outlet.
3. Use only chargers certified by the original mobile phone manufacturer. This is an international charger (Model: KWS05C is subject to change in different countries). Read instructions on the charger label before use.
  4. A 'battery low' message will be displayed on the screen to alert you of battery low condition. The mobile phone will automatically shut down when the battery is exceptionally low.
  5. If the battery is totally out of power, the battery requires to be recharged at least ten minutes. Otherwise, it might have difficulty to turn on.

### **Turning on the Phone**

To turn the phone on, hold the  key for about 2~3 seconds. If the message "Enter PIN:" shows on the screen, the preset "PIN:" code of the SIM card must be keyed in (please refer to the Manual provided by the telecommunication company for details). Then, press the  key.

### **PIN and PIN2 (4 to 8 digits)**

A PIN (Personal Identification Number) code is stored in your SIM card and is supplied by your SIM card network provider. To prevent unauthorized use, your PIN1 code will be required every time while you turn on your phone. Key-in the correct PIN1 code and press .

**Important! :**

- 1. If a wrong PIN code is entered three consecutive times, the phone becomes locked or disabled. You must ask for your network provider to use the PUK code to unlock or enable the phone again.**
- 2. PIN2 code is for other functions, such as certain number dialing and barring.**




## PUK1 and PUK2 (8 digits)

To enable a locked PIN code, the PUK (Personal Unblocking Key) code is required. Check with your network provider for the code. After getting the PUK1 code and unlocking the PIN1, you can reset your PIN1.







## Calling

Enter the area code and phone number, the press  button to dial out a call.




## Dialing Emergency Numbers

1. Please turn the power on first. Enter an emergency number 112; and press  to dial out.
2. Most networks allow users to make emergency calls without inserting a SIM card. In the case of no SIM card, you'll see the  indicator on the down-left corner after turning on your phone.
3. In the case of SIM card inserted, SOS sign will be displayed on the down-left corner and without enter 112 number, press  or  keys to dial out.






## Changing an Entry

Pressing the  will delete the last letter or number keyed which you entered.




## Answering a Call

 
Your phone rings or/and vibrates when receiving a call. Press  or  to answer the call. Press  to end the call. If you are using an earpiece, you can press the button of the earpiece to answer or terminate the call.



 

## Recent Calls

The phone will record all the recent calls in which you received, dial out, and unanswered calls. After pressing  to enter



menu and  to select submenu "Call List", you can find out all recent calls. The recent calls can accommodate up to 30





numbers. Press either  button to browse numbers and select a number to dial out by pressing  button. There are five choices you can select. They are "Call", "Edit Phonebook" and "Remove".



 

## Speed Dial

You may quickly search a number stored in SIM card by entering the address (SIM Card: depend on SIM card capacity, Phone memory address: 2001~2250) of a certain phone. Every phone number comes with an address number in phone book.

Under standby mode, you can press  button to get a "#" sign on the screen and type in the address of the phone number which you want to dial after the "#" sign. Then, press  button to dial a call.








## Holding a Call

Pressing  allows you to put the on-line call on hold while you make another call. When the second call is connected, pressing  allows you to switch between these two calls.





## Multi-party Calls

1. If, while talking to a party, you would like a third party to join the conversation, press the  key and dial the number of the third party. Once the call goes through, press  and  to conduct a three-party call.
2. If you would like to talk to a fourth party, repeat step one to conduct a four-party call. (This system allows a maximum 6-party call.)
3. If you want to end the connection with any one of the parties during a multi-party call, you can follow the steps as below:
  - (1). Press .
  - (2). Press the sequence number in which the party joined the conversation. (For example, the sequence number of the first call is 1 and the one of the second call is 2)
  - (3). After pressing , the party now can leave this multi-party conversation.

**Important! :**



**Before you make a multi-party call, make sure you do not have a call on hold.**



## Voice-activated Dialing

Steps for using voice-activated dialing :

1. Store phone data in the phone book.
2. To set up voice calling function:  
In the phone book menu, select the number and enter Edit


mode. Use  key to switch each field. In the voice-dial filed, press  right key to create a new

record of voice. The message "Say Name After Beep" prompts up on the screen. Follow the instructions and voice the name, in which you want to save, to microphone. After first time input, the system will play back it for you to recognize the voice. With your confirmation, the system will request you to input the second time. If the voice-activated name is already used in the phone book, then repeat the



above procedure and recreate it. After done, press right key to Modify, Play and Delete.


### 3. Using the voice dialing :


- (1). Press and hold  key for two seconds or when the screen is on.
- (2). After the beep, voice the name for the number you want to call, into the phone.
- (3). The mobile phone will play the sample first. After your confirmation, the number will be dialed.







## Method of Input



Only under edit mode, you can input the content by various methods. This mobile phone has ten fields for edit; that is; name field of Phonebook and name search, content of Message, rename file name of tone edit, note making in the calendar, notes for alarm, rename of voice memo files, power on greeting, WAP file name, rename file name of customer in the Profile, and the rename of audio and image file names in

File Manager. After enter these items, press  to enter edit mode. According to the setup of language, you can have default setting of input method in your own language.

However, if you want to change to other methods, press  to enter submenu. For characters input, you can have T9 English, ABC(English), 123 (numeric), T9 Russian and




 


Symbols. By using  key to select the input method you want. No matter that T9 English or ABC English methods, press  turn on function for upper case and lower case. By pressing and holding , you can switch to Symbols. By pressing and holding , you can switch among Chinese, English, and Numeric methods.

## 1. T9 English

While inputting, you can only press the button of letter without selecting particular one. The T9 English will smartly detect what you want for written wording. Switch upper case and lower case by press ; for example, you can have upper case of first letter 『Eng』, or all in upper case 『ENG』, or all in lower case 『eng』 by switching  and pressing numeric button 『123』.

Example : Smart

Button pressed as follows as below :

 →  press once →  press once →  press once →  press once →  press once



Only six steps to have a word “Smart” completely. After keying in 7·6·2·7·8, two words can be selected. One is **Smart** and

the other is **Roast**. Press  to select the wording

such as “**Roast**”. Use  right key to deselect the yellow highlight. If you want to re-highlight the whole wording,


press  down key to recover it.

## Menu Function


For speedy access with certain options, press  to proceed with Inbox, Profile, Hot Key Setting, and Soft Key Switch. This mobile phone provides different features and several options to meet your needs by manipulating  :





### Phone Book


The phonebook menu lets you save the names and phone numbers in the SIM card or in the memory of the phone,

press  to enter this menu. You may also have Search, Add Entry, Edit, Delete, Copy, P. Book Setting and Memory Status. This menu will show the records according to the sort you selected, and the detail window will show the content of current record. Depended on the selection of SIM or phone itself, phone memory module has 10





fields, and SIM module has 6 fields. You can use  to move forward and backward to those fields. If you want to get into


the submenu, press  left/right key. With inputting completely, press  to save or  discard this record. If there are three sets of phone number, press ,

 to select the one you want to dial out.




## Search



In search function, the “search name” input window will be displayed on the screen. After typing in the name that you want to search for, then press . If the input methods are needed, press  to enter it. When the first letter you typed fits in with your list, the first one will be highlighted and all matched


data will be listed down. You can use  to browser and view the rest data.





## Add Entry

After pressing  key to launch the function, items of new record including memory type SIM/Phone, name, tel. number, caller groups, voice dial, e-mail, address record number, and birthday, will be displayed on the screen. Blank is not allowed in both name and phone fields.

1. The phone will automatically assign a memory location to store the data on the SIM or phone itself according to your selection.
2. You will need to enter both the phone number and name, and no data will be stored if you leave any of these two items in blank. In the name field, press  to enter text entry mode, and press  again for input methods selection. [See on page 34.](#)
3. Empty filed is not allowed in phone number. Three sets of phone numbers can be input for handset setting (NVM), and one phone number is for SIM card setting
4. You may assign a caller group to a phone number, so that you can identify it next time when it comes in. There are 7 default

choices accessible by pressing  right/left key and choosing from the submenu; that is, Family, VIP, Colleagues, Friend, Classmates, Business, and None.

5. Move to the field of Voice Dial and press  to start this function to record the voice into your voice record. Refer to [page 33](#).
6. Enter E-mail address to the field with handset setting (NVM).  
By pressing  to search \_ underscore, and "." dot can be found and entered into it
7. Normally, the phone will automatically generate an address number on input field. If you want to assign a memory address to the data, you may enter the address and the phone will store the data to the address you assign. However, if you put it empty, no data can be stored.
8. Enter the birthday and date format will be dd/mm/yyyy.

### **Edit**




This function is for you to modify or edit an existed record. Use



to select the field you want to modify. All fields and items should be manipulated as the same as above "New function". In the Voice Dial field, Modify, Play, and Delete can be selected in the submenu to record the voice, play and remove the voice from this field

### **Delete**

Select this function to remove the phone record from your address book. After launching this function, three selections are

“Delete One”, “Delete All in SIM Card”, and “Delete All in Phone” in submenu by press . A message prompt will ask for your confirmation of this deletion before execute deleting. Press  to save data or  to discard.






### **Copy**

You may use this function to copy single or all phone records to SIM or handset memory at your will. On launching this function, the system will automatically provide you an available position. You may also give a designated position to save your data instead of system assigned number.

### **P.Book Setting**

#### **1. Caller Group**

It is for setting a ring tone in corresponsive with a specific incoming call. After entering into this option, select one of the six ring tone groups to setup such as Family, VIP, Colleagues,

Friends, Classmates, and Business by  key. Press the  key to enter this option, the  key to select the ring tone from the list, and press  to play the tone. Press the  key to switch the selected tone.

#### **2. Sorting**

This function is for you to select the way phone number is sorted



in your phone list. You may sort By Pinyin (Chinese Phonetic Alp) or By Alphabet and save the sort setting into the handset.

### 3. Display SIM Records

There are two display modes. One is to display the phone numbers that are restored in handset only. The other is to display all the phone numbers no matter that are saved in handset or SIM card. You can switch your screen to show the phone numbers by handset only or by all at your willing.



#### Memory

This provides inquiry about the total number of records and the empty spaces left for the phone records in the current SIM and the memory of the handset. Also, you can know how many Voice Dial numbers is in phone list.

At this stage, memory size of SIM is 100 records in total and that of handset is 250. Voice Dial only is sum up to 20.



#### Camera

The camera is embedded on top of the sub LCD screen. Press to enter the camera function and setup camera options. Press key to enter directly into snap shoot mode.



#### Snap Shoot Mode

You can take a picture when enter into this mode. Press to take a picture, you can then hear the camera sound, the picture taken will be save automatically into photo album then display on the screen. Press to select more options, which include


save picture, delete picture, send MMS, save as wallpaper, save as caller picture, browse photo album and re-name.

### **Photo Album**


Enter this option to browse pictures in the photo album, use the up




and down directional key to scroll and view each picture.

Press  to select more options, which include open file, send MMS, save as wallpaper, re-name, delete file, delete all files, sort file, and view details. For more detailed descriptions on these functions, please refer to page 52 on File Manager.

### **Camera Settings**

While in the snap shoot mode, press  to enter camera settings.

#### **1. Night Shoot Mode**

This function allows you to take picture in poor lighting conditions. You can choose to enable or disable this option. When enable, the indicator  will be displayed on the top left corner of the screen.

#### **2. Image Frame**

This function allows you set frame for your picture; there are 10 sets of frames to choose from. You can choose to enable or







disable this function. When enable, you can press to switch between frames.

#### **3. Special Effect**

This function allows you to select different special effects for your picture. These effects include embossment, negatives, sketch, oil painting, black/white and sepia.

#### 4. Continuous shoot

This function allows you to take four continuous shoots. You can set the interval in between each shoot to 0.5 seconds, 1 second and 1.5 seconds, then press  to enable it. When it is enable, you can see the indicator  displayed on the top left corner of the screen. Press  to take the pictures, after all four pictures had been taken, they will automatically be saved to the photo album and then displayed on the screen. Press  to select more options, which include open file, delete file, send MMS, save as wallpaper, save as caller picture, browse photo album and re-name.

#### 5. Two stage snap shoot


When this function is enable, two pictures taken one after another will be merge into one.

#### 6. Image size and quality


Here you can choose between picture size of large (352 x 288 pixels) · normal (128 x 143 pixels) and small ( 64 x72 pixels), the default is set to normal. When image size is smaller, the less storage is require, hence more pictures can be taken. However please note that when the image size is set to format other than normal size, the screen display of the picture will not be as it should be .You can also choose between picture quality of low, normal, and high, the default is set to low.

#### 7. Advanced

Timer

Timer can be set to 5, 10 or 15 seconds, the indicator  will be displayed on the

top left corner of the screen when this function is enable. Press

 key again , the picture will be taken after the timer run out.

⊙ Add date

Activate this option to show the date on the image.



⊙ Add Text

- Enable/Disable this option
- Set text position


Set the text to be position on the top, in the middle, or at the bottom of the picture.

- Set color




Press right or left directional key  to enter palette then use  to select the desired color.

- Input content

You could input the content after the cursor is position in the input box , press  key to select input method .






⊙ Set file name

Press  key to enter the input box and enter the desired file name.



⊙ Camera sounds

When switch on the camera sounds, a tone will be hear when taking a shoot.

⊙ Info Display

When you switch on this option, you can then see indicator displayed on the screen when different function is enable; For example  ,  ,  ,  ,  etc.

⊙ Softkey display

Here you can choose whether to display the selection keys  and  on the screen.

⊙ Reset settings



This will restore factory settings.

 **Messages**

This phone allows you to send and receive various kinds of messages. Please contact with your network operator for more details on which service you could use.





 **SMS**




Press  to enter this menu, after you finished editing your message and the recipient's phone number, press  to enter into the sub menu that include options of send, send & store, send & save to pre-message, and store. Send option allows you to send out the message. Send & store option allows you to store then send the message at the same time. Send & save to pre-message option allows you to store the message as pre-message then send it out at the

same time. Store will only store the message onto the SIM card

## 1. Write


Press  to enter the message editor. Press  while in the editor allows you to switch between input methods. You can add text, pictures, animation, and sounds into your message.

If you would like to add pre-message, pictures, animation or sounds into the message,

Press  and use the directional keys  to select the items, then press to  confirm.

For details on how to use text input method, please refer to page 17.


When entering the recipient's phone number, you

can press the down directional key  to enter phonebook and search for the number directly or enter it yourself. After that, simply select whether to send, send & store, or store the message.


## 2. Inbox

When enter into the inbox, you will see a list of all



message received (both on the phone and the SIM card) including the name or phone number of the message sender and the time you receive it. All unread messages will be indicated by the "✉" icon.

Press  key to select and display the content of a message onto screen. For multiple pages message, you can use the up and down directional key




to look through the entire message. Press  to select more options, which include; delete message, forward, reply, call and store number. Delete option allows you to delete this particular message from the phone or SIM card. Reply option allows you reply a message to the sender of this message. Forward option allows you to send this message to others. Call/Store option will list all the numbers in the message and you can then select a number to call out or store to the phonebook. To delete all the messages in the inbox, you can select the delete all option at the bottom of the list.

### 3. Outbox

Functions for outbox are the same as inbox. After editing a message and select send & store, it will be store in the outbox with the icon  and indicate with the icon  when select store only.

### 4. Delete message

Similar to the delete function above, press  and you will be prompted to confirm whether to delete the selected message from inbox or outbox.

## 5. Free count

This function allows you to check the total amount of messages that can be store plus the amount of free space available currently on both the phone and the SIM card. Message will be save onto the phone by default, and will be save onto the SIM card once the phone is full. The total amount of messages that can be store on the phone is 100. The total amount of messages that can be save onto the SIM card will depend on each individual SIM card.

⊙ NOTE:

**In situation where one or more messages in inbox/outbox are long messages, each of these long messages will be considered and calculated as two, three, or more messages. Therefore, the free space available displayed will actually be less than the total amounts of messages that can be store deduct by the number of messages in inbox/outbox.**

## 6. Settings

⊙ Pre - Message

Here you can add up to eight frequently used messages and save them as pre-message. These messages are all empty by default.

⊙ SMS Center

This menu item allows you to set the SMS center




number. (Please contact your network operator for details)

⊙ Validity Period

If your message can not be delivered, for example, if the recipient has turned off the phone, your service center can save the message to send it later or until the valid time expired. You can set the validity period to twelve hours, one day, one week, one month, or maximum period.

⊙ Auto Display

When this option is enable, a notification will appears after a message is received, you could then choose whether to read it now or later. If this option is disable, you will only see the indicator  display on the screen plus a notify tone when a message is received.

⊙ Status Report

When this option is enable, you will be notify by the SMS center once the message sent has been delivered to the recipient.

⊙ Storage Area

This allows you to choose whether to save the message on the phone or on the SIM card.




 

## MMS

Multimedia Messaging Service (MMS) allows you to send message that contains text, pictures, animation, and sound to other mobile phone and email account, the contents in

the message will be presented as slides. This phone is capable of sending a MMS of approximately 50K at a time. The total storage on this phone is around 5 MB for you to save all your text, pictures, animation and sounds.

### 1. Compose message

 


You can edit the MMS here. When enter into an input area, press  to quickly bring up a list of input methods, for example T9, ABC, numbers, emotional icons and regularly used internet symbols. Use the


 
directional key  to select from the different input methods and press  to confirm. The selected input method will be display at the bottom right hand corner.

 


**NOTE** Ø If the warning message “MMS connection not set” is display after you attempt to compose a new message , please set up the MMS connection by selecting your network operator from the default connection list. (MMS Settings > Connection > Add from list)

#### ⊙ New

Here you can add text, image and sound into the message by selecting each item using the



directional key  then press  .  
 Press  to return to the previous menu.

In text input area, press  and  to select a template you want to edit or start edit a new message. Refer to the description on the previous page on how to edit contents while in input area. To add an image, you can select which folder you want to add it from; photo album or image folder. To add a sound, simply select a sound file. To add a slide, use



the directional key  to move the cursor to "+" then press  to confirm and go into next slide. Press  to exit from editing, you can choose to save it as draft before leaving.

MMS menu options include;





**□Send message**

Press  to enter the option then press  again. When prompted with the dialog "Send this 1K message" select "yes" to send the



message. Use the directional key to move the cursor onto “Address Book...” then press  to select number from the phonebook or you can enter into the input area. When entering multiple addresses, they should be separate by a space. After you complete the inputs, press  to enter option menu. You can





use the directional key  to move the cursor while in the menu. Options include send MMS, send Email, cancel and advanced. Press  to select an option. Advanced include the following four options; press  to enter into an option › press  to save and return to the previous menu.

- a. Delivery time : Delivery time allows you to set the date and time you want the message to be delivered to the recipient. Validity Period allows you to set how long the message will be available for the recipient to download; you can set it to 30 minutes, one hour, six hours, one day and




one week.

b. Message title : After select this option, press

 key to enter the input area,  
press  again to starting editing. For detail description on input method, please refer to page 17.

c. Priority : This allows you to set the priority of the message. There are three kinds of priority to choose from; low normal and high\_ Message class allows you to set the class of the message, which include personal, advertisement and informational.

d. Carbon copy(cc) and Blind carbon copy(bcc) : Use the

 to  
move the cursor onto Cc...或  
Bcc... to enter phonebook  
directly or move it to the input  
area and press  then press  
 key again to start editing ° For detail description

on input method, please refer to page 17.

 

**□Preview**

You can preview the MMS here.

**□Save**

You can save the contents of the message as draft and complete it at anytime you want or you can save it as templates.

**□Settings**

You can use the directional keys  to move the cursor then press  to select from the two options; slide duration, and slide format.

- a. Slide duration : You can set the duration of every slide in a MMS to be display
- b. Slide format : You can set how the image is position on the screen from four different options; image at the bottom, image on the top, image to the left or image to the right.

**□Add slide**

**□Delete slide**

⊙ From Templates

There are five default MMS templates to choose from. Simply select and open the template you wanted to start editing it.



## **Broadcast**

Broadcast messages are sent by the network operator to all users in a certain area. Please contact your network operator for more details on whether they provide this service.

⊙ Read

This allows you to read the last broadcast message received. Only the last message will be stored here.

⊙ Filter

This allows you to select the type of broadcast you want to receive and filter out the unwanted one.

1. **All:** Receive all broadcast messages

2. **None:** Not to receive any broadcast messages.

3. **List:** List all the broadcast channels you want to receive broadcast messages from, different areas will have different broadcast channel numbers. You can add and delete any channel from the list.

⊙ Auto Display

This option allows you to set up whether to automatically display broadcast messages onto screen upon receiving.




**Voice Mail**


⊙ Listen to voice message

Here you can dial out directly to your default voice mailbox number. (You need to set up the number of your mailbox before you use this function.)

⊙ Voice mailbox number

Here you can enter your voice mailbox number. The number you enter will be save on the phone, so if you change the SIM card (different network operator), please also change the corresponding number; otherwise you will not be able to successfully dial out. If you have not set up your voice mailbox number before, you will be prompted to enter it when you press the voice mailbox hotkey . Please contact your network operator for the voice mailbox number.

⊙ Note

**You could enter directly into your voice mailbox by press and hold  key while in standby mode ◦**



## Profile

There are 6 profiles (Typical, Silent, Outdoor, Handsfree, Meeting, and Customer) to meet your different needs. After selecting a suitable profile, push Activate to enable profile. If you want to personalize the profile, launch the Adjust menu and select the item you want to personalize.



## Adjust

 
You can change the setting of the follow profiles with this function.

### 1. Activate

Activate all settings under the selected profile.

### 2. Ringtone and Volume



Using the  keys allows you to select the ringing tone pattern. When the tone is selected and is played, you can set up the volume of tone at the same time. There are 34 different ringing tones or melodies for your selection.

### 3. Key Sound

You can set on/off the volume of the keypad tones. They are DTMF, Silent, Normal.

### 4. Crescendo

In this menu, the ring tone is adjusted to ascending. It can be turn on or off.

### 5. SMS Rec Tone

When receiving SMS message, the phone will alert you with ring. You can select to turn it on or off.

### 6. Vibrator

You may switch on/off the vibrator. This feature depends on which model you are using.

### 7. Service Tone

When this function is set on, the phone will generate a tone when a network is available.

### 8. Auto Answer

Under this menu selection, you may enable or disable the auto receiving function for incoming calls while you are using an earpiece.

 
### 9. Rename (Only in Customer mode)

On the selected file, enter dialogue box to rename the file name.

Under the edit mode, press  to enter Input Mode on [page 34](#).

### Call Lists


This menu records the charges and the length of time or duration of all incoming and outgoing calls in hours, minutes, and seconds. Please contact with your telecommunication company for providing charge information.

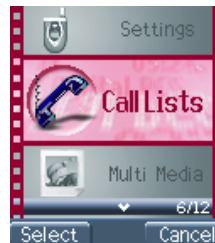

### Missed Call

After entering this menu selection, the screen will display all the



missed call. You can use  to call, move to phonebook into your SIM or handset memory for save and remove. Launching the menu and listing all the missed call. One more function is listed on the manual "Delete All" records of call lists.



### **Incoming**

List all of answered calls. The functions are the same with above.



### **Outgoing**

List all of dial-out calls. The function is the same with above.



### **Call Info**

This menu records the charges and the length of time or duration of all incoming and outgoing calls in hours, minutes, and seconds.

#### **1. Last Call**

This displays the duration of the last call.

#### **2. Total Calls**

This displays the total duration of all incoming and outgoing calls.

#### **3. 1-minute Beep**

This sends you a warning beep every minute (Beep will be activated at the 55 seconds), while a call is in progress.


#### **4. Charge Info**

This function allows you to calculate telephone fee to facilitate cost control.

Note : This function including Total Charge, Max Charge and

Unit Price will be supported by telecommunication service provider. Please contact with your supplier for detail.

### ☉ Total Charge

 
This displays the total charge of all calls. Pressing  allows you to reset the value, but it requires entering PIN2 before you do.

### ☉ Max Charge

This allows you to set a maximum limit to your total cost. You can't dial any number if you go over your limit until the total charge has been reset. As similar to total charge, you need to enter PIN2 for setting.

### ☉ Unit Price

This allows you to enter the unit price. After entering your PIN 2

code you can input price and unit. Pressing  allows you to select different entry fields.

## Settings

Your phone offers many options, making it your best partner.

### Personal

#### 1. Language

You may select the display language in this menu. There are English, and Russian.

#### 2. Greetings

You may enter greeting words in the edit window so that the phone will display greetings each time you turn it on.

#### 3. Power On/Off Melody

You may select the melody that will play each time you turn the phone on.

#### 4. Folder On/Off Melody

You may select the melody that will play each time you open or close the folder.

#### 5. Hot Key Setting



Reset shortcut keys have the following functions:



Long Key 1 is predefined as Call Voice Mail Box.

2. Messages -----	Long Key 2
3. Silent -----	Long Key 3
4. Show Clock -----	Long Key 4
5. Calendar -----	Long Key 5
6. Calculator -----	Long Key 6
7. Record -----	Long Key 7
8. Voice Dial-----	Long Key 8
9. Standby Mode -----	Long Key 9



This function allows you to press a designated key for 2 seconds, while in idle mode, to activate a function. If users want to change the programming of shortcut keys, please follow the procedures described below:

a. Enter the menu. Use  to select the numeric key to be used for setting. Press  to confirm.

b. Then use  again to choose the function to be set. Press  to confirm.

## 6. Own Number


You may store the SIM number in the phone.



## Clock

You may set time, date, alarm and auto on with the clock setting function.

### 1. Set Date

After launching the menu, push the  keys arrow to select setting date, time, data format and time format. If you select 12-hour system, the cursor will stop at AM/PM, push the




arrow keys to select AM/PM. You may push the



arrow keys to select date and time formats.  
Available date formats: yy/ mm/ dd or dd/ mm/ yy or mm/ dd/ yy.  
Available time formats: 24-hour or 12-hour

## 2. Set Alarm

It provides a set of alarm ring tone. The user may set the date,

time, melody, (貪睡鬧鈴) and note of the alarm by using .  
You may select three different modes: Disabled, Once, and Daily.

## 3. Power Off

In this menu, you may set the function and the time of turning off your handset daily.



## Screen

### 1. Standby mode

There are 3 standby screen modes: picture and text, clock, digital clock and calendar.

### 2. Color Theme

You may adjust the color background, and wording for the subjects of menu functions.

### 3. Network Name

You can decide whether display the name of the networking phone company on the screen.

### 4. Show Clock

Set "show clock" to display time and date on the screen.

### 5. Standby LED

After this Standby LED function is enabled, the standby flash will be around 5 Sec to discharge interval.



## Call Setting

### 1. Call Waiting

You may set the call waiting function on and off in this menu.

**Activate**

After you have set the call waiting to Activate, you will be alerted by audio and video signals when another call is coming in while you are making a call.

**Cancel**

If you set this function to Cancel, the phone will not alert you of another incoming call but directly divert that call to other number or your voice mailbox.

**Status**

It reports current status for Activate or Cancel

### 2. Divert

Call divert is a common telecommunication service, when you are unable to answer a call or the signal is out of service range, you can divert all incoming calls to another number.

**Forward to**

Set the number you want your calls be diverted to and the Delay before divert (default is 15 seconds). When a call comes in, the phone will divert the call to the preset number after the delay time.

**Unreachable**

Set "divert when not reached" function on or off.

**If No Reply**

Set 'divert if not answered' function on or off.

**All Calls**

Set 'divert all calls' on or off.



⊙ If Busy

Set 'divert when busy' function to on or off.

⊙ Status

Get status of all divert functions.


⊙ Cancel All

The function of this option will cancel the setting for diverting all incoming calls.

### 3. Answer Mode

Press any key to receive the incoming call when this function is enabled.

⊙ Normal answer

Press  to answer when this function is enabled.

⊙ Any key answer

Press any key to receive the incoming call.

⊙ Folder answer

Open folder to answer incoming call.

### 4. Present Number

This option sets the handset to show or not to show its phone number when dialing out a call.



## Network

This menu allows you to select and register with the network that you want the phone to use.

### 1. Select Method

When the phone is switched on, it looks for available networks and then selects one of them. You can also manually select the desired network from the list.

### 2. New Search

You can search available networks and manually select one of them.

### 3. Select Sequence

You can add the networks by manually. Enter the Country Code and Network Code to add the new network into the list.



## Security

### 1. Bar Calls

Call barring is a telecommunication network function to enable users to bar both incoming and outgoing calls in different conditions. Enter the Supplementary Services Password (obtainable from service provider) before setting up call barring. Please set mailbox to OFF before applying call barring.

All Out

You may bar all out calls (except emergency call) with this function.

Out Intl

You may bar all out international calls with this function.

Out X Home

You may bar all out international calls during roaming except calls to home country.

All In

You may bar all ingoing calls with this function.

In If Abr

You may bar all ingoing calls (roaming) when you are abroad with this function.

Status

You may check the status of call barring with this function.

Cancel All

You may cancel all barrings this function.

Note: The availability of barring services is subject to the network functions.

## 2. PIN Check

This function provides you with two options. One is to make PIN Enable, and the other is to make PIN Disable.

## 3. PIN Change

Make sure that you have PIN enabled. When you switch the power on, the phone will prompt you to input the PIN number.

## 4. PIN2 Change

Changes the PIN2 number. You need to input the original PIN2 number before you make changes. (Please contact your telecommunication company for detail.)

## 5. Fixed Numbers

This function only dials the numbers in the fixed dialing phonebook. (It needs the PIN2 number).

## 6. SIM Lock

This function allows you to lock the phone with a specific SIM card. This feature is designed to prevent somebody else from using your lost or stolen SIM card(s).

### ⊙ Set Lock

To activate the SIM lock function.

### ⊙ Change PCK

This allows you to change PCK code.

Note: The factory default PCK is supported by the manufacturer is (0000).



## Reset Setting


After entering into this option, you may select whether or not to convert the settings of your handset to the reset settings.

## MMedia

### File Manager

Under file manager menu, Image, Audio, and OSD frames can be manipulated as below functions.

 

⊙ Open File

On the selected file, press  to open it as full screen display.



⊙ Send MMS



By using  to select the file, press  to send MMS. Refer to [page 53](#) for detail.

⊙ Save as Wallpaper


You can save the file as wallpaper.

⊙ Save to P.Book

You can save the file as picture displayed when the call is coming.

⊙ Rename

On the selected file, enter dialogue box to rename the file name.

Under the edit mode, press  to enter Input Mode on [page 38](#). Chinese file name is not supported.

⊙ Delete

Delete the selected file.

⊙ Delete all file


⊙ File Sort

Enables all files sorting.

- ┆ By Name

- › By Date
- › By Type
- ⊙ View
  - › List



Press  to display selected image.

› Icon  
Display 9 image files on the screen at the same time.

⊙ Detail Info.  
The detail information will include image type, file name, file date, and file size.

### **Image**

In the phonebook, there are image files will be displayed on the screen when you review or browse it or when you receive the calls. Those images will be managed and stored under this folder.

### **Audio**

Ring tones or download audio file are stored under this folder.

### **Free Space**

This menu tells you the total space stored and how much free memory space is available.

### **Game**

#### **1. Game**

⊙ Puzzle

Choose your own picture from camera snapshot, last game, or file



manager to start game. By using to move empty grid till the whole picture is well compiled. Press left soft key

for viewing the picture and press to exit the game. Enable the user to turn on or off the game sound.

⊙ Hostage Salvation

Choose the picture for bad guy from camera snapshot, last game or file manager to start game. By pressing 1 to 9 numeric keys, shoot the bad guy and win 10 points for each shoot. In case innocent figure shot, 5 points is deducted. Total time is 2 minutes. Enable the user to turn on or off the game sound.

⊙ Reversi


Before starting a game, the sequence order must be selected ("Play First" or "Player Later"). When the game starts, you can use




keys to position the black piece. Press to confirm the surrounding of white piece. When the chessboard is full of pieces, if there are more blacks than whites, black wins the game. The game under this section allow you to save and continue the

game without restart over every time. Press to save your score and pause. Press the same button to continue the game. You may also save the score and exit the game by

pressing to leave. When you next time enter to the same game, select stored game to continue the game when you left last time. Any incoming calls while playing games, you may press

 button to answer the call and save the game that is been played.


☉ Coin Elf

Before the game, you can read the help. When the game start, the coin should be selected on the screen, The money master will follow the coin to move, the player have to move and lead the money master to win the treasure. Press  to pause the

game,, and use  to move.


 **Tone Edit**

Under this function, you can create your own tone and setup them as your ring tone under Audio Profile. There are total 5 tones are

allowed you to edit. Press  to enter edit mode including play, edit, reset, tempo, instrument, and name -

**1. Play**


This section allows you to display the edited melody from the


mobile phone. Press  to exit while playing. Otherwise, the system will exit until the melody is complete played.

**2. Edit**



☉ Keypad functions

Numeric 1-7 represent the musical notation from Do toSi, 60 notes can be entered.

 High octave


 
 


 Delay in one beat for previous note

 A rest

 



-  Raise half tone or a dot to extend half beat for previous note.
-  One extend (half beat or a quarter beat) and lower.

**⊙ Edit**

follow the steps below :

- a. Press numeric pads 1~7 to select note. Press  to delay in one beat for previous note, display on screen as “-“. Press  to enter a rest note displayed as “0 “
- b. Press  to switch into higher octave
- c. Press  to raise or lower half tone, “#” or “.” is displayed on screen.
- d. Press  to switch for long note “-half tone = a quarter tone” and for lower octave “.” If higher octave is selected, there won't be any mark for lower octaves.



- e. After a tone is edited, press  to shift the cursor to the next position, and then continue editing the next tone.
- f. If the setting is not correct, please move the cursor to the incorrect symbol to have direct revision or move the cursor to last the note and press  to delete the note and re-enter.
- g. Once editing is complete, press  to exit. If users want to restore the original setting, press  to cancel the editing.

**3. Reset**

After confirming to tone reset settings, the defined tone will be clear.

**4. Tempo**


There are 5 modes: More slowly, Slowly, Normal, Fast, More fast.  
You can select any of the modes to adjust the rhythm.



### 5. Instrument

Select the instrument to edit the tone including BritePno, Marimba, Harp, Crystal, and Banjo.

### 6. Rename


Allow you to enter the name for the tone. Under dialogue box, press  to enter edit mode. For Input methods, refer to page [on page 38](#).

 
### PIM.....

Under this function, you can do simple mathematical calculations and currency exchanges.





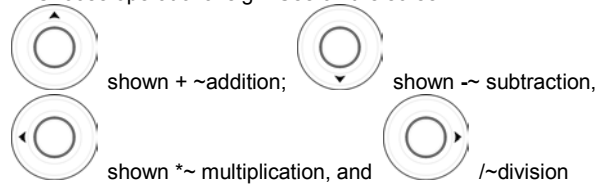

### Calculator

1. When " 0 " is shown enter the operational digits. (press  key for decimal point)
2. Choose operational sign: See on the screen





3. Enter second number.



4. Press  or  key to get the result. If a mistake is made during the operation, press  key to make a correction.

Holding  key for few seconds clears all the digits.


## **Calendar**

You may check your reminders in this menu. First, the current date will be displayed.

Push the  arrow keys to select date, push  to launch calendar menu,


and push  to exit menu. You may push the arrow keys to select a reminder, and then push  to launch the selected reminder menu (View Day Note, Make Note, Erase Note, View All Notes, Go To Date).


### **1. View Day Note**


Select today's reminder to view content, and push  to edit or erase content.


### **2. Make Note**



You may select reminder type (reminder, phone, meeting, Birthday).

Push the  arrow keys to select reminder types which including Meeting, Birthday, Anniversary, and Customize.

 Set date:

 Set time:


 Set alarm: After the time and date of the reminder are keyed


in, press the  key to set the alarm for the reminder, and the  key to shut off the alarm of the reminder. In the reminder field, you can input the memo. Refer to text input methods [on page 38](#).

### 3. Erase Note

Select erase types: erase reminders of chosen day, erase one by one, erase all, and auto delete. In auto delete, there are 3 items; they are auto del 1 month before, auto del 2 month before, and auto del 3 month before.

### 4. View All Notes

While checking all the notes, press  to enter the delete,

modify or move data menu option. Press  to view the content of each individual note. If the content is over a page long,

press  key to change pages.

### 5. Go To Date

Enter the date on which you want to receive the reminder.

### Exchange Rate

For first time users, push  buttons to move cursor to Set Rate to key in exchange rate for Domestic and Foreign. After

setting, enter the Domestic currency value, the Foreign exchange value will be automatically calculated on the screen.

### **Voice Memos**

Voice reminder allows users to record a maximum 20-second audio input. The main advantage of this function is to assist users in record messages when they do not have a pen and paper at hand.

#### **1. Record**

When users want to record messages, they simply enter this menu and press the “Record” key to start the recording process.

#### **2. Playback**

##### Playback

When users want to play the messages, they simply enter this menu and press the “Play” key to listen to the recorded message. If there is a \* mark before a certain record, it means the message has not been played before.

##### Delete One

In this menu, users can delete the saved records individually.

##### Label

When users enter this menu, they can check the time, date and record length when a certain record was recorded.

#### **3. Options**

In this menu, users can select one of the following methods of recording:

##### Self Only

When this function is on, it can only record the conversation of this phone content.

##### Other Party Only

When this function is on, it can only record the conversation of the call content.


⊙ Both

This function enables users to record directly from the callers and the content of conversation.

Note: The '2-way recording' (default) will be resumed after each recording.

When on the line, press  to enter record item, and press  to confirm recording.

 **World clock**

After entering into this option, you may press  keys to browse the current time of the place over the world.

⊙ Set Location

You may set your present location to browse the time in different countries with the time display function.

┆ Automatic

The mobile phone will automatically set the location for you.

┆ Manual

You may select your own location with the manual setup.

 **WAP**

 
 **Access WAP**

You can use this function to browse the World Wide Web to get the latest information. The data will appear in a special format compatible with your mobile phone. You might have to register with your





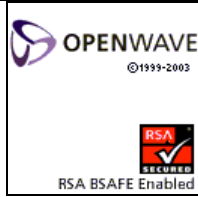

system service provider to be able to connect to the World Wide Web.

**Graphic and Message of Browser**





Shows the version of OPENWAVE and Copyrights.


**Definition of WAP Keys**

		End WAP
	Return to previous page or clear figures.	Return to previous page or clear figures.
	When input words, use shift to switch between capital and small letters.	Call out browser menu
		Call out My Favorite


 **Favorites**

You can connect with the Internet immediately by using the bookmarks.  
 There are 1-12 my Favorites are set on screen. Browser them



by using . On the selected item, press  to access internet.



Press  to select other function such as New Bookmark, New Folder, Delete all, and Hotkeys.




If there is not existed bookmark within folder, manipulate

 to move the cursor to the context, and build new bookmark and Hotkeys. If the bookmark is existed, then it will display with title, URL, and folder name that can be modified and saved.


### 1. New Bookmark




Press numeric key 1, and enter Title and URL to save as a bookmark. To enter the field of Title, press  to enter edit mode first, and press  button to select T9 English, symbol, numbers, Emotions, and abc input method. You may also press

 keys to select a exist Title. When using T9 English and ABC method to input, you can press  to switch upper case and lower case or first letter capital.

Press  to go to the bottom of screen, a Save button appears on screen, press  to save the bookmark; press  to go back to Bookmarks menu.

### 2. New Folder

Press  to enter Folder edit mode. Press numeric key 2 to create a new folder. After entering edit mode, use the same input methods as above. After entering complete text, repeat

 



pressing  until a "Save" button shown on screen, press  to save data. Or you can press  button to go back to Bookmark menu.

### 3. Delete all

Allows you to delete all folders and bookmarks.

### 4. Hotkeys

There are 1-9 numeric keys enable to be set as hotkeys. If you want to assign numeric key 1 as a hotkey for the specific website,

use  to move the cursor to "1 Unassigned" and press  button to go to bookmark list. Press  to select that specific website URL. Then press  to select the bookmark to complete the hotkey setting.

### Go To URL

This allows you to set up the protocol web site.

### WAP Settings




After entering this menu selection, users can program the mobile phone to search for the SIM card to see if it is equipped with GPRS function.

## 1. Connection


You can select one of the six files preset in the menu to connect. The connection will be made through the chosen file.

### ⊙ Add New

#### ┆ Name

Enter the "name" function screen, you can clear the preset file (press the  key), name and rename it.

#### ┆ Homepage

You can reset the homepage by pressing the  key to clear the preset Web address and keying in the new web address you want.

#### ┆ IP Address

This function allows you to set the IP web address you want to connect to.

#### ┆ Bearer

Supports both GPRS, and CSD.

#### ┆ User name

This function allows you to set a username to register to the WAP website. The function need to be supported by your telecommunication service provider.


#### ┆ Password

Set the password for logging in the WAP website.

#### ┆ DNS IP address.

Set DNS IP address to register to WAP website. The service is provided by telecommunication company.

┆ Linger Time

Modify Linger Time for connection, press  button to enter Linger Time field. The default setting is 90 seconds. (Unit: second)

┆ APN

If you select GPRS to browse, you need to input the Access Point Name of your system service provider.

┆ Security

This function provides the Internet security service, you can select on or off.

┆ Store

Save all settings.

⊙ Add from List

┆ 中華 WAP

┆ 台哥大 WAP

┆ 遠傳 WAP

┆ 泛亞 WAP

┆ 東信 WAP

## 2. Color Scheme

Color palette will provide three colors: Blue, Red and Green.

## 3. Clear Cache

This option allows you to clear all data from Cache temporary memory.

## 4. Reset all

Select this option to go back to WAP default setting.

 **GPRS Setting**

Two functions under GPRS setting menu:

1. **Permanent**
2. **Needed**

 **STK( SIM TOOLKIT ).**

This selection menu can only be displayed if your SIM card supports Value-added Services. Regarding the details as to how to use SIM services, as well as price and other information, please contact your telecommunication Service Company.

**Important :**

**The STK service is provided by your telecommunication company. The name of menu, title, and content are defined by your telecommunication company. Due to the content size may be too big to fit into the screen of your mobile phone, some of text may not be displayed.**

## Battery

- Ⓢ The battery is rechargeable up to hundreds of times, but its capacity will reduce. You may need to replace a new battery when the operation duration (calling and standing duration) reduces evidently.
- Ⓢ Remove charger from the source each time after charging. Over charging will shorten the life of the battery. Avoid charging a battery for over 24 consecutive hours.
- Ⓢ Use only batteries certified by the mobile phone manufacturer.
- Ⓢ Extreme temperatures will affect charging performance. The desirable ambient temperature for charging is 0°C-45°C (32°F-113°F).
- Ⓢ Do not use damaged or old batteries.
- Ⓢ Avoid contacts of the + and – poles of the battery with metals, such as coins, scissors, and pens. It will damage or cause short circuit to the battery. Place spare batteries in a safe place or wrap them up with insulated materials before putting inside your pocket or handbags.
- Ⓢ Extreme temperatures will reduce the capacity or shorten the life of batteries. Avoid placing batteries in extreme temperatures, such as inside vehicles or near air-conditioner outlets. The desirable battery storage temperature is 15°C-25°C (59°F-77°F). Batteries that have been charged may not work properly in extreme temperatures.
- Ⓢ Keep batteries away from water or fire.
- Ⓢ Dispose batteries according to local environmental regulations.

## Care and Maintenance

Follow the instructions below to take care of your mobile phone. They will help you to enjoy life with this product.

- ⦿ Keep the mobile phone and its accessories out of children's reach.
- ⦿ Keep the mobile phone dry. Rain, moisture and liquid contain minerals which will corrode the circuit of the mobile phone.
- ⦿ Keep the mobile phone away from dirt or dust.
- ⦿ Keep the mobile phone away from heat. Heat will shorten the life of electronics, damage the battery, or even deform or corrode the shell of the mobile phone.
- ⦿ Keep the mobile phone away from coldness. Condensation takes place and the moisture will damage the circuit board when the mobile phone resumes normal temperature.
- ⦿ Do not open the mobile phone. Non-professional treatment may cause damage to the mobile phone.
- ⦿ Avoid falling, impact or vibration of the mobile phone. Improper external force may damage the circuit of the mobile phone.
- ⦿ Do not clean the mobile phone with chemical solutions or detergents. Gently wipe the shell of the mobile phone with a soft cotton cloth and clear water or mild soap.
- ⦿ Use accessories and batteries from the manufacturer.
- ⦿ Contact your nearest service station if the mobile phone is out of order. Our well-trained technicians will provide you the best service.

# FCC Regulations

## Conditions of Use

Operation of this TG7C mobile phone is subject to the following two conditions; (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This TG7C mobile phone generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1). Reorient or relocate the receiving antenna.
- 2). Increase the distance between the device and receiver.
- 3). Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- 4). Consult the dealer or an experienced radio/TV technician for help.

The radiated output power of this internal wireless radio is far below the FCC radio frequency exposure limits. Nevertheless, the wireless radio shall be used in such a manner that the radio is 1.5 cm or further from the human body. However, the user of wireless radios may be restricted in some places or situations, such as aboard airplanes. If you are unsure of restrictions, you are encouraged to ask for authorization before turning on the wireless radio. Several restrictions and cautions of using mobile phone are listed in the **Safety**.

# **FCC RF Exposure Information**

## **Read this information before using your handset**

In August 1996 the Federal Communication Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

## **Body-worn Operation**

This device was tested for typical body-worn operations. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure requirements and should be avoided.

***For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov)***