

Callaway®



**GPSYNC WATCH**



## INTRODUCTION

The Callaway GPSync Watch combines elite performance on the course with an elegant, fashionable design. Hit more greens and minimize penalty strokes by knowing precise distances to the front, center, and back of the green, as well as distances to hazards and doglegs. Synchronize with your Smartphone to receive texts, missed calls, and other notifications.

## SPECIFICATIONS

Product	Callaway GPSync Watch
# of Courses	30,000+
Battery	220mAh Lithium Ion Polymer
Battery Life	Golf: 9 hours / Time: 90 Days
Weight	2.24 oz.
Display Size	1.28" (128 x128 pixels)
Band Length	10.25"
Water Resistant	Yes 1ATM Designation

## CHARGING

1. Power watch Off. **Hold [ POWER ]** until screen goes blank. (See watch diagram page 4)
2. Connect **Charger Pins** on the charger to the **Charging Ports** on the watch.



 
**Note:** **Charger Pins** and **Charging Ports** must be aligned properly (Easiest to align while looking at back of watch).

3. Secure **Charger Clamp** on the charger to **Charger Socket** located on opposite side of watch.



4. Plug USB cord end into USB port.

5. When connection is made, watch will power on and **Battery Icon** bars will pulsate to indicate charging.

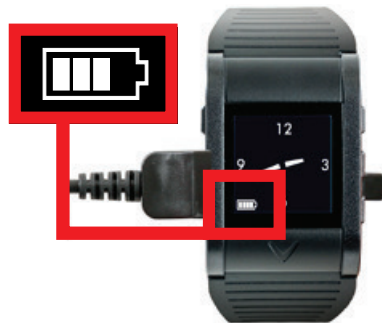

**Note:** **Battery Icon** bars will stop pulsating when charging is complete. (2-3 hours)

## DESCRIPTION OF TERMS

- **PRESS** - Press & Release button quickly.
- **HOLD** - Press & Hold button until desired screen appears or change happens.

 
## WATCH DIAGRAM




- A.** [ POWER ] - **HOLD** to Power On/Off, **PRESS** to turn Backlight On/Off
- B.** Charging Ports
- C.** [ UP ] - Scroll Up
- D.** [ OK ] - **PRESS** to Toggle Screens, Select Options, Acknowledge messages - **HOLD** to access **Main Menu**.
- E.** [ DOWN ] - Scroll Down

## 4 HOW TO USE

## DISPLAY DIAGRAM

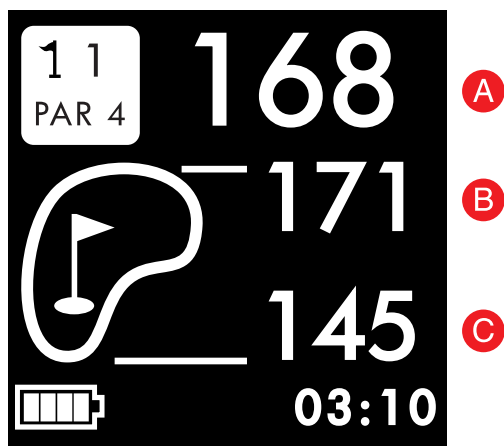

PLAY MODE

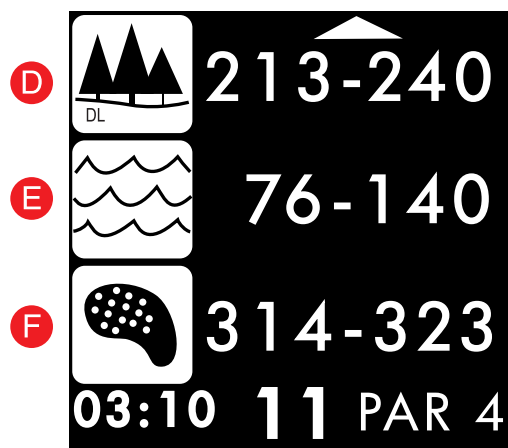 

HAZARD MODE

- A.** Distance to the **Center** of Green
- B.** Distance to the **Back** of Green
- C.** Distance to the **Front** of Green
- D.** Distance to front and back of **Dogleg**
- E.** Distance to layup or carry **Water**
- F.** Distance to layup or carry **Bunker**

## SYNC WITH SMARTPHONE

To receive notifications complete the following steps:

**Note: Notifications** must be turned on in **Settings** on the watch. (See page 17).

**Note:** Bluetooth® must be enabled on Smartphone.

1. Download and install **GPSync APP**  
(Search “GPSync”)



APP ICON

 
2. Open APP on smartphone.

3. **For Apple™:** Click  icon (top right corner)

**For Android™:** Click **Scan** (top right corner)

\*ANDROID IS A TRADEMARK OF GOOGLE INC.

4. **Press & Hold** the [DOWN] button until Bluetooth® icon appears on top left corner then **Release** button.

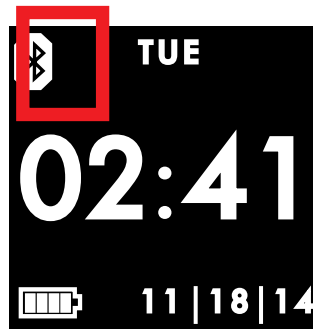

5. Select **Callaway GPSync** device on APP.
6. Watch and application are now paired.  
Notifications can now be received on the Watch. (Missed Calls, Text, etc.)
  - Saved round data will be uploaded from the watch to the application. (See page 11).

7. Connection range is approximately 15-30 ft. If the two devices are separated by more than 15-30 ft, the pairing will disconnect. Watch & Smartphone will automatically reconnect once devices are back within the connection range.



**Note:** Bluetooth® icon is located at the bottom of the screen while in **Play Mode**.

8. While out of connection range, Bluetooth® icon will flash. Once reconnected, Bluetooth® icon will stop flashing and remain solid. There could be a delay (1-3 min.) after reconnecting and receiving a notification on the watch.

**Note:** Compatibility depends on model of Smartphone and version of operating software. Features may vary or could be limited due to compatibility conflicts.


**For Apple™:** Compatible with iPhone® 4S or later.

**For Android™:** Compatible with Samsung Galaxy S5, Nexus 4&5, hTC One M8, (must be originally installed with OS 4.4 or later). Compatibility and functionality can vary from one Smartphone to another.

\*ANDROID IS A TRADEMARK OF GOOGLE INC.

- View full list of compatible Smartphones at: [www.callawaydmd.com/gpsync-watch](http://www.callawaydmd.com/gpsync-watch)

## TIME MODE

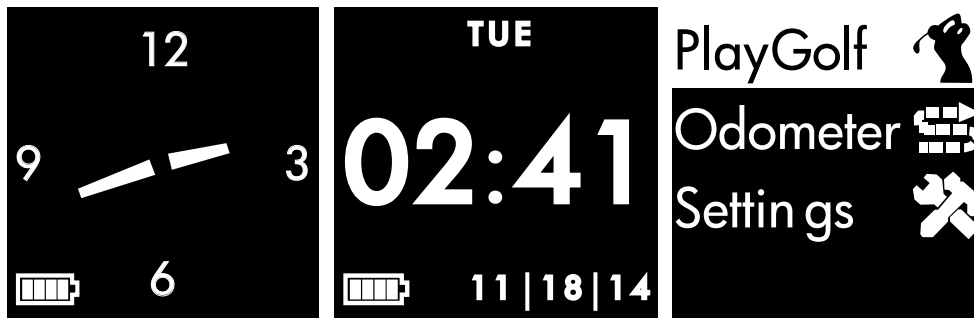 

1. **PRESS** [ OK ] button to toggle between Analog or Digital Time Display.
2. **PRESS** [ POWER ] button to turn Backlight On/Off.
3. To set time and date, see **Settings**. (Pg. 14)
4. **HOLD** [ OK ] button to access **Main Menu**.

## AT GOLF COURSE



1. From **Time Screen**, **HOLD** [ OK ] button to access **Main Menu**.
2. **PRESS** [ OK ] button to select **Play Golf**.
3. Device will begin searching for satellite signal (**HOLD** [ OK ] button to cancel).
4. Once satellite connection is established, the nearest golf courses will be listed. Use [ UP/DOWN ] buttons to scroll to desired course, **PRESS** [ OK ] button to select course.

 


## PLAY MODE



1. **PRESS** [ OK ] button to toggle between Hazard, Scorecard, and Shot Distance Screens.
2. To exit **Play Mode** at any time, **HOLD** [ OK ] button.

## HAZARD VIEW

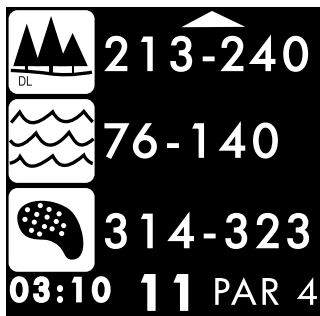


**Note:** If no hazards are present, screen will be blank.

1. **PRESS** [ OK ] button to access the Hazard Screen.
2. Only 3 hazards will show at a time. If a hole has more than 3 hazards, scroll by using [ UP/DOWN ] buttons. (*Hazards that are behind you will not be displayed*).
3. **PRESS** [ OK ] button to view next/previous screen.

## SHOT DISTANCE

 **Note:** Shot Distance must be turned On in Settings.

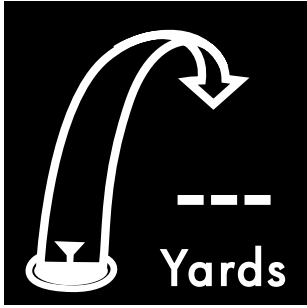

1. **PRESS** [ OK ] button to access **Shot Distance**.
2. To start measuring **Shot Distance**, **PRESS** the [ DOWN ] button.
3. As you travel to your ball, the distance will begin calculating.
4. Once you arrive at your ball, the distance displayed is the distance of your previous shot (the distance you traveled).
5. To reset, **PRESS** the [ DOWN ] button.
6. **PRESS** [ OK ] button to view next/previous screen.

## SCORECARD

**Note:** Scorecard must be turned **On** in Settings.

H03	Par5
Score	5
Putt	2
GIR	N
Total 15	+1

**Note:** Scorecard data can be recorded and tracked via the GPSync App.

 
1. **PRESS** [ OK ] button to access **Scorecard**.
2. Use [ UP/DOWN ] buttons until number of total strokes for that hole is displayed.
3. **HOLD** the [ DOWN ] button to scroll to **Putts**, use [ UP/DOWN ] buttons until correct number of putts is displayed.
4. **HOLD** the [ DOWN ] button to scroll to **GIR** (Greens in Regulation). Use [ UP/DOWN ] buttons to select **Y/N** (Yes or No).
5. **PRESS** [ OK ] button to view next/previous screen.

## AUTO-HOLE ADVANCE

1. While traveling from the green to the next tee box, the device will automatically advance to the next hole.
2. To manually advance to the next hole, **PRESS** [ UP ] button. To return to the previous hole, **PRESS** the [ DOWN ] button.

## END ROUND


1. When finished with round, **HOLD [ OK ]** button to return to **Main Menu**.
2. If **Scorecard** is turned on, use the [ UP/DOWN ] buttons to scroll to desired option, **PRESS [ OK ]** to select.

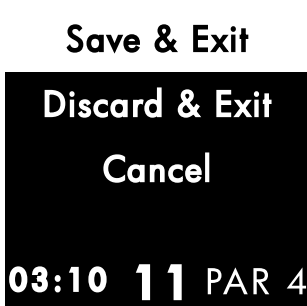

**Note:** Saved round data automatically uploads to **GPSync App** when paired via Bluetooth®.

- **Save & Exit** - Save Scorecard, end round, and return to **Main Menu**.
- **Discard & Exit** - Discard Scorecard, end round, and return to **Main Menu**.
- **Cancel** - Select to return to **Play Mode**.

## ODOMETER

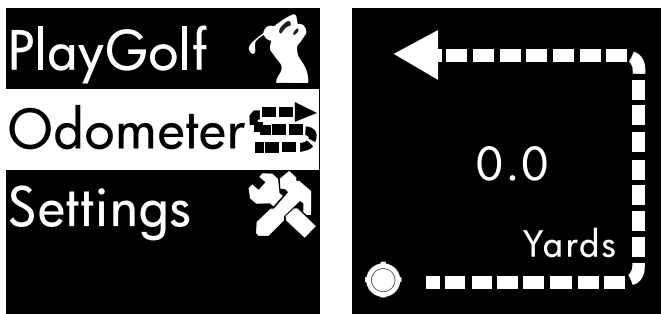 

1. From **Time Screen**, **HOLD [ OK ]** button to access **Main Menu**.
2. Use [ UP/DOWN ] buttons to scroll to **Odometer**, **PRESS [ OK ]** button to select.


3. Circle will flash while connecting to satellite.
4. Once satellite connection is established, circle will stop flashing.
5. To start, **PRESS [ UP ]** button. The **Odometer** will begin calculating the distance you will travel.
6. To reset, **PRESS [ DOWN ]** button. The distance will return to zero (0).
7. To exit and return to **Main Menu**, **HOLD [ OK ]** button.

## SETTINGS



 1. From **Time Screen**, **HOLD [ OK ]** button to access **Main Menu**.
2. Use [ UP/DOWN ] buttons to scroll to **Settings**.
3. **PRESS [ OK ]** button to access **Settings Menu**.
4. Use [ UP/DOWN ] buttons to scroll through **Settings Menu**.
5. **PRESS [ OK ]** button to select desired setting.
6. **HOLD [ OK ]** button to return to **Main Menu**.

## ALARM

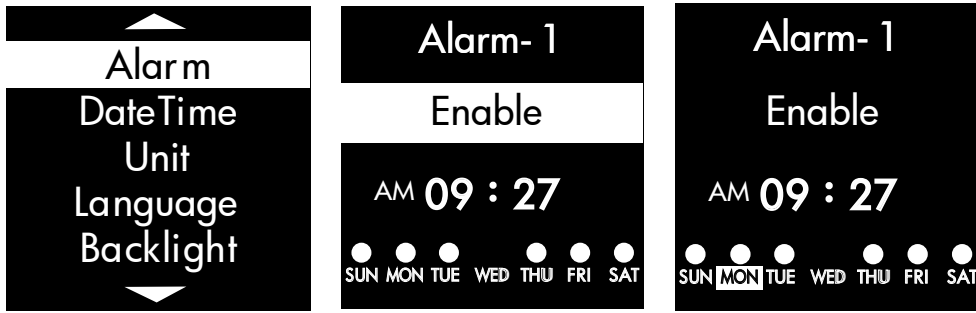

1. Use [ UP/DOWN ] buttons to select **Alarm 1**, **Alarm 2**, or **Alarm 3**.
2. **PRESS** [ OK ] button to scroll down. **PRESS** [ UP/DOWN ] buttons to **Enable/Disable Alarm**.
3. **PRESS** [ OK ] button to scroll down. Use [ UP/DOWN ] buttons to set the **Hour**.
4. **PRESS** [ OK ] button to scroll to **Minutes**. Use [ UP/DOWN ] buttons to set the **Minutes** then **PRESS** [ OK ] button.
5. **PRESS** [ OK ] button to scroll through days of the week. Use [ UP/DOWN ] buttons to **Enable/Disable Alarm** for that day. (Enabled is represented by a circle.)
6. **HOLD** [ OK ] button to save and return to **Settings Menu**.

## DATE/TIME

 
 
 
1. Use [ UP/DOWN ] buttons to select **Auto** or **Manual**.

Alarm	Manual
DateTime	MM-DD-YYYY
Unit	12H Clock
Language	11-18- 2014
Backlight	PM 02 : 52

- **Auto:** The Watch will start searching for satellite connection, once connected; the time and date will appear according to your location. (**Note:** Must be outside.)
- **Manual:** **PRESS** [ OK ] button to scroll up or down the list of time/date settings, Use [ UP/DOWN ] buttons to change/edit setting.

Manual	Manual	Manual
MM-DD-YYYY	MM-DD-YYYY	MM-DD-YYYY
12H Clock	12H Clock	12H Clock
11-18- 2014	11-18 -2014	11-18- 2014
PM 02 : 52	PM 02 : 52	PM 02 : 52

2. Use [ UP/DOWN ] button to change the **Date Format** (*MM-DD-YYYY, DD-MM-YYYY, YYYY-MM-DD*).
3. **PRESS** [ OK ] button to scroll down. Use [ UP/DOWN ] button to select **12 hour** or **24 hour** clock.

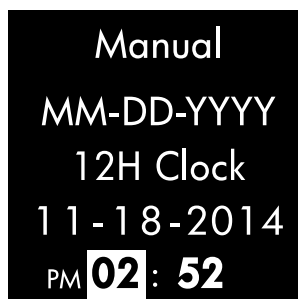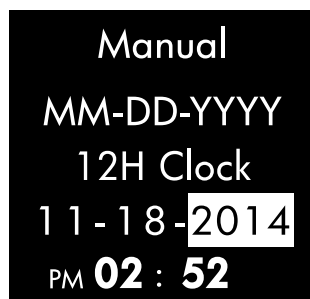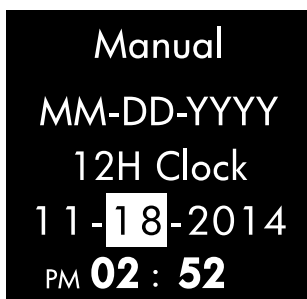

4. **PRESS** [ OK ] button to scroll down. Use [ UP/DOWN ] button to select **Month**.
5. **PRESS** [ OK ] button then use [ UP/DOWN ] button to select **Day**.
6. **PRESS** [ OK ] button then use [ UP/DOWN ] button to select **Year**.
7. **PRESS** [ OK ] button then use [ UP/DOWN ] button to select **Hour**.
8. **PRESS** [ OK ] button then use [ UP/DOWN ] button to select **Minutes**.
9. **HOLD** [ OK ] button to save and return to **Settings Menu**.
10. **HOLD** [ OK ] button again to return to **Time Screen**.

## UNIT

1. Use [ UP/DOWN ] buttons to change unit of measure to **Yards** or **Meters**.
2. **PRESS** [ OK ] button to save and return to **Settings Menu**.



## LANGUAGE

1. Use [ UP/DOWN ] buttons to scroll through **Languages** (*English, Espanol, Francais, Deutsch*).
2. **PRESS** [ OK ] button to select **Language** and return to **Settings Menu**.

## BACKLIGHT

1. Use [ UP/DOWN ] buttons to scroll through the amount of time the **Backlight** stays on (*5s, 10s, 30s, off*).
2. **PRESS** [ OK ] button to save and return to **Settings Menu**.

## SOUND

1. Use [ UP/DOWN ] buttons to toggle **Sound** (*On/Off*).
2. **PRESS** [ OK ] button to save and return to **Settings Menu**.

## DAYLIGHT SAVINGS TIME (DST)

1. Use [ UP/DOWN ] buttons to toggle **DST** (*On/Off*).
2. **PRESS** [ OK ] button to save and return to **Settings Menu**.

## SCORECARD

1. Use [ UP/DOWN ] buttons to toggle **Scorecard (On/Off)**.
2. **PRESS** [ OK ] button to save and return to **Settings Menu**.

## SHOT DISTANCE

1. Use [ UP/DOWN ] buttons to toggle **Shot Distance (On/Off)**.
2. **PRESS** [ OK ] button to save and return to **Settings Menu**.

## NOTIFICATION

1. Use [ UP/DOWN ] buttons to toggle **Notification (On/Off)**.
2. **PRESS** [ OK ] button to save and return to **Settings Menu**.

## MODEL INFO

1. **PRESS** [ OK ] button to return to **Settings Menu**.

## **WARRANTY POLICY**

This product is warranted to be free from defects for up to (1) year from the original purchase date. IZZO Golf cannot refund your purchase unless purchased directly from IZZO Golf. IZZO Golf will replace or repair any unit that is determined defective under normal use within the warranty period. Please call Customer Service at **888-606-4634** to request a Return Authorization. All defective products must be returned to:

**IZZO Golf**  
**Attn: Returns Dept.**  
**1635 Commons Parkway**  
**Macedon, NY 14502**

Please include a note with your Name, Address, Phone # and Return Authorization #. Your replacement will be shipped once we diagnose the returned unit.

**To register your product visit:**  
***[www.callawaydmd.com/registration](http://www.callawaydmd.com/registration)***

***If you have any other questions or concerns, please call 1-888-606-4634 or go to [www.callawaydmd.com](http://www.callawaydmd.com)***

## CAUTION

Global Position System (GPS) was developed and is managed by the United States Department of Defense (DOD) which is responsible for its normal operation and position precision control; the U.S. is entitled to affect function or position precision of the whole system without prior notification or announcement based on its political considerations or safety of national defense. In order to use the device correctly and safely, you must be aware of the following information prior to operating the device:

- The device was only designed for the purpose of leisure and recreation and is not applicable for industrial or special measurement.
- The device is only an auxiliary device. IZZO Golf will not accept any legal liability for accidents due to mistaken operation, or any use of the device for measurement.
- Please do not try to disassemble the device or repair any part of the device discreetly.
- Please do not store the device in places exposed to direct sunlight or in extremely high temperatures.

© 2015 CALLAWAY GOLF COMPANY.

Callaway Golf and the Chevron device are trademarks of Callaway Golf Company. IZZO Golf is an official licensee of Callaway Golf Company.



Callaway®  
V



**GPSync MONTRE**



## INTRODUCTION

La montre Callaway GPSync combine performance d'élite et design tendance et élégant. Frappez plus souvent sur le vert en connaissant la bonne distance de l'avant, du centre et de l'arrière du vert. Limitez les coups de pénalité en connaissant les distances de l'avant, du centre et de l'arrière des obstacles et de doglegs. Synchronisez votre téléphone intelligent pour recevoir des notifications pour les appels manqués, les messages texte, et les courriels. Enfin, il s'agit d'une montre de golf GPS haute-performance avec assez de style pour la porter hors du parcours de golf!

## CARACTÉRISTIQUES

Produit	Montre Callaway GPSync
# de Parcours	30,000+
Pile	Polymère lithium-ion 220mAh
Durée de la pile	Golf : 9 heures / Durée : 45 jours
Poids	2,24 oz.
Taille de l'affichage	1,28 po (128 x 128 pixels)
Longueur du bracelet	10,25 po
Résistance à l'eau	Oui Désignation 1 ATM

 
## 2 INTRODUCTION

## CHARGEMENT

1. Alimentation de la montre en arrêt **Maintenir** le bouton d'[ **ALIMENTATION** ] jusqu'à ce que l'écran soit vide. (Voir le diagramme de la montre en page 4)
2. Branchez les **connecteurs de chargement** sur le chargeur et dans les **ports de chargement** de la montre.



CONNECTEURS DE CHARGEMENT

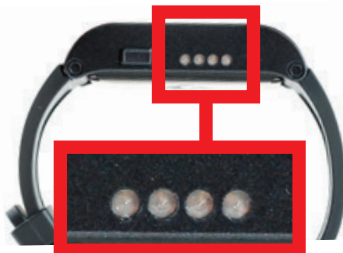

PORTS DE CHARGEMENT

**Remarque :** Les **connecteurs de chargement** et **ports de chargement** doivent être correctement alignés (ce qui est plus facile en regardant l'arrière de la montre).

3. Sécurisez la **pincette du chargeur** du chargeur sur la **prise du chargeur** située sur côté opposé de la montre.

 


PINCETTE DU CHARGEUR



PRISE DU CHARGEUR

4. Branchez le câble USB dans le port USB.
5. Lorsque la connexion est établie, la montre s'allumera et les barres de l'**icône de la pile** clignoteront pour indiquer un chargement.

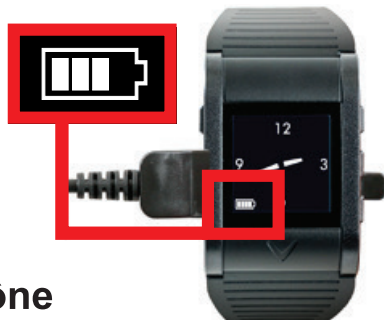

**Remarque :** Les **barres de l'icône de la pile** cesseront de clignoter lorsque le chargement est complet. (2-3 heures)