



# Remote Siren

 
## Siren Speaker Unit

# INSTRUCTIONS

## MODEL SP501B

836

1. Speakers
2. Status LED
3. Battery Compartment
4. Programmable Switch

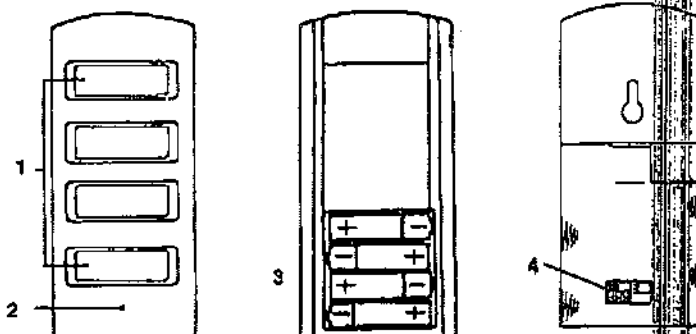


### BATTERY INSTALLATION (SEE FIGURES BELOW)

Access the battery compartment on the rear of the unit by removing the back cover. Press on the upper center part of the cover and slide it down. Insert four (4) "AA" batteries (not included) following the polarity diagram. When the last battery is inserted, the Status LED will flash and the Siren will chirp to indicate the batteries are installed properly. Replace the battery compartment cover. The Siren will chirp every 10-15 seconds when the batteries need replacing.


### PROGRAMMING THE SIREN SPEAKER UNIT

 1. Remove battery compartment cover, remove batteries.
2. Locate the programmable switch.
3. Set the "CORRECT SWITCH COMBINATION" on programmable switch. All 3 switches of the programmable switch must be set at the same positions as respective switches of the Main Alarm Unit programmable switch.
4. Replace batteries, replace the battery compartment cover.

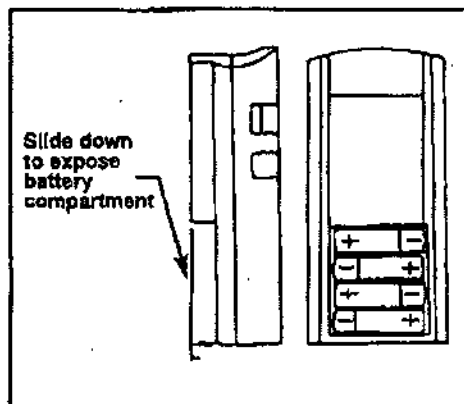

### INSTALLATION (Siren Speaker Unit)

 The unit is designed to be either free standing or wall mounted. Place the unit in the desired location within 60' from the Alarm Unit. To mount the unit on the wall use the supplied screw (see figure at right).

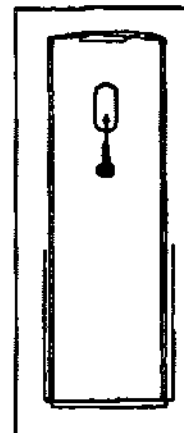

**WARNING: THE ALARM SIREN IS VERY LOUD; PLEASE DO NOT ALLOW IT TO SOUND FOR LONG LENGTHS OF TIME.**

### BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different type of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)

**NOTE:** Not intended for use in exposed outdoor applications. Will not operate properly if used in below freezing temperatures (32°F) or damp locations.

**INTERMATIC INCORPORATED**  
 SPRING GROVE, ILLINOIS 60081-9698

ART 61

**WARNING**

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

In addition, for a Class B digital device or peripheral or cordless phone, the user manual shall include the following or similar statement, placed in a prominent location in the text of the manual:

**NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.